

# KENWOOD

AUDIO VIDEO SURROUND RECEIVER

## KR-V9080

---

### INSTRUCTION MANUAL

KENWOOD CORPORATION

B60-2512-00 © (K, P, C, M, X, Y) WS  
97/12 11 10 987654321 96/12 11 10 987654321

# Getting started

**Caution - Read this page carefully to ensure safe operation.**

KR-V9000 (En)

## Before applying the power

Units are designed for operation as follows.

U.S.A. and Canada ..... AC 120 V only  
Australia ..... AC 240 V only


China ..... AC 220 V only  
\*Other countries ..... AC 110-120 / 220 / 230-240 V switchable

### \* AC voltage selection

The AC voltage selector switch on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

Note:  
Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.



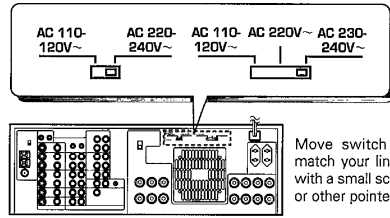

### AC voltage selector switch



Move switch lever to match your line voltage with a small screwdriver or other pointed tool.

## Safety precautions

**WARNING :** TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

|   |  |   |  |
|---|--|---|--|
|  | <p><b>CAUTION</b><br/>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</p>   |  | <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> |
|  | <p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p> |   |  |
|  | <p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>  |   |  |

## Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage. We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

### Accessories

FM indoor antenna (1)



Repeater (1)



 
AM loop antenna (1)



Double-sided tape (1)



Loop antenna stand (1)



\*AC plug adaptor (1)



Remote control unit (1)



Batteries (R6/AA) (2)



\* Use to adapt the power cord to the shape of the wall outlet. (Accessory only for regions where use is necessary.)

# Contents

**Caution : Read the pages marked  $\Delta$  carefully to ensure safe operation.**

|  |           |
|--|-----------|
| <b>Getting started</b>                             | <b>2</b>  |
| $\Delta$ Before applying the power                 | 2         |
| $\Delta$ Safety precautions                        | 2         |
| Unpacking  | 2         |
| <b>Special features</b>                            | <b>4</b>  |
| <b>Names and functions of parts</b>                | <b>5</b>  |
| <b>System connections</b>                          | <b>6</b>  |
| Connecting the antennas                            | 6         |
| FM DE EMPHASIS/CHANNEL SPACE switch                | 6         |
| Connecting audio components                        | 7         |
| Connecting video components                        | 8         |
| Connecting the system control                      | 9         |
| Connecting the speakers                            | 10        |
| Connecting the repeater                            | 11        |
| <b>How to use the remote control</b>               | <b>12</b> |
| Names and functions of keys                        | 12        |
| Operations   | 13        |
| <b>Using the OSD (On Screen Display)</b>           | <b>14</b> |
| Switching to GUI (Graphical User Interface) mode   | 14        |
| Operating in GUI mode                              | 15        |
| <b>Preparing for playback (SET UP)</b>             | <b>17</b> |
| System set up                                      | 17        |
| Surround set up                                    | 20        |
| <b>Normal playback</b>                             | <b>22</b> |
| Listening to source components                     | 22        |
| Adjusting the sound                                | 23        |
| <b>Recording</b>                                   | <b>25</b> |
| Recording audio                                    | 25        |
| Recording video                                    | 26        |
| <b>Listening to radio broadcasts</b>               | <b>27</b> |
| Tuning radio stations                              | 27        |
| Tuning radio stations by frequency (DIRECT tuning) | 28        |
| Presetting radio stations                          | 29        |
| Receiving preset stations                          | 29        |
| Receiving preset stations in order (P.CALL)        | 29        |
| <b>Ambience effects</b>                            | <b>30</b> |
| Sound modes  | 30        |
| Playing back with surround sound                   | 32        |
| <b>Remote controlling video components</b>         | <b>34</b> |
| How to operate video components                    | 34        |
| <b>Set up code chart</b>                           | <b>35</b> |
| <b>OSD flow chart</b>                              | <b>39</b> |
| <b>In case of difficulty</b>                       | <b>41</b> |
| $\Delta$ <b>Specifications</b>                     | <b>43</b> |

Since this instruction manual explains the operating instructions for models destined for different regions, one part of the input selector name list and display information vary according to region.

## Special features

### A variety of home theater functions

This receiver is provided with a variety of surround modes to bring you maximum enjoyment from your video software. Select a surround mode according to your equipment or the software you are going to play. Enjoy!

- [20] - [30]

### DOLBY PRO LOGIC & DOLBY 3 STEREO

This surround system reproduces theater-like surround sound from video software marked  DOLBY SURROUND.

The DOLBY PRO LOGIC mode uses the built-in directivity enhancer circuit to control the Left, Center, Right and Surround channel audio signals and reproduce a real sense of sound motion.

The DOLBY 3 STEREO mode uses the directivity enhancer circuit to provide proper acoustic positioning and a real sense of sound motion even when only the front and center speakers are used.

### DSP LOGIC

This mode uses DSP (Digital Signal Processor) to add an element of "presence" to the DOLBY PRO LOGIC signals (Left, Center, Right and Surround) output from the directivity enhancer circuit, and bring the extra sense of dimensionality, associated with movie theaters, to your listening room.

### DSP Presence

This mode uses DSP (Digital Signal Processor) to add the "presence" associated with an arena, stadium, or jazz club to the original signal. It is compatible with almost any kind of program source.

### Simple home theater operation

#### Easy operation with OSD (On Screen Display)

This function uses a monitor TV to simplify the previously difficult setup procedures like, surround setup, remote control setup code input, and macro-play setup. Once you've completed these setups, all you have to do is enjoy your movies.

You can also use OSD for basic operation of source components. Connecting KENWOOD source components with the System Control (SL16 only), lets you use OSD to display information about the current source. - [14]

#### IR (Infrared Ray) remote control

To watch video software, you used to have to use the infrared ray remote control supplied with your monitor TV and video equipment. This receiver, however, is supplied with a repeater that lets you turn ON and start playback from your video components once you specify the remote control setup code. Be sure to set up the IR remote before you start watching movies. - [11] - [18] - [24]


### MACRO PLAY

This function lets you perform a series of operations automatically with the push of a single button.

Once you store the steps necessary to perform a specific operation, like starting playback from your LD player or video deck, you can perform those operations, like turning ON the power, switching the inputs, and starting playback, automatically. (To operate video equipment in a macro play, be sure to input the remote control setup code before starting the macro set up procedure.) - [18]

# Names and functions of parts

KF-V9080 (En)

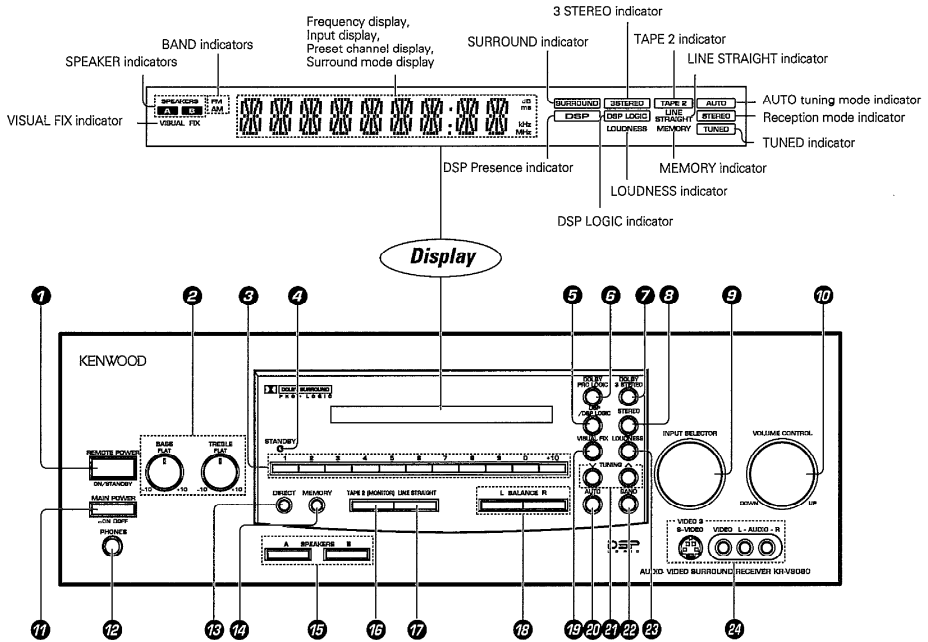

- |  |   |  |
|--|---|--|
| <p><b>1 REMOTE POWER key</b><br/>Use to switch the power ON/STANDBY when the MAIN POWER is turned ON.</p> <p><b>2 Tone Control knobs</b> - [23]</p> <p><b>3 Numeric keys</b></p> <p><b>4 STANDBY indicator</b></p> <p><b>5 DSP/DSP LOGIC key</b> - [32]<br/>Use to turn on, or switch, the DSP LOGIC mode.</p> <p><b>6 DOLBY PRO LOGIC key</b> - [32]<br/>Use to turn on the DOLBY SURROUND mode.</p> <p><b>7 DOLBY 3 STEREO key</b> - [32]<br/>Use to turn on the DOLBY 3 STEREO mode.</p> <p><b>8 STEREO key</b> - [32]<br/>Use to cancel the surround mode.</p> | <p><b>9 INPUT SELECTOR knob</b> - [24]<br/>Use to select the input sources.</p> <p><b>10 VOLUME CONTROL knob</b> - [24]<br/><b>11 MAIN POWER key</b><br/>Use to turn the POWER ON/OFF.</p> <p><b>12 PHONES jack</b> - [24]<br/>Use for headphone listening.</p> <p><b>13 DIRECT key</b> - [28]<br/>Use to tune radio stations directly by numerical input.</p> <p><b>14 MEMORY key</b> - [29]<br/>Use to store radio stations in the preset memory.</p> <p><b>15 SPEAKERS A/B keys</b> - [22]<br/>Use to turn the speakers ON/OFF.</p> <p><b>16 TAPE 2 (MONITOR) key</b> - [25]<br/>Use to monitor a recording.</p> | <p><b>17 LINE STRAIGHT key</b> - [24] - [22]<br/>Use to listen with high quality sound.</p> <p><b>18 BALANCE keys</b> - [23]<br/>Use to adjust the volume balance between left and right.</p> <p><b>19 VISUAL FIX key</b> - [14] - [22]<br/>Use to lock on to the current video input.</p> <p><b>20 AUTO key</b> - [27]<br/>Use to select the auto tuning mode.</p> <p><b>21 TUNING keys</b> - [27]<br/>Use to tune in radio broadcasts.</p> <p><b>22 BAND key</b> - [27]<br/>Use to select the broadcast band.</p> <p><b>23 LOUDNESS key</b> - [23]<br/>Use to emphasize deep base sounds.</p> <p><b>24 VIDEO-3 terminals</b> - [8]</p> |
|--|---|--|

## REMOTE POWER switch STANDBY mode


 
When the receiver's power cord is plugged in to an AC outlet and the MAIN POWER key is turned ON, the STANDBY indicator will remain lit, regardless of the ON/STANDBY setting of the REMOTE POWER switch. This indicates that a small amount of current is being supplied to the receiver in order to back up the memory contents. This is called the Standby mode. When the standby indicator is lit, the receiver can be switched ON/STANDBY from the remote control.

## Connecting the antennas

Make connections as shown below.  
Do not connect the power cord to a wall outlet until all connections are completed.

### Antenna terminal connections


- ➊ Push lever.
- ➋ Insert cord.
- ➌ Return lever.

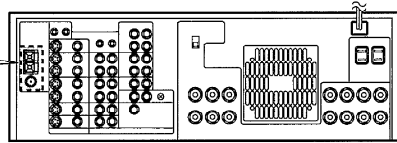

### AM loop antenna

The supplied loop antenna is for use indoors. Place it as far as possible from the receiver, TV set, speaker cords and power cord, and adjust the direction for best reception.

AM loop antenna

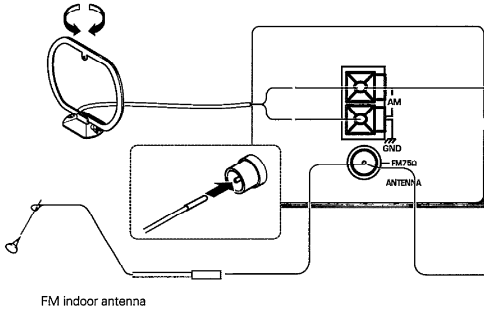


FM indoor antenna


### AM outdoor antenna

If reception is poor with the loop antenna, extend a vinyl-coated wire (more than 6 meters long) outdoors, without disconnecting the loop antenna.

AM outdoor antenna

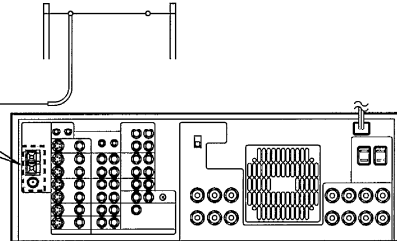

Use an optional antenna adapter

 

### FM indoor antenna

The supplied indoor antenna is for temporary use only. For stable signal reception we recommend using an outdoor antenna. Disconnect the indoor antenna when you connect one outdoors.


### FM outdoor antenna

Lead the 75Ω coaxial cable connected to the FM outdoor antenna into the room and connect it to the FM 75Ω terminal.

## FM DE-EMPHASIS / CHANNEL SPACE switch (Except for U.S.A., Canada and Australia)

The FM DE-EMPHASIS / CHANNEL SPACE switch on the rear panel is set to the correct setting that prevails in the area to which the unit is shipped. However, if the FM DE-EMPHASIS / CHANNEL SPACE setting is not matched to the area where the unit is to be used; for instance, when you move from area 1 to area 2 or vice versa, desired reception of AM / FM broadcasts is not expected. In this case, change the FM DE-EMPHASIS / CHANNEL SPACE setting in accordance with the area corresponding to the table. The FM DE-EMPHASIS is switched over at the same time.

- When changing the setting of the FM DE-EMPHASIS / CHANNEL SPACE switch, first disconnect the power cord, then reset the channel space switch, connect the power cord again, and turn the power on.

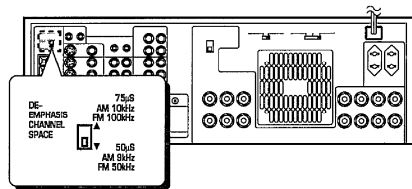


|   | Area   | CHANNEL SPACE freq.       | FM DE-EMPHASIS |
|---|--|---------------------------|----------------|
| 1 | U.S.A., Canada, and South American countries | FM: 100 kHz<br>AM: 10 kHz | 75 μs          |
| 2 | Other countries                              | FM: 50 kHz<br>AM: 9 kHz   | 50 μs          |

# Connecting audio components

Make connections as shown below. When connecting the related system components, be sure to also refer to the instruction manuals supplied with the components you are connecting. Do not connect the power cord to a wall outlet until all connections are completed.

**Microcomputer malfunction**  
If operation is not possible or an erroneous display appears, even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty". -[21]

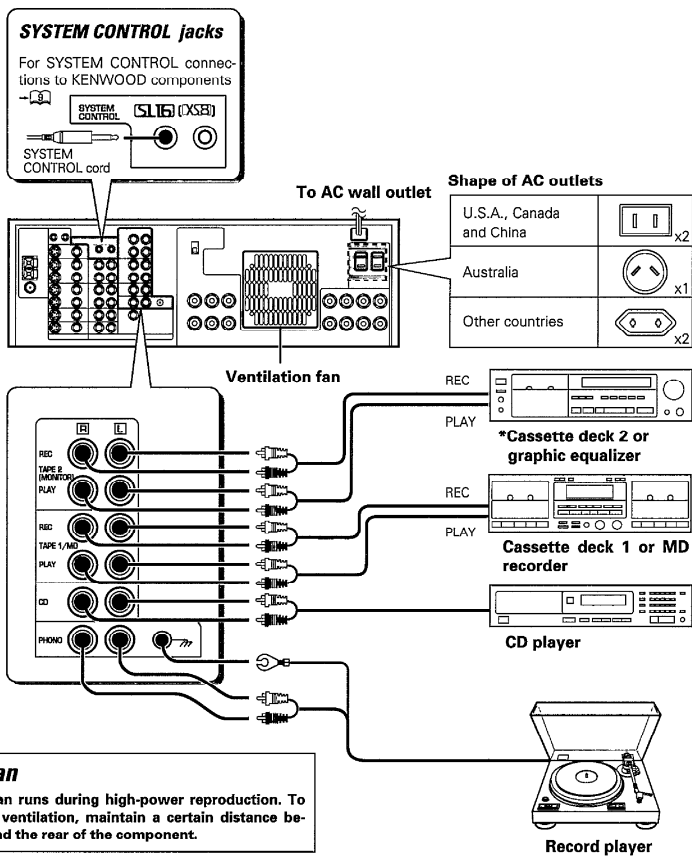

## Ventilation fan

The ventilation fan runs during high-power reproduction. To allow for proper ventilation, maintain a certain distance between the wall and the rear of the component.

## Caution regarding placement (except for U.S.A. and Canada)

To maintain proper ventilation, be sure to leave a space around the unit (from the largest outer dimensions, including projections) equal to, or greater than shown below:  
Left and right panels: 10 cm, Rear panel: 10 cm, Top panel: 50 cm

**\*Do not connect a System Control cord to a cassette deck connected to the TAPE 2(MONITOR) jacks.**




1. Connect all cords firmly. Loose connections may prevent proper sound transmission or produce noise.
2. Be sure to remove the power cord from the AC outlet before plugging or unplugging any connection cords. Plugging/unplugging connection cords without disconnecting the power cord can cause malfunctions and may damage the unit.
3. Do not connect power cords from components whose power consumption is larger than what is indicated on the AC outlet at the rear of this unit.

# 8 Connecting video components

Make connections as shown below.

When connecting the related system components, be sure to also refer to the instruction manuals supplied with the components you are connecting.

Do not connect the power cord to a wall outlet until all connections are completed.

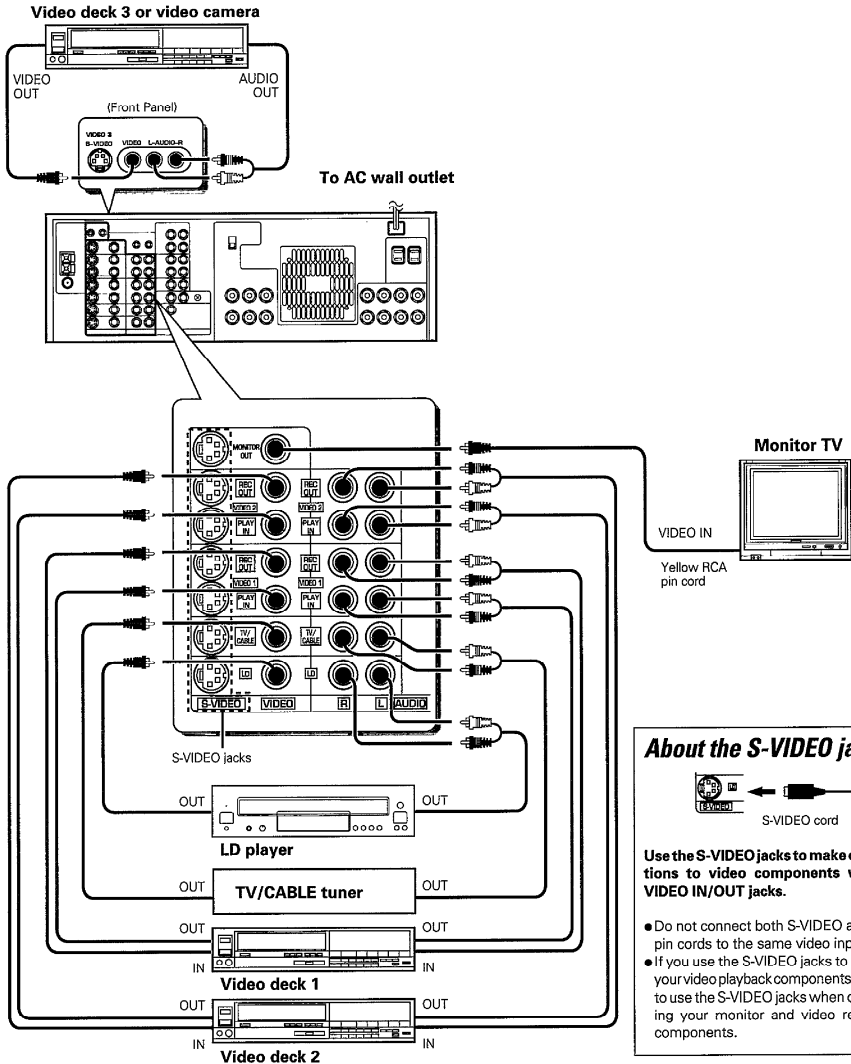

**Video inputs and outputs**  
(Yellow RCA pin cords)

**Audio inputs and outputs**  
(Red and white RCA pin cords)



# Connecting the system control

Connecting system control cords after connecting a KENWOOD audio component system lets you take advantage of convenient system control operations. There are two KENWOOD system control modes. Make connections according to the groups of terminal symbols shown below.


[XS8] Mode : lets you combine [XS], [XS8], and [XR] terminals

[SL16] Mode : for [SL16] terminals only

This unit is compatible with both [XS8] and [SL16] modes. It comes from the factory set to the [SL16] mode. To switch to the [XS8] mode, follow the instructions in "SWITCHING FROM [SL16] TO [XS8]" below.


## EXAMPLE: [XS8] mode connections

The underlined portion represents the setting of the system control mode.

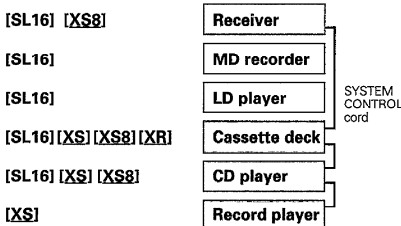

## EXAMPLE: [SL16] mode connections

The underlined portion represents the setting of the system control mode.

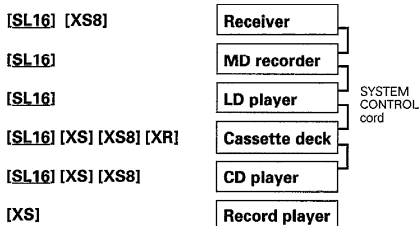

- Some CD players and cassette decks are not compatible with the [SL16] system control mode. Be sure to use the [XS8] system control mode when making system connections with equipment that is not [SL16] compatible.
- Some LD players and MD players are not system control compatible. You cannot make system control connections to this kind of equipment.

1. [SL16] equipment cannot be combined with [XR], [XS], and [XS8] equipment for system operations. If your equipment consists of this kind of combination, please do not connect any system control cords. Even without system control cords, normal operations can be carried out without affecting performance.
2. Do not connect system control cords to any components other than those specified by KENWOOD. It may cause a malfunction and damage your equipment.
3. Be sure the system control plugs are inserted all the way in to the system control terminals.



## SYSTEM CONTROL OPERATIONS

### Remote Control

Lets you operate this unit with the system remote supplied with the receiver.

### Automatic Operation (except [XR] equipment)

When you start playback from a source component, the input selector on this unit switches to that component automatically. (Except for TAPE 2.)

### Synchronized Recording (except [XR] equipment)

Lets you synchronize recording with the start of playback when recording from CD, MD, LD, or analog discs.

### On-Screen system operation ([SL16] only)

This unit can display the current status of the component you wish to operate on the screen of a monitor television and let you operate that component with on-screen operations.

## SWITCHING FROM [SL16] TO [XS8]

You can easily change the system control mode with the following operation. Do this operation after completing all connections.

Switching to [XS8] : Hold down the **BAND** key and switch the **MAIN POWER** key from OFF to ON.

Switching back to [SL16]: Hold down the **AUTO** key and switch the **MAIN POWER** key from OFF to ON.

- This operation will not affect items stored in the memory.

You can also change the mode using the On Screen Display.



The system control mode will revert to [SL16] if the unit is not turned on for three consecutive days. If you would like to make the unit completely (and permanently) [XS8] compatible, please consult your dealer.


## SWITCHING THE TAPE 1 INPUT TO MD ([SL16] only)

If you set the SYSTEM CONTROL to [SL16] mode and connect an MD recorder, be sure to switch the receiver's TAPE 1 input to MD. To switch the input, follow the steps shown below. (The input can also be switched through an on-screen operation.)

- ① Set the input to TAPE 1
- ② Hold down the **AUTO** key on the receiver for more than 2 seconds. Repeat to return to the original input setting (TAPE 1).

# 10 Connecting the speakers



- ① Strip coating.
- ② Loosen.
- ③ Insert.
- ④ Secure.

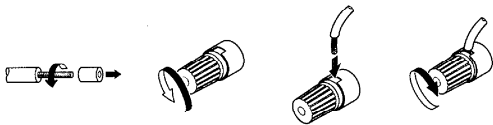

- Never short circuit the + and - speaker cords.
- If the left and right speakers are connected inversely or the speaker cords are connected with reversed polarity, the sound will be unnatural with ambiguous acoustic imaging. Be sure to connect the speakers correctly.
- To emphasize deep bass sounds, connect a sub-woofer as desired.
- Be sure to set one of the **SPEAKERS** keys (either **A** or **B**) to the ON position when using the PRE OUT jack.

**IMPEDANCE SELECTOR switch for front speakers**  
(see below) **FRONT SPEAKERS IMPEDANCE SELECTOR**


A or B: 8Ω OR MORE  
A or B: LESS THAN 8Ω  
A and B: 8Ω OR MORE

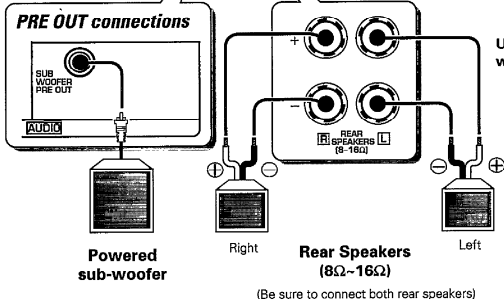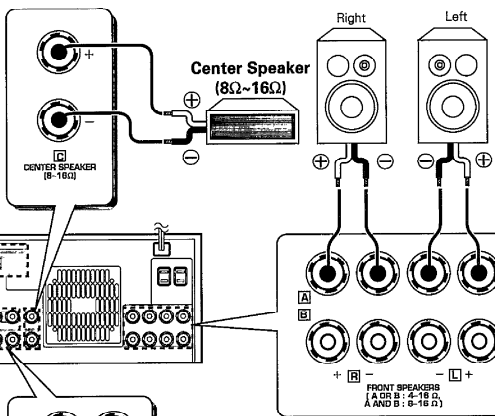

Use the **FRONT SPEAKERS SYSTEM B** terminals if you want to connect a second front speaker system.

**Connection of banana plugs (For U.S.A. and Canada only)**

- ① Secure.
- ② Insert.

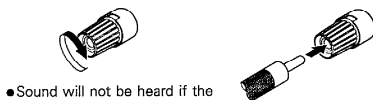

- Sound will not be heard if the speaker terminal is not fully secured.

## Setting the FRONT SPEAKERS IMPEDANCE SELECTOR

When using FRONT SPEAKERS A and B separately.

| Speaker impedance | Selector position |
|-------------------|-------------------|
| 4Ω, 6Ω            |                   |
| 8Ω, 16Ω           |                   |

When using FRONT SPEAKERS A and B at the same time

| Speaker impedance | Selector position |
|-------------------|-------------------|
| 8Ω, 16Ω           |                   |


**CAUTION: TO PREVENT FIRE, OR DAMAGE TO THE RECEIVER, SET THE IMPEDANCE SELECTOR SWITCH AS DESCRIBED BELOW.**

Set the **IMPEDANCE SELECTOR** on the rear panel of the receiver according to the impedance of the speakers you plan to use.

- When the **IMPEDANCE SELECTOR** switch is set to 'A or B : LESS THAN 8Ω, A and B : 8Ω OR MORE', it is possible to use the A and B speakers at the same time. Therefore, when using the speakers A and B simultaneously, be sure to set the **IMPEDANCE SELECTOR** switch to the 'A or B : LESS THAN 8Ω, A and B : 8Ω OR MORE' position.
- Set the **MAIN POWER** key to the OFF position when connecting speakers or adjusting the **IMPEDANCE SELECTOR**.


## Connecting the repeater

Setting up the repeater lets you control your video components with the receiver's remote control. This repeater sends out signals corresponding to those of the remote supplied with your video equipment. There are 2 repeater jacks on the rear panel. One is for the supplied repeater. Depending on the repeater and the locations of your video components, it may not be possible to control all your video components with just one repeater. If you would like to use 2 repeaters, please consult your dealer.

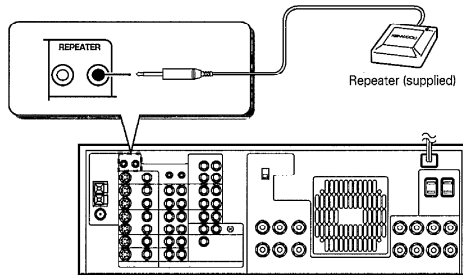

### Placement

This repeater outputs infrared ray remote control codes in three directions (shown at right). Use the supplied double-sided tape to secure the repeater in a position where it can operate your video components. The range of operation depends on the shape and size of your room. Place the repeater so that there are no obstacles between the repeater and the remote receptors on your video components. Obstacles may prevent remote operation of your video components.

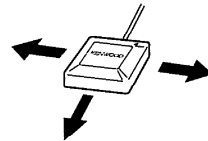

Remote control code output directions

# How to use the remote contro

KR-V9080 (En)

This remote control has 3 operating modes; the function of each key changes accordingly.

**Graphical User Interface (GUI) mode**..... Lets you operate the receiver (and related components) by moving a hand that appears on the screen of your monitor TV.

**KENWOOD mode**..... This mode lets you operate the receiver, and other KENWOOD source components, like cassette decks and CD players, using this remote control. (The component you want to operate must be connected with a SYSTEM CONTROL cord. -[27]-[31])


**Video mode**..... Lets you operate both KENWOOD and other video components. (The appropriate setup codes must be entered beforehand. -[18])

Certain operation keys have different functions in different operation modes. Be sure to set the remote to the correct mode before operation. This section explains basic operating procedures and the KENWOOD operation mode.

To use the GUI mode -[31]  
To operate non-KENWOOD components -[32]


## Names and functions of keys

Numbered keys have different functions in different modes. For details, see the "Remote control key operation table" -[13]-[31]

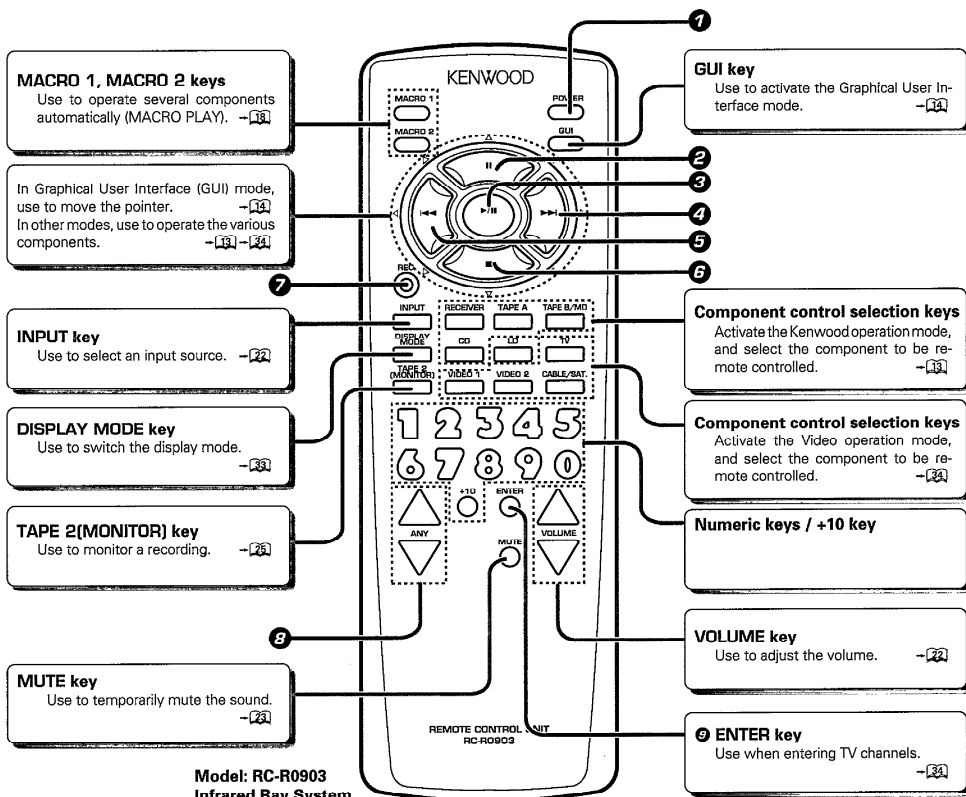


### Loading the batteries


① Remove the cover.

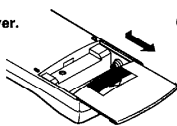

② Insert the batteries.

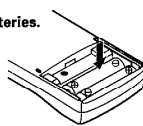

③ Close the cover.

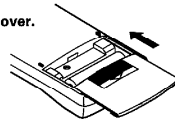


● Insert two AA size (R6 / SUM-3) batteries as indicated by the polarity markings.

# Operations



- 1** Turn on the receiver.
- 2** Set the input selector to the component you want to control.
- 3** Use a component control selection key to select the component you want to control.
- 4** Refer to the "Remote control key operation table" and press the key corresponding to the operation you desire.

## Operating distance

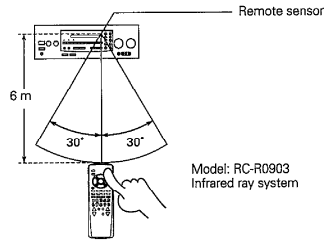

• When pressing keys in succession, press each key firmly and be sure to wait at least 1 second before pressing the next key.

## Remote control key operation table

| Component control selection keys | RECEIVER   | TAPE A<br>or<br>TAPE B/MD<br>(for TAPE B)          | CD        | LD<br>(System Control operation) | TAPE B/MD<br>(For MD) |
|----------------------------------|--|--|-----------|----------------------------------|-----------------------|
| <b>1</b> POWER key               | REMOTE POWER key                                   | _____  | _____     | _____                            | _____                 |
| <b>2</b> II key                  | _____  | II (Pause)   | _____     | _____                            | II (Pause)            |
| <b>3</b> ▶/II key                | BAND key   | ▶ (Play)   | _____     | ▶/II (Play/Pause)                | ▶ (Play)              |
| <b>4</b> ▶▶ key                  | P.CALL (Δ) key<br>(When the input is set to TUNER) | ▶▶ (Fast forward)                                  | _____     | ▶▶ (Skip)                        | _____                 |
| <b>5</b> ◀◀ key                  | P.CALL (∇) key<br>(When the input is set to TUNER) | ◀◀ (Rewind)  | _____     | ◀◀ (Skip)                        | _____                 |
| <b>6</b> ■ key                   | AUTO key<br>(When the input is set to TUNER)       | _____  | _____     | ■ (Stop)                         |                       |
| <b>7</b> REC key                 | _____  | ● (Record)   | Disc Skip | _____                            | ● (Record)            |
| <b>8</b> ANY key (Δ)             | TUNING (Δ) key<br>(When the input is set to TUNER) | ▶ (Play)   | _____     | ▶▶ (Search)                      |                       |
|                                  | ANY key (∇)  | TUNING (∇) key<br>(When the input is set to TUNER) | ◀ (Play)  | _____                            | ◀◀ (Search)           |



1. The supplied batteries may have shorter lives than ordinary batteries due to use during operation checks.
2. Replace both batteries with new ones when you notice a shortening of the distance from which the remote control will operate.
3. Placing the remote sensor in direct sunlight, or in direct light from a high frequency fluorescent lamp may cause a malfunction. In such a case, change the location of the system installation to prevent malfunction.

# Using the OSD (On Screen Display)

KR-V3080 (E-1)

This receiver incorporates an on screen display (OSD) feature to provide information in large easy to read characters and to simplify operation. OSD lets you carry out three types of operations using the remote control's GUI (graphical user interface) mode. But first, lets see what kind of screen OSD provides.

## Switching to the GUI (Graphical User Interface) mode


### 1 Turn on the components you want to use.

- Set the MAIN POWER key to the ON position.
- Set the REMOTE POWER key to the ON position.
- Turn on the connected monitor TV.

### 2 Activate the GUI mode.



This is the first display that appears when you activate the GUI mode.

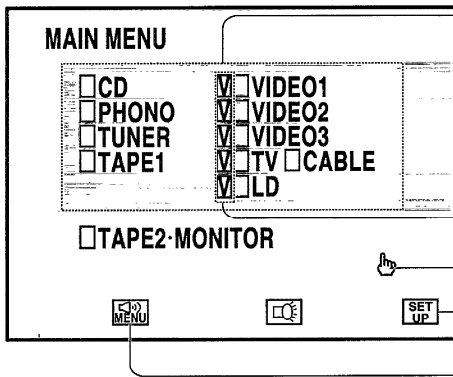

### 3 Switch input sources and operate other components.

The current input is displayed in blue. When you select another source, the input switches and the operation screen for that component is displayed (except for VIDEO 3 and PHONO).

#### VIDEO input display

Red: Represents the current video input.

Blue: Shows that the video input is locked (VISUAL FIX).  
"VISUAL FIX" -

#### Pointer

Move this hand (pointer) to conduct on-screen operations.

### 1 Create an ideal AV environment.

### 2 Select surround modes on-screen.

## Here's what you can do in GUI mode

### 1 Create an ideal AV environment (Set Up).

You can set up your AV system for efficient operation of all the audio and video equipment connected to this receiver. Set according to your equipment. (SYSTEM SET UP)

This mode also lets you complete the required surround setup. Once surround setup is complete, you may not need to adjust it again unless you change (or add) speakers. (SURROUND SET UP)

It may seem tedious but after you complete these set up operations, you will have a fully integrated AV system.

### 2 Select surround modes on-screen.


The receiver lets you choose from various home theater operations while looking at the screen of your monitor TV. So you can stay seated for simple operations.

### 3 Switch input source and operate other components.

The GUI mode also lets use the monitor TV screen for basic operations of components connected to the receiver with SYSTEM CONTROL cords. With the [SL16] mode, the current status of the source component is displayed in red.

You can also conduct basic operations of video components by entering the remote control set up code. In this case, the current status of the video component is not displayed.

Since the icons shown on the monitor TV are similar to the symbols on the operation keys of each source component, also check the operating instructions supplied with the source components during operation.

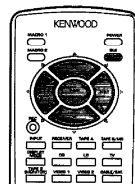


Keys or controls used in this operation.

## Operating in GUI mode


On-screen operation in GUI mode consists of moving the hand shaped pointer icon to select items from the screen. First of all, lets try moving the pointer freely and selecting an item.

### 1 Activate the GUI mode.

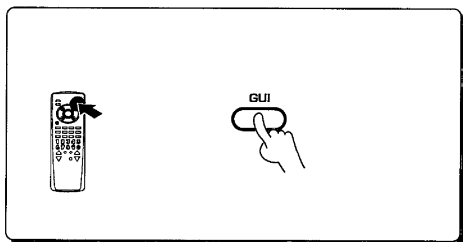


- The remote control switches to the on-screen operation mode.
- If no menus are displayed on screen, GUI mode is activated. If a menu is displayed, GUI mode is cancelled.


#### MAIN MENU screen

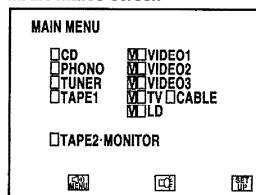

### 2 Move the pointer.

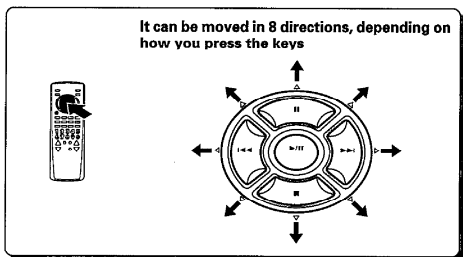


EXAMPLE: moving the pointer downwards toward the right.

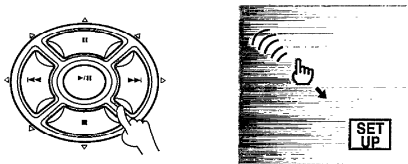

Press the  $\triangleright$  and  $\nabla$  keys at the same time.


- You can move the pointer in up to 8 different directions by pressing different key combinations. Try moving the pointer around the screen in different directions.

### 3 Press the item you desire.

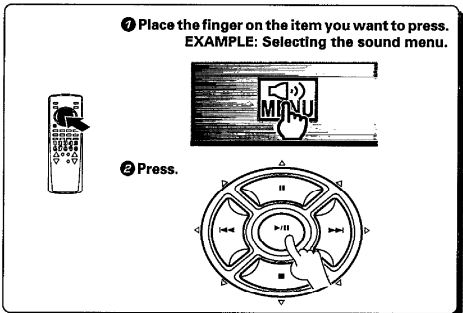


- To select an item, press the  $\triangleright$ ||| key located in the center of the remote control after moving the finger of the pointer on top of the item you want to select.

The SOUND MENU screen appears.

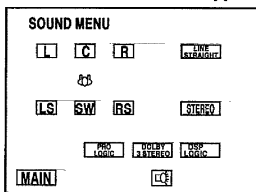


### Convenient items for on-screen operation

Convenient and often used items are displayed at the bottom of the screen for you to use as necessary. If an item cannot be used with a certain menu, it will not be displayed.

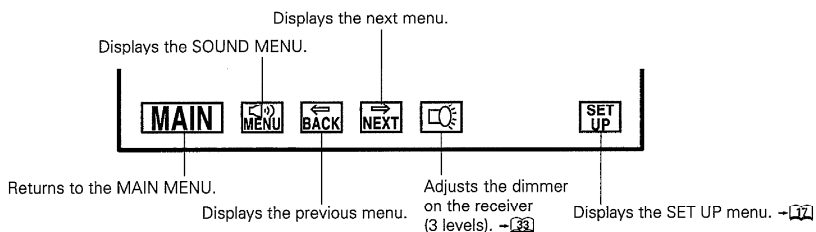

### Screen menu structure

Below is a general outline of the screen menu structure. Choose the menus according to the screens you wish to access. Refer to the circled numbers shown below and see the "OSD flow chart" for information about the contents of each screen. -[39]

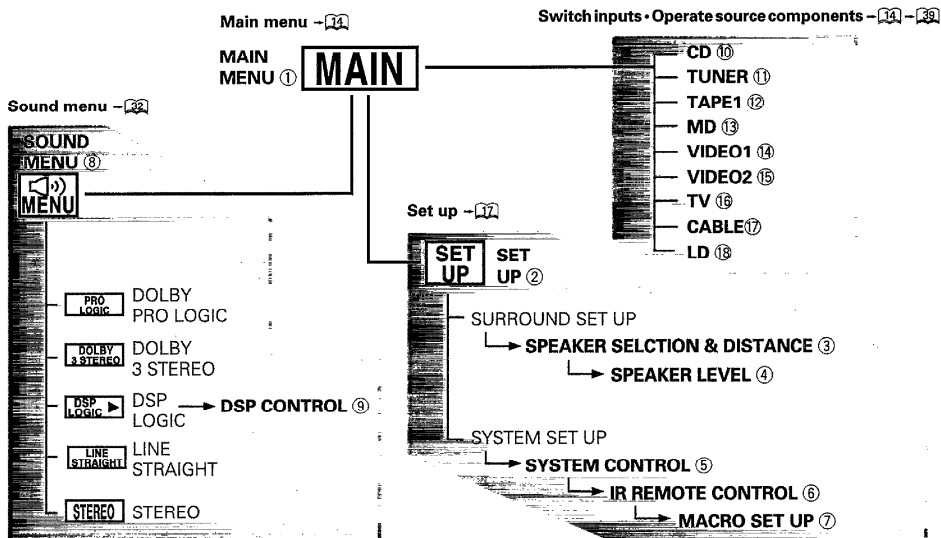




# Preparing for playback (SET UP)

KR-V8080 (En)

Use the SET UP menu to create an ideal AV operating environment by matching the system control functions to your components. The SET UP menu arranges for proper control of other KENWOOD components and systems, as well as video equipment from other manufacturers.

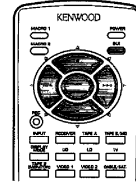


## Preparations

- Turn on your monitor TV.

Keys or controls used in this operation.

## System set up

### 1 Choose the SYSTEM SET UP menu.

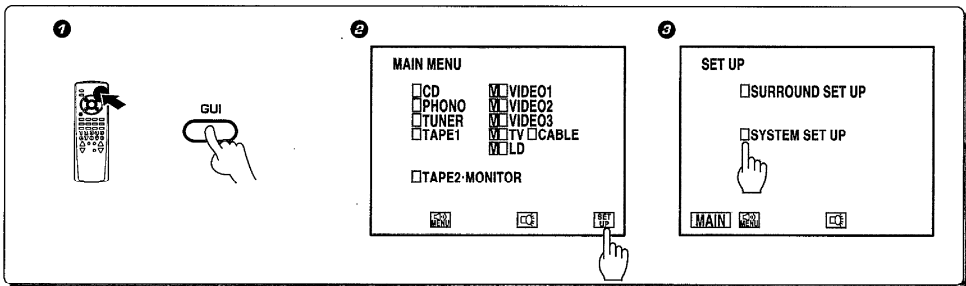

### 2 Set the SYSTEM CONTROL.

Set the KENWOOD system control. For details regarding SYSTEM CONTROL, see "Connecting the system control".

#### 1 Choose a SYSTEM CONTROL mode.

This switches the KENWOOD SYSTEM CONTROL mode. For details regarding SYSTEM CONTROL, see "Connecting the system control".

- If you switched the SYSTEM CONTROL mode in "System connections", check to make sure the mode is correct and go to the next step.
- If the POWER is not turned on for 3 days, the SYSTEM CONTROL mode will automatically return to [SL16]. To set the receiver to [SL16] permanently, consult with your dealer.

#### 2 Choose how to operate your LD player.


When you use a SYSTEM CONTROL cord to connect a KENWOOD LD player compatible with the [SL16] system control mode, choose the SYSTEM CONTROL and IR remote operations.

#### 3 Choose either TAPE 1 or MD ([SL16] only).

This determines which component can be operated by the SYSTEM CONTROL. The input you select can then be chosen with the input selector.

- When the SYSTEM CONTROL is set to [SL16], and a [SL16] mode compatible KENWOOD MD recorder is connected to the TAPE1/MD jacks, select "MD".


#### 4 Continue to next screen.

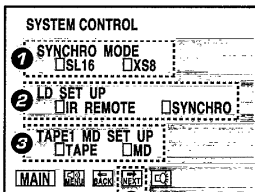

continued on next page

### 3 Setting up the IR REMOTE CONTROL.

Before operating video components using remote control supplied with this receiver, you need to input the setup code that corresponds to the IR remote control of the component you want to control.

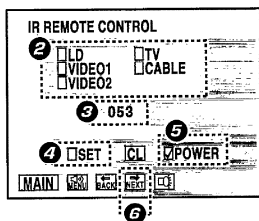

#### 1 Look up the setup code for the component you want to control.

Use the "Setup Code Chart" to look up the setup code after determining the maker and the remote control capabilities of the component you wish to control. → [30]

**EXAMPLE:** To enter the setup code for a KENWOOD VCR → 053, 056 and 082  
If there is more than one setup code, input each code to see which one turns the power on. That will be the correct code for your component.

#### 2 Select the input corresponding to the component you want to control.

Select VIDEO 1 or VIDEO 2.

#### 3 Enter the setup code (3 numbers).

Use the remote control's numeric keys to enter "0 5 3".

#### 4 Select SET.

#### 5 Select POWER and check to see that the component you want to control turns on.

If the component does not turn on, and there is more than one setup code, enter another setup code and try again.

- If you choose POWER when setting the mode for the current monitor TV, the monitor TV will turn off and you will not be able to see the screen. In this case, press the enter (▶/M) key on the remote control again. The monitor TV turns on, and the set up screen is displayed.


#### 6 Repeat steps 1 ~ 5 to enter setup codes for all the components you want to control, then continue to the next screen.



Although each setup code is designed to work with a number of different models, certain codes may not work with some models. (Also, certain codes may only operate some of the functions available on a given model.)

### 4 MACRO SET UP.

This section shows you how to set the receiver to control several components in succession (MACRO PLAY). After completing this setup, you can perform a series of operations automatically, simply by pressing the **MACRO1** or **MACRO2** key. Enter the setup codes for the video components you want to control beforehand.

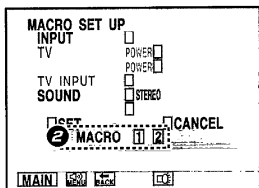

#### 1 Determine the order of the operations you want set as a MACRO PLAY.


**EXAMPLE :** Turn the receiver's power ON → Set the INPUT on the receiver to VIDEO1 → Set the sound mode to DOLBY PRO LOGIC → Turn the monitor TV ON → Switch the input on the monitor TV → Turn the VCR ON → start playback from the VCR.

For this example, we'll store these operations as MACRO1.

#### 2 Select the macro number you want to set.

Select 1.

continued on next page

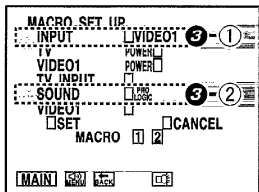

**3 Enter the commands for the receiver.**

① Set the receiver's input selector to the source you want to play. This setting also turns on the receiver (when the **MAIN POWER** key set to the ON position.)

**The INPUT changes as follows:**

**none** → CD → TAPE1A (deck A) or MD → TAPE1B (deck B) or MD → LD → VIDEO1 → VIDEO2 → TV → CABLE → none

Select VIDEO1.

- If you connect a single cassette deck, select "TAPE1B" when selecting the TAPE 1 input.
- To playback from audio components, make system control connections to KENWOOD audio components beforehand.

② Select the SOUND mode by referring to "Sound modes". → [30]

**The mode changes as follows:**

**STEREO** → PRO LOGIC → DOLBY 3 STEREO → DSP LOGIC → STEREO

Select PRO LOGIC.

**4 Enter the commands for your monitor TV.**

① Set the timing for the monitor TV commands. Your monitor TV may not be able to receive remote commands immediately after the POWER ON signal. This setting lets you turn ON the monitor TV and program a delay before the next signal.

**The timing changes as follows:**

**none** (no POWER ON signal; sends remote command immediately)

→ 1s (sends command 1 second after POWER ON) → 5s (5 seconds after)

→ 10s (10 seconds after) → none

Select 5s.

② Set the command necessary to switch your monitor TV input in order to view video playback. First, determine how many times you have to press the input selector on your monitor TV to reach the correct video input, then set that number (FUNC.1, 2). If you watch videos by choosing a TV channel instead of switching the input, set the correct channel (TV1CH, TV2CH, TV3CH).


**The setting changes as follows:**

**none** (0 times) → FUNC.1 (1 time) → FUNC.2 (2 times) → TV1CH → TV2CH

→ TV3CH → none

- If your TV switches to VIDEO when you press the input selector once:

→ Select FUNC.1

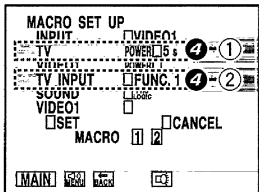

**5 Enter the commands for your playback source (VCR).**

① Set the timing for the command of the video components, such as a VCR. It is also necessary to program a delay between the POWER ON and PLAY signals for your playback source.

**The timing changes as follows:**

**none** (no POWER ON signal; sends remote command immediately)


→ 1s (sends command 1 second after POWER ON) → 5s (5 seconds after)

→ 10s (10 seconds after) → none

Select 5s.

② Set the operation mode for the playback source. If the playback source is a TV (etc.), use the remote's numeric (and ENTER) keys to select the channel.

Select PLAY.

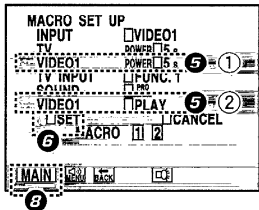

**6 Select SET.**

This completes the setup for MACRO1.

**7 To enter another MACRO SET UP, repeat steps 1-6.**

**8 Go back to the main menu.**

**9 Press the GUI key on the remote to turn off the on-screen display.**

**To use the MACRO PLAY**




**1 Load the video (or audio) software.**

- Remove video (or audio) software from all other connected components.

**2 Press MACRO1 or MACRO2 when the receiver's MAIN POWER switch is set to ON to carry out the operations set in the respective macro.**

- If you set the macro to turn ON the power to your video components in steps 4-1 and 5-1, be sure those components are turned OFF when you press the **MACRO** key. If they are turned ON when you press the **MACRO** key, they will be turned OFF.

This completes the system setup. If you add a new component or change a component, be sure to return to **SYSTEM SET UP** and correct the settings that apply to the component that was added or changed.

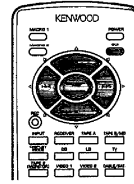


Keys or controls used in this operation.

# Surround set up

To obtain the most possible enjoyment from the receiver's various surround modes, be sure to complete the surround set up as shown below.

## 1 Speaker placement.

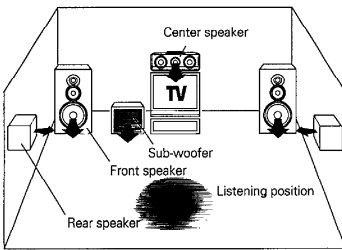

**Front speakers** :Place to the front left and right of the listening position. Front speakers are required for all surround modes.

**Center speaker** :Place front and center. This speaker stabilizes the sound image and helps recreate sound motion. Be sure to connect a center speaker when using the Dolby 3 Stereo mode.

**Rear speakers** :Place to the direct left and right, or slightly behind, the listening position at even heights, approximately 1 meter above the ears of the listeners. These speakers recreate sound motion and atmosphere. Required for surround playback.

**Sub-woofer** :Reproduces powerful deep bass sounds.

• Although the ideal surround system consists of all the speakers listed above, if you don't have a center speaker or a sub-woofer, you can divide those signals between the available speakers in the following steps to obtain the best possible surround reproduction from the speakers you have available.

## 2 Go to the SURROUND SET UP screen.

1

GUI

2

MAIN MENU

|                                |   |
|--------------------------------|---|
| <input type="checkbox"/> CD    | <input checked="" type="checkbox"/> VIDEO1                            |
| <input type="checkbox"/> PHONO | <input checked="" type="checkbox"/> VIDEO2                            |
| <input type="checkbox"/> TUNER | <input checked="" type="checkbox"/> VIDEO3                            |
| <input type="checkbox"/> TAPE1 | <input checked="" type="checkbox"/> TV <input type="checkbox"/> CABLE |
|                                | <input type="checkbox"/> LD   |

TAPE2-MONITOR

[REV] [CE] [ENT]

3


SET UP

SURROUND SET UP

STEM SET UP

[MAIN] [ESC] [CE]

## 3 Select the speakers and enter the speaker distance.

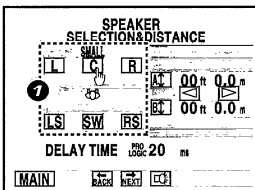

### 1 Select the speakers you connected to the receiver.

When you select the icons for the speakers you connected, they turn grey.

L,R Front speakers (left and right) : Are already selected.

C Center speaker

: Switches each time the icon is pressed:

SMALL → select when using a relatively small center speaker.

LARGE → select when using a relatively large center speaker.

LS, RS Rear speakers (left and right) : LS and RS are selected at the same time.


SW Sub-woofer

continued on next page

### What's delay time?

The sound you hear is composed of sound that comes to your ears directly from the sound source (direct sound), and sound that is reflected off the walls, floor, and ceiling of your room (reflected sound). Reflected sounds arrive at your ears slightly later than the direct sounds. Delay time is the difference in arrival time between the direct sound and the reflected sound.

This receiver sets the appropriate delay time automatically when you input the speaker distance.

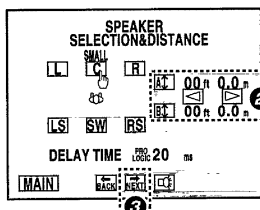

#### 2 Enter the speaker distance .

(A) is the distance from the listening position to the front speakers.

(B) is the distance from the listening position to the rear speakers.

To enter the distance:

① Choose A  $\downarrow$  (or B  $\downarrow$ )


② Use  $\leftarrow$  and  $\rightarrow$  to enter the appropriate distance (from 0m(0ft) to 9m(30ft)).

- The delay time is calculated automatically when you input the speaker distance.

#### 3 Continue to the next screen.

### 4 Adjust the volume levels of each speaker.

A test tone is emitted from the speaker displayed in red. Listen to the test tone and adjust the volume level of each speaker so that they produce the test tone at the same volume level as the front speakers.

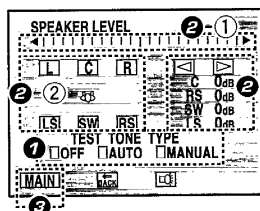

#### 1 Select the test tone type.

AUTO : The test tone is switches between each speaker in regular intervals.

MANUAL : The test tone only comes from the speaker you select (displayed in red).

OFF : Stops the test tone.

#### 2 Adjust the Volume level of each speaker.

① Use the  $\leftarrow$  and  $\rightarrow$  icons to adjust the balance between the front (left and right) speakers.

② Listen to the test tone and select the speaker you want to adjust.

- The name of the selected channel (on the right side of the screen) turns red, to show that it can be adjusted.

③ Listen to the test tone and adjust the volume level of the speaker.

$\leftarrow$  : Lowers the volume  $\rightarrow$  : Raises the volume

- Adjust the sub-woofer as you desire (no test tone comes from the sub-woofer).

#### 3 Return to the main menu.

 
#### 4 Press the GUI key on the remote to turn off the on-screen display.

This completes the surround setup. If you add a new component or change a component, be sure to return to SYSTEM SET UP and correct the settings that apply to the component that was added or changed.

# Normal playback

KR-VS050 (EN)


- Preparations**
- Turn on the power to the related components.
  - Set the **MAIN POWER** key to the ON position.




Keys or controls used in this operation.

## Listening to a source component

 
### 1 Turn on the receiver.



### 2 Select a speaker system.

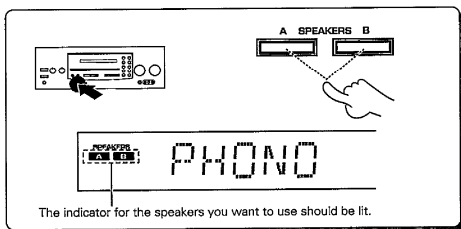


### 3 Select the source you desire.

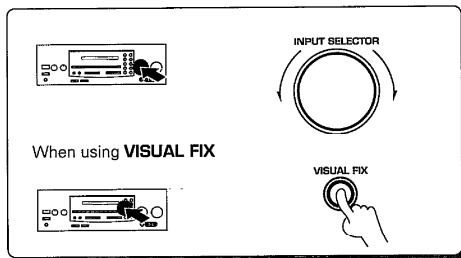

### 4 Start playback from the selected source.

### 5 Adjust the volume.

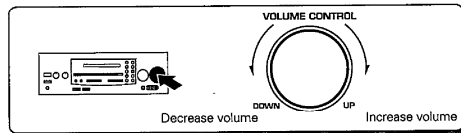


- A ON** : Sound from the speakers connected to the SPEAKERS A terminals on the rear panel.
- B ON** : Sound from the speakers connected to the SPEAKERS B terminals on the rear panel.
- A+B ON** : Sound from both the speakers connected to the SPEAKERS A and B terminals on the rear panel.
- A+B OFF** : No sound from the speakers. Use this setting when listening with headphones for stereo sound in all playback modes.

- When both SPEAKERS A and B are ON, activating a surround mode turns SPEAKERS B OFF automatically. In this case, to listen with SPEAKERS B, press the **SPEAKERS B** key; SPEAKERS A turn OFF automatically.

#### The input sources change as follows:

- ① TUNER (Frequency display)
- ② TAPE 1 (M1)
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ VIDEO 3
- ⑥ TV/EARLE
- ⑦ LD
- ⑧ CD
- ⑨ PHONO

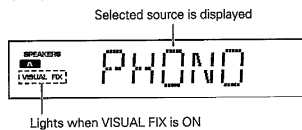



#### VISUAL FIX

The VISUAL FIX function lets you lock on to the current video input. For example, if you turn on **VISUAL FIX** before changing from VIDEO 1 to VIDEO 2, you can watch the images from VIDEO 1 while listening to the sound from VIDEO 2.

- The on-screen display (MAIN MENU) also lets you select, or check, audio and video input selections.



  
- If **TAPE 2(MONITOR)** is ON, you will not hear the selected input source.





Keys or controls used in this operation.

## Adjusting the sound

### Adjusting the tone

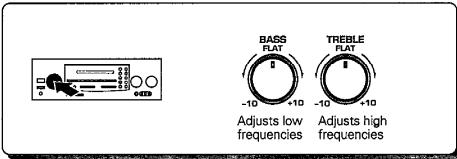



### Adjusting the left and right balance

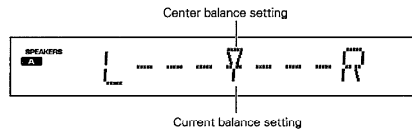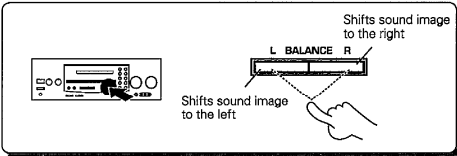


- You can also adjust the balance using the on-screen display (SPEAKER LEVEL).
- When playing back in surround sound, set the balance according to the adjustments shown in "Surround set up".

### Emphasizing deep bass (LOUDNESS)

 

**LOUDNESS** lets you emphasize the sound of deep bass when listening at low volumes.

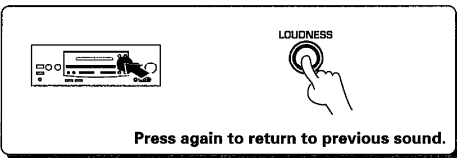


**To cancel**  
Press again.

 



### Muting the sound

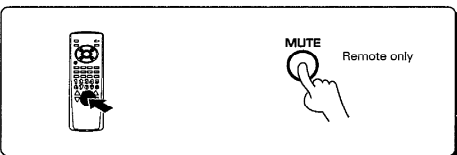 

**To cancel**  
Press again.

 

 
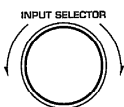 


 Keys or controls used in this operation.


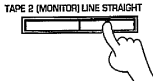 
## LINE STRAIGHT playback

Use this function for high quality playback of CD's (etc.).


**1 Select a playback source.**

 **2 Press the LINE STRAIGHT key.**


**3 Start playback .**



- Tone controls do not work during LINE STRAIGHT playback.
- Pressing any of the keys related to surround playback will cancel LINE STRAIGHT playback.
- You can also select LINE STRAIGHT from the on-screen display (SOUND MENU).
- No signal is output to the sub-woofer during LINE STRAIGHT playback.



### To cancel

 Press again.





## Listening with headphones

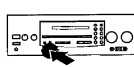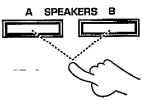  
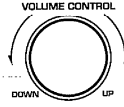 
**1 Turn OFF both speaker switches.**


**2 Connect headphones.**

**3 Adjust the volume.**



Decrease volume      Increase volume



 Make sure the SPEAKERS indicators are turned off.

  - Turning off both **SPEAKERS A** and **B** when using a surround mode, or LINE STRAIGHT playback, will cancel the respective mode and activate stereo playback.






Keys or controls used in this operation.

## Recording audio
 
### Recording a music source

- 1 Select the source you want to record.

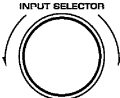


Select a source other than TAPE 1

- 2 Set the cassette deck to record.
- 3 Start playback, then start recording.


### Dubbing tapes (TAPE 2 → TAPE 1)

 - 1 Press TAPE 2(MONITOR).




TAPE 2 (MONITOR) LINE STRAIGHT

- 2 Set the input selector to a source other than TAPE 1.

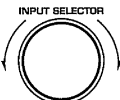

- 3 Start playback from TAPE 2, then start recording on TAPE 1.

 Lights



● You can also select **TAPE 2(MONITOR)** using on-screen operation (MAIN MENU).


● When copying with a double cassette deck, refer to the operating instructions supplied with the deck.

### Dubbing tapes (TAPE 1 → TAPE 2)

 - 1 Set the INPUT SELECTOR to TAPE 1.
- 2 Start playback from TAPE 1, then start recording on TAPE 2.

### TAPE 2 (MONITOR) function

You can connect either a cassette deck or a graphic equalizer to the receiver's TAPE 2 terminals. If you connect a graphic equalizer, the **TAPE 2(MONITOR)** key should be turned ON. If you connect a 3-head cassette deck, you can compare the source sound to the sound being recorded while recording. Press the **TAPE 2(MONITOR)** key to switch between the recorded sound to the source sound. For further details, refer to the operating instructions supplied with the component you connected.



Keys or controls used in this operation.


## Recording video

The following steps show how to record playback from VIDEO2 onto the video deck connected as VIDEO1. For details regarding operation of the video components, refer to the operating instructions supplied with the components.

**1** Connect the component you want to record.

- Connect the source you want to record to the VIDEO2 terminals.
- You can connect video decks (playback only), video cameras (playback only), LD players, BS tuners, etc.

**2** Set the input to "VIDEO 2".

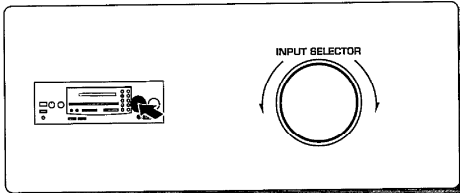

The input sources change as follows:

- ① TUNER (Frequency display)
- ② TAPE 1 (M3)
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ VIDEO 3
- ⑥ TV / CABLE
- ⑦ LD
- ⑧ CD
- ⑨ PHONO

"VIDEO 2" appears in the display.



**3** Start playback from the component you want to record.


**4** Start recording on the video deck.

- Start recording on the deck connected to VIDEO 1.
- By using the input selector to select the input terminals for the video component you wish to record, you can record video to and from other components in the same way.

# Listening to radio broadcasts

 KN-V0080 (En)


This section shows you how to receive radio broadcasts. You can preset up to 40 stations, which can then be received with the touch of a single button.



Keys or controls used in this operation.

## Tuning radio stations


### 1 Set the input to tuner.

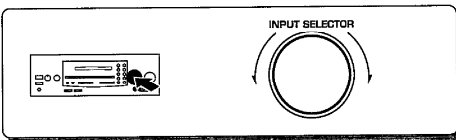


The input sources change as follows:

- ① TUNER (Frequency display)
- ② TAPE 1 (MD)
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ VIDEO 3
- ⑥ TV/CABLE
- ⑦ LB
- ⑧ CD
- ⑨ PHONO

 Frequency display



### 2 Select a broadcast band.

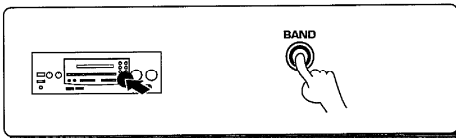


Each press switches the band as follows:

- ① FM
- ② AM

"AM" or "FM" is displayed



### 3 Select a tuning method.

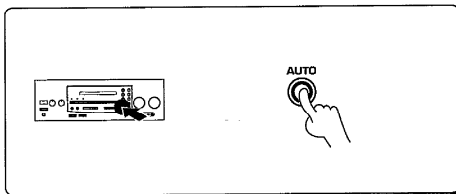

Each press switches the tuning method as follows:


- ① AUTO lights (auto tuning)
- ② AUTO goes out (manual tuning)

● Normally, set to auto tuning.




If the radio waves are weak and there is a lot of interference, switch to manual tuning. (With manual tuning, stereo broadcasts will be received in monaural.)

### 4 Select a station.

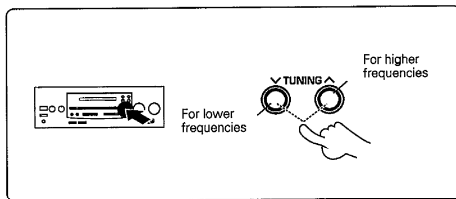

Frequency display

 


"TUNED" is displayed when a station is received

**Auto tuning** :Tunes the next station automatically.


**Manual tuning**: Press the **TUNING** keys repeatedly to tune the station.



 Keys or controls used in this operation.


## Tuning radio stations by frequency (DIRECT tuning)

### 1 Set the input to tuner.

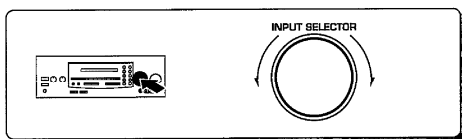


The input sources change as follows:

 - ① TUNER (Frequency display)
- ② TAPE 1 (MD)
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ VIDEO 3
- ⑥ TV/CABLE
- ⑦ LB
- ⑧ CD
- ⑨ PHONO




### 2 Select a broadcast band.

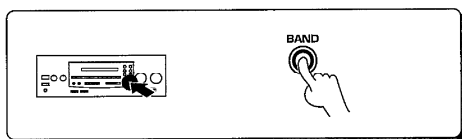


Each press switches the band as follows:

- ① FM
- ② AM

 "AM" or "FM" is displayed



### 3 Enter the frequency.

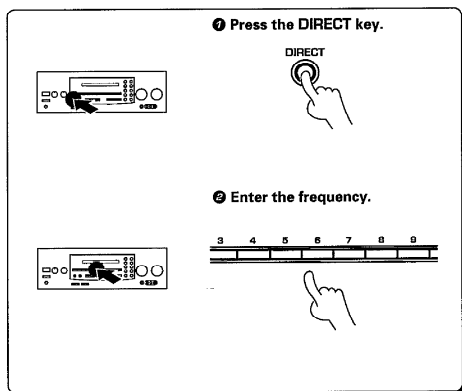

Press the numeric keys in the following order:

 
\* AM 10 kHz/FM 100kHz tuning space (U.S.A., Canada, etc.)

- AM 810 kHz, press ..... **8**, **1**
- AM 1260 kHz, press ..... **1**, **2**, **6**
- FM 90 MHz, press ..... **9**, **0**, **0**
- FM 102.5 MHz, press ..... **1**, **0**, **2**, **5**

\* AM 9 kHz/FM 50 kHz tuning space (other countries)

- AM 810 kHz, press ..... **8**, **1**, **0**
- AM 1260 kHz, press ..... **1**, **2**, **6**, **0**
- FM 90 MHz, press ..... **9**, **0**, **0**, **0**
- FM 102.5 MHz, press ..... **1**, **0**, **2**, **5**, **0**

\* FM DE-EMPHASIS/CHANNEL SPACE switch.




"TUNED" is displayed when a station is received

• If you make a mistake entering the frequency, the frequency display will blink for a few seconds. In this case, start again from step 3.

**Preparations**

 - Tune to the station you want to store. - [27]
- Press the **RECEIVER** key on the remote to activate the receiver mode.



Keys or controls used in this operation.

**Presetting radio stations**

- 1 Press the **MEMORY** key while receiving the station.

 


MEMORY




Proceed to step 2 within 5 seconds (If you wait longer than 5 seconds, repeat step 1.)

- 2 Enter a preset number (1-40).



Lights for 5 seconds

 

Press the numeric keys in the following order:


For "15", press [+10], [5]

For "20", press [+10], [+10], [0]

- Repeat steps 1 and 2 and to store as many stations as necessary.
- If you store a station at a previously used preset, the old station will be replaced by the new one.

**Receiving preset stations**

 - 1 Select tuner.



INPUT SELECTOR



- 2 Enter the number of the preset you want to receive (up to "40").



Press the numeric keys in the following order:

For "15", press [+10], [5]

For "20", press [+10], [+10], [0]

- If you make a mistake entering a two digit number, press the [+10] key several times to return to the original display and start again.

**Receiving preset stations in order (P.CALL)**



Higher preset numbers



Lower preset numbers

- Each time you press the key, another preset station is received in order.

When you press ►►

1→2→3→ . . . 38→39→40→ 1→2→3→ . . .

When you press ◀◀

1←2←3← . . . 38←39←40← 1←2←3← . . .

Holding down the button, lets you skip through the presets, receiving each for 0.5 seconds apiece.

# Ambience effects


KR VB080 (En)


This receiver incorporates 4 different sound modes to let you enjoy surround sound with a wide variety of program sources. The Dolby Pro Logic surround sound lets you enjoy theater-like surround effects when you play Dolby Pro Logic program sources (like Laserdiscs). Dolby 3 Stereo creates a panoramic frontal sound field while keeping dialog on screen. The Digital Signal Processing (DSP) modes, DSP Logic and DSP presence, let you create the atmosphere of a movie theater, jazz club, stadium, or arena from almost any type of program source.

To obtain the best possible surround sound, be sure to complete "Surround set up" before using the surround modes. - 19 - 20

## Sound modes

### Dolby Pro Logic


Dolby Pro Logic is a specially encoded 2 channel surround format designed to provide theater-like surround sound from Dolby Pro Logic program sources (such as video and Laserdisc software marked  (DOLBY SURROUND)). This receiver is equipped with a Dolby Pro Logic surround decoder to let you enjoy the wide variety of currently available Dolby Pro Logic home video software.

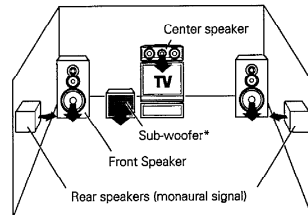

\* Optional in this mode.

### Dolby 3 Stereo

Dolby 3 Stereo creates a panoramic frontal sound field while maintaining the dialog in an on-screen position. This mode is designed for use with Dolby program sources, but can also improve sound field unity for non-Dolby program sources. Dialog positioning and sound image definition, however, may not be as accurate when used with non-Dolby program sources.

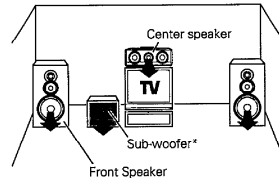

\* Optional in this mode.




### DSP Logic

DSP Logic transforms your listening room into either a **SMALL** or **LARGE** movie theater by using DSP to add delay and reverberation to signals processed by the Dolby Pro Logic surround decoder. These modes are most effective with Dolby Pro Logic program sources, but can also create a convincing theater-like atmosphere from a (non-Dolby) stereo signal.\*

The **EFFECT** level lets you adjust the "presence" of the theater according to your preference.

--(33)

\*Spatial dynamics and sound image definition may not be as accurate when used with non-Dolby Pro Logic program sources.

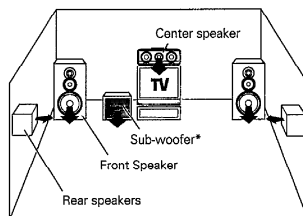


\* Optional in this mode.

### DSP Presence

DSP Presence lets you add the atmosphere of an arena, jazz club, or stadium to almost any type of program source.\* These modes are particularly effective when used with stereo program sources, like CD, television, and FM radio. You might enjoy trying the **STADIUM** or **ARENA** mode the next time you watch a concert or sporting event!

\*DSP Presence will produce a stereo-like surround effect from monaural sources, but there will be some reduction in the presence of the arena, jazz club, or stadium.

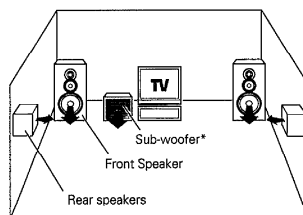

\* Optional in this mode.

### What's DSP?

DSP stands for Digital Signal Processor.


The way a sound is heard in an actual environment depends on a variety of different factors. One of the most important is reverberation (the act of decaying elements of sound echoing in various places).

The DSP modes produce the feeling of presence by using the DSP to create reverberation, without spoiling the sound quality of the original signal.

Manufactured under licence from Dolby Laboratories Licensing Corporation. "Dolby", "Pro Logic" and the double - D symbol are trademarks of Dolby Laboratories Licensing Corporation.

# Playing back with surround sound


KF-V5080 (EN)

DOLBY PRO LOGIC and DOLBY 3 STEREO can be used when playing video or LD software bearing the  DOLBY SURROUND mark. DSP LOGIC can be used with any source. Be sure to complete "Surround set up" before using any of these surround modes. -- 20

## Preparations

- Turn ON related components.
- Complete "Surround set up". -- 20
- Set the input to the component you wish to play back with surround sound.

## 1 Select the SOUND MENU.

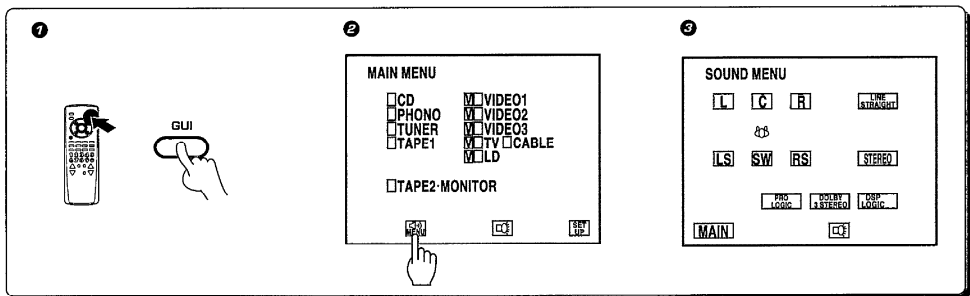

## 2 Select a surround mode.

Select the icon for the mode you desire. The selected icon turns blue.

Shows the speakers selected in SURROUND SET UP -- 20

**DOLBY PRO LOGIC**  
Selects the DOLBY PRO LOGIC mode.

**DOLBY 3 STEREO**  
Selects the DOLBY 3 STEREO mode.

**DSP LOGIC**  
Turns on the current DSP LOGIC mode. Press the blue triangle (displayed when DSP LOGIC is turned on) to switch to the DSP CONTROL screen and set the DSP LOGIC mode and effect level.

**LINE STRAIGHT**  
Lets you enjoy stereo playback with high sound quality.

**STEREO**  
Cancels surround playback.

## 3 Start playing the video software.

## 4 Adjust the volume.




### To select a DSP mode

Pressing the blue triangle (displayed when DSP LOGIC is turned on) in the DSP LOGIC icon on the SOUND MENU, displays the DSP CONTROL screen. Set the DSP LOGIC mode and EFFECT LEVEL as you desire.



#### DSP LOGIC mode setting

- LARGE** : Simulates the presence of a large movie theater.
- SMALL** : Simulates the presence of a relatively smaller movie theater.

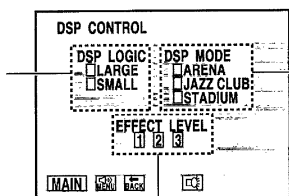

#### DSP presence mode setting

- ARENA** : Simulates the presence of a first row seat in an arena.
- JAZZ CLUB** : Simulates the presence of a live jazz house where cymbals resound.
- STADIUM** : Simulates the presence of an open air stadium where there is little reverberation.

#### EFFECT LEVEL setting

 
Lets you choose from three different effect levels.

## Convenient functions

### DIMMER switch

The dimmer switch lets you adjust the brightness of the receiver's display in three levels. You might find this useful if you darken your room to watch movies or listen to music.


Press to switch.



### DISPLAY MODE key

Each time you press the **DISPLAY MODE** key on the remote control, the information shown in the receiver's display changes between the current input source and the current surround mode.

 DISPLAY MODE



# Remote controlling video components

KR-V9080 (En)

Refer to the following table for the type of remote control operations available for each video component. Each key on the table operates the selected component as shown in the respective column. (The set up code for each component must be entered beforehand. - 18)

 
 
 
 
 









 

"Connecting the repeater" - 11  
"System set up" - 11

## How to operate video components

- 1** Turn on the receiver.
- 2** Set the input selector to the component you want to control.
- 3** Use a component control selection key to select the component you want to control.
- 4** Refer to the "Remote control key operation table" and press the key corresponding to the operation you desire.

• Be sure to point the remote control at the IR receptor on the receiver when operating the remote control, even when operating other components.

### Remote control key operation table

| Component control selection keys   | LD<br>LD<br> | VIDEO 1<br>VIDEO 1<br>   | VIDEO 2<br>VIDEO 2<br> | TV<br>TV<br> | CABLE/SAT.<br>CABLE/SAT.<br> |
|--|---|---|---|---|--|
| Key names  | (IR remote operation)   |   |   |   |  |
| <b>1</b> POWER key      | Power On/Off  |   |   |   |  |
| <b>2</b> II key         | II (Pause)  |   |   | Video selector  |  |
| <b>3</b> ►/II key       | ► (Play)  |   |   | —   |  |
| <b>4</b> ►► key         | ►► (Skip)   | ►► (Fast forward)   |   | Volume up   |  |
| <b>5</b> ◄◄ key        | ◄◄ (Skip)   | ◄◄ (Rewind)   |   | Volume down   |  |
| <b>6</b> ■ key        | ■ (Stop)  |   |   | Mute  |  |
| <b>7</b> REC key      | —   | ● (Record)  |   | —   |  |
| <b>8</b> ANY key (Δ)  | ►► (Search)   | Channel up  |   |   |  |
| ANY key (▽)           | ◄◄ (Search)   | Channel down  |   |   |  |
| Numeric keys          | Numeric keys + +10 key  |   |   |   |  |
| <b>9</b> ENTER key    | —   | Use after the numeric keys when entering a channel number.<br>(See the operating instructions supplied with the component to be controlled for information about how to enter the channel.) |   |   |  |

**Note** Although each setup code is designed to work with a number of different models, certain codes may not work with some models. (Also, certain codes may only operate some of the functions available on a given model.)

# Set up code chart

KR-V9080 (En)

## VCR Set up codes

| Maker           | Set up codes  |
|-----------------|---|
| ADVENTURA       | 015   |
| AIKO            | 293   |
| AIWA            | 015   |
| AKAI            | 056,064,068,076,257                                     |
| AMERICAN HIGH   | 050   |
| ASHA            | 255   |
| AUDIOVOX        | 052   |
| BEAUMARK        | 255   |
| BELL & HOWELL   | 119   |
| BROKSONIC       | 136,199,226,310,376                                     |
| CALIX           | 052   |
| CANON           | 050,182   |
| CAPEHART        | 035   |
| CARVER          | 096   |
| CCE             | 087,293   |
| CITIZEN         | 052,293   |
| COLT            | 087   |
| CRAIG           | 052,062,087,255,286                                     |
| CURTIS MATHES   | 050,056,075   |
| CYBERNEX        | 255   |
| DAEWOO          | 035,060,102,293   |
| DAYTRON         | 035   |
| DYNATECH        | 015   |
| ELECTROHOME     | 052   |
| ELECTROPHONIC   | 052   |
| EMEREX          | 047   |
| EMERSON         | 015,017,052,059,076,136,199,223,224,226,227,309,310,376 |
| FISHER          | 062,069,081,119   |
| FUJI            | 048,050   |
| FUNAI           | 015   |
| GARRARD         | 016   |
| GE              | 050,075,080,217   |
| GO VIDEO        | 247,294   |
| GOLDSTAR        | 033,052,053   |
| GRADIENTE       | 015   |
| HARLEY DAVIDSON | 015   |
| HARMAN/KARDON   | 053,090   |
| HARWOOD         | 087   |
| HEADQUARTER     | 061   |
| HI-Q            | 062   |
| HITACHI         | 056,057,080,097,120,181                                 |
| JENSEN          | 056   |
| JVC             | 023,056,082   |
| KENWOOD         | 053,056,082   |
| KLH             | 087   |
| KODAK           | 050,052   |
| LLOYD           | 015   |
| LLOYD'S         | 223   |
| LOGIK           | 087   |
| LXI             | 052   |
| MAGNAVOX        | 050,054,096,125,164                                     |
| MAGNIN          | 225   |
| MARANTZ         | 050,096   |
| MARTA           | 052   |
| MATSUSHITA      | 050   |
| MEI             | 050   |
| MEMOREX         | 015,050,052,054,061,062,063,119,225                     |
| MGA             | 058,076   |
| MGN TECHNOLOGY  | 255   |
| MINOLTA         | 057,120   |
| MITSUBISHI      | 058,076,082,090,188,229,257                             |
| MOTOROLA        | 050,063   |

| Maker           | Set up codes                            |
|-----------------|---|
| MTC             | 015,255                                 |
| MULTITECH       | 015,087                                 |
| NAD             | 073                                     |
| NEC             | 053,055,056,065,082,097                 |
| NIKKO           | 052                                     |
| NOBLEX          | 255                                     |
| OLIMPUS         | 050,241                                 |
| OPTIMUS         | 052,063,073,119                         |
| OPTONICA        | 077                                     |
| PANASONIC       | 050,092,240,241                         |
| PENNEY          | 050,052,053,055,057,069,255             |
| PENTAX          | 067,080,120                             |
| PHILCO          | 050                                     |
| PHILIPS         | 050,077,096,125                         |
| PILOT           | 052                                     |
| PIONEER         | 073,082                                 |
| PORTLAND        | 035                                     |
| PROTEC          | 087                                     |
| PULSAR          | 054                                     |
| QUARTER         | 061                                     |
| QUARTZ          | 061                                     |
| QUASAR          | 050,092                                 |
| RADIO SHACK     | 015,052                                 |
| RADIX           | 052                                     |
| RANDEX          | 052                                     |
| RCA             | 057,075,080,092,120,164,217             |
| REALISTIC       | 015,050,052,061,062,063,077,081,119,255 |
| RICOH           | 049                                     |
| RUNCO           | 054                                     |
| SAMSUNG         | 060,068,255                             |
| SANKY           | 054,063                                 |
| SANSUI          | 056,082,097,286                         |
| SANYO           | 061,062,119,255                         |
| SCOTT           | 058,060,136,199,225,226,227             |
| SEARS           | 050,052,057,061,062,069,081,119,120     |
| SHARP           | 063,077                                 |
| SHINTOM         | 087                                     |
| SHOGUN          | 255                                     |
| SINGER          | 087                                     |
| SONY            | 047,048,049,050                         |
| STS             | 057                                     |
| SYLVANIA        | 015,050,058,096,125                     |
| SYMPHONIC       | 015                                     |
| TATUNG          | 056                                     |
| TEAC            | 015,056                                 |
| TECHNICS        | 050,177                                 |
| TEKNIKA         | 015,050,052,067                         |
| TMK             | 223,255                                 |
| TOSHIBA         | 058,060,081,225,227                     |
| TOTEVISION      | 052,255                                 |
| UNITECH         | 255                                     |
| VECTOR          | 060                                     |
| VECTOR RESEARCH | 053,055                                 |
| VIDEO CONCEPTS  | 055,060,076                             |
| VIDEOSONIC      | 255                                     |
| WARDS           | 015,050,057,062,063,077,087,164,227,255 |
| XR-1000         | 015,050,087                             |
| YAMAHA          | 053                                     |
| ZENITH          | 048,049,054                             |

## TV Set up codes

| Maker         | Set up code   |
|---------------|---|
| A-MARK        | 018   |
| ABEX          | 047   |
| ADMIRAL       | 108   |
| ADVENTURA     | 061   |
| AIKO          | 107   |
| AKAI          | 045,113   |
| ALARON        | 231   |
| ALLERON       | 194,198   |
| AMBASSADOR    | 192   |
| ANAM          | 019,195   |
| ANAM NATIONAL | 070   |
| AOC           | 018,034,045,067,152,200   |
| ARCHER        | 018   |
| AUDIOVOX      | 018,195   |
| BELCOR        | 034   |
| BELL & HOWELL | 031,169   |
| BRADFORD      | 195   |
| BROCKWOOD     | 034   |
| BROKSONIC     | 018   |
| CANDLE        | 045,061,071,201   |
| CARVER        | 069   |
| CCE           | 232   |
| CELEBRITY     | 015   |
| CHITZEN       | 045,054,061,071,075,107,201,295   |
| CLAIRTONE     | 200   |
| CONCERTO      | 071   |
| CONTEC        | 173,195,200   |
| CRAIG         | 195   |
| CROWN         | 054,195   |
| CURTIS MATHES | 045,054,075,169   |
| CXC           | 195   |
| DAEWOO        | 034,054,106,107,466   |
| DAYTRON       | 034   |
| DUMONT        | 032,034   |
| DYNATECH      | 064   |
| ELECTROBAND   | 015,200   |
| EMERSON       | 034,053,054,169,173,192,193,194,195,196,197,198,200,251,285,295,297,478 |
| ENVISION      | 045   |
| FISHER        | 169,174   |
| FUJITSU       | 194   |
| FUNAI         | 194,195   |
| FUTURETECH    | 195   |
| GE            | 036,042,044,062,066,070,150,189,193,297                                 |
| GIBRALTER     | 032,034,045   |
| GOLDSTAR      | 016,017,034,045,047,054,071,121,193                                     |
| GRUNPY        | 194,195   |
| HALLMARK      | 193   |
| HARVARD       | 195   |
| HITACHI       | 047,053,071,110,112,160,166,188,242                                     |
| IMA           | 195   |
| INFINITY      | 069   |
| JANEIL        | 061   |
| JBL           | 069   |
| JCB           | 015   |
| JENSEN        | 065   |
| JVC           | 051,068,197   |
| KAMP          | 231   |
| KAWASHO       | 173,231,323   |
| KAYPANI       | 067   |
| KENWOOD       | 034,045,171   |
| KLOSS         | 039,061   |
| KMC           | 121   |

| Maker       | Set up code   |
|-------------|---|
| KTV         | 045,054,195,198,200,232,295   |
| LOGIK       | 031   |
| LUXMAN      | 071   |
| LXI         | 062,069,163,169,171,193   |
| MAGNAVOX    | 045,051,069,111,201   |
| MAJESTIC    | 031   |
| MARANTZ     | 045,069   |
| MATSUI      | 232   |
| MEGATRON    | 018,160,093   |
| MEI         | 200   |
| MEMOREX     | 031,071,121,165,169,193   |
| MGA         | 034,045,165,170,193   |
| MIDLAND     | 032,047,054,062,066,150   |
| MINUTZ      | 036   |
| MITSUBISHI  | 034,113,165,170,193   |
| MOTOROLA    | 070,108   |
| MTC         | 034,045,064,071,075,106,200   |
| MULTITECH   | 064,195,232   |
| NAD         | 171,181,193   |
| NEC         | 034,045,051,071,185   |
| NIKKO       | 045,107,193,332   |
| NTC         | 107   |
| ONWA        | 195   |
| OPTIMUS     | 169,181   |
| OPTONICA    | 108,180   |
| ORION       | 251   |
| PANASONIC   | 066,069,070,177,265,353   |
| PENNEY      | 017,018,033,034,036,042,045,047,054,062,066,075,125,150,164,171,193 |
| PHILCO      | 034,045,069,111   |
| PHILIPS     | 069   |
| PILOT       | 034,045,054   |
| PIONEER     | 053,181   |
| PORTLAND    | 034,054,107   |
| PRICECLUB   | 075   |
| PRISM       | 066   |
| PROSCAN     | 062   |
| PROTON      | 018,046,067,193   |
| PULSAR      | 032   |
| PULSER      | 034   |
| QUASAR      | 066,070,265   |
| RADIO SHACK | 034,047,054,180,195   |
| RCA         | 033,034,044,053,062,105,150,189                                     |
| REALISTIC   | 034,045,047,054,071,169,180,193,195                                 |
| RHAPSODY    | 198,200,231   |
| RUNCO       | 032,045   |
| SAMPO       | 045,047,054,067,115,125   |
| SAMSUNG     | 034,045,047,054,071,075,125,193                                     |
| SAMSUX      | 054   |
| SANYO       | 161,169,174   |
| SCIMITSU    | 034   |
| SCOTCH      | 193   |
| SCOTT       | 034,193,194,195,251   |
| SEARS       | 062,069,071,161,163,164,169,171,174,186,193,194                     |
| SHARP       | 054,108,180   |
| SHOGUN      | 034   |
| SIGNATURE   | 031   |
| SIMPSON     | 201,202   |
| SONY        | 015,026,095,126,288   |
| SOUNDESIGN  | 193,194,196,201   |
| SPECTRICON  | 018,152   |
| SQUAREVIEW  | 186   |
| SSS         | 034,195   |

**TV Set up codes**

| Maker           | Set up codes  |
|-----------------|---|
| STARLITE        | 195   |
| SUPRE-MACY      | 061   |
| SUPREME         | 015   |
| SYLVANIA        | 045,069,080,111   |
| SYMPHONIC       | 186   |
| TANDY           | 108   |
| TATUNG          | 018,064,070   |
| TECHNICS        | 066,265   |
| TECHWOOD        | 066,071   |
| TEKNIKA         | 031,034,054,069,071,075,107,165,194,195,201,327,337                 |
| TERA            | 046   |
| TMK             | 071,192193  |
| TOSHIBA         | 051,075,164,169,171   |
| TOSONIC         | 200   |
| TOTEVISION      | 054   |
| ULTRA           | 406   |
| UNIVERSAL       | 042   |
| VECTOR RESEARCH | 045   |
| VICTOR          | 068,265   |
| VIDEO CONCEPTS  | 113   |
| VIDEKRON        | 069   |
| VIDTECH         | 034,193   |
| VIKING          | 061   |
| WARDS           | 031,034,035,036,042,043,044,045,069,071,095,111,126,180,189,193,194 |
| YAMAHA          | 034,045   |
| ZENITH          | 031,032   |
| ZONDA           | 018   |

**Cable Set up codes**

| Maker              | Set up codes                        |
|--------------------|-------------------------------------|
| ABC                | 016,018,022,023,026,028,029,032,062 |
| ANTRONIX           | 222                                 |
| ARCHER             | 054,168,222                         |
| CENTURY            | 168                                 |
| CITIZEN            | 168                                 |
| COLOUR VOICE       | 040,046                             |
| COMBAND            | 247,248                             |
| COMTRONICS         | 055,075                             |
| CONTEC             | 034                                 |
| EASTERN            | 017                                 |
| ELECTRICORD        | 093                                 |
| FOCUS              | 415                                 |
| GARRARD            | 168                                 |
| GC ELECTRONICS     | 222                                 |
| GE                 | 247,248                             |
| GEMINI             | 030,072,085,257                     |
| GENERAL INSTRUMENT | 026,291                             |
| GOLDSTAR           | 055159                              |
| HAMLIN             | 024,035,049,274,288                 |
| HITACHI            | 026                                 |
| HITEX              | 022                                 |
| JASCO              | 168                                 |
| JERROLD            | 018,026,027,029,030,039,062,113,291 |
| MACOM              | 048                                 |
| MAGNAVOX           | 042                                 |
| MEMOREX            | 015                                 |
| MOVIE TIME         | 078,093,171                         |
| NORTHCOAST         | 329                                 |
| NSC                | 078,085,171                         |
| OAK                | 022,034,263                         |
| PANASONIC          | 036,122                             |

| Maker               | Set up codes                        |
|---------------------|-------------------------------------|
| PARAGON             | 015                                 |
| PHILIPS             | 040,042,043,044,045,046,168,257,305 |
| PIONEER             | 038,159,275                         |
| POPULAR MECHANICS   | 415                                 |
| PULSAR              | 015                                 |
| RCA                 | 036                                 |
| REALISTIC           | 222                                 |
| RECOTON             | 415                                 |
| REGAL               | 035,274,288,294                     |
| REGENCY             | 017                                 |
| REMBRANDT           | 026,085                             |
| RUNCO               | 015                                 |
| SAMSUNG             | 055,159                             |
| SCIENTIFIC ATLANTA  | 021,023,032,292                     |
| SIGNAL              | 030,055                             |
| SIGNATURE           | 026                                 |
| SL MARX             | 055                                 |
| SPRUCER             | 036,322                             |
| STANDARD COMPONENTS | 111                                 |
| STARCOM             | 018,030,062,113                     |
| STARGATE            | 030,055                             |
| STARQUEST           | 030                                 |
| SYLVANIA            | 016                                 |
| TANDY               | 273                                 |
| TATUNG              | 112                                 |
| TEKNIKA             | 161                                 |
| TELECAPTION         | 236                                 |
| TELEVIEW            | 055                                 |
| TEXSCAN             | 016,111                             |
| TOCOM               | 027,028,074                         |
| TOSHIBA             | 015                                 |
| TUSA                | 030                                 |
| TV86                | 078                                 |
| UNIKA               | 168,222                             |
| UNITED ARTISTS      | 022                                 |
| UNITED CABLE        | 018                                 |
| UNIVERSAL           | 054,092,093,168,206,222,337         |
| VIDEOWAY            | 265                                 |
| VIDTECH             | 259                                 |
| VIEWSSTAR           | 042,075,078,226,273,304             |
| ZENITH              | 015,069                             |
| ZENTEK              | 415                                 |

**LD Set up codes**

| Maker      | Set up codes |
|------------|--------------|
| AIWA       | 218          |
| CARVER     | 079          |
| DENON      | 187          |
| FUNAI      | 218          |
| KENWOOD    | 273          |
| MAGNAVOX   | 232,256      |
| MARANTZ    | 079          |
| MITSUBISHI | 074          |
| NAD        | 074          |
| PANASONIC  | 219          |
| PHILIPS    | 079          |
| PIONEER    | 074          |
| QUASAR     | 219          |
| RCA        | 366          |
| REALISTIC  | 218          |
| SHARP      | 016          |
| SONY       | 208,216      |
| YAMAHA     | 232          |

## Satellite Set up codes

| Maker              | Set up codes            |
|--------------------|-------------------------|
| BIRDVIEW           | 060                     |
| CHANNEL MASTER     | 033                     |
| CHAPARRAL          | 068                     |
| CITOH              | 179                     |
| DRAKE              | 033,079                 |
| ECHOSTAR           | 163,174,233,284,295,327 |
| GENERAL INSTRUMENT | 053,065                 |
| MACOM              | 033,065                 |
| MEMOREX            | 284                     |
| PROSAT             | 173                     |
| RCA                | 581                     |
| REALISTIC          | 067                     |
| STS                | 052                     |
| UNIDEN             | 067,089,091             |
| ZENITH             | 079                     |

### Notes for using cable television or satellite broadcast reception equipment

Please note that the input selector and the components which can be used with this receiver vary according to the region in which it was purchased.

**TV/CABLE:** Lets you input signals from a TV or cable TV receiver and enter TV or cable TV set up codes.

**TV/SAT:** Lets you input signals from a TV or satellite receiver and enter TV or satellite receiver set up codes.

The specifications for each region are as follows.


| Region  | FM DE-EMPHASIS/<br>CHANNEL SPACE switch position | Input selector name | Functional set up codes |
|---|--|---------------------|-------------------------|
| <b>For U.S.A., Canada and South American countries</b>  | _____  | <b>TV/CABLE</b>     | <b>TV or Cable</b>      |
| <b>For Australia</b>  | _____  | <b>TV/SAT.</b>      | <b>TV or Satellite</b>  |
| <b>For other countries</b><br>(The specifications change according to the position of the FM DE-EMPHASIS/CHANNEL SPACE switch.) |  | <b>TV/CABLE</b>     | <b>TV or Cable</b>      |
|   |  | <b>TV/SAT.</b>      | <b>TV or Satellite</b>  |



Some set up codes cannot be used in certain regions.

The following chart shows all the menus that can be displayed in the OSD mode. Use this chart as a reference to determine the position of the current menu when using the GUI control mode. The numbers preceding the menu names correspond to the numbers in "Screen menu structure".

① MAIN MENU

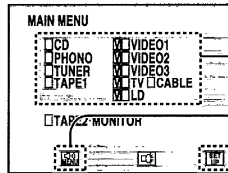


Switches to the operation menu for the respective component.


Switches to the SOUND MENU.

Switches to the SET UP menu.

Set up menus

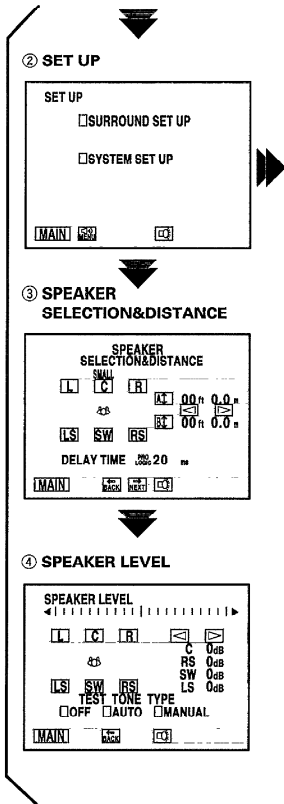

Sound menus

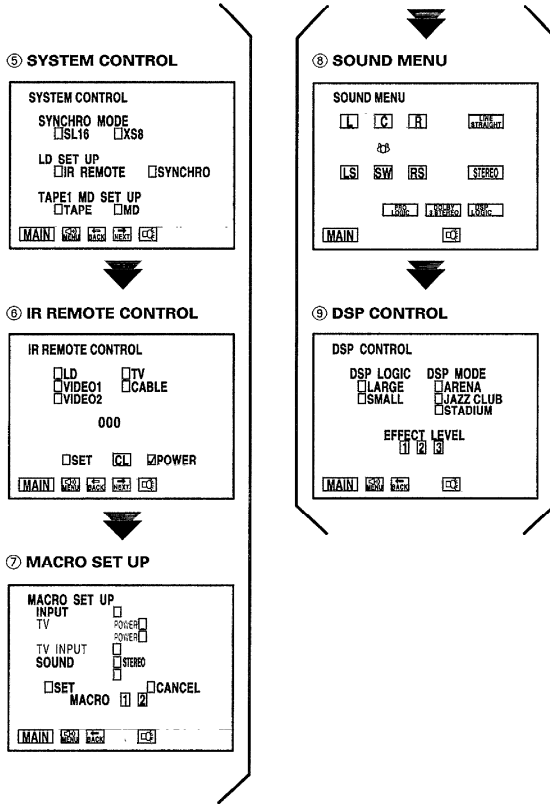

### Operation menus

**10 CD**

CD

DISC NO. 001

TRACK NO.

◀◀ ▶▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

Disc Skip

**11 TUNER**

TUNER

FM 76.00 MHz

BAND AUTO MEMORY

|       |           |     |           |
|-------|-----------|-----|-----------|
| ▲ 01M | 76.00 MHz | 09M | 144.0 MHz |
| ▼ 02M | 83.50 MHz | 07M | 81.30 MHz |
| 03M   | 90.00 MHz | 08M | 79.50 MHz |
| 04M   | 63.0 MHz  | 05M | 82.50 MHz |
| 05M   | 99.9 MHz  | 10M | 84.70 MHz |

MAIN [M] [C]

**12 TAPE 1**

TAPE1

A B

◀◀ ▶▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

**13 MD**

MD

TRACK NO.

◀◀ ▶▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

**14 VIDEO 1**

VIDEO1

◀ CHANNEL ▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

TV/VIDEO

**15 VIDEO 2**

VIDEO2

◀ CHANNEL ▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

TV/VIDEO

**16 TV**

TV

◀ CHANNEL ▶

◀ VOLUME ▶

MUTE POWER

MAIN [M] [C]

**17 CABLE**

CABLE

◀ CHANNEL ▶

◀ VOLUME ▶

MUTE POWER

MAIN [M] [C]

**18 LD**

LD

◀◀ ▶▶

◀ ▶

⏮ ⏪ ⏩ ⏭

MAIN [M] [C]

• The icons have the same functions as the keys on the receiver.

• Select "B" when operating a single cassette deck.



1. Refer to the operating instructions supplied with each component for details regarding their operation.
2. Selecting PHONO or VIDEO 3 from the main menu only switches the INPUT.
3. The operation screens are displayed in black and white when video signals are being input to the TV.
4. Some of the contents displayed may vary according to the operation mode.



## **Resetting the Microcomputer**

If the microcomputer may malfunction (unit cannot be operated, or shows an erroneous display) if the power cord is unplugged while the power is ON, or due to some other external factor. If this happens, execute the following procedure to reset the microcomputer and return the unit to its normal operating condition.

**With the power cord plugged in, turn the MAIN POWER key OFF. Then, while holding down the REMOTE POWER key, press MAIN POWER.**

- Please note that resetting the microcomputer will clear the contents of the memory and returns the unit to the state it was in when it left the factory.

## **Amplifier**

| Symptom  | Cause   | Remedy   |
|--|---|--|
| No sound from the speakers.  | <ul style="list-style-type: none"> <li>● The speaker cords are disconnected.</li> <li>● VOLUME is set to the minimum position.</li> <li>● MUTE is ON.<br/>(The MUTE indicator is blinking)</li> <li>● The SPEAKERS switches are set to OFF.</li> <li>● The TAPE 2(MONITOR) key is set to ON.</li> </ul> | <ul style="list-style-type: none"> <li>● Connect them properly referring to "Connecting the speakers" - (10)</li> <li>● Adjust the volume to a proper level.</li> <li>● Turn OFF the MUTE. - (2)</li> <li>    (use the remote)</li> <li>● Set the SPEAKERS switch(es) to ON. - (2)</li> <li>● Set the TAPE 2(MONITOR) key to OFF.</li> </ul> |
| The standby indicator blinks and sound is not output.  | <ul style="list-style-type: none"> <li>● Speaker cords are short-circuited.</li> </ul>  | <ul style="list-style-type: none"> <li>● Turn the power off, eliminate the short-circuiting, then turn on the power again. - (1)</li> </ul>  |
| Sound is not output from one of the speakers.  | <ul style="list-style-type: none"> <li>● The speaker cord is disconnected.</li> <li>● The BALANCE control is set to an extreme position.</li> </ul>   | <ul style="list-style-type: none"> <li>● Connect it properly referring to "Connecting the speakers".</li> <li>● Adjust the Left/Right balance.</li> </ul>  |
| Sound is not output from the rear (surround) speakers and/or the center speaker, or their sound is very small. | <ul style="list-style-type: none"> <li>● The rear speaker cords and/or the center speaker cord is disconnected.</li> <li>● A surround mode has not been engaged.</li> <li>● The REAR VOL. and/or CENTER VOL. controls are set to the minimum level.</li> </ul>  | <ul style="list-style-type: none"> <li>● Connect it properly referring to "Connecting the speakers".</li> <li>● Select a surround mode.</li> <li>● Adjust the REAR VOL. and CENTER VOL. controls.</li> </ul>   |
| A humming noise is generated when the PHONO input selector is selected.  | <ul style="list-style-type: none"> <li>● The audio cord from the turntable is not connected to the PHONO jacks.</li> <li>● The turntable is not grounded.</li> </ul>  | <ul style="list-style-type: none"> <li>● Insert the audio cord plugs securely into the PHONO jacks.</li> <li>● Connect the grounding wire to the GND terminal on the rear panel.</li> </ul>  |

## **Tuner**

| Symptom  | Cause  | Remedy  |
|--|--|---|
| Radio Stations cannot be received  | <ul style="list-style-type: none"> <li>● No antenna is connected.</li> <li>● The broadcast band is not set properly.</li> <li>● The frequency of the desired station is not tuned.</li> </ul>  | <ul style="list-style-type: none"> <li>● Connect an antenna.</li> <li>● Set the broadcast band properly.</li> <li>● Tune the frequency of the desired station. - (2)</li> </ul>                               |
| Interference   | <ul style="list-style-type: none"> <li>● Noise due to ignition noise from an automobile.</li> <li>● Noise due to interference from an electric appliance.</li> <li>● Noise due to a nearby TV set.</li> </ul>                        | <ul style="list-style-type: none"> <li>● Install the outdoor antenna away from the road.</li> <li>● Turn off the power to the appliance.</li> <li>● Install the receiver farther away from the TV.</li> </ul> |
| A station which was preset cannot be received by pressing the corresponding numeric key. | <ul style="list-style-type: none"> <li>● The preset station belongs to a frequency that cannot be received.</li> <li>● The preset memory was cleared because the power cord had been unplugged for a long period of time.</li> </ul> | <ul style="list-style-type: none"> <li>● Preset a station with a receivable frequency.</li> <li>● Preset the station again.</li> </ul>  |

## Remote control unit

| Symptom                                   | Cause   | Remedy   |
|---|---|--|
| Remote control operation is not possible. | <ul style="list-style-type: none"> <li>● Batteries are exhausted.</li> <li>● The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle between the receiver and the remote.</li> <li>● The audio cords and system control cords are not connected properly.</li> <li>● No software is loaded in the source component.</li> <li>● An attempt is made to play a tape which is being recorded in the cassette deck.</li> <li>● The remote control has not been set to the operation mode for the component you wish to control.</li> </ul> | <ul style="list-style-type: none"> <li>● Replace with new batteries. <span style="float:right">- [22]</span></li> <li>● Operate the remote control unit within the controllable range.</li> <li>● Connect properly referring to "System connections". <span style="float:right">- [32]</span></li> <li>● Place software in the source component you want to play.</li> <li>● Wait until recording has completed.</li> <li>● Press the component control selection key corresponding to the component you wish to control to activate the respective control mode before operation. <span style="float:right">- [32] - [34]</span></li> </ul> |



Do not use contact cleaning agents because they could cause a malfunction. Be specifically careful against using contact cleaning agents containing oil, since they may deform the plastic components.

### For the U.S.A.

#### FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

### For the U.S.A.

#### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Memory back up function

**Please note that the following items will be deleted from the receiver's memory if the receiver is not turned on for a period of approximately 3 days.**

- Power mode.
- SYSTEM CONTROL MODE setting.
- Settings made using OSD (like SYSTEM SET UP and SURROUND SET UP).
- Input selector settings (including MD and LD).
- Volume level.
- Broadcast band.
- Frequency setting.
- Preset stations.

# Specifications (For U.S.A. and Canada)

KR-V9080 (EN)

## Rated power output during STEREO operation

120 watts per channel minimum RMS, both channels driven, at 8 Ω from 20 Hz to 20 kHz with no more than 0.03 % total harmonic distortion. (FTC)

## Rated power output during SURROUND operation

### Front

105 watts per channel minimum RMS, both channels driven, at 8 Ω, 1kHz with no more than 0.7 % total harmonic distortion.

### Center

105 minimum RMS at 8 Ω, 1kHz with no more than 0.7 % total harmonic distortion.

### Rear

70 watts per channel minimum RMS, both channels driven, at 8 Ω, 1kHz with no more than 0.7 % total harmonic distortion.

|                                |                                     |
|--------------------------------|-------------------------------------|
| Total harmonic distortion      | ..... 0.005%(1 kHz, 60W, 8 Ω)       |
| Frequency response             |                                     |
| LINE(CD, AUX, TAPE)            | ..... 10 Hz ~ 75 kHz, + 0 dB, -3 dB |
| Signal to noise ratio (IHF'66) |                                     |
| PHONO(MM)                      | ..... 75 dB                         |
| LINE(CD, AUX, TAPE)            | ..... 98 dB                         |
| Input sensitivity / impedance  |                                     |
| PHONO (MM)                     | ..... 2.5 mV / 47 kΩ                |
| LINE(CD, AUX, TAPE)            | ..... 200 mV / 47 kΩ                |
| Output level / impedance       |                                     |
| TAPE REC                       | ..... 200 mV / 2.2 kΩ               |
| PRE OUT (SUBWOOFER)            | ..... 1 V / 1 kΩ                    |
| Tone Control                   |                                     |
| BASS                           | ..... ±10 dB (at 100 Hz)            |
| TREBLE                         | ..... ±10 dB (at 10 kHz)            |
| LOUDNESS control               |                                     |
| VOLUME at -30 dB level         | ..... +8 dB (at 100 Hz)             |

## VIDEO section

|                            |                         |
|----------------------------|-------------------------|
| TELEVISION format          | ..... NTSC              |
| VIDEO inputs / outputs     |                         |
| VIDEO (composite)          | ..... 1 Vp-p / 75 Ω     |
| S-VIDEO (luminance signal) | ..... 1 Vp-p / 75 Ω     |
| (chrominance signal)       | ..... 0.286 Vp-p / 75 Ω |

## FM tuner section

|  |  |
|--|--|
| Tuning frequency range                     | ..... 87.5 MHz ~ 108 MHz                               |
| Usable sensitivity (MONO)                  | ..... 1.2μV (75 Ω) / 13.2 dBf (75 kHz DEV., S/N 30 dB) |
| 50dB quieting sensitivity                  |  |
| STEREO                                     | ..... 32μV (75 Ω) / 41.2 dBf (75 kHz DEV.)             |
| Total harmonic distortion (1 kHz)          |  |
| MONO                                       | ..... 0.6 % (65.2 dBf input)                           |
| STEREO                                     | ..... 0.7 % (65.2 dBf input)                           |
| Signal to noise ratio (1 kHz, 75 kHz DEV.) |  |
| MONO                                       | ..... 75 dB (65.2 dBf input)                           |
| STEREO                                     | ..... 68 dB (65.2 dBf input)                           |
| Selectivity ( ±400 kHz)                    | ..... 50 dB  |
| Stereo separation (1 kHz)                  | ..... 40 dB  |
| Frequency response                         | ..... 30 Hz ~ 15kHz,+0.5 dB, -3.0 dB                   |

## AM tuner section

|  |                           |
|--|---------------------------|
| Tuning frequency range                       | ..... 530 kHz ~ 1.700 kHz |
| Usable sensitivity (30% mod., S/N 20 dB)     | ..... 16 μV / (500 μV/m)  |
| Total harmonic distortion                    | ..... 0.7 %               |
| Signal to noise ratio (30 % mod. 1 mV input) | ..... 45 dB               |
| Selectivity                                  | ..... 30 dB               |

## GENERAL

|                         |                                   |
|-------------------------|-----------------------------------|
| Power consumption       | ..... 5.2 A                       |
| AC outlet               |                                   |
| SWITCHED                | ..... 2 (total 150 W, 1.2 A max.) |
| Dimensions              |                                   |
| W : 440 mm (17 - 5/16") |                                   |
| H : 162 mm (6 - 3/8")   |                                   |
| D : 396 mm (15 - 9/16") |                                   |
| Weight (Net)            | ..... 12.8 kg (28.2 lb)           |



# Specifications (For other countries)

⚠ Caution: Read this page carefully to ensure safe operation.

KR-V90B0 (E6)

## AUDIO section

Rated power output during STEREO operation  
(EIAJ) 1kHz, 10% T.H.D. at 8 Ω ..... 150 W + 150 W  
(DIN/IEC) at 8 Ω ..... 120 W + 120 W

Rated power output during SURROUND operation  
FRONT(1kHz, 10% T.H.D. at 8 Ω) ..... 150 W + 150 W  
CENTER (1kHz, 10% T.H.D. at 8 Ω) ..... 150 W  
REAR(1kHz, 10% T.H.D. at 8 Ω) ..... 65 W + 65 W

Total harmonic distortion ..... 0.005 % (1kHz, 60 W, 8 Ω)

Frequency response  
LINE (CD, AUX, TAPE) ..... 10 Hz ~ 75 kHz, +0 dB, -3 dB

Signal to noise ratio (IH'66)  
PHONO (MM) ..... 75 dB  
LINE (CD, AUX, TAPE) ..... 98 dB

Input sensitivity / impedance  
PHONO (MM) ..... 2.5 mV / 47 kΩ  
LINE (CD, AUX, TAPE) ..... 200 mV / 47 kΩ

Output level / impedance  
TAPE REC ..... 200 mV / 2.2 kΩ  
PRE OUT (SUBWOOFER) ..... 1 V / 1 kΩ

Tone control  
BASS ..... ±10 dB (at 100 Hz)  
TREBLE ..... ±10 dB (at 10 kHz)

LOUDNESS control  
VOLUME at -30dB level ..... +8 dB (100 Hz)

## VIDEO section

TELEVISION format ..... NTSC

VIDEO inputs / outputs  
VIDEO (composite) ..... 1 Vp-p / 75 Ω  
S-VIDEO (luminance signal) ..... 1 Vp-p / 75 Ω  
(chrominance signal) ..... 0.286 Vp-p / 75 Ω

## FM tuner section

Tuning frequency range ..... 87.5 MHz ~ 108 MHz

Usable sensitivity (MONO)  
..... 1.2μV (75 Ω) / 13.2 dBf (75 kHz DEV., S/N 30 dB)

50dB quieting sensitivity  
STEREO ..... 32μV (75 Ω) / 41.2 dBf (75 kHz DEV.)

Total harmonic distortion (1 kHz)  
MONO ..... 0.6 % (65.2 dBf input)  
STEREO ..... 0.7 % (65.2 dBf input)

Signal to noise ratio (1 kHz, 75 kHz DEV.)  
MONO ..... 75 dB (65.2 dBf input)  
STEREO ..... 68 dB (65.2 dBf input)

Selectivity (±400 kHz) ..... 50 dB

Stereo separation (1 kHz) ..... 40 dB

Frequency response ..... 30 Hz ~ 15kHz, +0.5 dB, -3.0 dB

## AM tuner section

Tuning frequency range  
9 kHz step ..... 530 kHz ~ 1.602 kHz  
10 kHz step ..... 530 kHz ~ 1.610 kHz

Usable sensitivity (30% mod., S/N 20 dB)  
..... 16 μV / (500 μV/m)

Total harmonic distortion ..... 0.7 %

Signal to noise ratio (30 % mod. 1 mV input) ..... 45 dB

Selectivity ..... 30 dB

## GENERAL

Power consumption ..... 450 W

AC outlet  
SWITCHED (for Australia) ..... 1 (total 90 W max.)  
SWITCHED (for other countries) ..... 2 (total 90 W max.)

Dimensions ..... W : 440 mm  
..... H : 162 mm  
..... D : 396 mm

Weight (Net) ..... 12.8 kg



KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

# KENWOOD

## For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model \_\_\_\_\_ Serial Number \_\_\_\_\_