



CASSETTERECEIVER

KRC-580 KRC-480

INSTRUCTION MANUAL

KENWOOD CORPORATION

FILE

Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new cassette receiver.

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on the product.

Model KRC-580 / 480 Serial number

Contents

| | |
|----------------------------------------|----|
| Before use | |
| Safety precautions | 3 |
| Care and Maintenance | 4 |
| Features | 5 |
| Basic operations | |
| Power / Volume / Attenuator | 7 |
| Loudness | 8 |
| Auto seek tuning | 9 |
| Manual tuning | 10 |
| Local seek | 11 |
| Cassette tapeplay | 12 |
| Dolby B NR / Tape type selection | 13 |
| Tuner features | |
| Station preset memory | 14 |
| Auto memory entry | 15 |
| Priority radio broadcast | 16 |
| CRSC | 17 |
| Tuner timer | 18 |
| Channel space selection | 19 |
| Cassette play features | |
| Tape advance | 20 |
| Tuner call | 21 |
| CD auto-changer control features | |
| CD play with CD auto-changer | 22 |
| Track / Disc search | 23 |
| Track / Disc repeat | 24 |
| Track scan | 25 |
| Disc scan | 26 |
| Random play | 27 |
| Magazine random play | 28 |
| Other features | |
| Selectable illumination / display type | 29 |
| Audio control | 30 |
| Clock display / setting | 32 |
| Theft deterrent faceplate | 33 |
| Disabled system indicator | 34 |
| Installation | |
| Accessories | 36 |
| Installation procedure | 36 |
| Connections | 37 |
| Installation | 38 |
| Troubleshooting guide | 40 |
| Specifications | 42 |

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Safety precautions

WARNING

Take the following precautions to prevent fire and avoid personal injury:

- Press in the faceplate until it is firmly locked to the main unit to prevent it from being detached in an accident.
- When extending the power supply cable, main or backup cable, or ground cable, use 0.75mm² (AWG18) or larger automotive grade cable to avoid cable deterioration or damage to the covering.
- Check that no metal objects (coins, tools, etc.) are left inside the unit to avoid short circuits.
- If you smell smoke or smoke, turn the power off immediately and consult your Kenwood dealer.

CAUTION

Take the following precautions to keep the unit in proper working order.

- Be sure the unit is connected to a 12V DC power supply with a negative ground connection.
- Do not open the top or bottom cover.
- Do not install the unit in places it is exposed to direct sunlight, high heat or humidity; water may splash over it, or dust exists.
- Do not store the detached faceplate or faceplate storage case in places it is exposed to direct sunlight or high heat.
- Do not splash water on the faceplate.
- The faceplate is a precision piece of equipment that contains sensitive parts. Do not subject it to excessive shock.
- If you need to replace the fuse, make sure the new fuse is of the same type and rating. Using a fuse of a different type or rating may damage your unit. The fuse ratings are normally shown on the fuse and fuse box.

NOTE

- If you have difficulty in installing this unit in your vehicle, contact your Kenwood dealer.
- If it doesn't seem to be working properly, first press the Reset button. If the malfunction persists, consult your Kenwood dealer.

IMPORTANT INFORMATION

This unit is NOT designed to be connected directly to a CD changer that was manufactured and sold before 1994. If you plan to use such units, please read the following information carefully.

- To control KDC-C200 / KDC-C300 / KDC-C400 A CA-DS100 is sold separately as an optional accessory, along with the control box and extension cord supplied with the CD changer, are required.
- To control KDC-C301 / KDC-C600 / KDC-C800 / KDC-C801 / KDC-C80 A CA-DS100 is sold separately as an optional accessory, along with the extension cord supplied with the CD changer, are required.
- KDC-C100 / KDC-C301 / C205 / C705 and CD changer manufactured by Other Companies are not compatible with this Kenwood model.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN DAMAGE TO THIS UNIT AND/OR THE CD CHANGER

FCC WARNING

- This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

Care and Maintenance

Cleaning the unit

- If the front panel is dirty, wipe it clean with a silicon cloth or soft dry cloth with the power off.

CAUTION

Do not use hard cloths or paint thinner, alcohol, or other volatile solvents. These may damage external surfaces or remove indicator characters.

Cleaning the tape head

- As you play tapes for a long time, magnetic dust and other grime accumulates around the heads and eventually causes noise that lowers sound quality. To clean the heads, use a cleaning tape or cleaning kit. Make sure you purchase a cleaning tape or cleaning kit suited to car audio use.

NOTE

- If it doesn't seem to be working properly, first press the Reset button. If the malfunction persists, consult your Kenwood dealer.



Reset button

Be careful with your tapes.

- Before loading a cassette, take up any slack tape by turning one of the spools with a pencil. Loading a slack tape can cause tape to loop around the capstan and pinch roller and other problems.
- Do not use any deformed cassettes or cassettes with tabs coming off, or the unit may fail.
- Do not leave cassettes exposed to high heat (for example, in the dashboard where it is exposed to direct sunlight, or near heater outlets). This can deform the cassette shell.
- Avoid long cassettes, such as 120-minute tapes. The tape is thin and easily tangled around the pinch roller or other parts.
- If you do not listen to your tape, remove it from the unit and store it safely. If a cassette is left in for a long time, the tape can stick to the tape head, causing failure.

Features

Tuner section

- Auto seek tuning (Page 9)**
Automatically searches for stations you can receive.

Local seek (Page 11)

- When this feature is turned on, the tuner scans only the stations offering good reception during Auto seek tuning and Auto memory entry.

Station preset memory (Page 14)

- Stores the frequencies of your favourite stations in memory. The frequencies stored in memory can be recalled by a single touch of a button.

Auto memory entry (Page 15)

- Automatically stores the stations in the band you are listening to in memory. You can tune to the stations stored in memory by a single touch of a button in the same way as for the Stations preset memory function. If you use this function when you drive a long way and do not know what stations are available there, you can check the programmes broadcast by local stations by recalling them by a single touch of a button.

Priority radio preset (Page 16)

- This function enables you to tune to the preset station by a single touch of a button while you are listening to a cassette or disc. Since you can listen to a station without switching to the tuner mode, it is useful to listen to your favourite station (such as news, traffic information).

CRSC (Clear Reception System Circuit) (Page 17)

- When this feature is turned on, the tuner switches reception to mono to reduce multi-path noise if it occurs in the broadcast you are listening to.

Tuner timer (Page 18)

- When this feature is turned on, the tuner automatically tunes to the station you have specified at the time you have set provided the unit power is on.

Channel space selection (Page 19)

- This feature allows you to change the frequency step between 200 kHz in FM/10 kHz in AM and 50 kHz in FM/8 kHz in AM.

Cassette player section

Tape type selection (Function of KRC-580) (Page 13)

- The Tape type selection function allows you to play normal tapes and metal (chromic) tapes.

Tape advance (Page 20)

- This function allows you to rewind to the start of the current track, fast forward to the start of the next track, and automatically play the tape.

Tuner call (Page 21)

- When this function is turned on, you can listen to the radio while rewinding or fast forwarding a cassette.

Features

■ CD changer control section


- **CD auto-changer control (Page 22)**
This unit has a CD auto-changer control function.
- **Track repeat (Page 24)**
When this function is turned on, the track you are listening to is played repeatedly.
- **Disc repeat (Page 24)**
When this function is turned on, the disc you are listening to is played repeatedly.
- **Track scan (Page 25)**
When this function is turned on, the last part of each track on the disc you are listening to is played automatically to help you find the one you want.
- **Disc scan (Page 26)**
When this function is turned on, the first part of each disc in the CD auto-changer is played automatically to help you find the one you want from the magazine loaded in the CD auto-changer.
- **Random play (Page 27)**
When this function is turned on, the tracks on the disc you are listening to are played in random order.
- **Magazine random play (Page 28)**
When this function is turned on, the tracks on the discs in your CD auto-changer are played in random order.

■ General section

- **Attenuator (Page 7)**
This function allows you to lower the volume quickly. The fade-in function is provided to restore the original volume gradually.
- **Loudness control (Page 8)**
When this function is turned on when the volume level is low, sound is made clear by emphasizing bass.
- **Selectable illumination (Page 29)**
Allows illumination colour to be switched between green and orange.
- **Selectable display type (Function of KRC-180) (Page 29)**
Allows the display type to change between negative and positive.
- **Audio controls (Page 30)**
Adjust the bass, treble, balance, and fader.
- **Clock display (Page 32)**
The time can be displayed.
- **Theft deterrent faceplate (Page 33)**
The faceplate is detachable. When you leave the vehicle, you can take the faceplate with you to help prevent theft.
- **Disabled system indicator (Page 34)**
When the faceplate is detached from the unit, the LED blinks.

Power/Volume/Attenuator

Attenuator Power

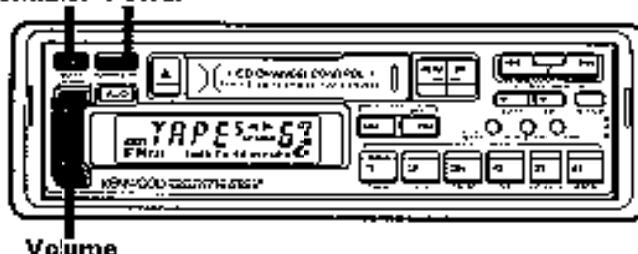

To turn the power on

 
Press the Source button.

NOTE

Perform the following operations with the power on.

To use the Attenuator function

Briefly press the Attenuator button. The Attenuator indicator will appear on the display and Attenuator function will turn on.



To turn the power off

 
Press the Source button for more than a second.

To cancel the Attenuator function

Briefly press the Attenuator button or set the volume to minimum. The Attenuator indicator disappears and the Attenuator function is cancelled.


To increase the volume

Press the Audio up button.




To decrease the volume

 Press the Audio down button.




Loudness

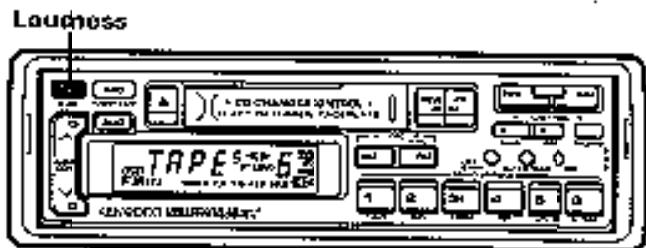

To use loudness control

 Press the Loudness button for more than a second. Loudness is turned on and the Loudness indicator appears on the display. This function is factory-set to ON.




FM

ON

To cancel loudness control

Press the Loudness button for more than a second. Loudness is turned off and the Loudness indicator disappears.


Auto seek tuning

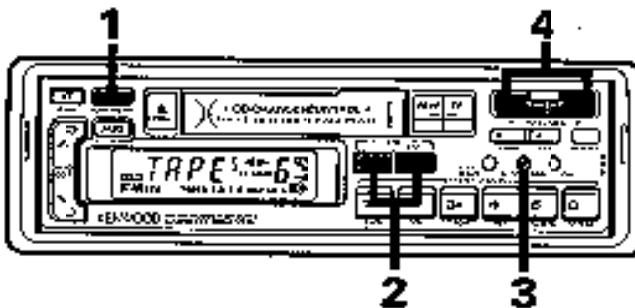


- 1 Listen to the radio
Press the Source button to select Tuner mode.
When 'TUNE' is displayed, you are in Tuner mode.

TUNE

- 2 To select a band
Press the FM/AM button.
Each time you press the FM button briefly, the band changes between FM1, FM2, and FM3.
Press the AV button to choose AM band.

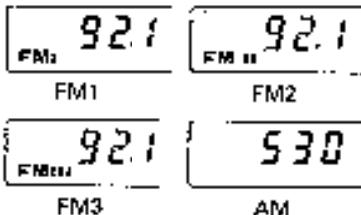


 - 3 To select Auto seek tuning mode
Briefly press the Auto button.
The Auto indicator will appear on the display and Autoseek tuning will turn on. This function is factory-set to ON.




FM

 - 4 To tune
Press the Tuning up/down button.
When the Tuning up button is pressed, up seeking is performed.
When the Tuning down button is pressed, down seeking is performed.
The Stereo indicator appears on the display when stereo broadcasts are received.




FM

Manual tuning

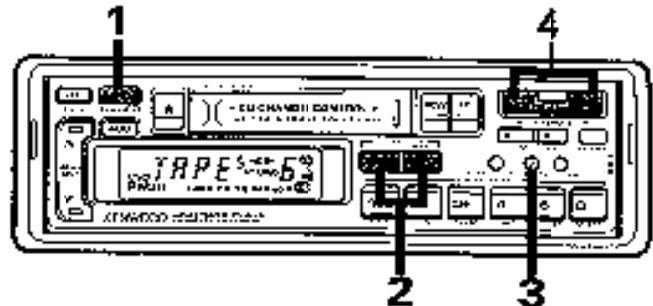


1 Listen to the radio

 Press the Source button to select Tuner mode.
When "TUNE" is displayed, you are in Tuner mode.




2 To Select a band

Press the FM/AM button.
Each time you press the FM button briefly, the band changes between FM1, FM2, and FM3.
Press the AM button to choose AM band.

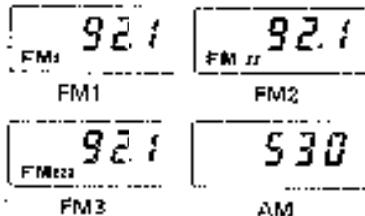


3 To select Manual tuning mode

 Briefly press the Auto button.
The Auto indicator disappears and the Auto seek tuning is canceled.




4 To tune

 Press the Tuning up/down button.
When you press the button once, the received frequency changes by one step. The frequency will continue to change as long as you hold the button down.
The Stereo indicator appears on the display when stereo broadcasts are received.




Local seek

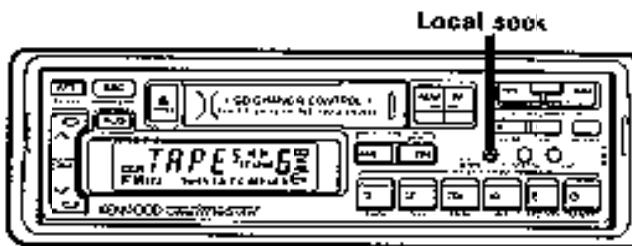

To use Local seek

 
Briefly press the Local seek button.
The Local seek indicator will appear on the display, and local seek will turn on.



To cancel Local seek

Briefly press the Local seek button.
The Local seek indicator disappears, and Local seek turns off.

Cassette tape play

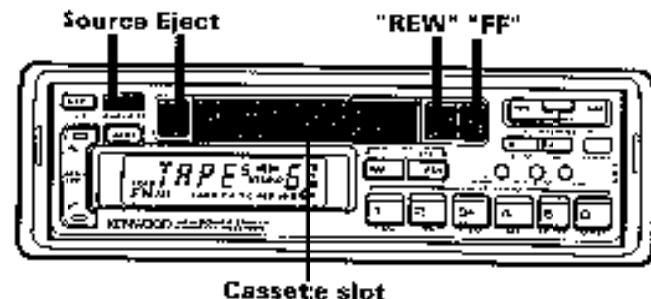

To play a cassette

Insert a cassette with the tape spool on the right. If there is a tape in the unit, press the Source button to select Tape mode.

The word "TAPE" will be displayed, and playback will start.

TAPE ▶

CAUTION

If you do not listen to your tape, remove it from the unit and store it safely. If a cassette is left in for a long time, the tape can stick to the tape head, causing failure.

NOTE

When you insert the cassette with side A up, one of the following indicators appears or blinks on the display to indicate the tape operation.

| Indicator | Tape side playing/status |
|-----------|-----------------------------------------------------|
| ▶ | Side A |
| ◀ | Side B |
| ◀▶ | The tape is stopped. The player is in another mode. |
| ◀▶ | Fast forwarding/rewinding |

To stop and eject

Press the Eject button. The tape playing stops and the player ejects the cassette.

To fast forward/rewind

Press the "FF" or "REW" button. When you press the "FF" button, the tape is fast forwarded. When you press the "REW" button, the tape is rewound. The Operation indicator blinks.

To cancel fast forward/rewind


To cancel fast forward, press the "REW" button. To cancel rewind, press the "FF" button. The fast forward/rewind is cancelled and the tape playing begins.

To switch sides

Press the FF and REW buttons simultaneously. The player will play the reverse side.

Dolby B NR/Tape type selection

Function of the KRC-580

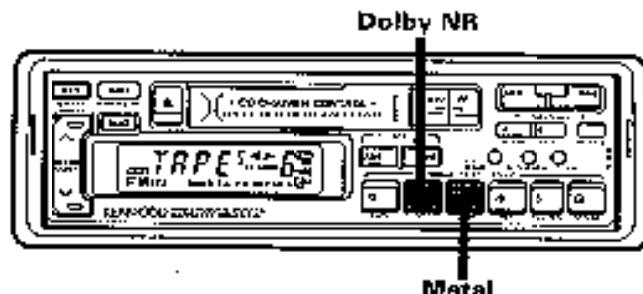

To use Dolby B NR

Press the Dolby NR button. The Dolby B NR indicator will appear on the display and Dolby B NR will turn on.

TAPE ▶

ON

To cancel Dolby B NR

Press the Dolby NR button. The Dolby B NR indicator will disappear and Dolby B NR will turn off.

TAPE ▶

Normal tape position

To listen to metal/chrome tapes

Press the Metal button. The Metal indicator will appear on the display and the unit will be set to the metal/chrome tape position.

TAPE ▶


Metal/chrome tape position

To listen to normal tapes

Press the Metal button. The Metal indicator will disappear and the unit will be set to the normal tape position. The unit is factory-set to the normal tape position.

TAPE ▶

Station preset memory

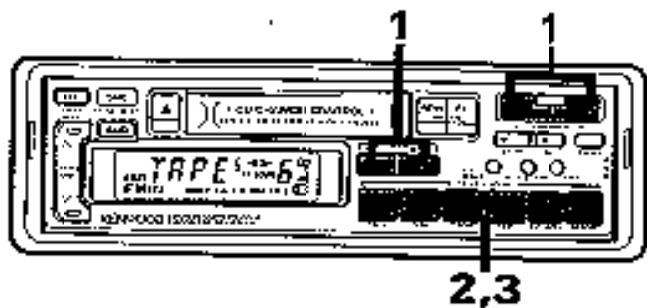

- 1 Select the band and station (frequency) you want to preset.
- 2 To preset
Press the Preset station button (1 to 6) you want to use for more than two seconds.
When the station is entered in memory, the number of the button to which you've assigned it will be displayed.


92.1 **6**
FM

You can preset each button for one station each from the FM1, FM2, FM3, and AM bands.

NOTE

To change preset frequencies
Turn in a station you want to preset and press the Preset station button you want to change for more than two seconds.

Auto memory entry

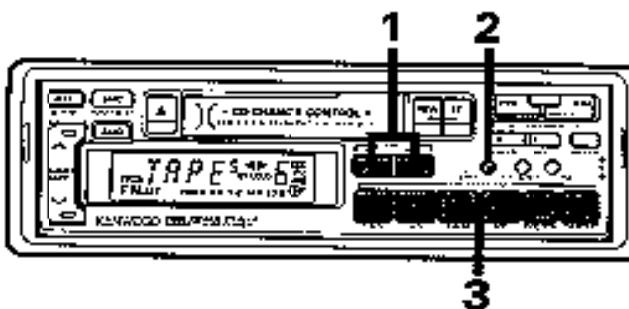


- 1 Select the band for Auto memory entry.
- 2 Auto memory entry
Press the Auto memory button for more than two seconds.
Auto memory entry starts and preset station button numbers are displayed in order.
- 3 To recall stations stored in memory by Auto memory entry
Briefly press a Preset station button (1 to 6).
The number of the pressed button is displayed, and the station is recalled.

92.1 **1**
FM

When stations are preset in all Preset station buttons, or all the stations that can be received in the selected band are preset, Auto memory entry ends. The last preset station is received.

Priority radio preset

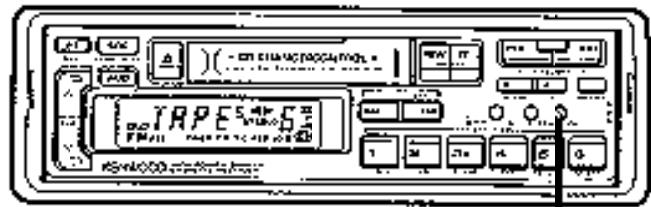


Priority radio preset

To recall preset stations

Press the Priority radio preset button.

 The Priority radio preset indicator appears on the display and the preset station is recalled.



To return to the original mode

Press the Priority radio preset button.

The Priority radio preset indicator disappears and the original mode returns.


To change the station to be recalled

Tune to the station you want in the Priority radio preset mode.

Only Auto seek tuning and Manual tuning can be performed in the Priority radio preset mode. Tune to the desired station by Auto seek tuning or Manual tuning.

The station you are tuned to is automatically preset, and will be recalled subsequently.

CRSC

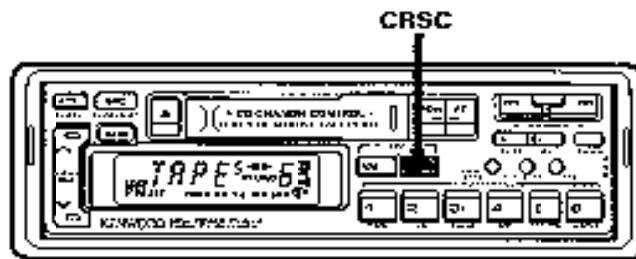

CRSC

 
To cancel the CRSC

Press the MC button for more than a second.

The mc indicator disappears from the display and the CRSC function will turn off. This function is factory-set to ON.


NOTE

If FM sound is unstable:
With CRSC function on, strong electrical field (from power lines, for instance) may make the sound level fluctuate. If this happens, try turning CRSC off.



OFF

Tuner timer

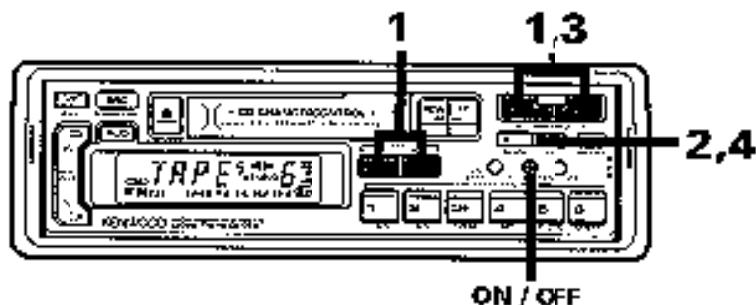


1 To set a station

Tune in the station you want to receive with the Tuner timer function.

2 To enter the set timer mode

 Press the Set timer (DISP) button for more than two seconds. The time and timer indicator are displayed and blinks and the unit enters the set timer mode.



NOTE

To cancel the set timer mode in the middle, briefly press the Set timer button.

3 To set the time

Press the Hour button and Minute button.

Press the Hour [◀◀] button to set the hours.

Press the Minute [▶▶] button to set the minutes.



4 To start Tunertimer

 
Press the Set timer (DISP) button for more than two seconds. The Timer indicator will appear on the display and the Tuner timer function will turn on.




If the power to the unit is on, the tuner tunes to the specified station automatically at the set time.

Tuner timer ON/OFF

Press the Timer button for more than a second. Each time you press this button, the Tuner timer function turns on and off. When the function turns on, the Timer indicator appears on the display.



Channel space selection

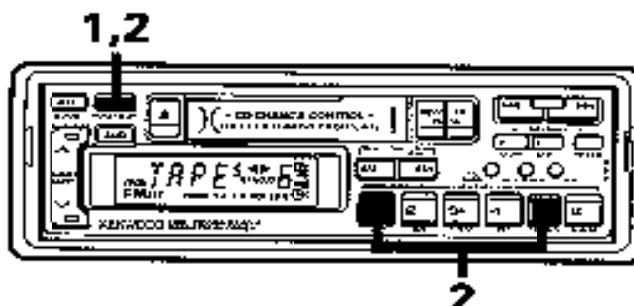

1

Turn the power off.

2

Hold down preset station buttons "1" and "5" and turn the power on. The frequency step is 50 kHz in FM and 9 kHz in AM.

NOTE


- When the frequency step is changed, all the contents of memory become the initial values.

- This function is not available in the United States and Canada.

To return to the original frequency step


Perform steps 1 and 2 again. The frequency step returns to its original value.

Tape advance

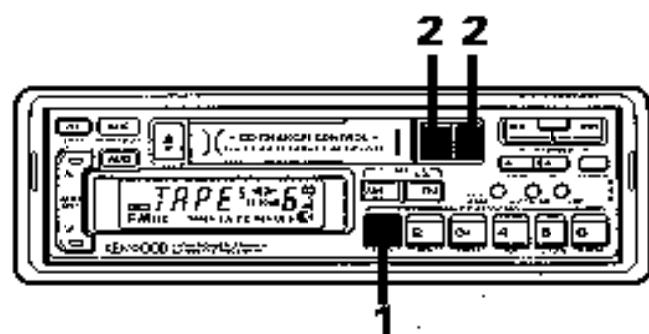

1

 Press the Tape advance button. The Tape advance indicator will appear on the display and the Tape advance function will turn on.

**NOTE**

This function detects the first part of a track by detecting the blank space between tracks. If the blank space between tracks is less than four seconds, or the volume is low for more than four seconds, the function will not operate correctly.

2


To return to the start of the current track
Press the "REV" button.
The tape will rewind and the player will replay the track.

To advance to the next track
Press the "FF" button.
The tape will fast forward and the player will start playing the next track.

To cancel

Press the Tape advance button.
The Tape advance indicator disappears and the Tape advance function is cancelled.

Tuner call

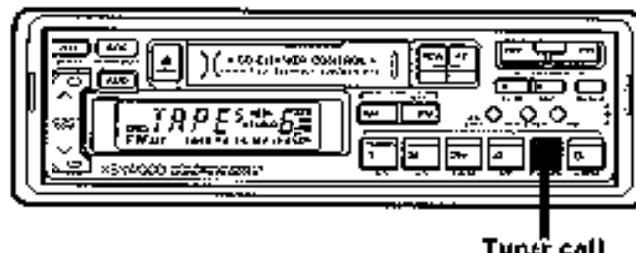**To turn the Tuner call function on**

Press the Tuner call button.
The Tuner call indicator will appear on the display and the Tuner call function will turn on.




ON

The radio turns on automatically during fast forwarding or rewinding.

To cancel


Press the Tuner call button.
The Tuner call indicator disappears and the Tuner call function is cancelled.

CD play with CD auto-changer

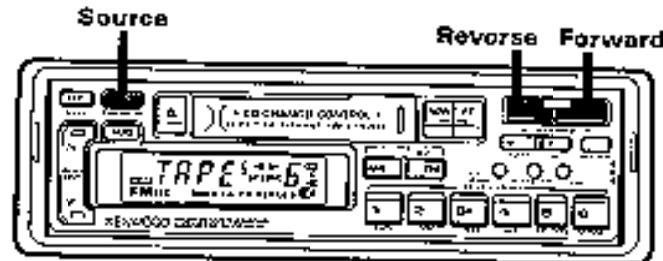


To play compact discs

 Press the Source button to select CD changer mode.
If you see 'CD' display, you are in CD changer mode.



The Disc indicator will appear on the display and disc play will begin.

 Disc No. display




Track No. display Disc indicator

When the player reaches the end of the last track on the disc you are playing, it will shift automatically to the first track on the next disc. When the player plays the last disc, it will return to the first disc.


When you change the discs in the auto changer, "load" is displayed. Disc No. 10 is displayed as '0'.

Track/Disc search

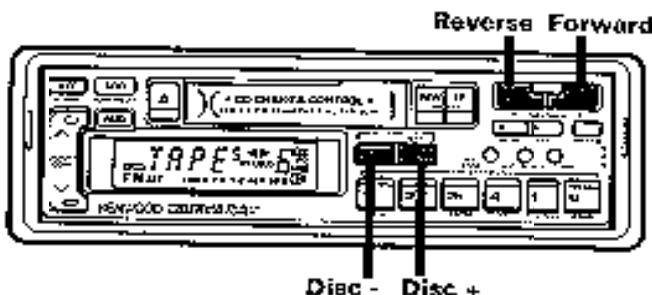

Reverse track search

 Briefly press the Reverse button. When you press this button once, the player returns to the start of the track you are listening to. Each time you press the button, the track number on the display decreases. The player plays the track with the track number shown on the display.




NOTE

If you try forward track search while playing the last track on a disc, the Forward track search function does not work.


Reverse disc search

 Press the Disc- button. Each time you press this button, the disc number on the display decreases. The player plays the disc with the disc number shown on the display.




Forward track search

 Briefly press the Forward button. Each time you press this button, the track number on the display increases. The player plays the track with the track number shown on the display.




Track/Disc repeat

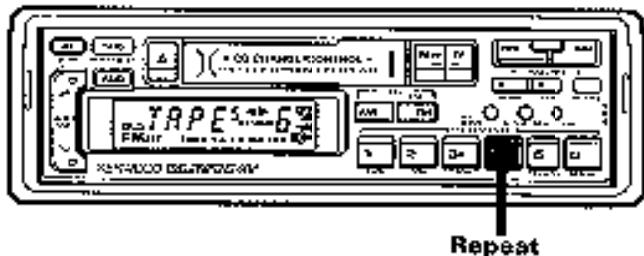

Repeat


To start track repeat

 Press the Repeat button once.
When Disc repeat is on, press the button twice.
The Repeat indicator will appear on the display and the Track repeat function will turn on.
The same track is played repeatedly.
The track number blinks during Track repeat.



To start Disc repeat

 
Press the Repeat button twice.
When Track repeat is on, press the button once.
The Repeat indicator will appear on the display and the Disc repeat function will turn on.
The same disc is played repeatedly.
The disc number blinks during Disc repeat.



To cancel Track repeat

Press the Repeat button twice.
The Repeat indicator disappears and the Track repeat function is cancelled.


Track scan

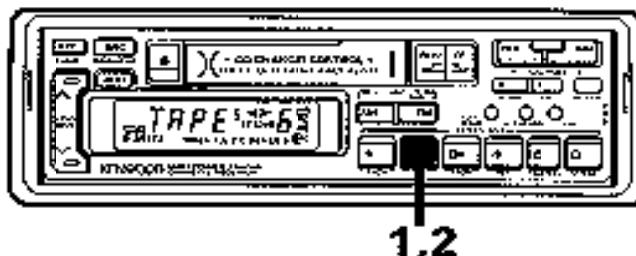

1,2

1

 Press the Track scan button.
The player will play the first 10 seconds of each track in succession.
The track number blinks on the display.




2 To select a track

Press the Track scan button.
The Track scan is cancelled and normal playback starts.


NOTE

- When CD play stops, Track scan is cancelled.
- When all tracks on the disc you are listening to are scanned, Track scan is cancelled.

Disc scan

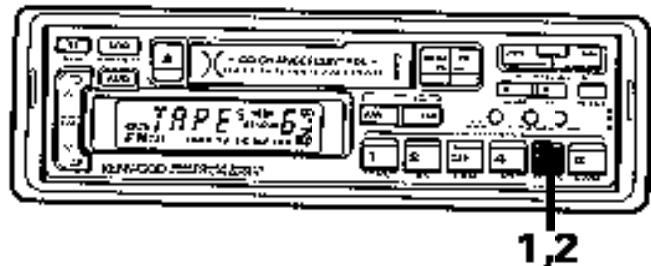**1**

 Press the Disc scan button.
The player will play the first 10
seconds from each disc in
succession. The disc number blinks
on the display.


**2**

To select a disc
Press the Disc scan button.
The Disc scan is cancelled and normal
playback starts.


NOTE

When CD play stops, Disc scan is
cancelled.

Random play

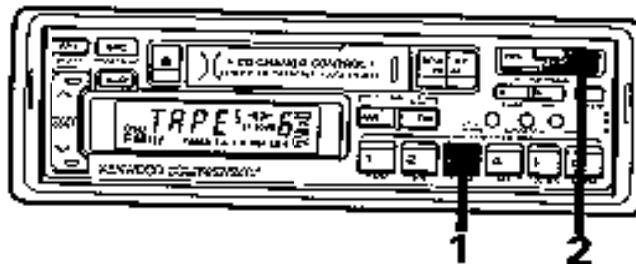**1**

 Press the Random button.
The player will randomly select
another track from the disc you are
playing. The track numbers on the
display will change continuously
during track selection. When a track
is selected, playback will begin
automatically. The track number
display blinks during Random play.

**2**

To select another track
Press the \blacktriangleleft button.
The player will randomly choose
another track.

To cancel

Press the Random button.
Random play is cancelled and normal
CD play starts.


NOTE

When the CD play stops, the Random
play function is cancelled.


NOTE

When all the tracks on a disc have
been played, the player will randomly
select the next disc.

Magazine random play

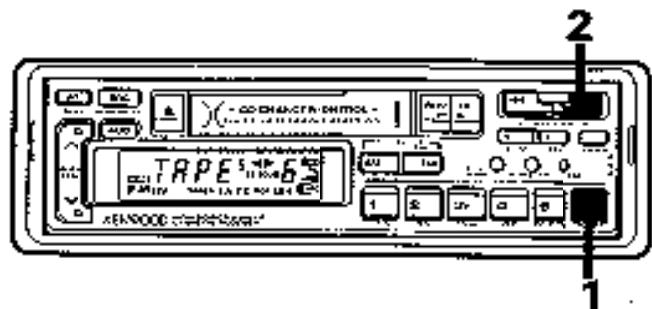**1**

 Press the Magazine random button. The player will randomly select another track from the disc you are playing. The track/disc numbers on the display will change continuously during track selection. When a track is selected, playback will begin automatically. The disc number display blinks during Magazine random play.

**NOTE**

The Magazine random play is not available if you use the KDC-C100/C200/C300/C400/C301/C401.

2

To select another track
Press the **▶▶** button.
The player will randomly choose another track.


To cancel

Press the Magazine random button. Magazine random play is cancelled and normal CD play starts.


NOTE

- When CD play stops, the Magazine random play function is cancelled.
- The Magazine random selection time changes according to the number of discs in the magazine.


Selectable illumination/display type

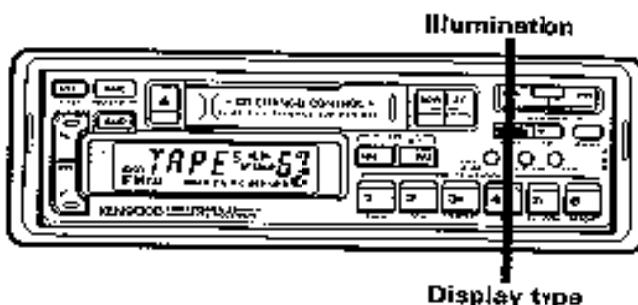**Function of the KRC-580****To change the display type**

 Press the P/N button for more than one second.
Each time you press this button, the display type will change from green to orange or vice versa.



Audio controls

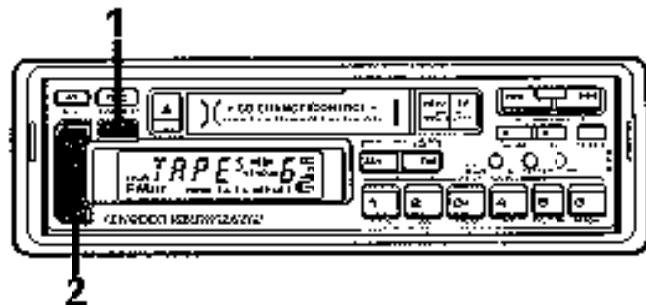

1 To select the control mode

Press the Audio button.
Each time you press this button, the adjustment mode changes as follows:
Bass -> Treble -> Balance -> Fader -> Volume. If you do not perform the next operation within five seconds, the Volume adjustment mode (normal model will return).

NOTE





Source tone memory
This unit allows the Tone (Bass and Treble) control to be set independently for each source mode (Tape, FM, /M, and CD). The tone set in Tape mode is recalled automatically when you select Tape, and the toneset in Tuner mode is recalled automatically when you select Tuner.

2 To adjust each mode


Press the Audio control button.
Adjust each mode according to the table.

To cancel

Press the Audio button for more than one second.
The Volume adjustment mode will return.
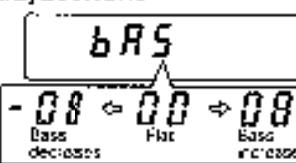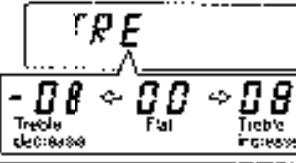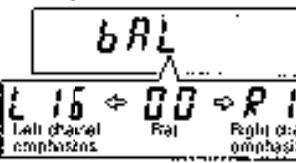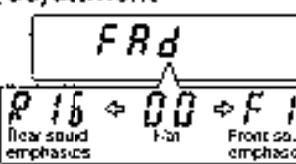
| Display | Operation of Audio control button | |
|-----------------------------------------------------------------------------------------------------------|-----------------------------------|--------------------------|
| | Audio down button | Audio up button |
| Bass adjustment  | Bass decreases | Bass increases |
| Treble adjustment  | Treble decreases | Treble increases |
| Balance adjustment  | Left channel emphasizes | Right channel emphasizes |
| Fader adjustment  | Rear sound emphasizes | Front sound emphasizes |


Clock display/setting

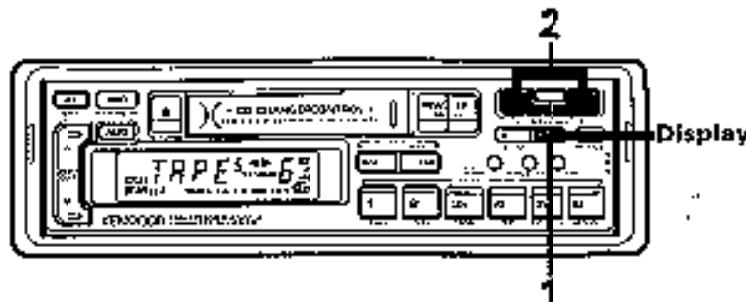

To recall clock display

Press the Display button.
The display changes as listed in the table.

| Mode | Displays |
|------------|--------------------------|
| Tuner | Frequency • Time |
| Tape | *TAPE • Time |
| CD changer | Disc/track number • Time |

 

*A appears in AM and *P appears in PM.

To set the clock


1

If the time is not displayed, press the Display button.
The time is displayed.

2


Hold down the Display button, and press the Tuning button.
Press the Tuning down button to adjust the hours and the Tuning up button to adjust the minutes.

Theft deterrent faceplate

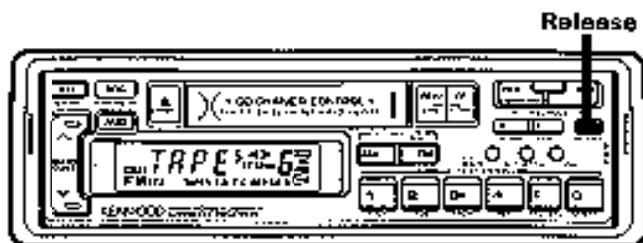


To remove the faceplate

Press the Release button.
The faceplate is unlocked and can be detached.

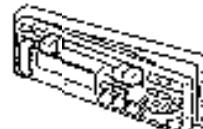

CAUTION


- Place the faceplate in the storage case (option) to prevent shocks. Since it is a precision piece of equipment, if it is subject to shock, it may fall.

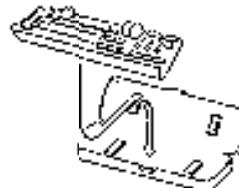

To install the faceplate


1

Align the projections on the faceplate with the grooves on the faceplate.

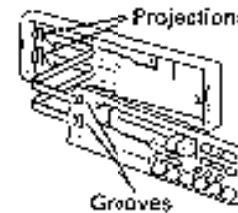


2

Press the faceplate until it clicks.
The faceplate is locked in place and the unit becomes operable.

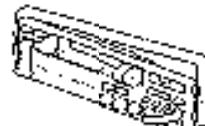

Disabled system indicator

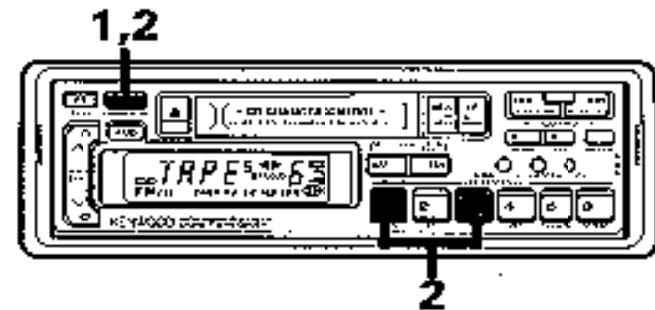

1
Turn the power off.

2
Hold down preset station buttons "1" and "3" and turn the power on. The Disabledsystem Indicator function turns off, and the LED does not blink when the faceplate is detached.

To turn the Disabled system indicator on

Perform steps 1 and 2 again. The LED blinks when the faceplate is detached.

Accessories

| Part name | External view | Number of items |
|----------------------------|---------------|-----------------|
| Mounting sleeve | | 1 |
| Wiring harness | | 1 |
| Metal mounting strap | | 1 |
| Removal tool | | 2 |
| Screw with washer (M4 x 8) | | 1 |
| Machine screw (M5 x 6) | | 4 |

Installation procedure

- Remove the ignition key and disconnect the negative (-) terminal of the battery to prevent short circuits.
- Connect the input and output cables of the units.
- Connect the speaker cables of the wiring harness.
- Connect the ground cable, memory backup cable, and power supply cable of the wiring harness in the order listed.
- Connect the wiring harness connectors to the unit.
- Install the unit in the car.
- Connect the negative (-) terminal of the battery.
- Press the Reset button.




CAUTION

- If the fuse blows, check cables for shorts, then replace the fuse with one of the same rating.
- Check that no unconnected cables or connectors are touching the car body. Do not remove caps from unconnected cables or connectors to prevent short circuits.
- Connect the speaker cables to appropriate speaker connectors separately. Sharing the negative cable of the speaker or grounding speaker cables to the metal body of the car can cause this unit to fail.
- After installation, check that the brake lamps, wipers, and wipers work properly.
- Some CD auto-changers require a conversion cord for connection. See the "Safety precautions" for details.
- Insulate unconnected ends of cords with vinyl tape or similar.

Connections

* Circle numbers indicate the procedures described in the Installation Procedure

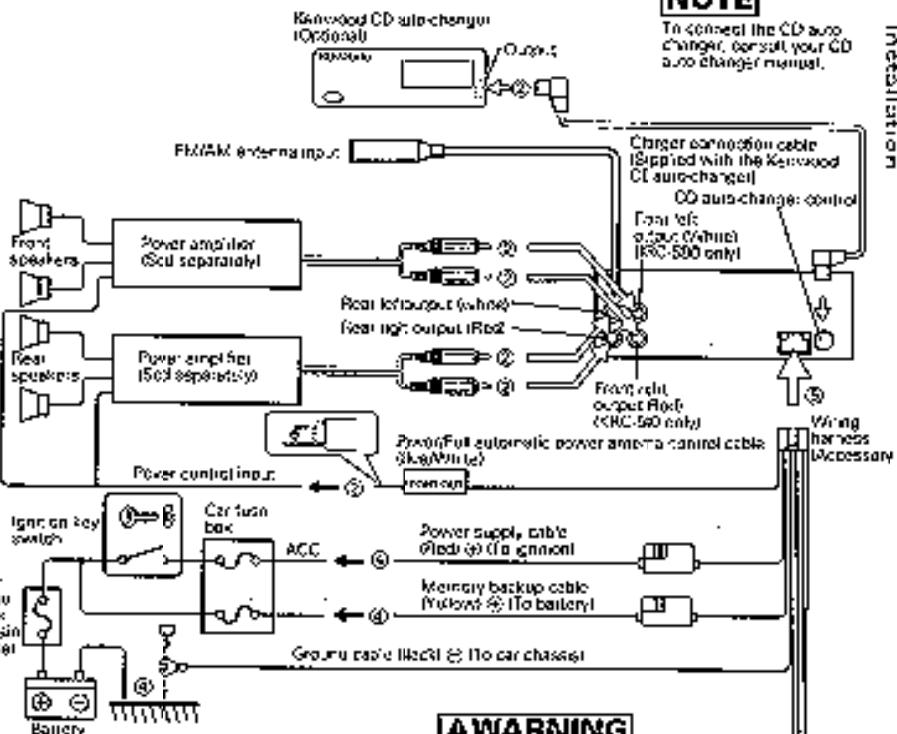


NOTE

To connect the CD auto-changer, consult your CD auto-changer manual.

CAUTION

When two speakers are connected to the system, be sure to connect both of them to the front output or rear output. In other words, do not connect the positive connector of the left speaker to the front output, and the negative connector to the rear output.

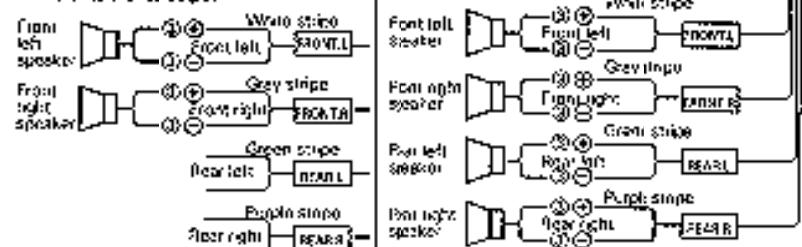


WARNING

To prevent fire when the power supply cable (Red) or memory backup cable (Yellow) is short-circuited by coming into contact with the vehicle chassis ground, only connect the power supply after making the fuse box connections.

Installation

Installation

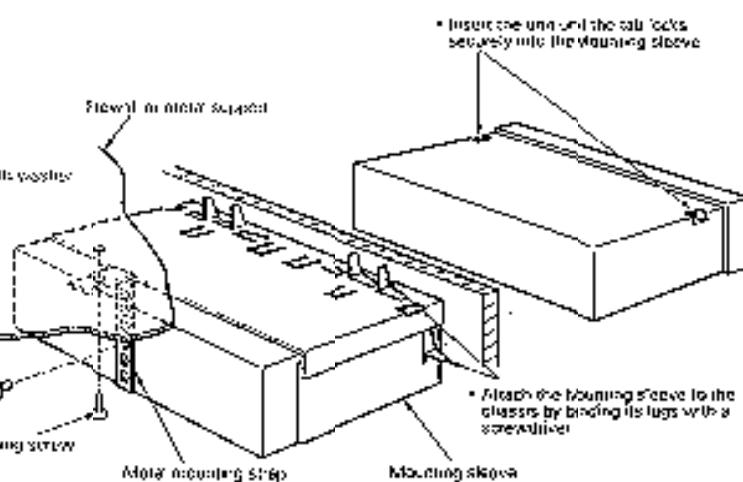


NOTE


Install the unit securely. If the unit is unstable, it may malfunction, causing sound skipping.

To install in the Japanese car


When installing in some cars made in Japan, drive Machine screws (M5 x 6) (accessories) into the two holes corresponding to the car bracket.

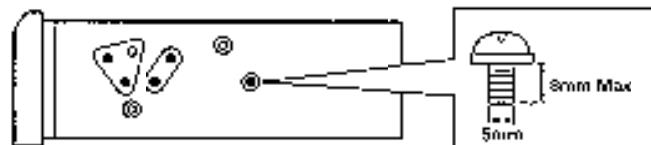


To remove the unit.

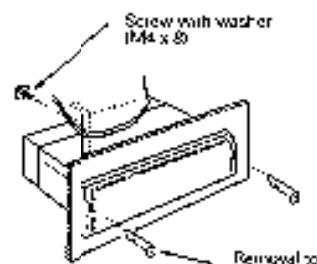

1. Remove the Screws with washer (M4 x 8) holding on the back panel.

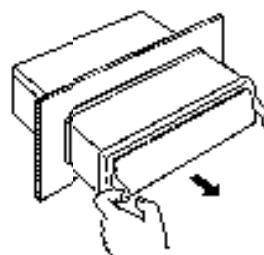

2. Insert the Removal tool into the slot in the unit and pull out the unit. The lock is released and the unit is detached.

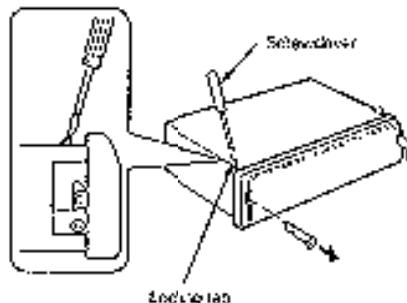

3. Pull out the Removal tool by pressing down the locking tabs on the top using a screwdriver.

Troubleshooting guide

Often, what appears to be a malfunction is due to user error. Before calling for service please consult the following table.

| Symptom | Cause | Remedy |
|----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The power is not turned on. | The voltage/fuses are blown. | Check cables for shorts, then replace the fuse with one with the same rating (shown on the case). |
| No sound or sound is low. | The volume level is minimum. The fader or balance is set to one side. The input/output cable or wiring harness is connected incorrectly. | Raise the volume level. Adjust the fader and balance. Connect the input/output cable or wiring harness correctly. See "Connections" (Page 37). |
| The cassette tape is jolly. | The cassette tape is jolly. | Use another cassette. |
| The unit does not work properly when a button is pressed. | The microcomputer malfunctions. | Press the Reset button on the front panel. |
| Sound quality is poor. (Sound distortion) | The volume level is too high. The tape head is dirty. A speaker cable is pressed by a screw in the car. A speaker cable is sheared. | Use the appropriate volume level. Clean the head. See "Head cleaning" (Page 49). Check the speaker cabling. Connect the speaker output connectors to the separate speaker connectors. |
| A cassette cannot be inserted. | The cassette is deformed. The cassette has been inserted incorrectly. | Use another cassette. Insert the cassette with the tape aperture on the right. |
| The cassette is not ejected. | The cassette is deformed. The cassette label is coming off. | Use another cassette. Remove the tape or reattach it properly. |
| Poor radio reception. | The car antenna is not extended. The antenna control cable is not connected. | Extend the antenna. Connect the cable correctly. See "Connections" (Page 37). |
| Tape mode is not selected. | No cassette is inserted. | Insert a cassette into the unit. |
| When the ignition key switch is set to OFF, the memory contents disappear. | The Memory backup cable is not connected correctly. | Connect the cable correctly. See "Connections" (Page 37). |

CD auto-change section

| Symptom | Cause | Remedy |
|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| CD auto-change mode cannot be selected. | CD auto changer is not connected from the unit. | Connect the CD auto-changer input from the unit. |
| CD play does not start. | Power button is not turned ON. | Turn the power button ON, press the SOURCE button, and select the CD auto-changer mode. |
| The specified disc is not played, a different disc is played instead. | The disc is loaded upside down. | Eject the disc magazine and insert the disc correctly. |
| | Two discs are inserted in a slot. | Eject the disc magazine and insert the discs correctly. |
| | The number of the slot into which the disc is inserted is different from the number of the specified disc. | Eject the disc magazine and check the number of the specified disc. |
| | The disc is severely damaged. | Use another disc. |
| Sound skips due to vibration. | Something is touching the CD auto-changer. | Keep it away from the CD auto-changer. |
| Sound quality is poor. | The recording of the disc is poor. | Try playing another disc. If the sound is good, the fault was with the original disc. |
| No sound is heard even though the information concerning the CD auto-changer is displayed. | Volume is set to minimum level. | Raise the volume level. |
| | The microcomputer does not function correctly. | Press the Reset button on this unit. |
| | The system is not connected properly. | Connect the system properly. See "Connections" (Page 37). |
| The specified track is not played. | The player is set to RANDOM PLAY/MAGAZINE RANDOM PLAY. | Turn off RANDOM PLAY/MAGAZINE RANDOM PLAY. |

In some cases, you may see one of the following error messages on your unit's display:

- E-01: No disc magazine in changer. Disc magazine is not inserted properly.
→ Insert the disc magazine properly.
- E-02: No disc in disc magazine.
→ Load a disc in the disc magazine.
- E-04: Disc is so dirty. The disc is upside down. The disc is damaged.
→ Clean the disc and insert it correctly.
- E-09: The volume/functions due to a defective I/O mechanism.
Press the Reset button. If the "E-09" message does not disappear, contact your Kenwood dealer.
- HOLD: When the temperature exceeds 60°C, a protection circuit will stop all operations. This message will then be displayed.
→ Let the place where the changer is located cool down. As soon as it has cooled, the changer starts playing.

Specifications

Specifications subject to change without notice.

Specifications

| | |
|---------------------------------------|--------------------------------------------------------|
| FM tuner section | |
| Frequency range (200 kHz spaced) | 87.9 MHz - 107.9 MHz |
| (50 kHz spaced) | 87.5 MHz - 108.0 MHz |
| Usable sensitivity (S/N=30 dB) | .9.3 dBf (0.8 μ V/75 ohms) |
| 60 dB Quieting Sensitivity | 15.2 dBf (1.6 μ V/75 ohms) |
| Frequency response (± 3 dB) | 30 Hz - 15 kHz |
| Signal to noise ratio | 73 dB |
| Selectivity | 100 dB |
| Capture Ratio | 1.5 dB |
| Image Response Ratio | 70 dB |
| IF Response Ratio | 120 dB |
| Stereo Separation (1 kHz) | 40 dB |
| AM tuner section | |
| Frequency range (10 kHz spaced) | 530 kHz - 1700 kHz |
| (5 kHz spaced) | 531 kHz - 1611 kHz |
| Usable sensitivity | 28 dB (30 μ V) |
| Cassette deck section | |
| Tape speed | 4.76 cm/sec. |
| Wow & Flutter (WRMS) | 0.12 % WRMS |
| Fast winding time (C-60) | 100 sec. |
| Frequency response (120 μ s) | 30 Hz - 14 kHz (± 3 dB) |
| (70 μ s / KRC-580 only) | 30 Hz - 16 kHz (± 3 dB) |
| Stereo separation (1 kHz) | 43 dB |
| Signal to noise ratio | 54 dB |
| Dolby B NR (N / KRC-580 only) | 33 dB |
| Audio section | |
| Maximum output power | 25 W X 4 |
| Output power (10% THD, 1 kHz, 4 ohms) | 20 W X 4 |
| (1% THD, 30 Hz - 10 kHz, 4 ohms) | 15 W X 4 |
| Tone action | Bass: 100 Hz \pm 10 dB Treble: 10 kHz \pm 10 dB |
| Precut level / load | 1500 mV (max.) / 10 kohms |
| General | |
| Operating voltage | 4.4 V (11 - 16 V allowable) |
| Current consumption | 1.5 A at Rated power |
| Installationsize (W X H X D) | 82 X 53 X 154 mm 3-3/16 X 2-1/16 X 6-1/16 in.) |
| Weight | 4.7 lb (1.7 kg) |