

KENWOOD

CASSETTE-RECEIVER

KRC-830

INSTRUCTION MANUAL

KENWOOD CORPORATION

Take the time to read through this instruction manual. Familiarity with installation and operation procedures will help you obtain the best performance from your new cassette-receiver.

For your records

 
Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your KENWOOD dealer for information or service on this product.

Model KRC-830 Serial number _____


WARNING

TO PREVENT ELECTRIC SHOCK, FIRE AND OTHER INJURY. PLEASE NOTE THE FOLLOWINGS:


- Secure the locks on the detachable case.

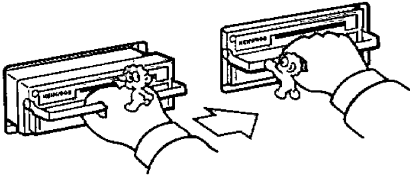

 
- Do not drop pieces of metal, needles, coins and other electrically conductive materials into the unit.

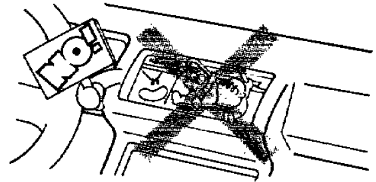

 
- The unit is designed to be connected 12 V DC and negative grounding.

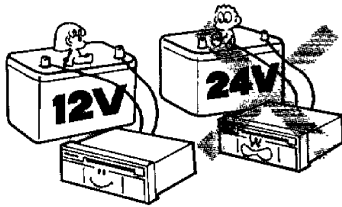

 
- Do not place the unit, where it will be exposed to direct sunlight or close to heating device.

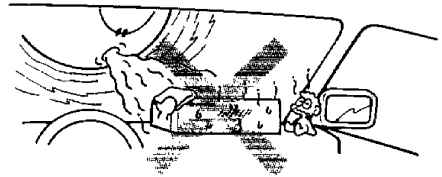

 
- Do not open enclosure, such as front panel, top or bottom cover.

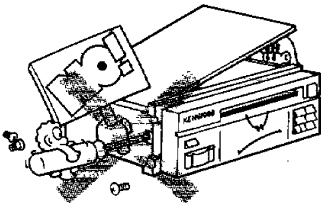


- Do not dash water on the unit.

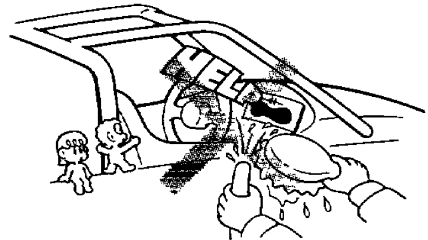 

 - Do not place the unit in areas of excessive dust, high humidity or on unstable surfaces.

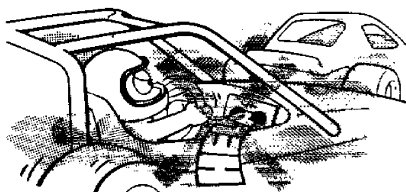


 - If an abnormal smell or smoke is detected, immediately turn the power off.

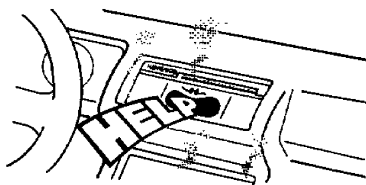

CLEANING

 1. Turn the power off, before cleaning the unit.
2. Do not use any type of abrasive pad, thinner, benzene and any such kind of objects.
3. Wipe the front panel and other exterior surfaces of the unit with a soft dry cloth or a soft cloth lightly moistened with a neutral detergent.

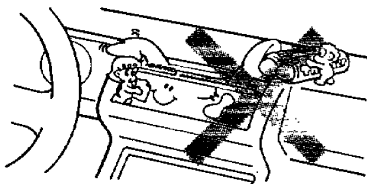

- If you have difficulty in installing the set in your car, please contact your KENWOOD dealer.


FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

CONTENTS

	Page
• POWER AND SOUND LEVEL	5
• TONE QUALITY AND LOUDNESS	6
• SEEK TUNING	7
• MANUAL TUNING	8
• PRESET STATION TUNING	9
• AUTO MEMORY	10
• TAPE PLAYBACK	11
• METAL TAPE AND DOLBY NR	12
• DIRECT PROGRAM SEARCH SYSTEM	13
• INDEX SCAN	14
• REPEAT PLAY	15
• BLANK SKIP	16
• TUNER CALL	17
• COMPACT DISC PLAY (CD-Changer is used)	18
• TRACK/DISC SEARCH (CD-Changer is used)	19
• RANDOM PLAY (CD-Changer is used)	20
• TRACK REPEAT (CD-Changer is used)	21
• TRACK SCAN (CD-Changer is used)	22
• DISC SCAN (CD-Changer is used)	23
• CHANGE-OVER THE INDICATION AND CLOCK ADJUSTMENT	24
• INSERTION/REMOVAL OF UNIT	25
• CODE PROTECTION	26
• SELECTABLE ILLUMINATION	28
• CHANNEL SPACE SELECTION	29
• CARE AND MAINTENANCE	30
• ACCESSORIES AND INSTALLATION	31
• CONNECTIONS	32
• INSTALLATION	33
• TROUBLESHOOTING GUIDE	34
• SPECIFICATIONS	36

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

“DOLBY” and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

POWER AND SOUND LEVEL

 
POWER ON/OFF

Press the Power switch.
(The power goes ON.)


Press the Power switch for more
than 1 second.
(The power goes OFF.)

ALL MODE STAND-BY

Tap the Power switch.
(The power remains in the ON
condition and wait for operation of
each mode state.)

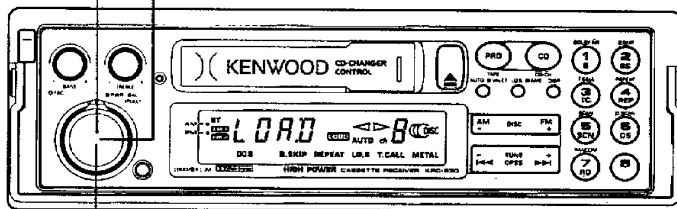


Volume
Decrease

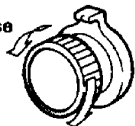 

Volume Increase

Left

 
Balance
Control (Pull)

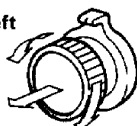

Right

Front

 Fader control

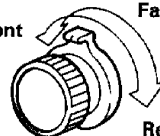

Rear

 


1. When turning the Power switch ON, operation begins from the Tuner mode.
2. Explain how to operate hereafter with the power ON.

TONE QUALITY AND LOUDNESS



BASS CONTROL

Each time this knob is pressed, it stays out or in. It must be out to adjust the bass response, and in when not in use.

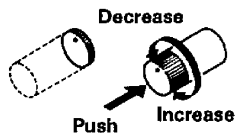


TREBLE CONTROL

  Each time this knob is pressed, it stays out or in. It must be out to adjust the treble response, and in when not in use.

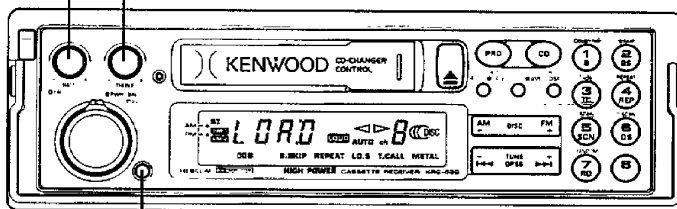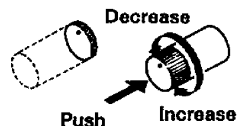

LOUDNESS SWITCH

 When listening at low volume levels, tapping this switch will activate the loudness circuit which will compensate for the human ear's lack of sensitivity to bass at low levels.



ON

SEEK TUNING

1

Select the desired Band.

AM DISC FM

↑ ↑

Press AM Press FM1 or FM2

92.1 FM1

92.1 FM2

 
530 AM

2

Turn the Auto switch ON.

92.1 AUTO

ON

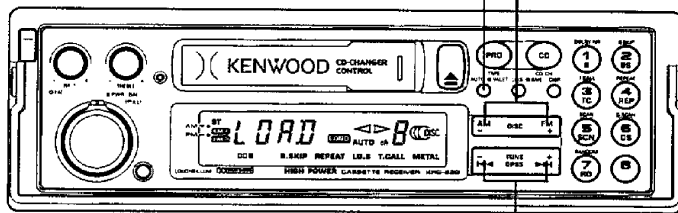

3

Press Seek switch.
(Seek starts and receives a broadcast station.)

TUNE OPS

↑ ↑

 
 
Down Seek Up Seek

Lit when stereo broadcast is received.

92.1 AUTO

Indicates reception frequency.

<Local tuning>

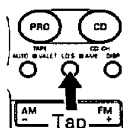


- If the Local switch is turned ON during SEEK TUNING and AUTO MEMORY, it will stop at stations only with satisfactory reception conditions.

MANUAL TUNING



1

 Select the desired Band.

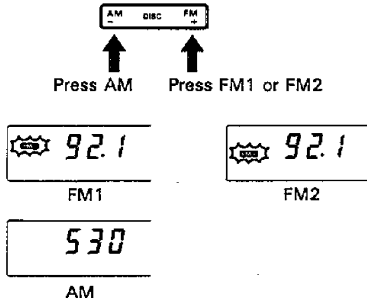


2

  Turn the Auto switch OFF.

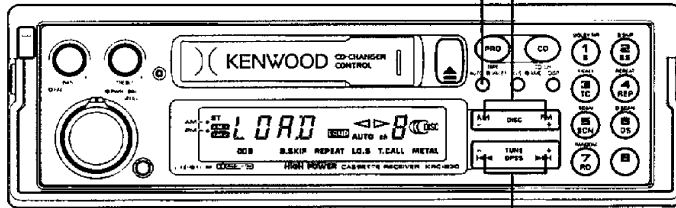


3

 Press to select the desired frequency.

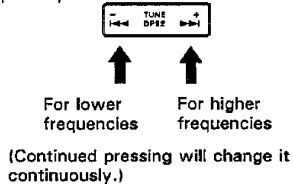

4

 Indicates the frequency being received.

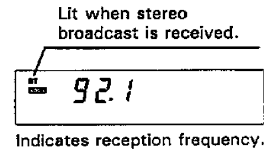

PRESET STATION TUNING

 
1

Selects the band and station you wish to preset.

2

Press the Preset station switch you wish to be kept preset for more than 2 seconds.
(When it is pressed, the number of switch pressed will be indicated.)

92.1

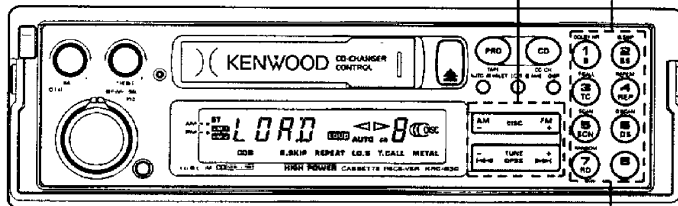

3

By repeating operation of 1 - 2 above, one station can be memorized in one switch each at FM1, FM2 and AM.

4

If tapped, the preset station can be called out.
(The number of switch pressed will be indicated.)

92.1

 


- If preset is to be made anew on the switch already preset, what was preset before will be replaced with what is to be preset.

AUTO MEMORY


1

Select the desired Band.

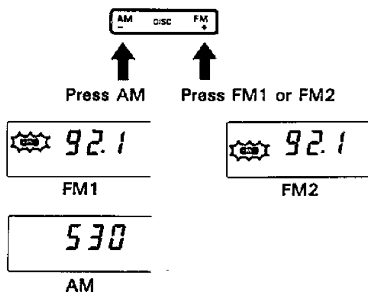

2

 Press the Auto memory switch for more than 2 seconds.

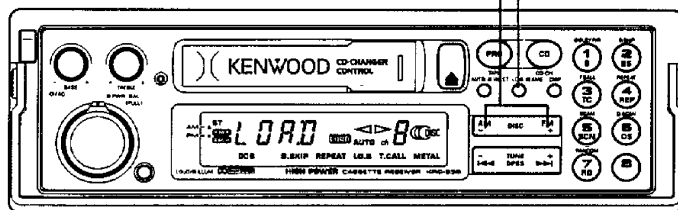

3

The selected band is automatically scanned and 8 stations are memorized. When 8 stations are memorized, the Auto memory function is automatically released.

 
4

The station last stored in memory is received.

TAPE PLAYBACK

TAPE PLAYBACK

Insert a cassette tape with the exposed tape facing to the right.
(Playback starts.)




TAPE ▶

(During playback,
▶ will be indicated.)

FAST FORWARD/REWIND

Operation	Press
Fast forward	▶▶ for more than 1 second.
Rewind	◀◀ for more than 1 second.

 To release, press the Program switch.

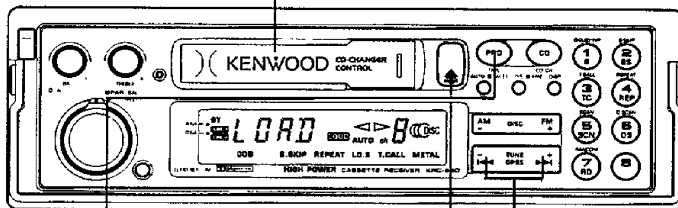

PROGRAM

When you wish to listen to the reverse side, press the Program switch.
(The reverse side will be played back.)

STOP PLAYBACK

Press the Eject switch.
(The cassette tape will come out.)


<Playback side>

When inserted with the side A up.

Indicator	Playback side
▶	Side A
◀	Side B

This will be reversed when inserted with the side B up.


<How to change the modes>

Present Mode	Destination Mode	Press
Tape	Tuner	Tap the Power (Tuner) switch. (Tape playback stops)
Tuner, CD-Changer	Tape	 or a cassette or tape should be inserted.

METAL TAPE AND DOLBY NR

METAL MODE

 
When a metal (chrome) tape is inserted, the Metal indicator comes ON, and the equipment is automatically set to the metal (chrome) tape position.




ON
(Metal/chrome tape position)

DOLBY B NR

 In tape play mode, press Dolby B NR switch when playing back a tape recorded with Dolby B NR system.



ON

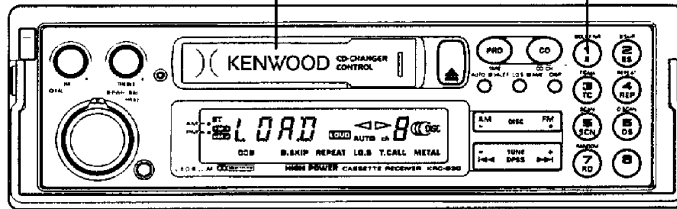 

DIRECT PROGRAM SEARCH SYSTEM


1 BACKWARD SEARCH


During playback of a program, tap the ◀ switch for the same number of times as the number of programs to be skipped.

This allows to search a program located in the backward direction of the present program by skipping up to 9 programs.

(The number of programs to be skipped is displayed blinking on the program count display.)

Example:

 When pressed once
(Searching the beginning of present program)

 When pressed 4 times
(Searching the third program before the present program)


1 FORWARD SEARCH


During playback of a program, tap the ▶ switch for the same number of times as the number of programs to be skipped.

 
This allows to search a program located in the forward direction of the present program by skipping up to 9 programs.

(The number of programs to be skipped is displayed blinking on the program count display.)

Example:

 When pressed once
(Searching the beginning of the next program)

 When pressed 5 times
(Searching the fifth program after the present program)

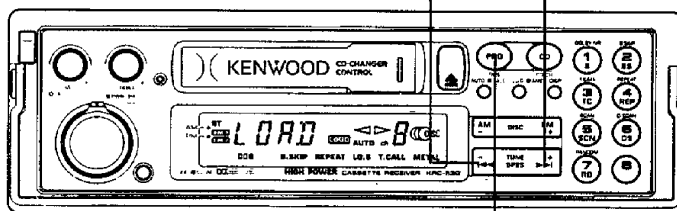

2

The rewind or fast forward operation is released when the beginning of the program selected in step 1 is detected, and tape playback starts from that position.

TO RELEASE

Press the Program switch to release the DIRECT PROGRAM SEARCH in the middle.

 


- Please note that in case of the following tapes, sometimes the DIRECT PROGRAM SEARCH SYSTEM does not function properly.
 1. When an interval between the music is less than 5 seconds.
 2. When a recorded portion of the low sound volume continues for more than 5 seconds.
- Depending on recording conditions, a search may not be conducted to the beginning of the musical track being played when initiated at an early part of the track.

INDEX SCAN

1

Press the index scan switch.
(While in the INDEX SCAN mode,
the below indication is repeated.)



2

Tape is fast forwarded until the
beginning of the next program is
searched.



3

After the beginning of the searched
program is played, the tape is fast
forwarded again, and repeats the
same operations for other
programs on tape.

4

When the beginning of a desired
program starts to be played, press
the Program switch.
(INDEX SCAN is released and
normal tape playback starts.)

 


- Please note that in case of the following tapes, sometimes the INDEX SCAN does not function properly.
 1. When an interval between the music is less than 5 seconds.
 2. When a recorded portion of the low sound volume continues for more than 5 seconds.

REPEAT PLAY


1

Press the Repeat switch at the track you wish to listen to repeatedly.
(Repeat indicator lights up.)



2

 After the track being played is over, automatic rewind begins to the beginning of the track selected for repeat play, and the track starts to play again.

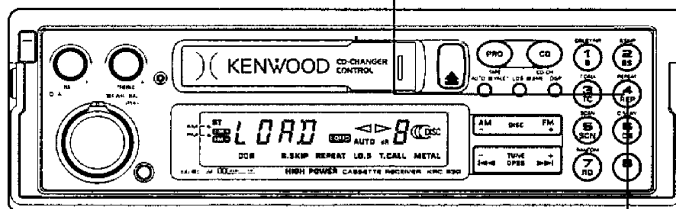

TO RELEASE

Press the Repeat switch again.

 


- Please note that in case of the following tapes, sometimes the REPEAT PLAY does not function properly.
 1. When an interval between the music is less than 5 seconds.
 2. When a recorded portion of the low sound volume continues for more than 5 seconds.

BLANK SKIP

1


Press the Blank skip switch.
(Blank skip indicator lights up.)



ON

2

 When a soundless segment of the tape lasts for more than 10 seconds, it will be advanced at high speed to the next track.

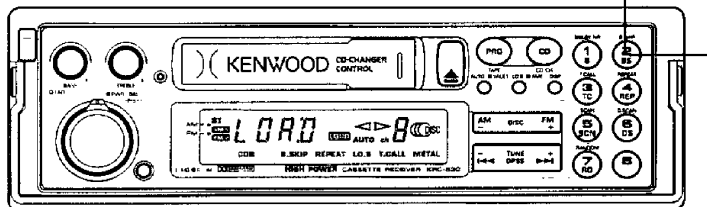

TO RELEASE

Press the Blank skip switch again.

- When the below described recorded tape is used, BLANK SKIP may not function correctly. However, this is not a malfunction.

 
1. Even when there is more than 10 seconds between tracks, BLANK SKIP may not operate if there is excessive background noise recorded, as this will not be recognized as "soundless."
2. BLANK SKIP may operate even in the middle of a recorded track, if there is a segment recorded at an extremely low sound level which last for more than 10 seconds. (In this situation, BLANK SKIP should be set to "OFF".)



TUNER CALL


1

Press the Tuner call switch.
(Tuner call indicator lights up.)



2

 It will function as a tuner automatically during fast forward and rewind.

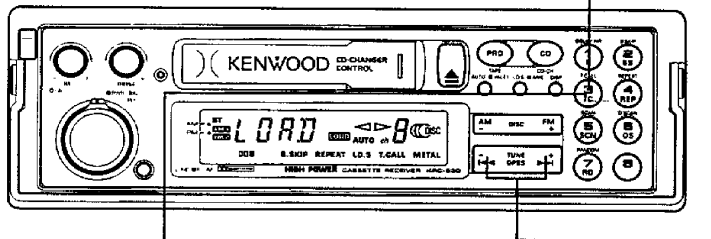


TO RELEASE

Press the Tuner call switch again.

COMPACT DISC PLAY (CD-Changer is used)

COMPACT DISC PLAY

 Press the CD switch.
(The DISC indicator lights and the CD play starts.)




AHEAD/BACKWARD

(at high speed)

Operation	Press
Ahead	▶▶ and hold.
Backward	◀◀ and hold.

 The Ahead/Backward play is released as soon as the finger is removed from the switch.

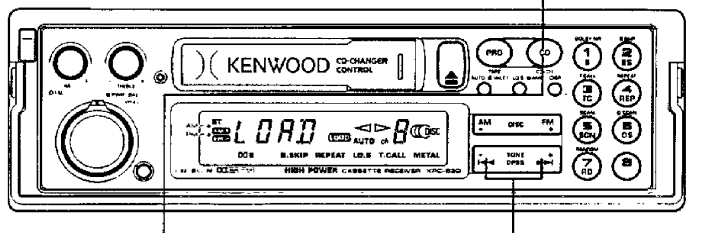

TO STOP CD PLAY

Press the CD switch.
(The DISC indicator disappears and the CD play stops.)

At the end of the disc

- When disc reaches the end of the last selection of the next disc starts automatically. At the end of the last disc, the unit will go back to the beginning of the first disc, and the play will restart.




<How to change the modes>

Present Mode	Destination Mode	Press
CD-changer	Tuner	Tap the Power (Tuner) switch. (Compact disc play stops)
Tuner, Tape	CD-changer	

TRACK/DISC SEARCH (CD-Changer is used)

BACKWARD DISC SEARCH

 
Press the Disc - switch successively until the Disc No. display shows the desired disc No.




Disc No. display

FORWARD DISC SEARCH

 Press the Disc + switch successively until the Disc No. display shows the desired disc No.




Disc No. display

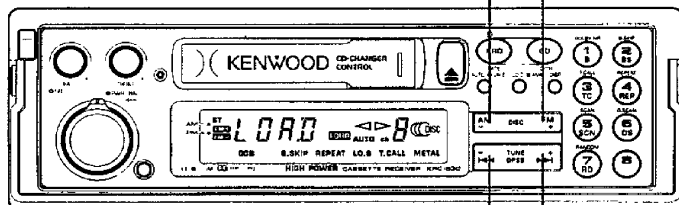 

BACKWARD TRACK SEARCH

 
Tap the <<< switch successively until the Track No. display shows the desired track No.



Track No. display

FORWARD TRACK SEARCH

 Tap the >>> switch successively until the Track No. display shows the desired track No.



Track No. display

 


- If BACKWARD TRACK SEARCH is initiated while track No. 1 is being played, the play position always returns to the beginning of track No. 1, and other tracks cannot be searched.
- If FORWARD TRACK SEARCH is initiated while the last track of a disc is being played, no operation takes place.
- The Disc No. display of No. 10 Disc is "0".

RANDOM PLAY (CD-Changer is used)

1



Press the Random switch.
(The displayed track No. vary one after another.)



During Random Search

2

  The tracks in the CD is played in a random order. When all of the tracks in that CD have been played, the next CD is played in a random order.
("—" of the Track No. display blinks.)

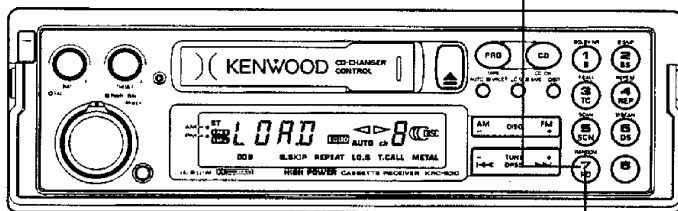

TO RELEASE

Press the Random switch again.



- When the Disc magazine is eject, RANDOM PLAY should be initiated again.




- Pressing the ►►| switch during RANDOM PLAY changes the track to the next random selection.

TRACK REPEAT (CD-Changer is used)


1

 Press the Track repeat switch.
(Repeat indicator lights up.)



2

 The track being played is played repeatedly.

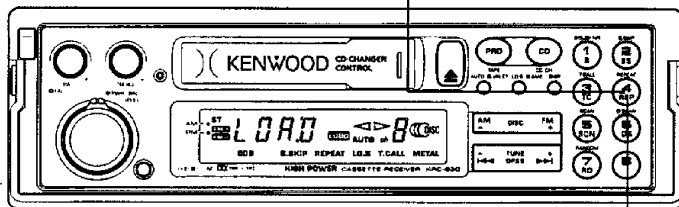

TO RELEASE

Press the Track repeat switch again.



- When the Disc magazine is eject, TRACK REPEAT should be initiated again.



- Ahead/Backward CD Play (at high speed) cannot be initiated during Track Repeat.

 
TRACK SCAN (CD-Changer is used)

1


Press the Track scan switch.
(This initiates TRACK SCAN.)

2

The first 10 seconds of all tracks in the CD are played in sequence.
("T" of the Track No. display blinks.)



ON

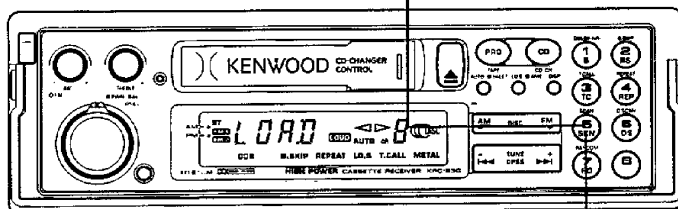 

3

When the beginning of a desired track starts to be played, press the Track scan switch.
(TRACK SCAN is released and normal CD play starts.)



- When the Disc magazine is eject, TRACK SCAN should be initiated again.
- Track scan plays the beginnings of all tracks in a disc repeatedly.

 
 
DISC SCAN (CD-Changer is used)

1

Press the Disc scan switch.
(This initiates DISC SCAN.)

2

The first 10 seconds of each track of the disc will be played one after another.
(While the disc is being scanned, the disc number indicator flashes.)

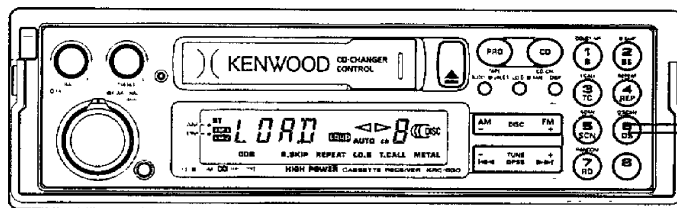


3

Press Disc scan switch for the disc required.
(DISC SCAN will be canceled and operation will return to the normal Disc play mode.)

CHANGE-OVER THE INDICATION AND CLOCK ADJUSTMENT


■ Change-over of indication

 Every time Display switch is tapped, the indications change as follows:



Clock indication
(The AM or PM is displayed with a dot.)

Mode	Indications
Tuner	Received frequency ↔ Time
TAPE	TAPE display ↔ Time
CD-changer	Track number ↔ Time ↕ Track Time

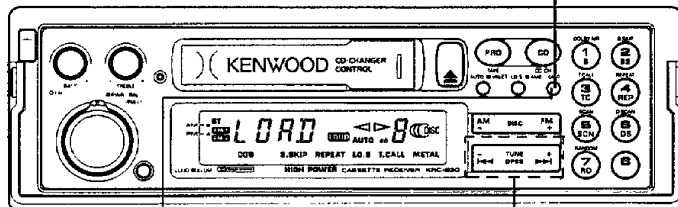 

■ Clock Adjustment

1

Keep on pressing Display switch.
(Then, make sure that clock indication is present.)

2

Adjust "Hour" with ◀◀ switch and "Minute" with ▶▶ switch while continuing the operation in 1.



 
- Hours digit increases when the minutes changes from 59 to 00.

INSERTION/REMOVAL OF UNIT

■ Insert the unit



1

Insert the unit into the detachable case.

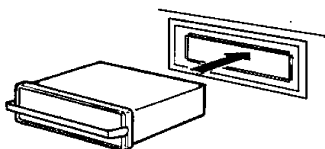

2

  Lower the handle down to the bottom.

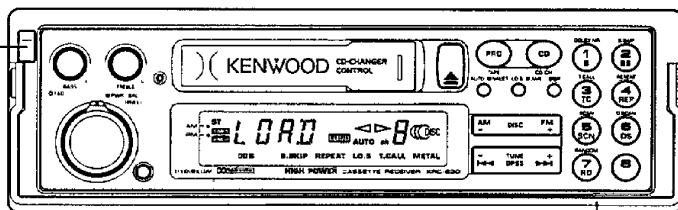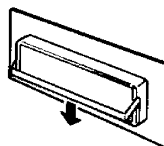

■ Remove the unit

1

 
Press the T.P.C. button.
Lift the handle.
(The handle lock is released and
power is OFF.)



- Be sure to eject the cassette tape before removing the unit.

2

Hold the handle and pull it out.

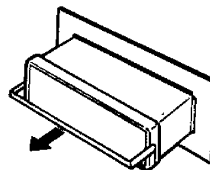

- When turning the Power OFF during unit removal, operation will resume from the mode selected at the time the power was turned OFF.

 
CODE PROTECTION

- A cord number can be registered to prevent misuse. It can be set so that the equipment will not operate until the code number registered at the time of Power OFF is re-entered at the time of Power ON.

■ Registration of code number.



1

Press the Valet switch for more than 1 second.
(CodE indicator flashes.)



2

  A code number up to four digits can be entered with the Preset station switch.
(The number entered will be shown as a flashing display.)

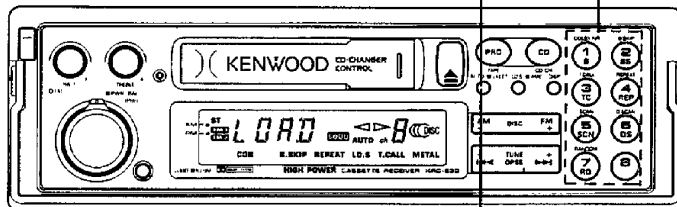

3

Tap the Valet switch.
(Power is turned OFF.)

TO RELEASE

For cancellation of the code number, press the Valet switch for more than 1 second.
(The player will return to the state it was in before code number registration.)

 


- When the input code number is unknown, please consult your nearest KENWOOD service agent.

■ Turning the power ON.



1

Press the Power switch.
(CodE indicator flashes.)



2

  Re-enter the code number using
the Preset station switch.
(The number entered flashes.)

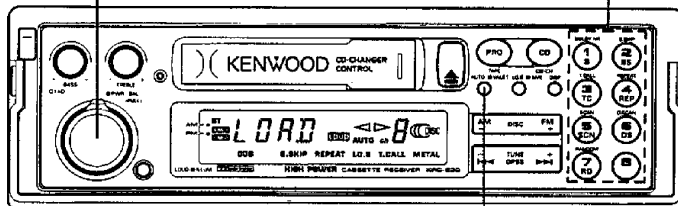

3

Press the Valet switch.
(Power is turned ON.)

 


- If each operation is not performed within 10 seconds of pressing the Power switch, the power will be automatically tuned OFF.

SELECTABLE ILLUMINATION

- Illuminations can be changed to fit the type of car or to suit your own taste.

Every time the Illumination switch is pressed for more than 1 second, it will switch over between the colors of green and orange.

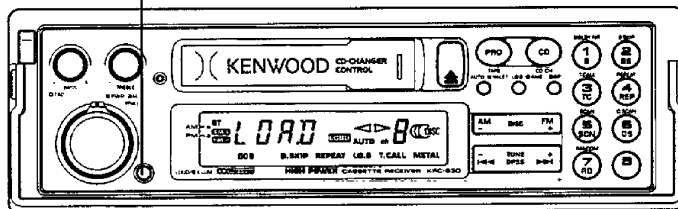

CHANNEL SPACE SELECTION

 
- The KRC-830 has a channel space select function.
Two spacing frequencies are available for both FM and AM, 200 kHz or 50 kHz for FM, and 10 kHz or 9 kHz for AM.

1

Turn the power OFF.

2

Keep on pressing the Preset station switch of "1" and "5".

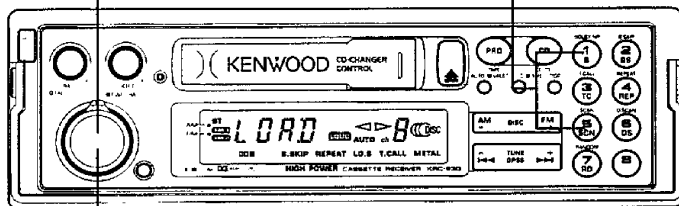

3

Turn ON the power while engaged in the operation of 2.
(Channel space will turn to 50 kHz for FM and 9 kHz for AM.)

4

To bring it back the home position, carry out operations of 1-3 again.
(Channel space returns to 200 kHz for FM and 10 kHz for AM.)



- When the channel space is changed, the memorized contents are erased.
- The channel space selection is not used in United States or Canada.

CARE AND MAINTENANCE

Notes on handling tape

 
- Before loading a cassette, check the tape for slack. If there is slack tape, remove it using a pencil to turn one of the spools in the cassette shell.
- Do not expose the cassette tape to direct sunlight. Leaving a cassette at high temperature or humidity can deform the cassette shell or tape.
- 120-minute tape is very thin. Avoid its use, because it can easily be twisted around the pinch roller.

Head cleaning

Magnetic particles from the tape adhere to the head surface after a long period of use, resulting in noise and poor quality sound. Clean the head with cleaning tape available at your KENWOOD dealer. And follow the directions with the head cleaner.


CAUTION:

- The KRC-830 includes a lithium backup battery to retain memory in the microprocessor. If the unit can no longer retain its memory, the lithium battery may have been discharged. In this case, bring the unit in to our authorized service center. This backup lithium battery life is estimated at about 7 years.

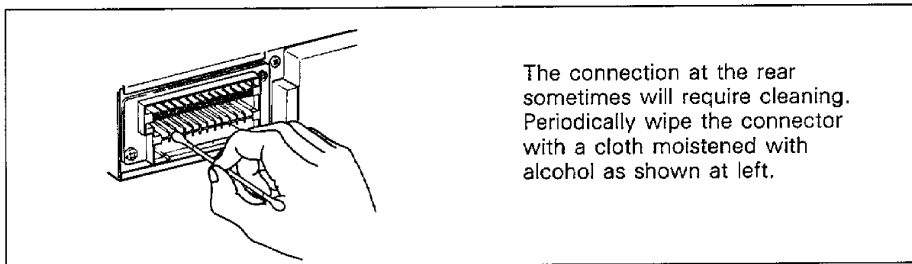

• If your set malfunctions


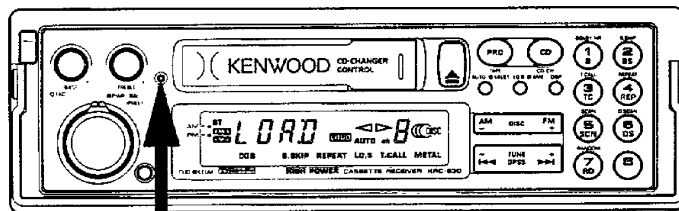 


If your set malfunctions or operates abnormally, first press the Reset button. If the malfunction persists, leave the set as it is and please call your KENWOOD dealer.



Reset button

  ACCESSORIES AND INSTALLATION

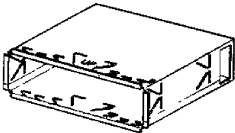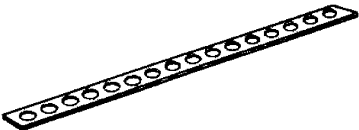■ ACCESSORIES

No.	Part name	External View	Number of units
①	Detachable case		1
②	Metal mounting strap		1
③	Hex. Bolt (M5 × 20)		1
④	Hex. nut (M5)		2

■ INSTALLATION

 
1. Before installation and wiring, remove the ⊖ terminal of the battery to prevent short-circuiting.
2. Connect the input and output cords of the system.
3. Connect the ground to the metal chassis of the car.
4. Connect the memory backup lead (yellow).
5. Connect the power supply lead (red).
6. Install the set and after confirming the installation and wirings are correct, connect the ⊖ terminal of the battery.
7. After installation, surely press the Reset button.



- If a fuse is blown, first check that the associated wires are not short-circuited then replace the fuse with a new one having the same capacity.
- Secure unconnected wires properly so that they do not contact the vehicle chassis.
- Do not remove the caps attached to the unused terminals.
- As the unit uses BTL output, always connect the without stripe speaker wires to the ⊖ terminals of the speaker systems. Never let the ⊖ speaker wires touch and never connect them to the chassis (ground). Do not let the speaker terminals come into contact with the chassis (ground). Insulate any unused output wire to prevent a short circuit.


CONNECTIONS

① Detachable case

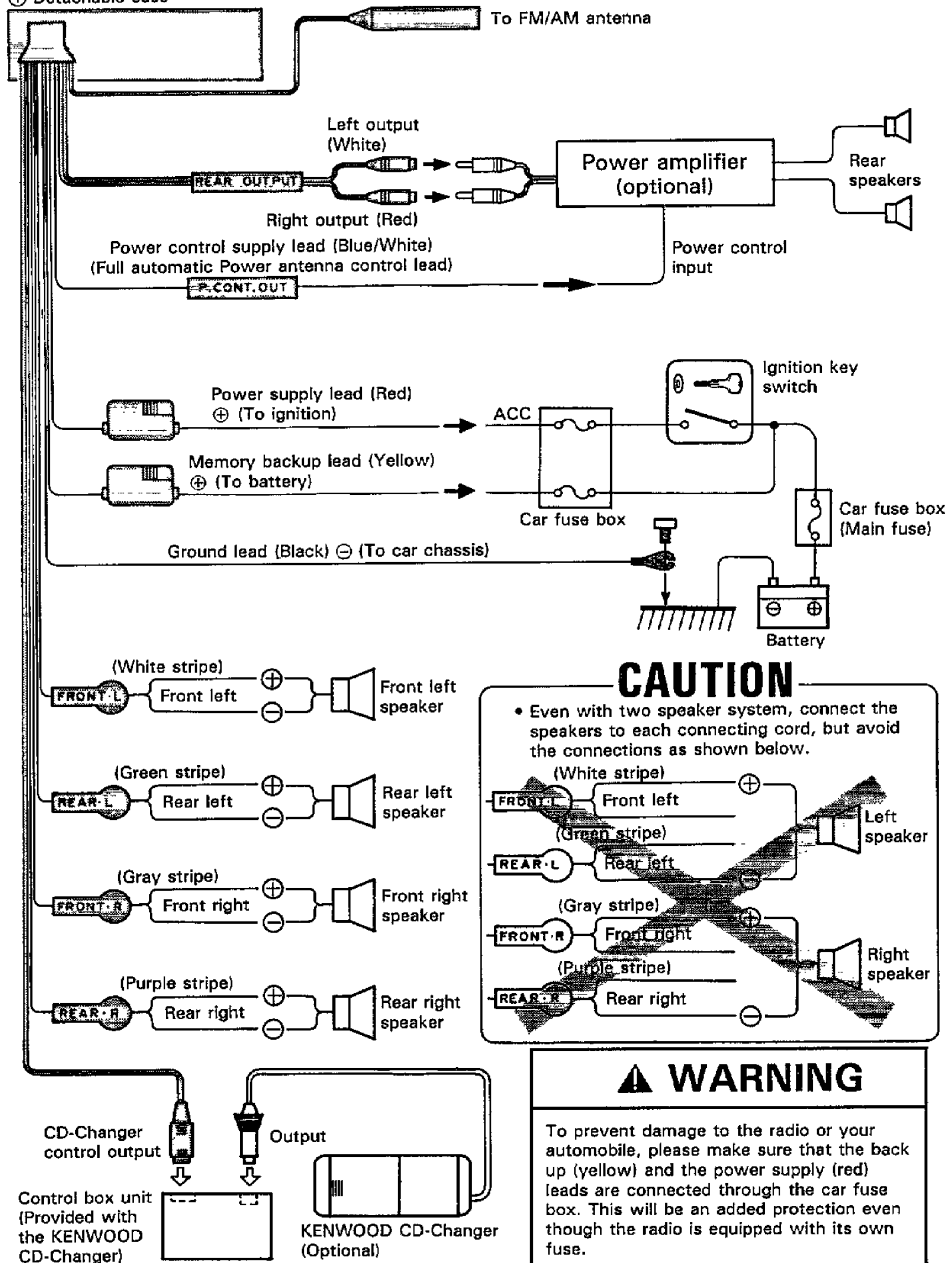


INSTALLATION

 - Insert the Detachable case ① into the console and clamp with the claws. If the detachable case cannot be inserted, cut off the console with a file.

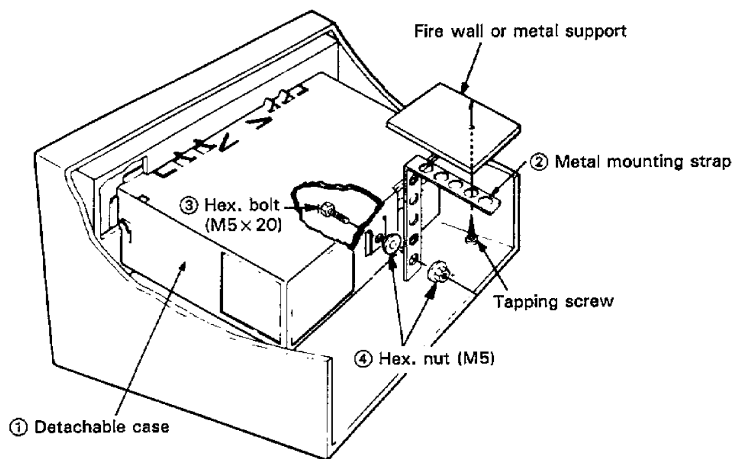

 - To install in the Japanese car, fix using the 2 of the holes indicated with ● with TP screw (M5).

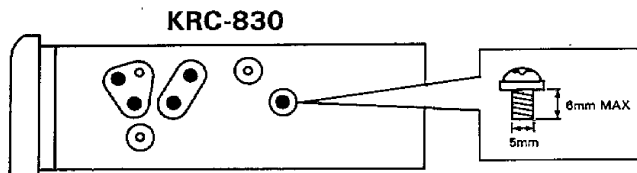

- If an "ELECTRONIC CHASSIS LOCK" (optional) is to be used with this unit, then, buy a "CK-50A".

TROUBLESHOOTING GUIDE

What often appears to be a malfunction is often due to user error in operation or connection. When trouble occurs with your unit, please check the following before calling for service.

Symptom	Cause	Remedy
No sound one channel	The balance/fader control is extremely rotated to one side.	Adjust the balance/fader control.
Poor reception	The antenna is not extended.	Extend the antenna.
Tonal quality is inferior.	Head is stained.	Carry out head cleaning.
Tape creaks.		
Operation switches do not function.	Correct operation is not obtained due to a sudden change in the power voltage, etc.	Press the Reset button of the front panel.

■ When the KENWOOD CD-changer is connected:

Symptom	Cause	Remedy
CD play does not start.	Power switch is not turned ON.	Turn the power switch ON, then press the CD switch.
The specified disc is not played and the next disc is played.	<ol style="list-style-type: none"> The specified disc is too dirty. The disc is placed upside down. Two discs are set in the same position. The specified disc is placed in a position with a different number. The disc is damaged or scratched seriously. 	<ol style="list-style-type: none"> Clean the disc. Eject the magazine and re-insert the disc correctly. Eject the magazine and set each disc correctly. Eject the magazine to check the disc number and the position number, then specify again. Play other discs.
No sound is output while the changer indicator is shown.	<ol style="list-style-type: none"> Volume is set to the minimum level. The incorporated microcomputer is not operating correctly. System connections are made imperfectly (power cord, connection of pre-out jacks, or speaker connections, etc.). 	<ol style="list-style-type: none"> Increase the volume level. Press the Reset button of this unit. Check the connections according to the instruction manual. If anything is wrong, reconnect it correctly.
Even when the required track is specified, the specified track is not played or the player does not function.	The player is set to random play.	Release random play.

Other than the previous, this unit displays various error indications to show the following messages.

E-00: The CD-changer control output is not connected.

E-01: No disc magazine in the changer, or the magazine is not set completely.

E-02: No discs in the disc magazine.

E-03: The specified track is not present on the disc.

(Example: This appears when the 15th track is specified for a disc on which only 10 tracks are contained.)

E-04: Disc is too dirty.

Condensation has occurred on the disc, or water drops are on the disc.

Disc is set upside down.

E-99: Operation incorrect due to something being defective.

Press the Reset button on this unit.

If the "E-99" indication does not disappear with this operation, consult your nearest KENWOOD Service Agent.

E-0D: • When the temperature exceeds 60°C, the protection circuit is engaged to stop any operation. At this time, this indication will appear.

• Open a window or turn the air-conditioner ON to lower the temperature. After a while, this indication will go out.

• This indication also appears for several seconds when making connections, or when the Reset button is pressed.

E-0E: This is displayed when the condition of "E-0D" is released.

LOAD: This indication appears while a disc is being changed inside the changer.

CAUTION: Random play, Track repeat or Track scan cannot be initiated while the LOAD indication is displayed.

* When no indicator appears in this unit and only illumination appears, the cable connector may nearly be disconnected.

SPECIFICATIONS

Specifications subject to change without notice.

FM Tuner Section

Frequency Range (200 kHz space)	87.9 MHz~107.9 MHz
(50 kHz space)	87.5 MHz~108.0 MHz
Usable Sensitivity	12.0 dBf (1.1 μ V/75 ohms)
50 dB Quieting Sensitivity	15.2 dBf (1.6 μ V/75 ohms)
Frequency Response (± 3 dB)	30 Hz~15 kHz
Signal to Noise Ratio	73 dB
Selectivity	100 dB
Capture Ratio	1.5 dB
Image Response Ratio.....	70 dB
IF Response Ratio.....	120 dB
Stereo Separation (1 kHz).....	40 dB

AM Tuner Section

Frequency Range (10 kHz space).....	530 kHz~1,700 kHz
(9 kHz space).....	531 kHz~1,611 kHz
Usable Sensitivity.....	28 dB (30 μ V)

Cassette Deck Section

Tape Speed.....	4.76 cm/sec.
Wow & Flutter	0.09% (WRMS)
Fast Winding Time (C-60).....	100 sec.
Frequency Response (120 μ s).....	30 Hz~19 kHz (± 3 dB)
(70 μ s).....	30 Hz~20 kHz (± 3 dB)
Stereo Separation (1 kHz).....	43 dB
Signal to Noise Ratio (Dolby NR OFF).....	56 dB
(Dolby-B NR ON)	65 dB

Audio Section

Maximum Power Output.....	25 W + 25 W
Power Output (10% THD, 1 kHz, 4 ohms)	20 W + 20 W
(1% THD, 30 Hz-20 kHz, 4 ohms)	15 W + 15 W
Tone Action	Bass: 100 Hz ± 10 dB
	Treble: 10 kHz ± 10 dB
Preout level/load.....	1000 mV (MAX.)/10 k ohms

General

Operating Voltage	14.4 V (11~16 V allowable)
Current Consumption.....	6 A at Rated Power
Installation Size (W x H x D)	182 x 52 x 159 mm
	(7-3/16 x 2-1/16 x 6-1/4 in.)
Weight	2.0 kg (4.4 lb)