




DISPLAY BOARD INSTALLATION INSTRUCTIONS



1


Slide the Here₂Anywhere unit into the cradle.

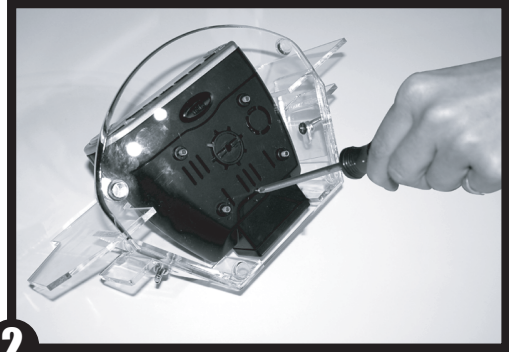

2


Secure the cradle to the Here₂Anywhere unit with the Phillips head screw (Screwdriver not included.)

Note: Screw goes through the large hole in the base.

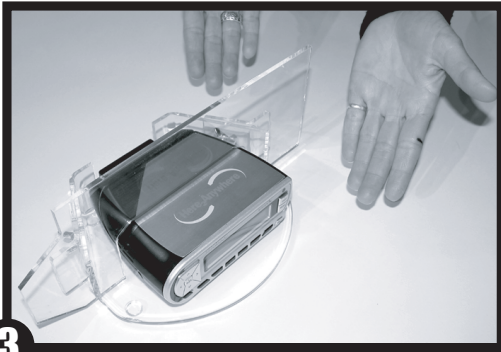

3

Now that the cradle, base and unit have been assembled you are ready to join the display to the wall mounting system.

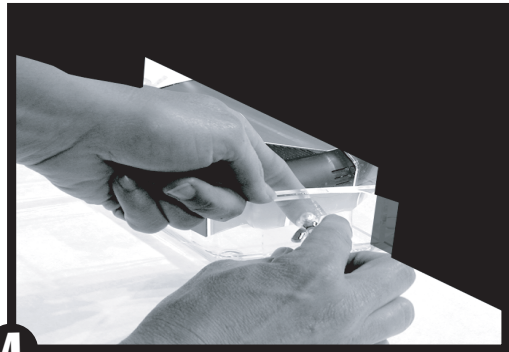


4

Using the supplied butterfly nuts and bolts connect the adjustable brackets to the base plate. Push the brackets toward the wall and tighten them. Repeat this procedure on the other side.

5


Connect live feed satellite antenna to the back of the cradle where it is marked "Antenna".

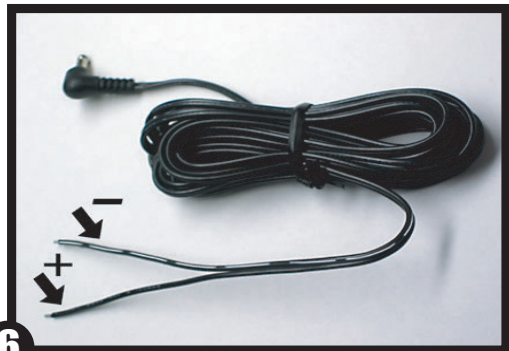

6

To connect the power use the included 10' power cable. Connect the finished end to the back of the cradle where it is marked "Power". Connect the bare wire end to the fused 12 volt DC from the display board.

Important note: To remove the Here₂Anywhere unit from the display once it is mounted and inserted into the cradle, the Phillip head screw must be removed. Next the above button must be pushed before pulling the unit out of the cradle. The supplied Allen wrench can be used to trigger the release button. Slide the Allen wrench between the Here₂Anywhere and the base plate to reach the button.

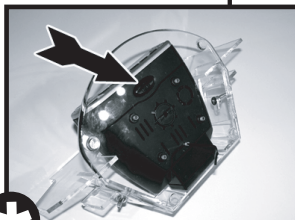




COUNTER TOP INSTALLATION INSTRUCTIONS



1

Slide the Here₂Anywhere unit into the cradle.

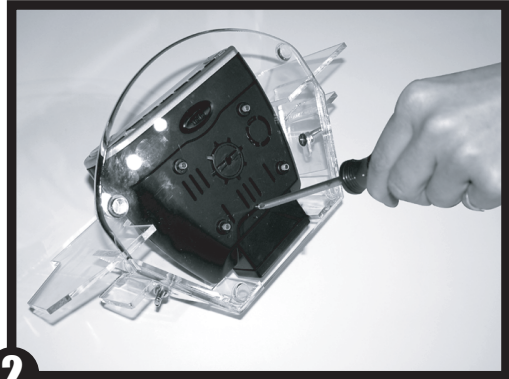

2

Secure the cradle to the Here₂Anywhere unit with the Phillips head screw (Screwdriver not included.)

Note: Screw goes through the large hole in the base.



3


Now that the cradle, base and unit have been assembled, you are ready to display the Here₂Anywhere on a counter or table.

4

For power you will need to use the AC adapter from the Here₂Home kit (not included).

5

To attach a tether (not included), use the screw holes on the side of the display.

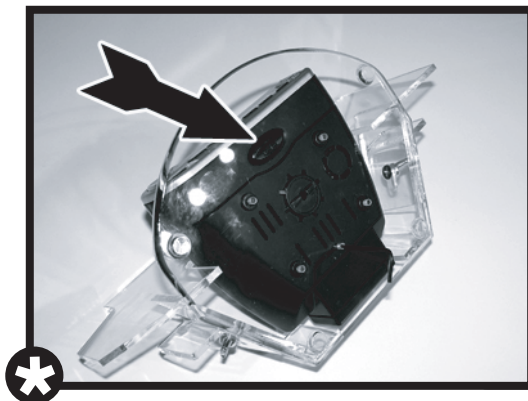

Important note: To remove the Here₂Anywhere unit from the display once it is mounted and inserted into the cradle, the Phillip head screw must be removed. Next the above button must be pushed before pulling the unit out of the cradle. The supplied Allen wrench can be used to trigger the release button. Slide the Allen wrench between the Here₂Anywhere and the base plate to reach the button.