

KENWOOD

UD COMPONENT SYSTEM/COMPACT HI-FI SYSTEM

UD-413

INSTRUCTION MANUAL

KENWOOD CORPORATION

For your records

Record the serial number found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on the product.


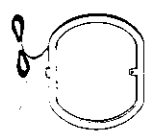

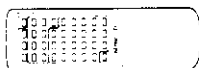 
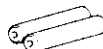 





Model _____ Serial Number _____

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

 Accessories

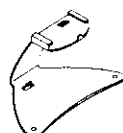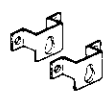FM indoor antenna (1) 	AM loop antenna (1) 	Loop antenna stand (1) 
Remote control unit (1) 	Batteries (R6/AA) (2) 	Audio cord (1) 
Speaker cord (2) 	Speaker stand (2) 	Wall hanger (2) 
		Screw (4) 

Before applying power

 **Caution : Read this page carefully to ensure safe operation.**





UD-413 (En)

Units are designed for operation as follows.

2 U.S.A. and Canada AC 120 V only

Safety precautions

WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	 CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
	THE LIGHTNING FLASH WITH ARROW-HEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.
	THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

The marking of products using lasers (Except for some areas)

**CLASS 1
LASER PRODUCT**

The label is attached to the rear panel and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Special features

Contents

UD-413 (En)



Easy operation

Nearly all operations for CD, tuner, and cassette deck can be done just with the self-illuminated basic operation keys (Color-keyed function control).

When the input selector is operated, the power is automatically switched on and play (reception) starts (except ALX).

3D Speaker System

Free layout is possible. A 3D speaker system is used. The sub woofer can be placed anywhere, for example in a corner of the room. Without impairing the stereo feeling, and rich bass sound will be played back.



Dynamic rotary volume control - 2

When adjusting the volume, fast turning of the volume control produces a larger volume change for the same angle of rotation of the VOLUME CONTROL knob. Slow turning produces a small volume change, thus permitting fine adjustment.



L.L.C. (Low Level Control) - 7

For listening at a low level at night etc., the volume can be lowered by one-touch operation. At this time, the low and the high range are compensated automatically for a more natural sound reproduction. The level at the time of low level can be changed as desired.



3-Disc carousel CD player - 8

The CD player is of the 3-disc carousel type which can accommodate up to 3 discs at a time. The disc can be replaced easily even during playback of another disc. This feature is useful when playing various discs for long periods.



One-touch edit - 25, 26




Only desired tracks from discs or an entire disc can be recorded on tape with a one-touch operation. This feature allows you to produce custom tapes.



Versatile tone and sound field adjustment - 27

The tone can be selected according to the genre of the music played: POP, ROCK, JAZZ, CLASSIC.

The sound field can also be selected as desired: ARENA, JAZZ CLUB, STADIUM, HIT MASTER.

	Before applying power	2
	Safety precautions	2
	System connection	4
	Operation of remote control unit	5
	Clock adjustment	6
	Sound adjustment functions	7
	Playback of CD	8
	Playing tracks in order from track No.1	8
	Playback from desired track	9
	Programming tracks in desired order	10
	Repeated playback	12
	Playback in a random order (Random playback)	14
	Playback of tape	15
	Tape playback	15
	Searching for the desired music program (DPSS)	17
	Broadcast reception	18
	Receiving broadcast station	18
	Storing radio stations in memory (Station preset)	19
	Recording (Deck B only)	20
	Preparation for recording	20
	Recording (Deck B only)	21
	Copying tape (Tape dubbing)	22
	CD edit recording	23
	Select the type of edit recording	23
	Timed edit recording	24
	Recording desired tracks while playing a CD	25
	Recording an entire disc	26
	Tone adjustment	27
	Demonstration	27
	Playing music with the desired tone	28
	Enjoying music with the presence effect (presence modes)	28
	Easy Karaoke singing (HIT MASTER)	29
	Timer operation	30
	Timer programming	30
	Sleep timer	32
	Maintenance	33
	In case of difficulty	35
	Specifications	38



Convenient timer functions - 30

In addition to the possibility of storing up to 2 timer programs in memory, the following functions are available:

- All timer: When the power is turned ON by the timer, the sound level increases gradually.
- Sleep timer: Useful when you want to go asleep while listening to music.

System connection

4

Do not plug the power cord into the power outlet until all of the required connections have been made.

- In case an associated system component is connected, also read the instruction manual of the component.
- Align the front panels of the unit flush.


Malfunction of microcomputer



If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to "in case of difficulty".

— 35

- Never short-circuit the + and - speaker cords
- If the left and right speaker connections or the + and - polarity are inverted, the sound will be unnatural with unclear positioning of musical instruments, etc. Be sure to connect them without mistake.

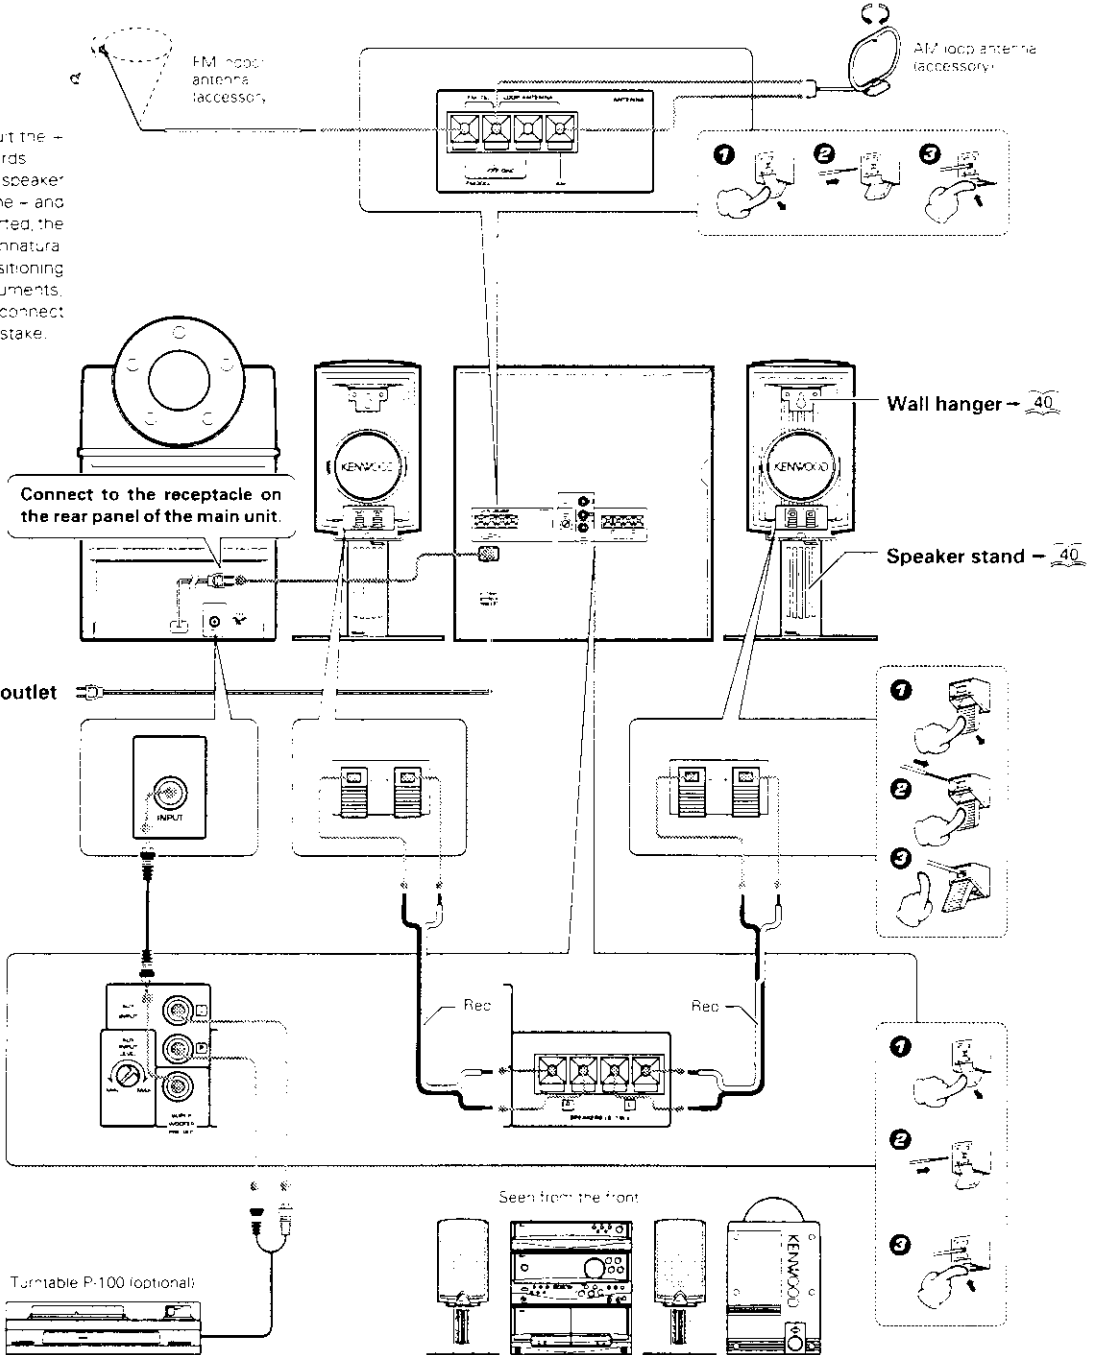

- Notes**
1. Be sure to insert all connection cords securely. If the connections are imperfect, the sound may not be produced or noise may interfere.
 2. Before plugging or unplugging a connection cord, be sure to unplug the power cord from the wall AC outlet. If connection cords are plugged or unplugged with the power cord still plugged in, malfunction or damage may result.
 3. Do not connect up a power source which is larger than that indicated on the socket at rear of the unit.



AUX INPUT LEVEL control

This control adjusts the input level from the component connected to the AUX INPUT jacks. Usually the AUX INPUT LEVEL should be set to MAX. Adjust the control when the input level is too high.

Note:



The AUX INPUT LEVEL control has been set to the MIN (minimum) position when the unit left the factory. Be sure to adjust the AUX INPUT LEVEL control if you connect an external component to the AUX jacks.

Power Supply for the Sub Woofer

When the system is connected as shown below, the power supply for the sub woofer will be coupled to the POWER ON/OFF switch of the main unit.

- ① Connect the power plug of the sub woofer to the AC receptacle (Switched) on the rear panel of the main unit.


- ② Always keep the POWER switch of the sub woofer set to ON.

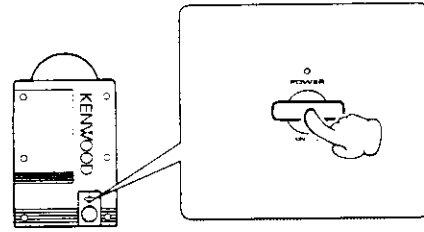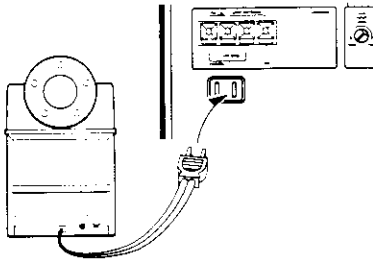


Operation of remote control unit

Loading batteries


- ① Remove the cover.

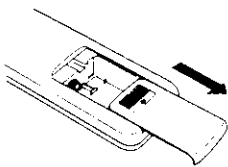

- ② Insert batteries.

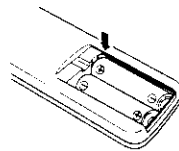

- ③ Close the cover.

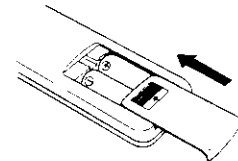


- insert two R6 ("AA"-size) batteries following the polarity indications.

Operation

After plugging the power cord of this unit, press the POWER key of the remote control unit to turn the power of the system ON. When the power is turned ON, press the key of the function to be operated.

- When pressing more than one remote control keys successively, press the keys securely by leaving an interval of 1 second or more between keys.

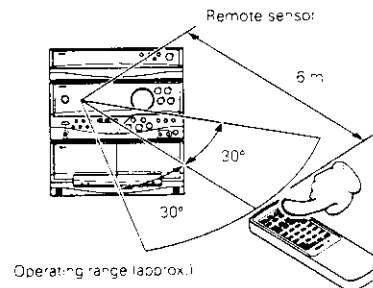

Model: RC-F3
Infrared ray system

Notes

1. The provided batteries are intended for use in operation checking, and their service life may be short.
2. When the remote controllable distance becomes short, replace both of the batteries with new ones.
3. If direct sunlight or the light of a high-frequency fluorescent lamp (inverter type, etc.) is incident to the remote sensor, malfunction may occur. In such a case, change the installation position to avoid malfunction.





Clock adjustment


6 This unit incorporates a clock function. Be sure to adjust the correct time before using the timer function.

Preparation


Ensure that the power is OFF.

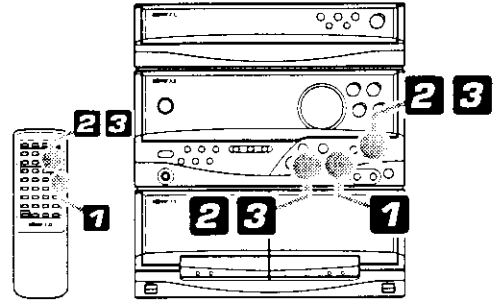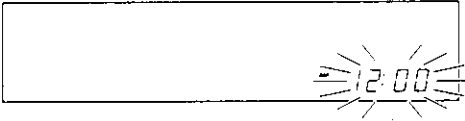

1 Activate the clock adjustment mode.


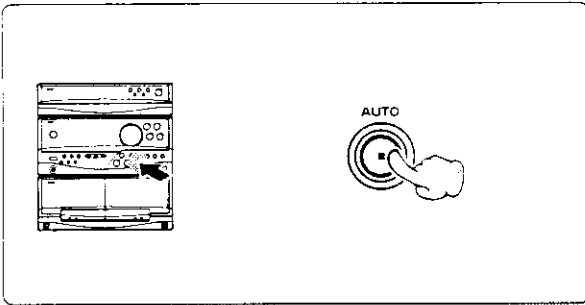


Example: Adjustment to 8:45

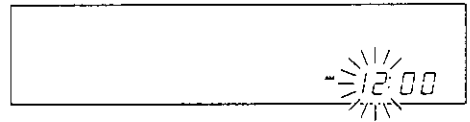



● The time display starts to blink

2 Enter the figure of hour.

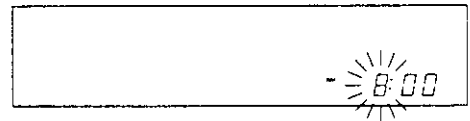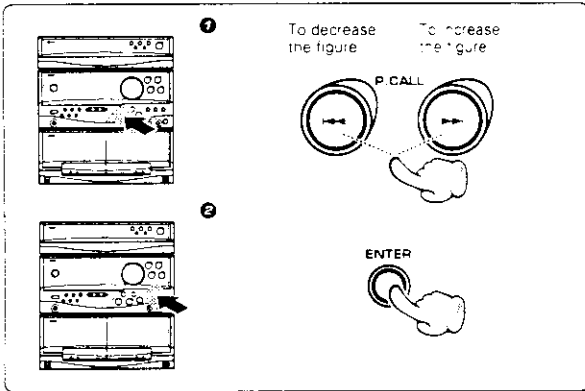

- The time of the day is represented in 12-hour AM/PM method.
- Press the **ENTER** key. The hour is entered and the minute display starts to blink.

3 Enter the figure of minute.

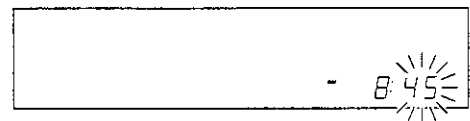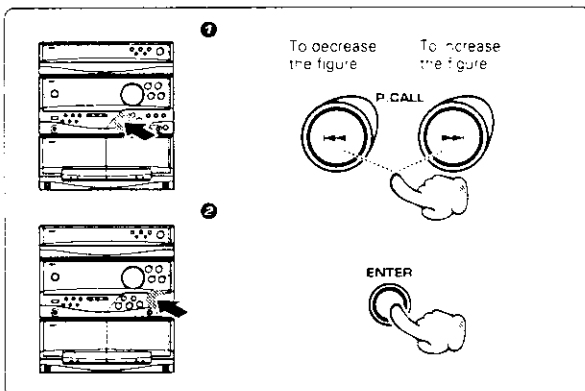




- If you make a mistake, restart from the beginning
- To adjust correct time, press the **ENTER** key at the same moment as a time announcement
- The time display blinks after a power failure or when the power cord has been unplugged from the AC outlet and plugged again. In such a case adjust the clock again.

Sound adjustment functions

UD-413 (En)

Power ON/OFF

 Press the POWER key.

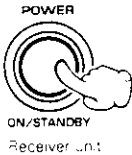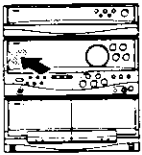

Sub woofer unit

- The power also is switched on when an input selector key (CD, TAPE, TUNER, etc.) is pressed

 
 


Listening through headphones

- 1 Insert the headphone plug into the PHONES jack.



- The sounds from all speakers are cut off.
- 2 Adjust the volume.

Volume adjustment

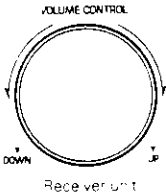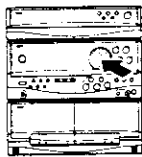

Receiver unit

Remote control unit

 
- Quick turning produces a larger change amount.
- The volume of the sub woofer also is coupled.

Muting the sound temporarily

Remote control unit only






Remote control unit



- Press again to resume the original volume
- This is canceled when the volume or the L.L.C. is operated

 Bass compensation (N.B.: Natural Bass circuit)

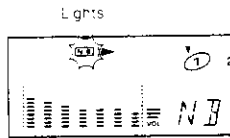
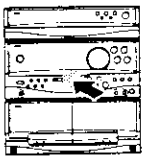


- This is canceled when it is pressed again.

Listening at low volume (L.L.C.: Low Level Control)

The volume for quiet listening (L.L.C. volume) can be called by one-touch operation.

 Press the L.L.C. key. Blinking (5 sec) → Lt

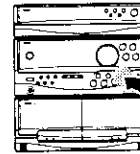

When the key is pressed again after the L.L.C. indicator has finished flashing, this function is canceled.

- The volume is reduced and the low range and the high range are compensated.
- When L.L.C. is ON, the change amount will be constant, independent of the speed with which the VOLUME CONTROL knob is turned.
- When the memorized L.L.C. volume is larger than the present volume, the volume will not change.
- The volume will not return to the original volume when L.L.C. is cancelled. Please adjust as required.



 

To change the setting

- 1 Switch the L.L.C. to ON.
- 2 Adjust the volume with the VOLUME CONTROL knob or the remote control unit while the L.L.C. indicator is flashing.
- 3 Press the L.L.C. key once more while the L.L.C. indicator is flashing.

- When the L.L.C. volume exceeds 29, no compensation is executed for high and low range.

Sub Woofer Phase Switching

The acoustics of the bass sound change according to various conditions. Listen to the music and select the phase according to your liking.

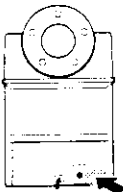


PHASE

NOR REV

Sub Woofer Volume Adjustment

 Set the volume ratio in regard to the front speakers.



The bass sound will be reduced

VOLUME

The bass sound will be increased

Standard setting example


STANDBY mode of POWER switch

As long as the plug of the power cable of this unit is connected to a receptacle, independent of power ON/OFF, the time display is lit. The reason for this is that a small current is kept flowing for memory protection. This is called standby condition. As long as the time display is lit, power ON/OFF also can be done by remote control.



Playback of CD

8 When a disc is placed into the CD player in advance, this unit will be switched on automatically and the CD will be played when the CD (▶/II) key is pressed.

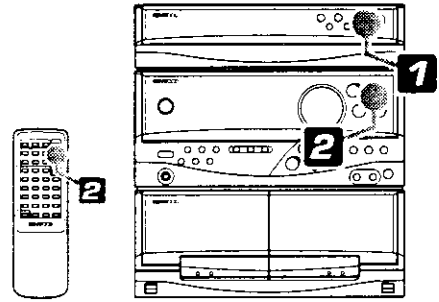

Playing tracks in order from track No. 1

Use the following procedure to play a CD in the original order of tracks from track No. 1.

1 Load a disc.

1 Open the tray. ▲ OPEN/CLOSE


2 Place a disc. With the label side up

3 Select the disc to be played. DISC SKIP

4 Close the tray. ▲ OPEN/CLOSE

- Do not touch the played side of disc.
- Rotate the tray with the **DISC SKIP** key to insert the third disc.
- The tray of the disc to be played should come to the left position when the unit is seen from the front.

2 Start playback.

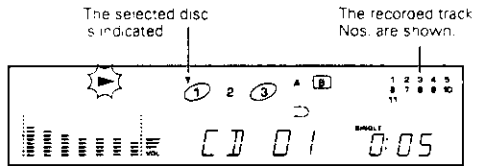

- After a few seconds, play starts from track No. 1.

Listening to a different disc

Select the disc number to be played.

 

DISC SELECTOR

1 2 3

- The disc can also be selected with the **DISC SKIP** key.





To pause playback

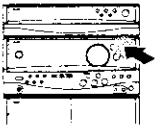

- Each press causes and plays the CD alternately

 To stop playback

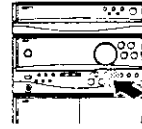

Playback from desired track

Preparation

- Select the "CD" input.
- Load discs in the CD player.

Selecting a track

① Select the disc.

DISC SKIP

② Select the desired track No.

1 2 3

4 5 6

7 8 9

- The disc can also be selected with the **DISC SELECTOR** key.

Press the numeric keys as shown below....

- To enter track No. 23 : **+10**, **+10**, **3**
- To select track No. 40 : **+10**, **+10**, **+10**, **+10**, **0**

- Playback starts from the selected track and continues on the subsequent tracks.

Skipping tracks

To skip backward

P. CALL

To skip forward

- The track in the direction of the button pressed is skipped, and the selected track will be played from the beginning.
- When the **P. CALL** key is pressed once during playback, the track being played will be played from the beginning

Searching

Backward search

TUNING

Forward search

- Playback starts from the position where the key is released.




Programming tracks in desired order



10

Preparation



- Select the "CD" input.
- Load discs in the CD player

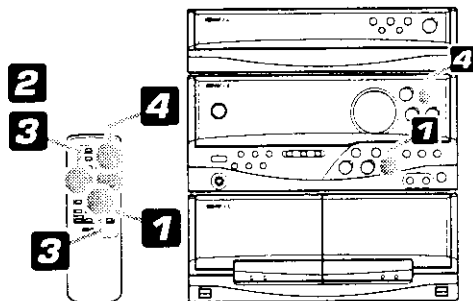

 
1 Check that the CD player is in the stop mode.

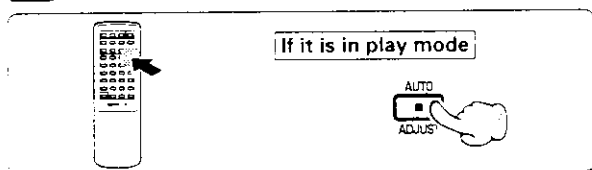



2 Light the "PGM" indicator.

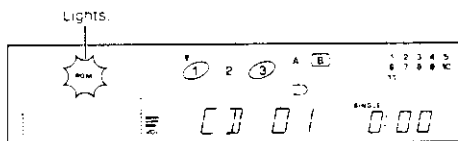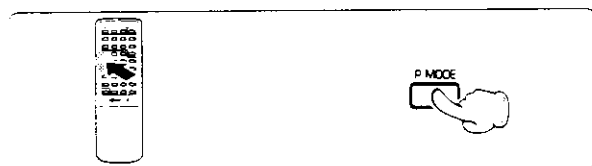


3 Enter track Nos. in the order you want to play them.

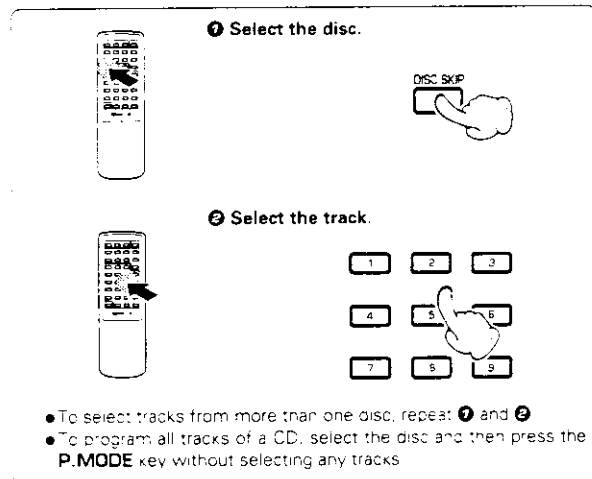

  - The disc can also be selected with the **DISC SELECTOR** key.
- Up to 32 tracks can be programmed. When "FULL" is displayed, no more tracks can be programmed.
- If you make a mistake, press the **P.MODE** key to exit the program mode and restart from step 2.




4 Start playback.

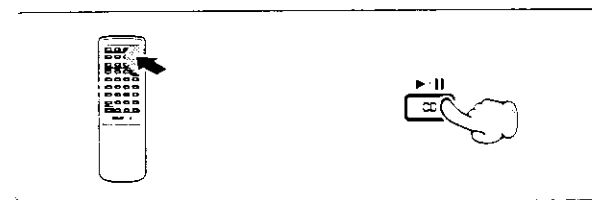

- Tracks will be played in the order they were programmed (in order of P.Nos.)
- When the **⏮** or the **⏭** key is pressed during play, the program will jump to the preceding or the following track respectively.
- When the **⏮** key is pressed once during playback, the play position returns to the beginning of the current track being played.
- A space of several seconds is produced between tracks.

 To stop playback




To add a track to the program

① Select the disc.




② Select the track.

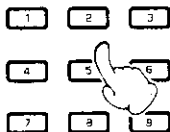

To quit the program mode



- When a track No. is entered, the track will be added to the end of the existing program.

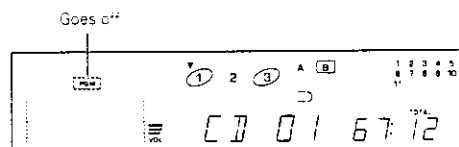

- If the key is pressed during playback, normal playback in order of tracks resumes from the current track.

Preparation

- Select the "CD" input
- Load discs in the CD player


To repeat a disc

1 Confirm that the "PGM" indicator is not lit.




If the "PGM" indicator is lit, press the P.MODE key to turn it off.


2 Press to select DISC REPEAT.

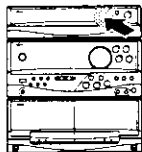

3 Select the disc.

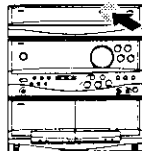


Confirm that this is not lit:

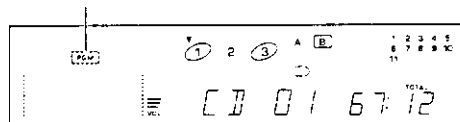

Each press switches the repeat mode:

- 1 REPEAT
- 2 DISC REPEAT
- 3 ALL REPEAT
- 4 Repeat OFF

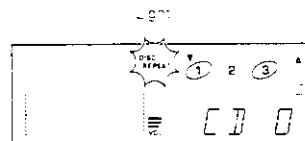

To stop repeated playback

Press the REPEAT key twice.

- The "DISC" and "REPEAT" indicators go off and the playback following the current mode of the CD player starts

To repeat all discs


All tracks on all of the discs loaded on the disc tray will be played repeatedly.

1 Confirm that the "PGM" indicator is not lit.




If the "PGM" indicator is lit, press the P.MODE key to turn it off.


2 Press to select ALL REPEAT.

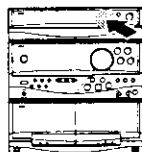

3 Select the disc to be played first.

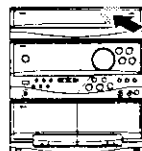


Confirm that this is not lit:

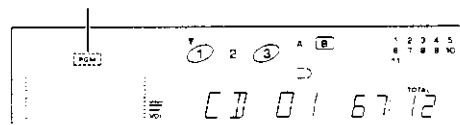

Each press switches the repeat mode:

- 1 REPEAT
- 2 DISC REPEAT
- 3 ALL REPEAT
- 4 Repeat OFF

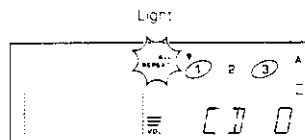

To stop repeated playback

Press the REPEAT key again.

- The "ALL" and "REPEAT" indicators go off and the playback following the current mode of the CD player starts



To repeat only one track

❶ Confirm that the "PGM" indicator is not lit.
If the "PGM" indicator is lit, press the P.MODE key to turn it off.

❷ Press to select REPEAT.

 
❸ Select the disc.

❹ Select the track.

Each press switches the repeat mode.

- ❶ REPEAT
- ❷ DISC REPEAT
- ❸ ALL REPEAT
- ❹ Repeat OFF

Lights up



To stop repeated playback

Press the REPEAT key three times.

- The "REPEAT" indicators goes off and the playback following the current mode of the CD player starts.

To repeat only the programmed tracks

❶ Light the "PGM" indicator.

 
 
❷ Select the disc.

❸ Select the track.


❹ Press to select REPEAT.

❺ Start playback.

"PGM" lights up



 - All of the programmed tracks will be played repeatedly.
- Up to 32 tracks can be programmed by repeating steps ❷ and ❸. When "FULL" is displayed, no more tracks can be programmed.



To stop repeated playback

Press the REPEAT key again.

- The "REPEAT" indicator goes off and the playback following the current mode (PGM) of the CD player starts.



Playback in a random order (Random playback)

As Tracks are selected at random, you can enjoy listening to for a long time.


14

Preparation

- Select the "CD" input
- Load discs in the CD player


1

2

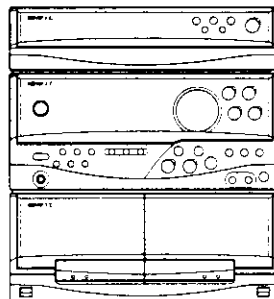


1 Confirm that the "PGM" indicator is not lit.

 If the "PGM" indicator is lit, press the P.MODE key to turn it off.



Confirm that this is not lit

 


2 Select the RANDOM mode.

For "DISC RANDOM" playback, select the disc in advance.




Each press switches the modes as follows

- ① DISC RANDOM (Random play of one disc)
- ② ALL RANDOM (Random play of all discs)
- ③ Random play cancelled

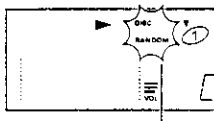


Random play of one disc

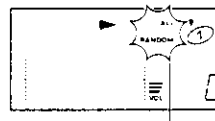

Random play of all discs

● The random playback can also be repeated by pressing the REPEAT key

 To select another track in the middle of playing one



● Pressing the **DOWN** key once returns to the beginning of the track being played

To cancel random playback

Press so that the "RANDOM" indicator goes off.



● The "RANDOM" indicator goes off and the playback in order of the tracks starts from the track being played


Playback of tape



When a tape is placed into the cassette deck in advance, this unit will be switched on automatically and the tape in deck B will be played when the TAPE (◀▶) key is pressed.



For play of a tape recorded with presence effect, switch off the presence - 28

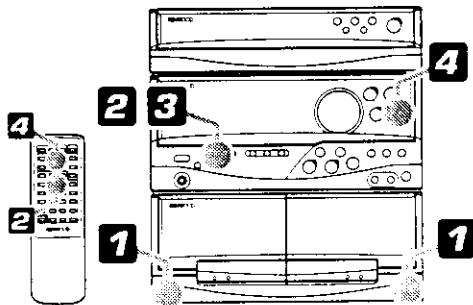

Tape playback


1 Load a cassette tape.

1 Open the door.

Push downwards

2 Insert a tape and close the door.

- The type of tape, that is, Normal, Chrome or Metal, is set automatically
- Remove tape slack before loading

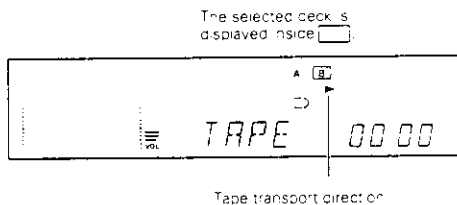

2 Select the deck to be used for playback.

A/B

- Close the door securely


3 Determine the playback modes.

1 Select the reverse mode.

REV. MODE

2 Select the Dolby NR mode.

DOLBY NR

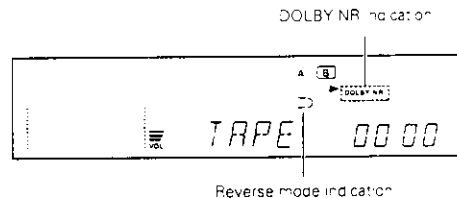

Each press switches the modes as follows

- ① "▶▶" ... Playback stops after having played the two sides.
- ② "◀▶" ... Endless playback occurs.
- ③ "◀▶" ... Playback stops after having played a side
- ① DOLBY NR OFF
- ② DOLBY NR ON

- Select the Dolby NR mode according to the recording condition of the tape.

4 Start playback.

TAPE

- If the tape transport direction is not the desired direction, press the TAPE ◀▶ key again




16



Relay play

When tapes are set in the decks A and B and the reverse mode is set to "↔" (play of both sides), play of the second deck will be started automatically after play of the first deck has been completed. Tape play will be repeated alternately.

- Relay play is not possible in the reverse modes "◀▶" and "▶◀".


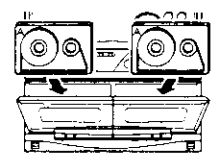


To stop playback

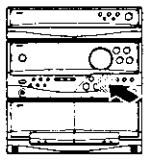 

- Do not press the eject key until the tape has stopped completely.

To wind tape at high speed

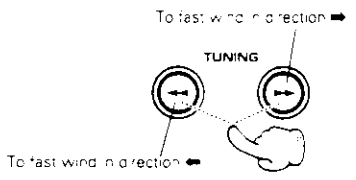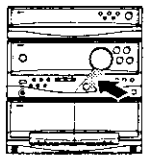

- Press the ■ key to stop fast winding.

A tip for use of the tape counter


The tape counter is set to 0000 when a cassette tape is loaded. By writing down the counter reading in case you want to interrupt recording (playback) in the middle of the tape, the memo will be helpful as a reference for locating the same position when continuing the recording (playback) the next time. The tape counter figure decrements during recording or playback of the back side (while the ◀ tape transport indicator is lit). To reset the tape counter to 0000, unload the tape then load it again.



Dolby Noise Reduction (NR)

The Dolby NR system minimizes the hiss noise heard when playing tape. When playing a tape prerecorded with Dolby NR ON, be sure to set the DOLBY NR ON for playback.

Lit when DOLBY NR is ON

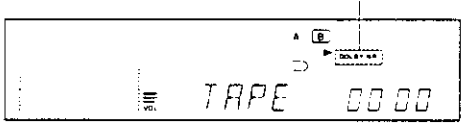

Transport direction indicators

The ◀ and ▶ indicators indicate the current direction in which the tape advances when playback or recording is started automatically by the easy operation function, etc. This direction is the direction stored in memory when the tape was last stopped.

(To change the direction, press the TAPE (◀▶) key then press the ■ key.)



Transport direction indicators

Searching for the desired music program (DPSS)




UD-413 (En)

17


The DPSS (Direct Program Search System) is capable of detecting non-recorded spaces of more than 4 seconds as "blanks between programs" and, based on this information, can return to the beginning of the music program being played or the beginning of a desired program by skipping up to 16 other programs.

▶ To return to the beginning of the current music


To return to the beginning of the current music

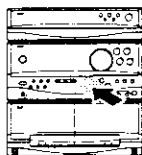


During play in direction ▶

 

During play in direction ◀

 


To skip to the beginning of a desired music

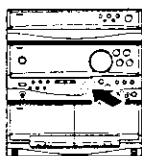

During play in direction ▶


To play the next program Press once.
To play the 4th program after the current program Press 4 times.

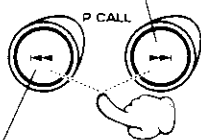

To return to the beginning of the current program Press once.
To play the 4th program before the current program Press 5 times.

During play in direction ◀

To play the next program Press once.
To play the 4th program after the current program Press 4 times.

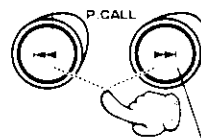

To return to the beginning of the current program Press once.
To play the 4th program before the current program Press 5 times.

Notes



The DPSS may not function normally with the following kinds of tape.

- Tapes containing several no-sound intervals of more than 4 seconds, such as conversation and talk tapes.
- Tapes containing pianissimo sections, such as classical music tape.
- Tapes in which large noise is recorded in blanks between programs.
- Tapes containing blanks between programs that are shorter than 4 seconds.
- Tapes recorded at low level.
- Tapes recorded by cross-tape recording in which the beginning of next program is overlapped on the end of previous program.



Broadcast reception

UD-413 (En)


18

It is also possible to receive them by one-touch operations by storing up to 20 stations in the preset memory.


When the TUNER key is pressed, this unit will be switched on automatically.

Receiving broadcast station



1 Select the broadcast band.

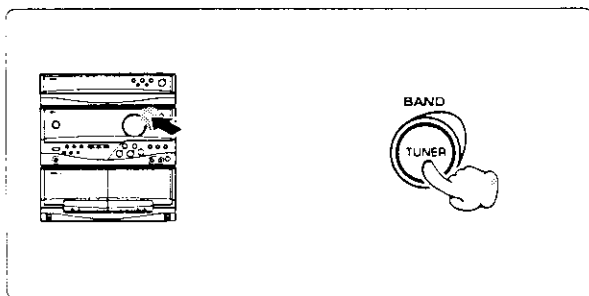

2 Select the tuning mode.

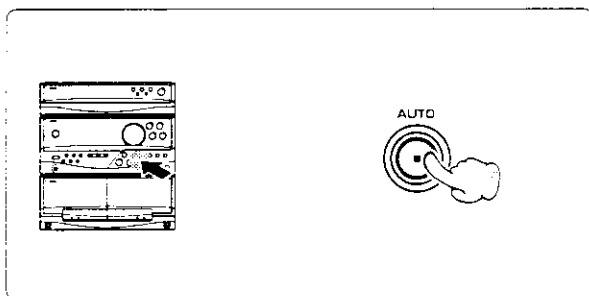


3 Select a station.

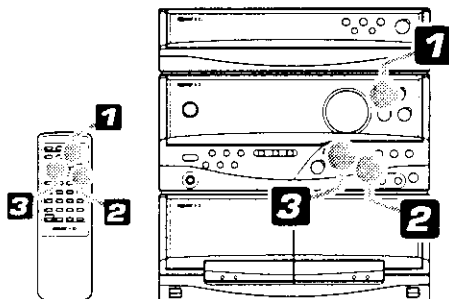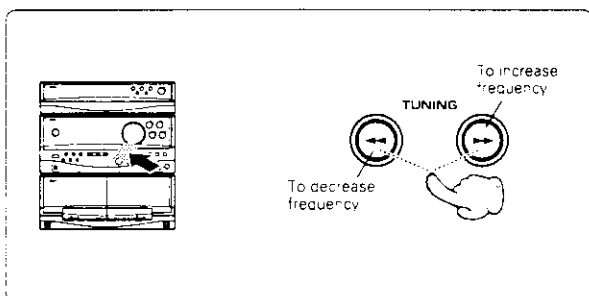


Each press alternates the band

 - ① FM
- ② AM



Each press alternates the mode.

 
- ① AUTO lit (Auto tuning)
- ② AUTO not lit (Manual tuning)



● Normally, use the **AUTO** (Auto tuning) mode.



Use the manual tuning mode when reception is noisy due to weak reception (In the manual mode, stereo broadcasts are received in monaural.)

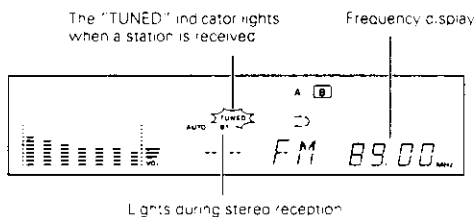

Auto tuning Each press receives the next station
Manual tuning Press the key repeatedly or hold it depressed until a station is received.


Storing radio stations in memory (Station preset)

UD-413 (En)

Preparation

- Receive a station to be stored in preset memory.

- 18

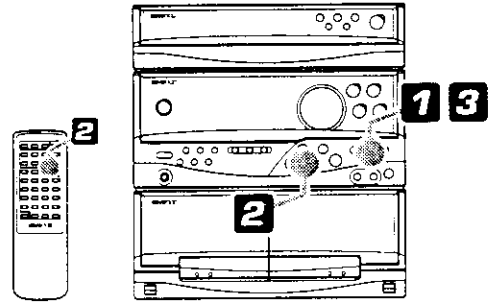


1 Press the ENTER key during reception.



Go to step 2 within 5 sec.

If more than 5 seconds have elapsed, press the ENTER key again.


2 Select one of the preset numbers from 1 to 20.

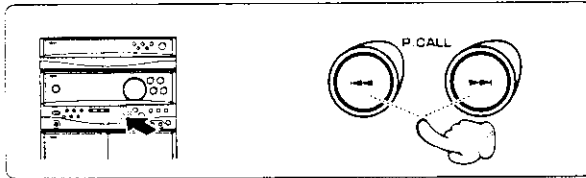



Go to step 3 within 5 sec.

If more than 5 seconds have elapsed, restart the procedure from step 1.

3 Press the ENTER key again.

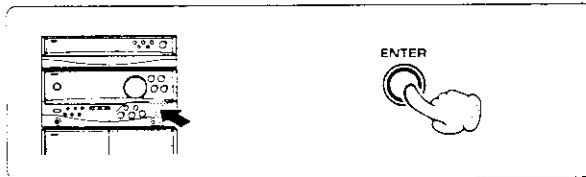


"MEMO" lights (for approx. 5 sec.)

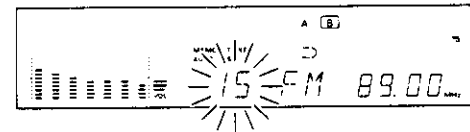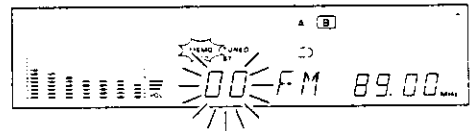


- Repeat steps 1 2 3 to preset other stations.
- If several stations are preset under the same number, the previous memory is replaced with the latest memory contents.

 Goes off



Receiving a preset station

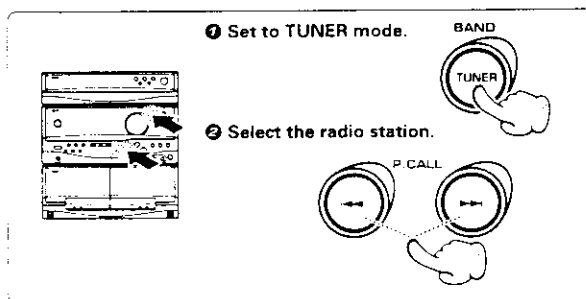

- Every time the key is pressed, the preset stations are switched over as follows


Press for the order of 1→2→3 ... 18→19→20→1 ...
Press for the order of 20→19→18 ... 3→2→1→20

- When a key is held depressed, preset stations will be skipped at an interval of about 0.5 seconds



Recording (Deck B only)

Note that this cassette deck cannot record onto Metal tapes.

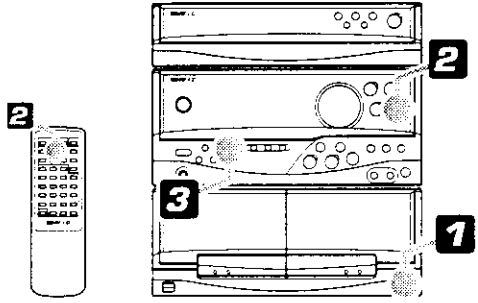

Preparation for recording

1 Load a tape in deck B.

1 Open the door of deck B.

Push downwards.

2 Insert a tape.

3 Close the door.

2 Select the tape transport direction.

Check the tape transport direction indicator.


To reverse the transport direction

1 Start playback.

2 Press the key again.

3 Stop playback.

- The type of tape, that is, normal or chrome is set automatically
- Remove tape slack before loading
- When the microphone is not used, set the MIC MIXING control fully counterclockwise to the minimum position

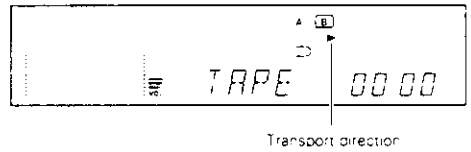

- When recording is started, the tape is transported in the direction selected in this step
- Wind the tape to the position where recording is to be started

3 Set the recording condition.

1 Select the reverse mode.

REV MODE

2 Select the Dolby NR mode.

DOLBY NR

Each press switches the modes as follows

- 1 " " ... Recording will end after having recorded on two sides
- 2 " " ... Recording will end after having recorded on two sides
- 3 " " ... Recording will end after having recorded on one side
- 1 DOLBY NR OFF
- 2 DOLBY NR ON

Dolby HX Pro

The Dolby HX Pro headroom extension system records high frequencies such as the cymbal sound clearly by controlling the bias current during recording according to the frequency composition of the sound being recorded. This system is activated automatically during recording with this unit.

Preparation


- Load a cassette tape in the deck.
- Select the tape transport direction (◀ or ▶).
- Select " " (two-side recording) or " " (one-side recording).
- Select the Dolby NR mode.
- (Insert a disc in the CD player.)

- 20





The presence effects applied to the music are recorded together with the music sound.

- 28

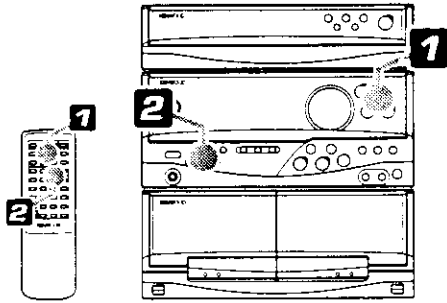



1 Select the source to be recorded.

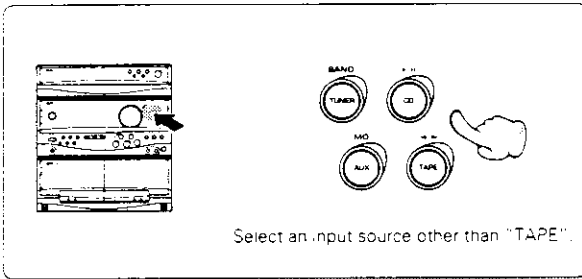 

The input source component to be recorded should be displayed.

- When the CD input is selected and if a disc has been set in the CD player, its playback starts immediately.

2 Start recording.

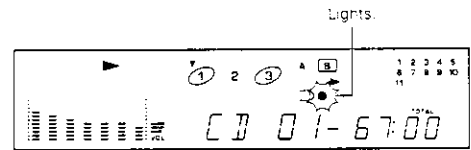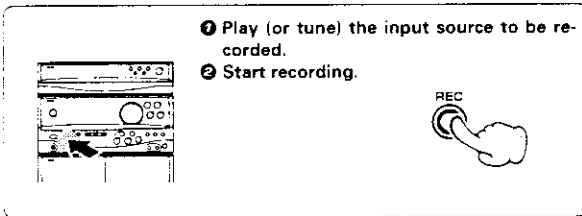

- Recording stops automatically when the tape side(s) to be recorded have been fully recorded.

To end recording



Beat cancel function

There may be cases in which beat noise interferes with recording of AM (MW/LW) broadcasting. In such a case, press the **DEMO** key during recording to reduce or suppress the beat noise. The **DEMO** key acts as the demonstration key except during tuner recording.

DEMO



Display during recording

 
During recording, the time display on the display panel shows the remaining playing time of the track (or disc). The displayed contents vary depending on the play mode.

When the "PGM" indicator is not lit

..... Remaining time on the disc being recorded.

When the "PGM" indicator is lit

..... Remaining time on the track being recorded






Copying tape (Tape dubbing)

The contents of the tape in deck A can be copied onto the tape in deck B.


22

Preparation

- Select the "TAPE" input
- Load tapes in the decks

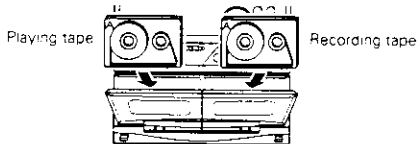

- Select "⏮" (double-side recording), or "⏪" (one-side recording)

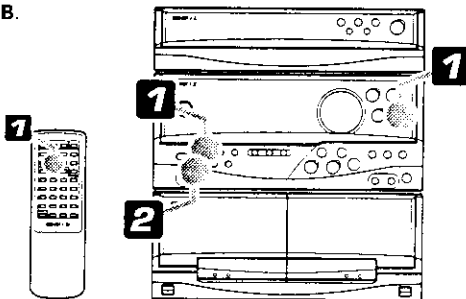


1 Use the same tape transport directions.


Check the tape transport direction indicators.

To reverse the transport direction

- 1 Select the deck to change the transport direction.

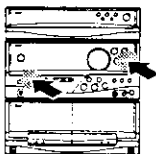

- 2 Start playback.

 

- 3 Press the key again.


- 4 Stop playback.



Running direction


- When recording is started, the tape will be transported in the direction selected in this step.

2 Start dubbing.

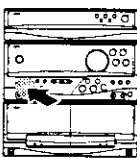

- Dubbing ends automatically when the side(s) to be dubbed has been completed

To stop dubbing

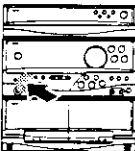

- The deck B will stop after creating a non-recorded portion of about 4 sec and then the deck A will stop
- The dubbing can also be stopped by pressing the **STOP** key. Non-recorded blank is not created in this case

Note

The **DOLBY NR** key is not active in dubbing mode. The tape recorded on deck B assumes the same Dolby NR condition as the tape played on deck A.





The system is capable of three types of edit recording which may be selected as follows:

Select the type of edit recording

If you want to avoid any tune being interrupted at the end of tape



Timed edit recording

- 24

Edit recording of CD is possible by the simple operation of entering the recording length of the tape.

If you want to select the tracks to be recorded while playing a CD



Recording desired tracks while playing a CD - 25

Play a CD and, if a track you want to record starts, press the **ONE TOUCH EDIT [O.T.E.]** key. The track will be recorded from the beginning.

If you want to record a CD in order of track numbers



Recording an entire disc

- 26

Press the **ONE TOUCH EDIT [O.T.E.]** key when in the stop mode. The disc will start to be recorded.



Timed edit recording

24 By simply specifying the recording time of the tape, the CD tracks will be recorded with their order automatically changed so that no tune is interrupted at the end of tape sides A and B.

Preparation

- Load a cassette tape in the deck B
- Select the tape transport direction (◀ or ▶)
- Select "D" (two-side recording)
- Select the Dolby NR mode
- Select the "CD" input
- Insert a disc in the CD player

The presence effects applied to the music are recorded together with the music sound.

1 Select the "EDIT" mode.

1 Confirm that the "PGM" indicator is not lit.
If the "PGM" indicator is lit, press the P. MODE key to turn it off.

2 Press the EDIT key.



Go to step 2 within 8 sec.
If more than 8 seconds have elapsed, select the mode again.

2 Select the disc.


3 Enter the recording length of the tape.

Confirm flashing of the ▶ indication and then go to step 4

4 Start edit recording.

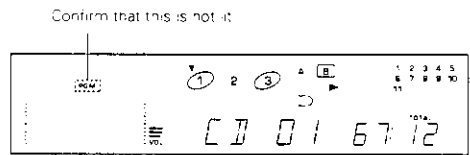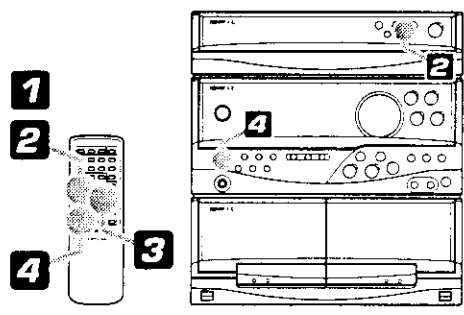

 ● To cancel the EDIT mode, press the P. MODE key of the remote control.





● Even if the disc has already been selected, select the disc again

Press the numeric keys as shown below.

- 30-minute tape : [+10] [+10] [+10] [0]
- 46-minute tape [+10] [+10] [+10] [+10] [6]

  - If you make a mistake in entering the recording time, check that the ▶ indicator is blinking and restart from step 3
- Up to 32 tracks can be edited.
- The ▶ indicator blinks after completion of automatic editing
- Every time the ▶ key is pressed, the edited track numbers will be displayed in the changed order. Press the ■ key to return to the track number of the first track.




- The tape and CD stop automatically when recording has completed
- The time display during recording is the remaining time on the current side of tape


Recording desired tracks while playing a CD

The following procedure allows you to record CD tracks by selecting them while playing a CD.

Preparation




- Load a cassette tape in the deck B.
- Select the tape transport direction (◀ or ▶).
- Select "⇒" (two-side recording) or "⇐" (one-side recording)
- Select the Dolby NR mode
- Select the "CD" input
- Insert a disc in the CD player

 The presence effects applied to the music are recorded together with the music sound.

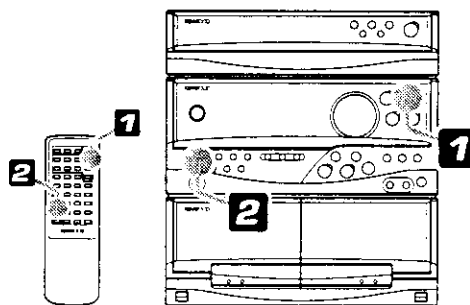


1 Play a CD.

  
Select a mode other than random play.

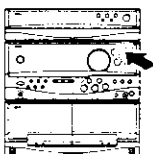

2 When you want to record a track being played, press the ONE TOUCH EDIT (O.T.E.) key.

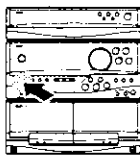

 
In case the key is pressed with track No.3



When recording has been completed, a non-recorded portion of 4 seconds will be produced and the cassette deck part will stop. The CD player will enter temporary stop condition.

To record a different track, repeat the steps 1 and 2.

To end recording in the middle

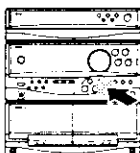

- Both the cassette deck and CD player stop.




Recording an entire disc

26 When the ONE TOUCH EDIT (O.T.E.) key is pressed while the CD player is in the stop mode, recording of a CD can be started at the same time as playback.

Preparation

- Load a cassette tape in the deck B.
- Select the tape transport direction (◀ or ▶)
- Select " " (two-side recording)
- Select the Dolby NR mode
- Select the "CD" input
- Insert a disc in the CD player.

The presence effects applied to the music are recorded together with the music sound

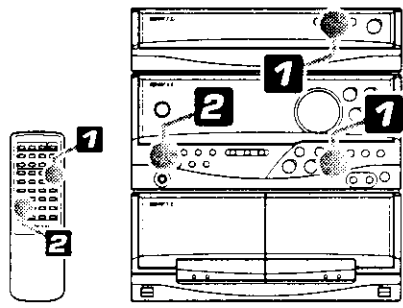

1 Select the disc.

1 Select the disc.

DISC SELECTOR

2 Stop the disc.

 
AUTO

- Select a mode other than random play.

Step 2 also can be executed after the order of the tracks has been programmed.

2 Press the ONE TOUCH EDIT (O.T.E.) key.

ONE TOUCH EDIT



- Recording of CD starts at the same time as playback
- At the end of tape, the music is not recorded on the leader tape portion. If you do not want any music to be interrupted in the middle, refer to "Recording" and start recording of side B with the interrupted track

To end recording in the middle

AUTO

- Both the cassette deck and CD player stop

The system allows you to select 4 kinds of graphic equalizer patterns or 4 kinds of presence (sound field) modes. Select graphic equalizer patterns according to the genre of music and select the presence modes according to the acoustic ambience required.


- 28 -

Demonstration

This feature applies various tone adjustment effects of the graphic equalizer and presence sound fields in sequence with the sound. The display also changes as the applied effects change. Check out the tone adjustment effects both visually and aurally.


DEMO 1

The effects of graphic equalizer and presence can be heard.

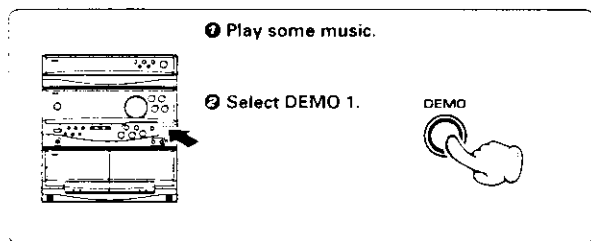

Each press of the key switches the demonstration modes as follows

 
- 1 DEMO 1
- 2 DEMO 2
- 3 OFF (Demonstration cancelled)



The letters flow on the display.


DEMO 2

The contents of the above DEMO 1 will be executed for the respective input sources in the order of CD player, cassette deck, tuner, and AUX (connected external unit).

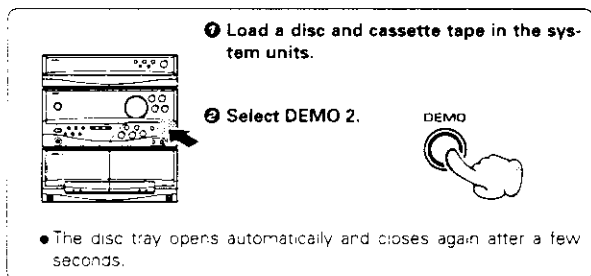


Each press of the key switches the demonstration modes as follows.

 - 1 DEMO 1
- 2 DEMO 2
- 3 OFF (Demonstration cancelled)



The letters flow on the display.


To stop the demonstration

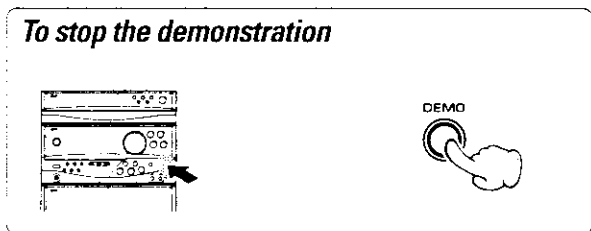

Note

Demonstration also starts automatically when the power plug is unplugged then plugged while the power is ON or when the power supply has recovered from a failure.




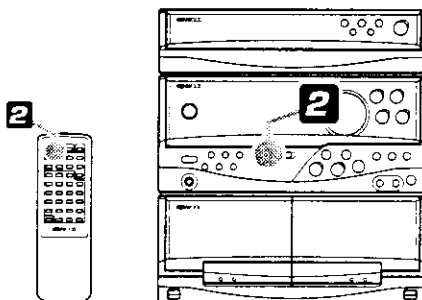


Playing music with the desired tone

The graphic equalizer patterns can be selected according to the genre of music played.

1 Play the desired music.

 2 Select the music category.

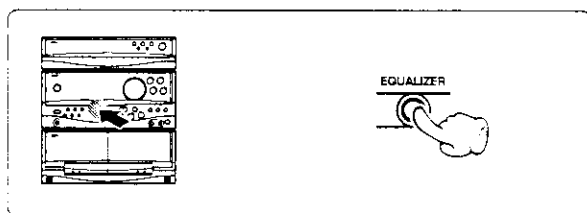

Display characters scroll from the right to the left.

Press repeatedly to select

 

- ① POP (Popular)
- ② ROCK (Rock)
- ③ JAZZ (Jazz)
- ④ CLASSIC (Classic)
- ⑤ EG OFF (EG.ON not lit ... Equalizer cancelled)

Enjoying music with the presence effect (presence modes)

The presence (sound field) mode can be selected according to the music played and to your liking. The presence effect applied to the sound can be recorded together with the sound.

1 Play a desired music.

2 Select a presence sound field.

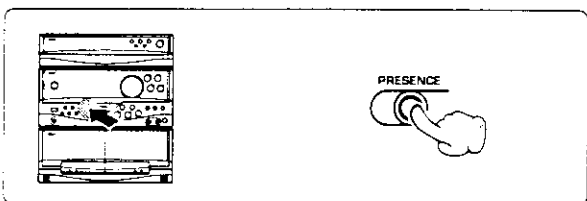

Display characters scroll from the right to the left.

Press repeatedly to select

- ① ARENA
Reproduction of a live feeling as if the listener is in the first row of the arena seat
- ② JAZZ CLUB
Reproduction of a jazz live house where cymbals resound
- ③ STADIUM
Reproduction of an open atmosphere with little reverberations which are usually reflected from the ceiling.
- ④ HIT MASTER (Vocal canceller)
For use in Karaoke singing
- ⑤ PRESENCE OFF
(PRESENCE, EQ.ON not lit ... Presence cancelled)



1 Connect a microphone.

① Turn the MIC MIXING control fully counterclockwise.

② Plug the microphone into one of the MIC jacks.

③ Adjust the volume balance between the music input and microphone input.

To decrease microphone volume

To increase microphone volume

- Use a microphone equipped with a mini-plug.
- Set the **MIC MIXING** control to the fully counterclockwise position when the microphone is not used.

2 Play the music.

3 Select HIT MASTER.

PRESENCE

4 Sing along with the accompaniment.

 
To record Karaoke singing

① Perform the procedure above until step 3.

② Start recording.

Select by pressing repeatedly.

- ① ARENA (Arena)
- ② JAZZ CLUB (Jazz club)
- ③ STADIUM (Stadium)
- ④ HIT MASTER (Hit master)
- ⑤ PRESENCE OFF (Presence OFF)



- The volume of the vocal parts of the song decreases. However, this effect may not be clear with some songs and discs.
- Adjust the overall volume with the **VOLUME CONTROL** knob

During Karaoke singing using the song recorded on a tape, the Karaoke sound cannot be recorded.

A Karaoke tape can be created by recording the performance while the **MIC MIXING** control is in the fully counterclockwise position.



Timer operation

Adjust the clock before setting the timer.

UD-413 (En)

30

Two 24-hour timer systems (PROG.1, PROG.2) (which can be used every day) and a sleep timer system (which works only once) are available.

In each of PROG.1 and PROG.2, the timer data including the operating period and played contents can be set and selected to be activated or not as required.



Timer reservation is possible for the two types PROG.1 and PROG.2 at the same time.

- Please make reservations with an interval of at least one minute, so that the operation times of PROG.1 and PROG.2 do not overlap.

Timer playback, timer recording (PROG.1, PROG.2)

With each of the two timer programs, a selected source can be played (or radio broadcast can be recorded) in the previously set time period.

All timer playback (PROG.1, PROG.2)

When timer playback starts, the volume increases gradually.

Sleep timer

The power is turned OFF automatically after the specified period has elapsed.

- 32

Timer programming

1 Make preparations for the play (recording).


- To listen to radio

The station should be preset prior to the above.

- 19

- To listen to CD

Insert a disc.
(Program playback is not possible.)

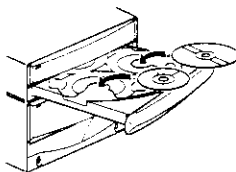

Select the disc to be played (1, 2 or 3)

- To listen to tape

Set a tape into deck B.



- Playing the auxiliary input source



Make timer setting of the component connected to the AUX jacks.

- For recording



Make preparations for recording.

- 20



2 Adjust the listening volume.

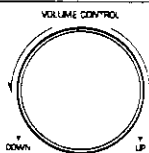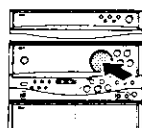

3 Set the POWER switch to OFF (STANDBY) position.

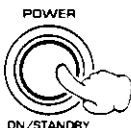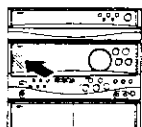

4 Select a program No.

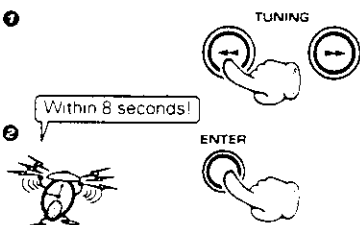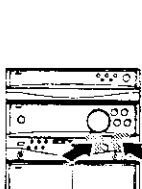


- When recording radio, the listening volume is automatically set to the minimum volume at the moment the power is turned ON by the timer.

- The selected program No. lights.
- If a program No. under which a timer program has already been reserved, it is replaced by the new timer program.


Each press of the key switches the program numbers as follows.

 - ① PROG.1 (Program 1)
- ② PROG.2 (Program 2)
- ③ Normal operation






5 Enter the ON time.

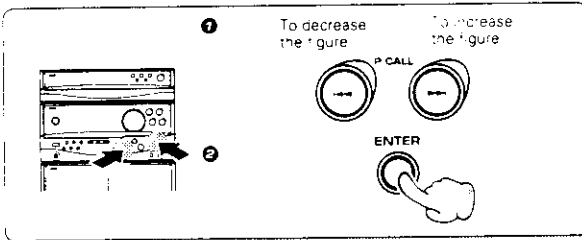


- After entering the figure of "hour" with the procedure in ① and ②, enter the figure of "minute" using the same procedure.

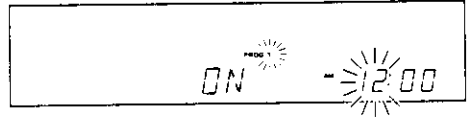

- if you commit a mistake, restart from step ②

6 Enter the OFF time.

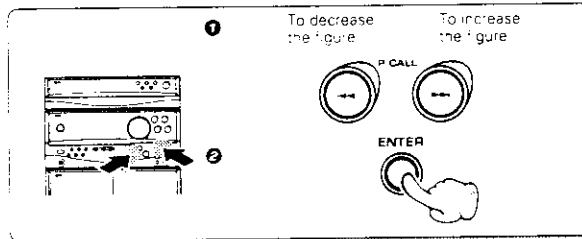

- After entering the figure of "hour" with the procedure in ① and ②, enter the figure of "minute" using the same procedure.




- if you commit a mistake, restart from step ②

7 Make the desired reservation.


For timer playback or AI timer playback

- ① Select the mode. Select "PLAY" or "AI".
(Each press alternates them.)

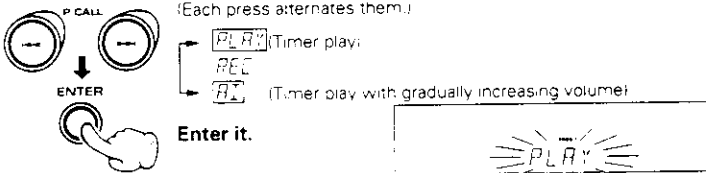


Enter it.

- ② Select the input source.

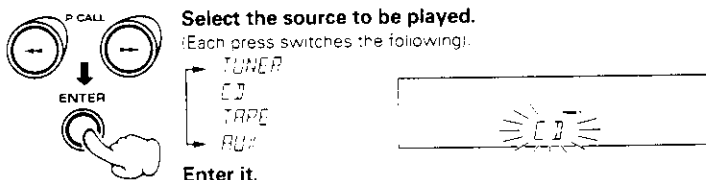

Enter it.

- ③ Select the broadcast station (only when TUNER is selected above).

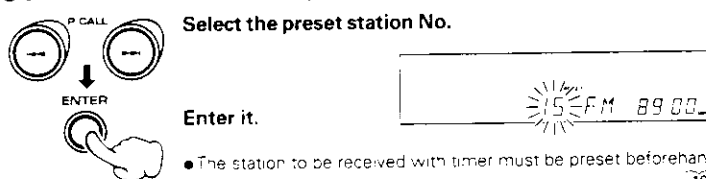


Enter it.

- The station to be received with timer must be preset beforehand


Timer recording of radio broadcasts

- ① Select the mode.

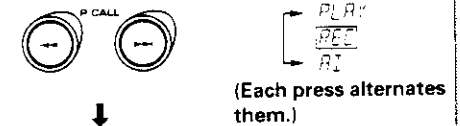


Enter it.

- ② Select the broadcast station.

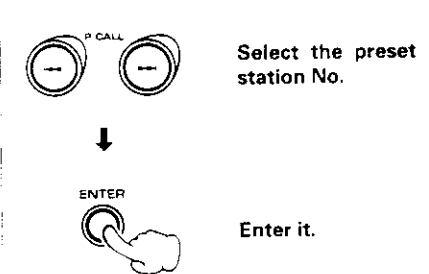

Enter it.

8 Select the timer program No. to be used.

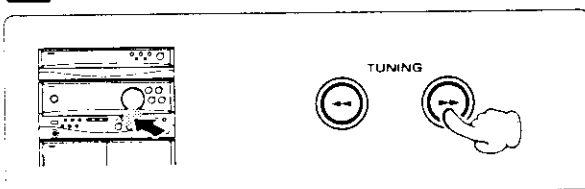

Each press of the key switches the program numbers as follows.

- 1 PROG. 1 Execution of program 1 only.
- 2 PROG. 2 Execution of program 2 only.
- 3 PROG. 1, 2 Execution of programs 1 and 2
- 4 Timer OFF

- The selected program No. lights
- The timer will not function unless a program No. is selected



Ensure that the power is OFF.

Check the reservation content.

Select the program number to be checked.

TUNING

When timer operation is not required

Press so that all PROG. indicators are OFF.

TUNING

To set the same timer program again

Press so that the desired PROG. indicators lights.

TUNING

Note The reservation contents cannot be cleared. The contents are cleared only when they are changed

Each press of the key switches the program numbers as follows

- PROG. 1 (Display of program 1)
- PROG. 2 (Display of program 2)
- Normal mode

The reserved contents will be displayed for 3 seconds per item. After this, the previous display content appears again

To change the reserved contents

Restart the procedure of "Timer programming" from the beginning

Each press of the key switches the program numbers as follows

- PROG. 1 (Program 1 operates.)
- PROG. 2 (Program 2 operates.)
- PROG. 1, 2 (Programs 1 and 2 operate.)
- Not lit (No program operates.)

The reservation contents are held in memory

Each press of the key switches the program numbers as follows

- PROG. 1 (Program 1 operates.)
- PROG. 2 (Program 2 operates.)
- PROG. 1, 2 (Programs 1 and 2 operate.)
- Not lit (No program operates.)

Also prepare the disc or tape and adjust the listening volume

Sleep timer

Set the number of minutes after which the power is to be turned OFF

1 Turn the power ON.


POWER

2 Set the time.

SLEEP

- The power is turned OFF automatically after the set time has elapsed
- Each press decreases the time by 10 minutes. The maximum time that can be set is 90 minutes.

90→80→70...30→20→10→Cancel→90→80...

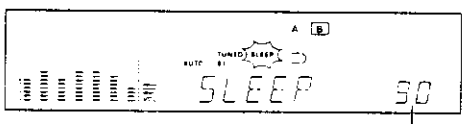

Duration for sleep timer


To cancel

Turn the power OFF or press the SLEEP key until the sleep time is cancelled

Notes on cassette tape



Safety tab (accidental erasure prevention tab)

After an important recording has been finished, break the safety tab, to prevent the recorded contents from being erased or recorded on accidentally.

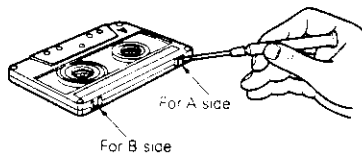

To store cassette tapes

do not store the tapes in a place which is subject to direct sunlight, or near equipment that generates heat. Keep the cassette tapes away from any magnetic field.

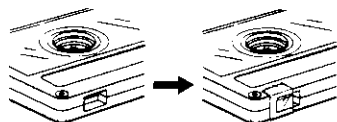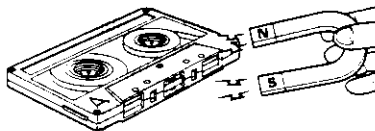


To re-record

Apply tape only to the position where the tab has been removed.

When there is slack in the tape

In such a case, insert a pencil into the reel hole and wind the reel hub to remove the slack.

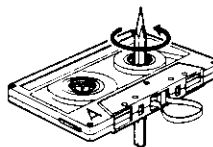

Notes




1. 110/120-minute cassette tape

Since a 110/120-minute cassette tape is very thin, the tape could adhere to the pinch roller or be easily broken. It is recommended that these tapes not be used with this unit to prevent possible damage.

2. Endless tapes

Do not use an endless tape, as this could damage the mechanism of the unit.

Cleaning the head section

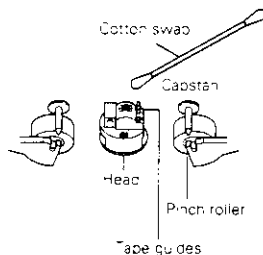

Cleaning the heads and peripheral components

For maintaining the best condition of the deck and for longer service life, always keep the heads (recording / playback / erase), capstan and pinch roller clean. To clean them, perform the following:

1. Open the cassette holder.
2. Using a cotton swab dipped in alcohol, clean the head (recording / playback / erase), capstan and pinch roller carefully.

Demagnetizing the head

When the recording / playback head is magnetized, the sound quality will deteriorate. In such a case, demagnetize the head using a commercially available demagnetizer (head eraser).

Note



There are precisely aligned parts around the heads, including the tape guides. When cleaning, pay special attention so as not to apply shock to them.

Beware of condensation

When water vapor comes into contact with the surface of a cold material, condensation is produced.


If condensation occurs, correct operation may not be possible, or the unit may not function correctly.

This is not a malfunction, however, and the unit should be dried-out. (To do this, turn the POWER switch ON and leave the unit as it is for several hours.)

Be especially careful in the following conditions.

- When the unit is brought from a cold place to a warm place, and there is a large temperature difference
- When a heater starts operating.
- When the unit is brought from an air-conditioned place to a place of high temperature with high humidity.
- When there is a large difference between the internal temperature of the unit and the ambient temperature, or in conditions where condensation occurs easily.

Disc handling precautions

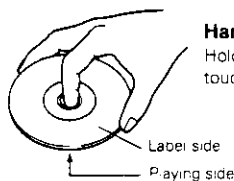


Handling

Hold compact discs so that you do not touch the playing surface.




 Do not attach paper or tape to either the playing side or the label side of compact discs.



Cleaning


If fingerprints or foreign matter become attached to the disc, lightly wipe the disc with a soft cotton cloth (or similar) from the center of the disc outwards in a radial manner.

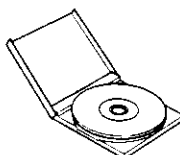

Storage

When a disc is not to be played for a long period of time, remove it from the CD player and store it in its case.

Caution on disc used

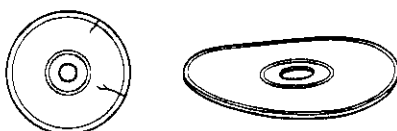

Never play cracked or warped disc.

During playback, the disc rotates at high speed in the player. Therefore, to avoid malfunction, never use a cracked or deformed disc or a disc repaired with tape or adhesive agent.

Discs which can be played with this unit

CD (12 cm, 8 cm), CDV (only the audio part)

- With CD-G (CD Graphics) discs, this unit can play only the audio.

Dolby noise reduction and HX Pro headroom extension manufactured under licence from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. 'DOLBY', the double-D symbol and 'HX PRO' are trademarks of Dolby Laboratories Licensing Corporation.

When your unit needs to be repaired, bring the entire set (Speakers excluded) to your dealer.

Memory backup function

Stored contents which are cleared immediately when power plug is unplugged from power outlet

Clock display

Stored contents which are cleared in at least a day after power plug is unplugged from power outlet

Amplifier

POWER status (ON or OFF)
Input selection
Volume control value

Tuner unit

Receiving band
Frequency
Preset stations
Program settings

 
Cassette deck unit

Transport direction
DOLBY NR
Reverse mode

Note related to transportation and movement (CD player)

Before transporting or moving this unit, carry out the following operations.

1. Turn the power ON but do not load a disc.
 - Press the CD (▶/II) key to check that no disc is present on the tray.
2. Wait a few seconds and verify that the display shown appears.



3. Turn the power OFF.

Operation to reset

The microcomputer may fall into malfunction (impossibility to operate, erroneous display, etc.) when the power cord is unplugged while power is ON or due to an external factor. In this case, execute the following procedure to reset the microcomputer and return it to normal condition.

Unplug the power cord from the power socket, and while holding the **ENTER** key depressed, plug the power cord into the socket again.

- Please note that resetting the microcomputer clears the contents stored in it returns it to condition when it left the factory

Receiver unit, speakers

Symptom	Cause	Remedy
Sound is not produced.	<ul style="list-style-type: none"> ● The speaker cords are disconnected. ● The volume control is set to the minimum position. ● The MUTE switch of remote control unit is switched ON. ● The headphone plug is inserted into the jack. 	<ul style="list-style-type: none"> ● Connect properly referring to "Connections". ● Adjust to an required volume - 17 ● Switch MUTE OFF ● Unplug the headphone plug
The character display blinks and sound is not produced.	<ul style="list-style-type: none"> ● The speaker cords are short-circuited. 	<ul style="list-style-type: none"> ● Turn the power OFF, remove the short-circuit and turn the power ON again.
Sound is not produced from the left or right speakers.	<ul style="list-style-type: none"> ● The speaker cords are disconnected. 	<ul style="list-style-type: none"> ● Connect properly referring to "System connections" - 17
The clock display blinks without changing the figures.	<ul style="list-style-type: none"> ● There was a power failure. ● The power cord was unplugged from the outlet. 	<ul style="list-style-type: none"> ● Adjust the present time again. - 5 ● Adjust the present time again
Timer operation is not possible.	<ul style="list-style-type: none"> ● The present time has not been adjusted or there was a power failure. ● The timer ON time and OFF time have not been set. ● The timer execution was not set up. 	<ul style="list-style-type: none"> ● Adjust the present time referring to "Clock adjustment". - 5 ● Set the timer ON time and OFF time. - 20 ● Press the ▶▶ key to set up the execution. - 20
Radio stations cannot be received.	<ul style="list-style-type: none"> ● The antennas have not been connected. ● A proper broadcasting band has not been selected. ● The frequency of the station to be received is not tuned. 	<ul style="list-style-type: none"> ● Connect antennas. - 17 ● Select a band. - 18 ● Tune to the frequency of the desired station.
Noise interferes.	<ul style="list-style-type: none"> ● Car ignition noise. ● influence of an electric appliance. ● A TV set is installed near the system. 	<ul style="list-style-type: none"> ● Install the outdoor antenna in an apart position from the roof. ● Switch the suspected electric appliance OFF ● Install the TV or the system at an increased distance between them.
A station has been preset but it cannot be received by pressing the P.CALL key.	<ul style="list-style-type: none"> ● The frequency of the preset station is not tunable. ● The preset memory has been cleared because the power cord has been unplugged for a long period. 	<ul style="list-style-type: none"> ● Preset stations with tunable frequencies. ● Preset stations again. - 19
Demonstration starts suddenly.	<ul style="list-style-type: none"> ● The power plug was unplugged from the outlet while the power switch was ON, or there was a power failure. 	<ul style="list-style-type: none"> ● This is not malfunction. Press the DEMO key to cancel the demonstration. - 22

Cassette deck unit

36

Symptom	Cause	Remedy
Sound cannot be produced by pressing the play key or no operation occurs even when an operation key is pressed.	<ul style="list-style-type: none"> The head is dirty The tape is wound too tight due to irregular winding A nonrecorded tape is played. 	<ul style="list-style-type: none"> Clean the head referring to "Maintenance" - 39 Try another tape Play a recorded tape
No operation occurs even when an operation key is pressed.	<ul style="list-style-type: none"> The cassette holder is not closed completely. The operation key is pressed immediately after closing the cassette holder. The operation key is pressed in less than 4 seconds after turning the power ON A tape is not inserted in the unit The tape is wound too tight due to irregular winding The tape is fully wound to one of the reels. 	<ul style="list-style-type: none"> Close the holder completely Press operations keys in more than a few seconds after closing the holder. Press operation keys after waiting for more than 4 seconds. Insert a tape Try another tape Change the tape transport direction or reverse the tape insertion orientation
The DPSS malfunctions.	<ul style="list-style-type: none"> The tape used is not suitable for DPSS, for example the spaces between tunes may be too short. 	<ul style="list-style-type: none"> Refer to "Searching for the desired music program (DPSS)" - 37
In dubbing, the tape stops at different moments in decks A and B.	<ul style="list-style-type: none"> This is due to the difference in the tape length or characteristics of the mechanisms of two cassette decks 	<ul style="list-style-type: none"> Small time difference does not mean a malfunction.
The cassette holder cannot be opened by pressing the eject key.	<ul style="list-style-type: none"> The key is pressed during recording or playback. The microcomputer is malfunctioning due to external noise. 	<ul style="list-style-type: none"> Press in stop mode Unplug the power cord and plug it again.
Sound is harsh or high frequencies are not reproduced.	<ul style="list-style-type: none"> The head is dirty The tape is stretched or shrunk 	<ul style="list-style-type: none"> Clean the head referring to "Maintenance" - 39 Try another tape
Sound is distorted.	<ul style="list-style-type: none"> The tape being played was recorded with distorted sound 	<ul style="list-style-type: none"> Try another tape
Noise is noticeable.	<ul style="list-style-type: none"> The tape head is magnetized External noise is induced A tape recorded with Dolby NR ON is played with Dolby NR OFF 	<ul style="list-style-type: none"> Demagnetize the head referring to "Maintenance" - 39 Install the system at a distance from other electric appliances and TV Set the Dolby NR to on
Sound vibrates.	<ul style="list-style-type: none"> The capstans or pinch rollers are dirty. The tape is wound irregularly 	<ul style="list-style-type: none"> Clean the head referring to "Maintenance" - 39 Wind the tape again by fast forwarding, rewinding or playing from an end to the other.
Recording cannot be started by pressing the record key.	<ul style="list-style-type: none"> The recording protect tab of the cassette has been broken. The cassette holder is not closed completely. The TAPE input is selected The tape is fully wound to one of the reels 	<ul style="list-style-type: none"> Use a cassette with an unbroken recording protect tab or block the hole Close the holder completely Select the source to be recorded with the input selector key Change the tape transport direction of deck B or reverse the tape insertion orientation
Volume of the recorded track changed.	<ul style="list-style-type: none"> MIC MIXING control knob is moved during recording. 	<ul style="list-style-type: none"> Fully turn the MIC MIXING control knob to the left

CD player unit

37

Symptom	Cause	Remedy
A CD is placed in the player but it cannot be played.	<ul style="list-style-type: none"> The disc is placed upside down. The disc position is displaced. The disc is extremely dirty. The disc is scratched. Dew is condensed on the optics lens. 	<ul style="list-style-type: none"> Place the disc properly, with the label side facing upward. Place the disc properly. Clean the disc referring to "Disc handling precautions" - 34 Try another disc. Refer to "Beware of condensation" and remove the condensation by evaporation - 33
Sound is not produced.	<ul style="list-style-type: none"> The disc has not been placed. The player is not put to the play mode. The disc is extremely dirty. The disc is scratched. 	<ul style="list-style-type: none"> Place a disc in the CD player. Press the CD (▶/III) key. Clean the disc referring to "Disc handling precautions" - 34 Try another disc.
Sound skips.	<ul style="list-style-type: none"> The disc is dirty. The disc is scratched. The player is subject to vibration. 	<ul style="list-style-type: none"> Clean the disc referring to "Disc handling precautions" - 34 Try another disc. Install the unit in a place not subject to vibrations.

Remote control unit

Symptom	Cause	Remedy
Remote control operation is not possible.	<ul style="list-style-type: none"> Batteries are exhausted. The remote control is too far away from the system, the controlling angle is deviated or there is an obstacle in between. There is no tape or CD set in the component to be played. An attempt is made to play the cassette deck which is recording something. 	<ul style="list-style-type: none"> Replace with new batteries - 35 Operate the unit inside the remote control's range. - 35 Set a tape or CD in the component to be played. Wait until the recording ends.

Notes

- With some tapes, a squeaky noise is produced when the tape is stopped automatically. This is due to the tape protection function, and not a malfunction.
- Do not use 120-minute tapes, for the tape is too thin and gets easily tangled.
- Do not use contact cleaners because it could cause a malfunction. Be specially careful not to use contact cleaners containing oil, for they may deform the plastic component.

WARNING NOTICE:

IN MOST CASES IT IS AN INFRINGEMENT OF COPYRIGHT TO MAKE COPIES OF TAPES OR DISCS WITHOUT THE PERMISSION OF THE COPYRIGHT OWNERS. ANYONE WISHING TO COPY COMMERCIALY AVAILABLE TAPES OR DISCS SHOULD CONTACT THE MECHANICAL COPYRIGHT PROTECTION SOCIETY LIMITED OR THE PERFORMING RIGHTS SOCIETY LIMITED.

Specifications

⚠ Caution : Read this page carefully to ensure safe operation.

UC-413 (En)

Main unit (RXD-F41)

38 Amplifier section

Rated power output

53 watts per channel minimum RMS, both channels driven, at 6 Ω from 500 Hz to 15 kHz with no more than 0.5 % total harmonic distortion. (FTC)

Input sensitivity / Impedance

AUX 200 mV / 47 kΩ
MIC 2.4 mV / 2.2 kΩ

Signal to noise ratio

AUX 86 dB (IHF'66)

FM Tuner section

Tuning frequency range 87.5 MHz ~ 108 MHz
Sensitivity (IHF) 13.2 dBf (1.2 μV at 75 Ω)

AM Tuner section

Tuning frequency range 530 kHz ~ 1,700 kHz
Usable sensitivity 12 μV / (500 μV / m)

Cassette deck section

Track 4-track, 2-channel stereo
Recording system AC bias system
(Frequency: 105 kHz)

Heads

A deck Playback head 1
B deck Playback / recording head 1
Erasing head 1

Motors 1

Fast winding time Approx. 120 seconds
(C-60 tape)

CD player section

Laser Semiconductor laser
Playing rotation 200 rpm ~ 500 rpm (CLV)
Wow & Flutter Unmeasurable Limit

General

Power consumption 150 W
AC outlet SWITCHED 1: (200 W, 1.6 A Max.)
Dimensions W: 270 mm (10-5/8")
H: 305 mm (12")
D: 341 mm (13-7/16")
Weight (net) 8 kg (17.6 lb)

In regard to the speaker part, please refer to the documentation enclosed with the speakers.

Note KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.



For the U.S.A.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

For the U.S.A.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION
2967-3, ISHIKAWA-CHO,
HACHIOJI-SHI,
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT
CONFORMS TO DHHS REGULATIONS NO. 21 CFR
1040. 10, CHAPTER I, SUBCHAPTER J.

Location: Back Panel

For the U.S.A.**FCC WARNING**


This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio / TV technician for help.

Attaching the wall hanger and stand

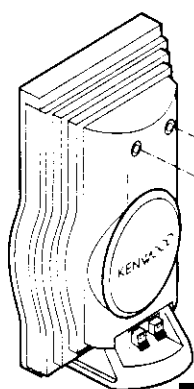


Wall hanger

Attach using the two screws provided (2 pieces).
When hanging the speaker on the wall, do not attach the stand.

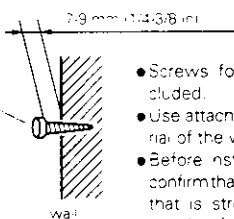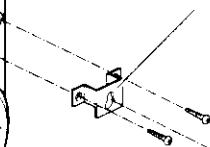

- Screws for wall attachment are not included.
- Use attaching screw that match the material of the wall.
- Before installation, check the wall well to confirm that it provides an attaching strength that is strong enough to withstand the weight of the speaker.

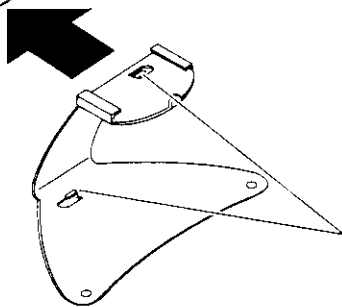

The speaker cord can be fixed to this position.

Stand

When the speaker is placed on a surface, attach as shown in the illustration.

Note Be sure to attach the stand when the speaker is to be placed on a surface. Otherwise, the speaker without the stand is very unstable could fall or drop depending on the position where it is placed.

