KENWOOD

AUDIO VIDEO SURROUND RECEIVER

VR-257 INSTRUCTION MANUAL for CATV tuner function

KENWOOD CORPORATION


B60-3625-00 00 CS MA (K, P) D 99/32198/121110987654

In addition to FM and AM broadcasts, the VR-257 is also capable of receiving the audio portion of cable TV broadcasts via cable box. This instruction manual explains the operating procedures for receiving the audio portion of TV broadcasts using the VR-257

Some cable TV broadcasts include the SAP (Second Audio Program) service. In such cases, you can use the VR-257 to enjoy multiplex audio, etc., during SAP broadcasts.

For information on standard operating procedures, such as receiving standard radio proadcasts, station presets, etc., refer to the separate receiver instruction manual.

Names and function of parts

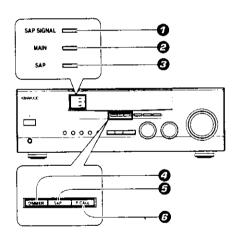

SAP SIGNAL indicator

Lights when a SAP input signal is being received by the VR-257. You may use the SAP function when this indicator is iit.

MAIN indicator

Lights when the main broadcast (normal stereo broadcast, etc.) has been selected and is being received.

SAP indicator

Lights when the SAP signal has been selected and is being received.

DIMMER key

Use to adjust the brightness of the display

SAP key


Use to switch SAP broadcasts on or off.


P.CALL key

Use to call up previously registered radio stations

 Refer to the separate receiver instruction manual for information on the other keys and knobs.


Connecting antenna for CATV reception

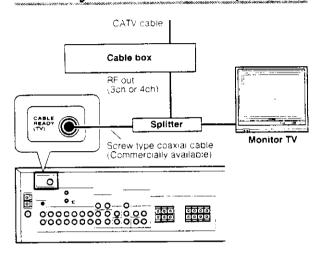

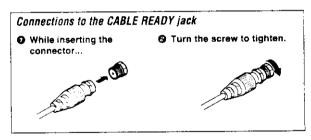

 In order to make connections to a cable antenna, the necessary equipment in addition to the VR-257) and cable must be obtained. Contact a dealer hear you for details.

Preparing to receive CATV broadcasts

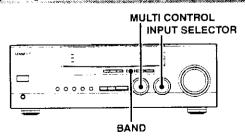

- Turn on the power to the related components.
- Use the input selector to select the tuner.

3 Use the BAND key to select TV.

Each press switches the band as follows:

 
- 0 TV 9 FM - 0 AM

 
- The currently selected listening mode is stored in memory and used in common for all bands.
- Use the MULTI CONTROL knob to select the channel setting used for output from the cable box connected to the VR-257.

→ 0 TV 3ch — 3 TV 4ch

 Check the RF output setting of the caple box and set the channel mode of the vR-257 to match it. There is no need to change the channel setting once it has been set to match that of the cable box. The caple box is then used to select specific channel broadcasts.

Enjoying CATV broadcasts






- 1 Complete the preparations for receiving broadcasts.
- 2 Use the cable box to select the desired channel.
 - Adjust the volume confroi of the cable box to the maximum setting
- Use the VOLUME CONTROL (VOLUME) to adjust the

Enjoying SAP broadcasts

 When a proadcast resturing the SAP (Second Audio Program) service is being received, you can enjoy the cener to this format provides, such as pilingual soundtracks, using the VR-257.



- Tune in a CATV channel broadcast for which the SAP SIGNAL indicator lights.
 - The gale of study on the area of the terms of the more property of the control of the ending shadow and the first area compared to SAR on area of the area of the control of

2 Press the SAP key to select the desired mode.

Each press switches the mode as follows:

MAIN indicator lit (normal stereo broadcasts, etc.)
 SAP indicator lit (menaural broadcasts such as blingual soundtracks, etc.)


- The type of SAP service provided differs depending on the TV station.
- It is not possible to change the SAP mode setting when no SAP proapcast is being received.


The output changes as shown below depending on the type of audio signal and the mode selected.

Broadcast received	SAP mode position	Output sound	
		L-Speaker	R-Speaker
Stereo (MAIN)		L	R
Monaural (MAIN)		L+Ĥ ·	
Stereo+SAP (SAP SIGNAL) (MAIN or SAP)	MAIN (MAIN)	Ĺ	R
	SAP (SAP)	SAP	
Monaural+SAP (SAP SIGNAL* (MAIN or SAP)	MAIN (MAIN)	L+R	
	SAP (SAP)	SAP	

Items in parentheses refer to the indicator that is lit

  Using the AUTO SOUND mode when receiving TV broadcasts





When TV is selected as the recept on band, the VR-257's $\pmb{\mathsf{AUTO}}$ key functions to toggie the AUTO SOUND mode on and off

When AUTO SOUND is turned on (AUTO SOUND indicator (it), the listening mode is switched automatically to match the tuner's input signal and prevent an inappropriate mode from being selected. If you wish to select the listening mode manually, press the **AUTO** key to make the AUTO SOUND indicator goloff and then select the listening.

Example off volume estening to a stereo brhadoast using the MAIN setting and in the Dobok Prollegic mode, and then you switch to the SAP mode, the AUTO SOUND function will alt manuscripting figure Prolegic. This is because the 1941 to de produces a monaural signal, and the Dobok Prolegic mode would therefore not produce any not ceable out in selection.

主SETUP ()、 tank g (A TO TXの対抗し m) pA

