



1998 CHANGER AND CONTROLLER COMPATIBILITY

<i>Cables packed w/unit</i>		CI	CG	H	G	F	J	J
<i>Connector at unit</i>		Ⓜ	Ⓜ	Ⓛ	Ⓛ	Ⓛ	Ⓛ	Ⓛ
<i>Model</i>		C200	C300 C400	C301FM	C401	C600 C601 C601FM C800	KDC-CPS81 C56FM C461 C504 C510FM C511 C560 C604 C602 C661 C660 C710 C711 C603 C810 C602FM KDCP200	These models have provisions to support the K-bus format. C803 KMD-C80
	Ⓜ KCA- R2FMA, R20, R10	C (d)	C (d)	D (bf)	D (d)	F (d)	F (b)	F (b)
	Ⓛ KCA-R51FP, 41FM, 40FM, 31FM, 30FM	CA (a)	CA (a)	A (f)	A (f)	J (a)	J (d)	J (d)
I	Ⓛ KCA-R200	D (a)	D (a)	⊗	⊗	⊗	⊗	⊗
E	Ⓛ KCA-R2FM	CE (e)	CE (e)	E (g)	E (g)	A(e)	A (be)	A (be)
	Ⓛ KDC-PS909, PS907, PS905, PS809, PS709	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓛ KDC-9007, 8009, 8007, 8005, 8003, 7009, 7007, 7003, 6009, 6007, 6005, S5009, 5007, 4009, 4007	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓜ KDC-9000, 85R, 95R	C (d)	C (d)	D (bf)	D (d)	F(d)	F (b)	F (b)
	Ⓛ KDC-9000 II	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓛ KDC-PS900	⊗	⊗	⊗	⊗	⊗	⊗	L (I)
	Ⓛ KRC-PS955, PS655	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓛ KRC-3006, 980, 953, 903, 902, 901, 880, 805, 803, 802, 801, 705, 703, 702, 701, 605, 603C, 602, 601, 580, S505, 503, 502, 501, 480, 405, 403, 402, 401, S400, 380, S305, 302, 301, S300, S205,	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓜ KRC-960, 940, 930, 910, 860, 830, 810, 740, 730, 660, 640, 630, 610, 560, 540, 530,	C (d)	C (d)	D (bf)	D (d)	F(d)	F (b)	F (b)
	Ⓛ KRC-860 II,	CA (a)	CA (a)	A (f)	A(f)	J (a)	J (d)	J (d)
	Ⓜ KRC-878	C (d)	C (d)	D (bf)	D(d)	F (d)	F (b)	F (b)
	Ⓛ DPX-410	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
	Ⓜ MAV-205	K (d)	K (d)	⊗	⊗	⊗	⊗	⊗
	Ⓜ X205	K (d)	K (d)	⊗	⊗	⊗	⊗	⊗
J	Ⓛ KDC-C56FM, C510FM, 602FM Controller	CA (a)	CA (a)	A (f)	A(f)	J (a)	J (d)	J (d)
F	Ⓜ 601 FM MOD	CG (d)	CG (d)	D (bf)	D(d)	F (d)	F (b)	F (b)
H	Ⓛ 301 FM MOD	CE (a)	CE (a)	E (g)	E (g)	A (e)	A (be)	A (be)



LEGEND FOR CHANGER CONTROLLER CHART

IDENTIFIER	ITEM	PART NUMBER	PHYSICAL DESCRIPTION
A (a)	CA-DS100	(Z-CADS100)	
B (b)	CA-SD200	(Z-CASD200)	
C (c)	I/O CONTROL BOX	(X13-6270-00)	
D (d)	DIRECT	(changer TO controller)	With changer's original cable
E (e)	SHORTIE	(E30-3798-05)	
F (f)	ADAPTER CORD	(E30-4000-05)	
G (g)	EXTENSION	(E30-3834-15)	
H (h)	EXTENSION	(E30-3692-05)	
I (i)	EXTENSION	(E30-2505-08)	
J (j)	ADAPTER CORD	(E30-4138-05)	
K (k)	MAV-205 I/O BOX	(X13-6550-00)	
L (l)	CA-K300	(Z-CAK300)	
	Do Not Use	Do Not Use	Do Not Use

Important notes on how to use this chart.

- If the customer has all the cables that are packed with the unit then use the letter within the parenthesis.
- The capital letter outside of the parenthesis indicates the minimum requirements to interface a CD changer with a controller.
- In most cases you can use one of the extensions to extend the distance from the changer to the controller by at least 12 feet.
- NOTE: The KDC-C100 is not compatible with any of the above controllers.

Examples:

To connect a KRC-960 to a new KDC-C604 with it packaged cable you will need (b) a CA-SD200 adapter cable.

To connect a KRC-980 to a KDC-C401 for testing purposes when cable length is not an issue you will need "A" a CA-DS100 adapter cable which will place the changer about 12 inches from the controller.