

LZH-100W

Instruction Manual
Kenwood Corporation

Overhead 10.2" Widescreen TFT with Built In DVD player

KENWOOD



Take the time to read through this instruction manual.

Familiarity with installation and operation procedures will help you obtain the best performance from the new DVD player.

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model LZH-100W Serial number _____

Contents

▲ Warning	3
Safety precautions	4
Before use	5
About the remote	6
Box contents	6
About discs	7
Name and function of each part	8
Unit	
Remote Controller	
FM transmitter for audio	11
How to play a DVD	12
Releasing the Monitor	
POWER and SOURCE select	
On Screen Display control	13
PICTURE	
OSD	
SETUP	
DVD setup	16
LANGUAGE	
DISPLAY	
AUDIO	
LOCK	
OTHERS	
DVD movie setup	21
Music mode	22
Photo mode	24
Connecting external devices	26
Installation (Professional installation recommended)	27
Connection diagram	28
Troubleshooting	29
Specifications	30

Warning

CAUTION

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Kenwood Corporation
2967-3, ISHIKAWA-MACHI
HACHIOJI-SHI, TOKYO, JAPAN
Kenwood Corp. CERTIFIES THIS EQUIPMENT
CONFORMS TO DHHS REGULATIONS NO.21 CFR.
1040.10. CHAPTER 1, SUBCHAPTER J.

Location : Bottom Panel

Warning

- To minimize the risk of improper installation, Kenwood recommends that the installation of this product be performed by an MECP-Certified professional installer. Improper installation may cause damage to the vehicle or injury to the driver and occupants.
- Installation must be performed according to this product installation manual. Kenwood is not responsible for damages or injuries resulting from installation not performed strictly in accordance with the procedures described in this manual.
- Proper installation of this product may require the use of mounting hardware not included with this product.
- Use only new, unused and properly-sized fasteners to install this product. Do not use previously-installed or worn fasteners.
- No modifications to the product or mounting hardware are permitted.
- This product is designed to be used and viewed by rear seat passengers only. The monitor screen must not be visible to the driver. Viewing by the driver while operating the vehicle will create an unsafe condition.
- Kenwood does not recommend connecting hanging wires or cables to auxiliary connectors while the vehicle is in motion.
- This product must not obstruct the driver's rear view when installed or used.
- It is the responsibility of the purchaser and installer to comply with all applicable laws and regulations governing the installation and use of this product.
- Kenwood disclaims all liability for any property damage or personal injury that may result from improper or unintended installation or use of this product.

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety precautions

▲ WARNING

To prevent injury or fire, take the following precautions:

- Insert the unit all the way in until it is fully locked in place. Otherwise, it may fall out of place when jolted.
- To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- If the unit starts to emit smoke or strange smells, turn off the power immediately and consult your Kenwood dealer.
- Do not connect the unit to the front monitor. This unit is for rear seat entertainment.

▲ CAUTION

To prevent damage to the unit, take the following precautions:

- Make sure to ground the unit to a negative 12V DC power supply.
- Do not open the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit. When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause your unit to malfunction.

NOTE

- If you experience problems during installation, consult your Kenwood dealer.
- The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the actual display. Some of the illustrations on the display may represent something impossible in actual operation.

Lens Fogging

Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the DVD player of the unit. Called lens fogging, DVD may not be played in such condensation. If the unit still does not operate normally after while, consult your Kenwood dealer.

Cleaning the Unit

If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe the stain off with a cloth moistened with neutral cleaner, then wipe neutral cleaner off.



- Applying spray cleaner directly to the unit may affect its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase characters.




 
 
This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision. Reverse engineering or disassembly is prohibited.

NOTE

This Class B digital apparatus complies with Canadian ICES-003.


Before use

Icons on the DVD discs

Icon	Description
	Indicates the region code where the disc can be played.
	Number of voice languages recorded with the audio function. The number in the icon indicates the number of voice languages. (Max. 8 languages)
	Number of subtitle languages recorded with the subtitle function. The number in the icon indicates the number of subtitle languages. (Max. 32 languages)
	Number of angles provided by the angle function. The number in the icon indicates the number of angles. (Max. 9 angles)
	Aspect ratios that can be selected. " LB " stands for letter Box and " PS " for Pan/Scan. In the example on the left, the 16:9 video can be converted into letter box video.

Region codes in the world

The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.

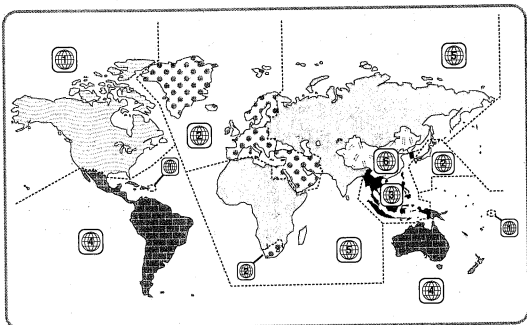

Playable discs

- CD-R
- DVD-R
- CD-RW
- DVD+R
- DVD-RW
- DVD+RW

Playable media format

- MPEG1
- DVD-AC3
- Video CD Ver.1.0
- Video CD Ver.2.0
- MP3
- MPEG2
- DVD-Video
- Video CD Ver.1.1
- CD-DA
- JPG

※ The Region Code of the unit is labeled on the gift box.

Unplayable discs

This player cannot play back any of the following discs.

- DVD-ROM/DVD-RAM discs
- CDV discs (Only the audio part can be reproduced)
- CD-G/CD-EG/CD-EXTRA discs (Only the audio can be reproduced)

- HQ-VCD discs
- Photo CD discs

Also, you cannot play back the DVD-R/RW and DVD+R/RW discs if not recorded in the DVD-Video format.

Restrictions due to difference between discs

Some DVD and VCD discs can be played only in certain playback modes according to the intentions of the software producers. As this player plays discs according to their intentions, some functions may not work as intended by you.


Please be sure to read the instructions provided with each disc, When an inhibition icon is displayed on the monitor, it indicates that the disc being played is under the restriction as described above.



About the remote

Loading the battery

1. Use two "AAA"- size batteries.
Open the cover while pressing downwards to remove it as illustrated.
2. Insert the batteries with the + and - poles aligned properly, following the illustration inside the case.

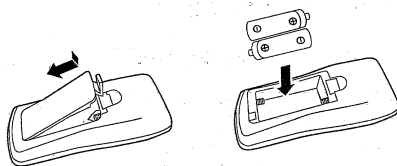

⚠ WARNING

- Store unused batteries out of the reach of children. Contact a doctor immediately if the battery is accidentally swallowed.
Do not put the remote in a place where it moves when you drive. If it falls under the brake pedal, etc., it will hinder your driving, and cause danger.

 
- ⚠ ■ Do not set the remote in hot places such as on the dashboard.



- The provided batteries are intended for use in operation checking, and their service life may be short.
- When the remote controllable distance becomes short, replace both of the batteries with new ones.

Box contents


After purchasing this product, open the packaging and see if any of the components listed below are damaged or missing. If there is an abnormality, make an inquiry with your place of purchase. As these images are to facilitate the understanding of the consumer, they may differ from the actual conditions.




Unit 1 EA




Remote Control 1EA
& Batteries 2EA

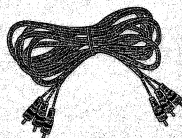


A/V Input Cable(6m) 1EA

 


Bracket 1EA & Screw 8EA

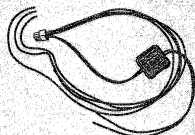

Power & Dome Lamp
Connector 1EA

 

A/V Input/Output
Cable 1EA

 


Digital Audio Cable 1EA



Cable Tie 2EA



Trim Ring 1EA

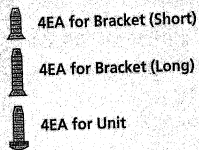


4EA for Bracket (Short)



4EA for Bracket (Long)

4EA for Unit

 Screw



Manual 1EA &
Warranty Card 1EA

  


Lamp Cover 2EA

About discs

Handling discs


- Don't touch the recording surface of the disc.

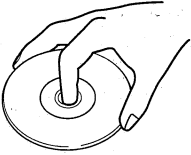

- CD-R and CD-RW are easier to damage than a normal music CD. Use a CD-R/RW, DVD-R/RW or DVD+R/RW after reading the caution items on the package etc.
- Don't stick tape etc. on the disc. Also, Don't use a disc with tape stuck on it.

When using a new disc

If the disc center hole or outside rim has burrs, use it after removing them with a ball point pen etc.

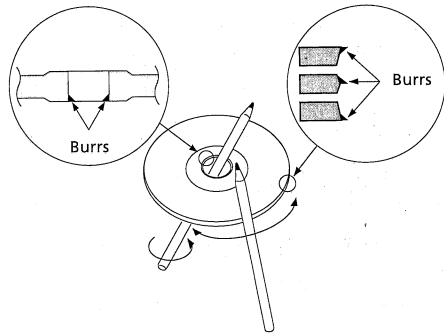


Disc accessories

Don't use disc type accessories.

Disc cleaning

 Clean from the center of the disc and move outward.




Removing discs

When removing discs from this unit, pull them out horizontally.

Discs that can't be used

- Discs that aren't round can't be used.

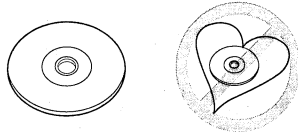

- Discs with coloring on the recording surface or discs that are dirty can't be used.
- This unit can only play the CDs with



 



- It may not correctly play discs which do not have the logo.
- A CD-R or CD-RW that hasn't been finalized can't be played. (For the finalization process, refer to your CD-R/CD-RW writing software and recorder instruction manual.)

Disc storage

- Don't place them in direct sunlight (on the seat or dashboard etc.) and where the temperature is high.
- Store discs in their cases.

Name and function of each part

UNIT

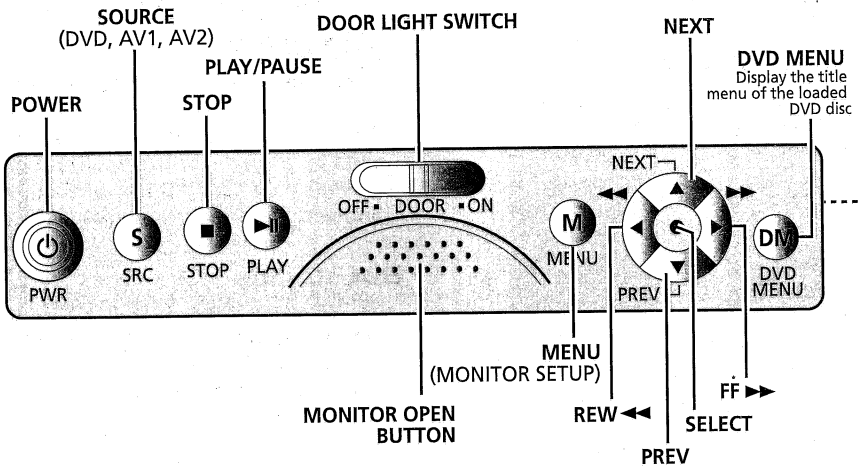
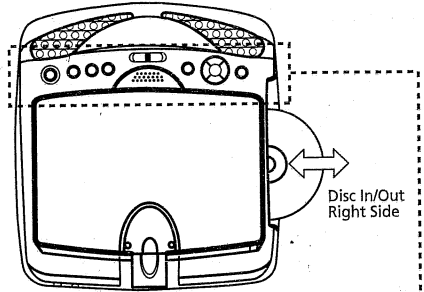
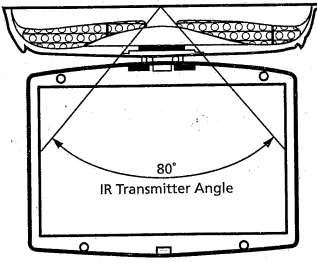


OFF : Light is off

DOOR : Light goes on when car doors are opened and goes off when car doors are closed.

ON : Light is on and stays on until switch is moved to "DOOR" or "OFF" position.

Name and function of each part

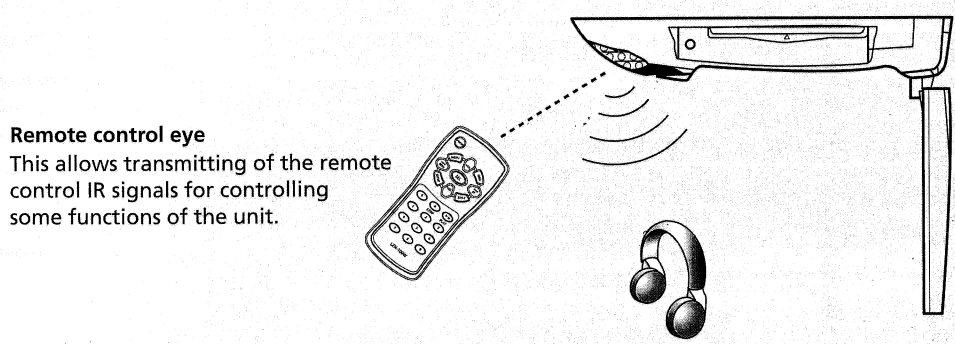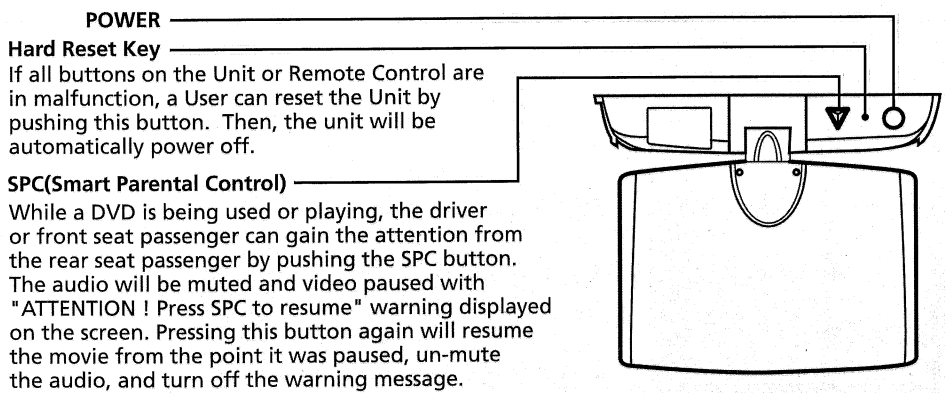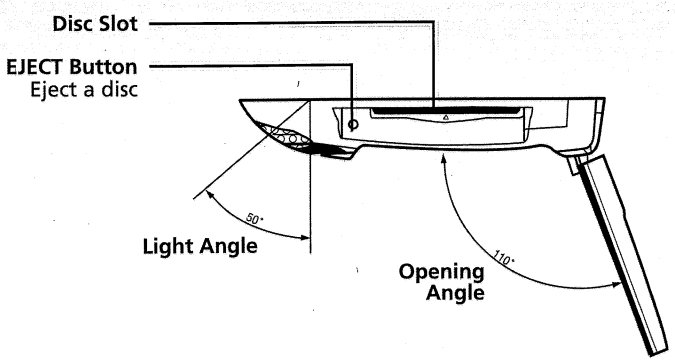


Remote control eye
 This allows transmitting of the remote control IR signals for controlling some functions of the unit.

IR Wireless Headphone

IR Wireless transmitter module
 This module sends the audio signal to wireless IR headphones. The audio signal is converted to an infrared light transmitted to your headphones by line of sight.

Name and function of each part


Remote Controller

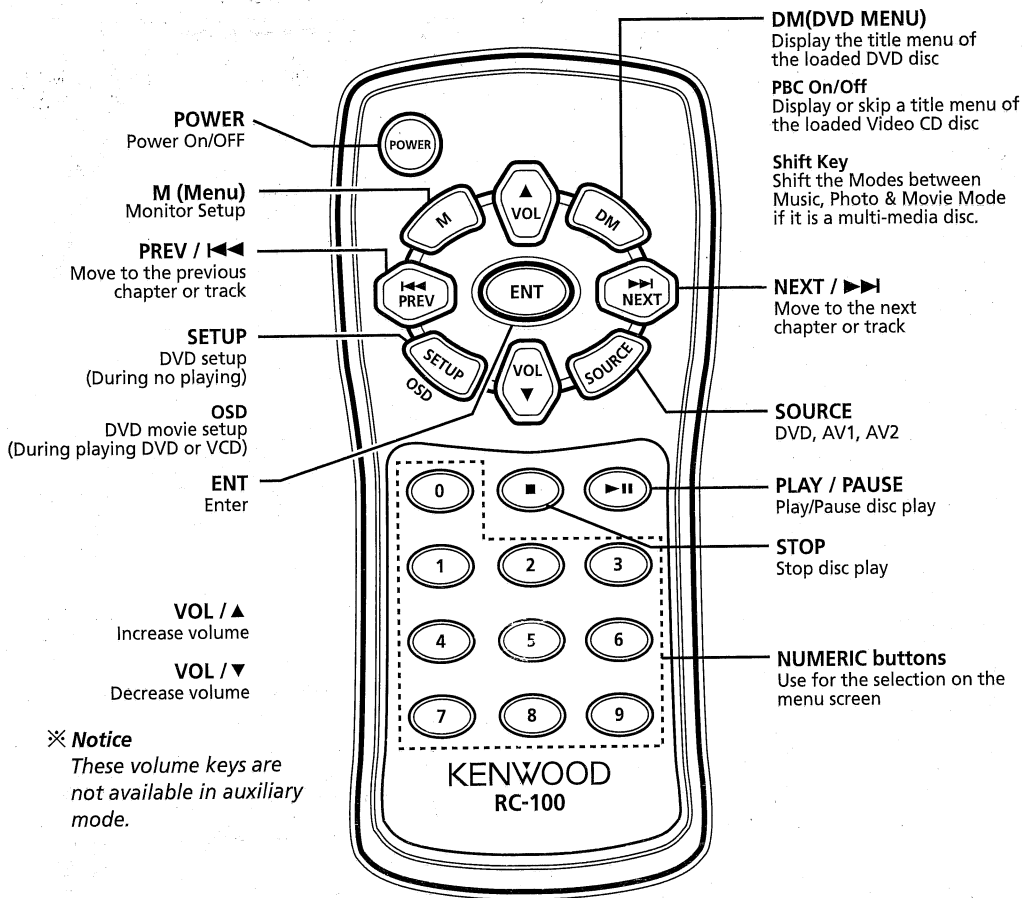

※ Notice

These volume keys are not available in auxiliary mode.


※ Special Tip

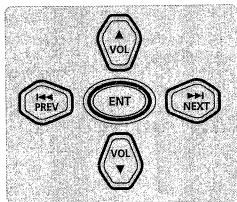


These arrow keys are useful for moving a cursor up/down or left/right while a User is changing the value & level on DVD Monitor Menu(M), DVD Setup(SETUP), DVD Title Menu(DM), DVD Movie Setup(OSD), Music Mode & Photo Mode.

FM transmitter for audio

In order to listen to the audio portion of the disc through the vehicle speakers, setup the settings once the unit has been installed.

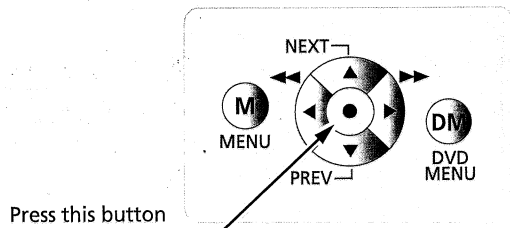

1. Press the ● (dot) button for 1.5 sec to bring out the control menu for FM transmitter on the screen of the unit.
 2. Press the up ▲ or down ▼ arrow buttons to turn the FM transmitter on or off.
 3. Press the left ◀ or right ▶ arrow buttons on the Unit to tune FM transmit frequency. When the unit's FM frequency matches with vehicle audio head unit's FM frequency, the Audio will come out through vehicle speakers.
- Open FM frequency are FM 88.0MHz ~ 89.5MHz (Tuning By interval of 100KHz)

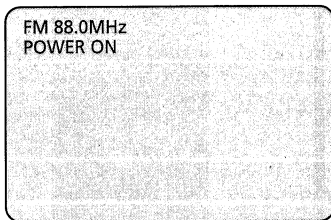


<Example>

How to play a DVD


How to play a DVD

Releasing the Monitor

Push the open button (located at the front of your screen) and open the monitor to the desired level. You can also adjust the swivel angle.

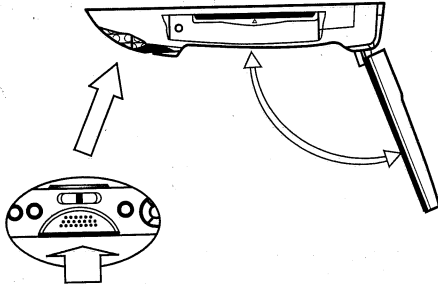


Push to open

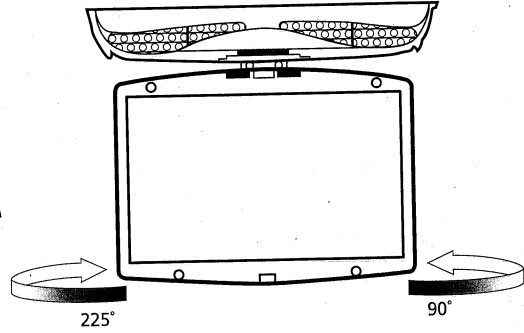


PWR(Power) and SRC(Source) select

1. Press the PWR(Power) button on either the remote control or the unit once to turn the power on. Press the same PWR(Power) button to turn your power off.

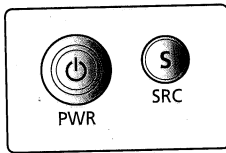


Unit

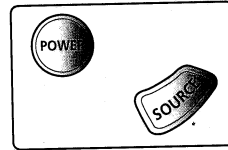


Remote Controller

 2. Press the SRC(Source) button on the remote controller or on the unit to select a desired auxiliary mode(AV1, AV2) or DVD mode. To change the source, press the SRC(Source) button repeatedly.




3. Insert a DVD Disc

Load a disc in the disc loading slot with the label side up, and it will be played automatically.

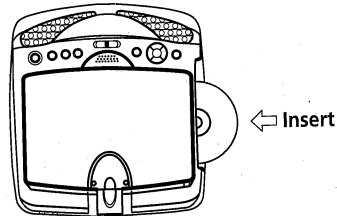

On Screen Display control

When the M (Menu) button on the Unit or the remote controller is pressed, the OSD will display the setting menu as follows:

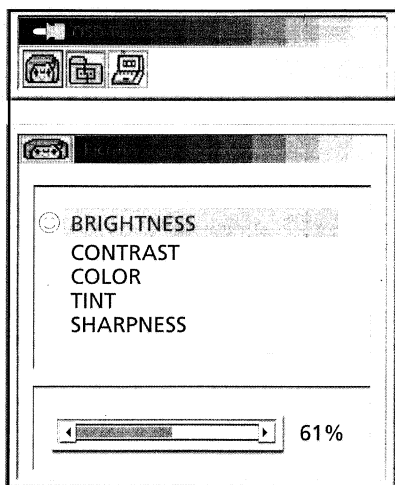

PICTURE

Adjust for Brightness, Contrast, Color, Tint & Sharpness



OSD

Adjust for OSD Horizontal / Vertical position




SETUP

Select for auto-application of Reset(Auto-setting for Screen)

Press the up▲ / down▼ arrow buttons on the the unit or remote controller to move the highlight cursor up / down in the menu list, and press the left ◀ or right ▶ arrow buttons to change the value / level while the menu OSD is still displayed on the screen.

On Screen Display control

PICTURE

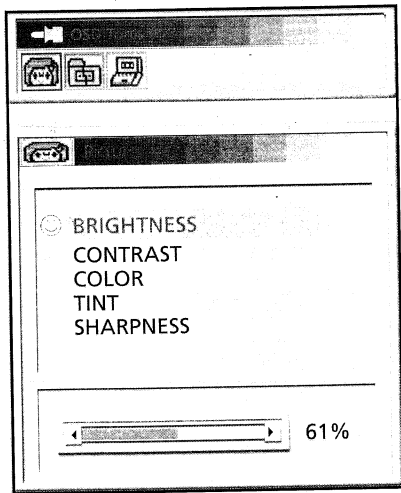


1. Use this menu to achieve the desired settings for **Brightness, Contrast, Color, Tint & Sharpness.**

- Brightness : Dim → Bright
- Contrast : Contrast between light and shade
- Color : Brilliance & Hue of color
- Tint : Tint of color
- Sharpness : Sharpness of view

2. Change the values with the left/right arrow buttons after highlighting the function to control.

OSD

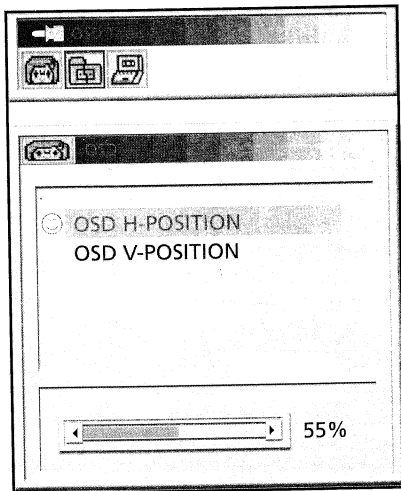


1. Use this menu to achieve the desired settings for **OSD H-Position & OSD V-Position.**

- OSD H-Position : Moving OSD menu horizontally
- OSD V-Position : Moving OSD menu vertically

2. Change the values with the left/right arrow buttons after highlighting the function to control.

On Screen Display control


SETUP

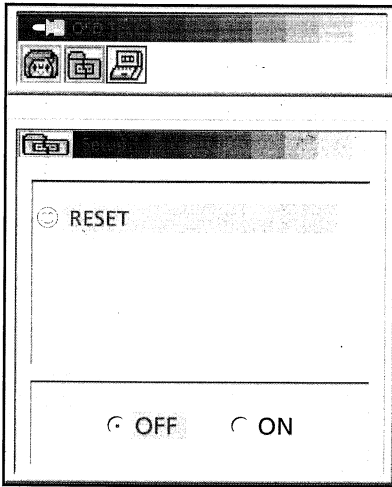

1. Use this menu to setup the enable/disable of auto application for **Reset**.
 - **Reset** : Brings its factory defaults always automatically for Brightness, Contrast, Color, Tint & Sharpness whenever the system power goes on.
2. Select ON/OFF with the left/right arrow buttons after highlighting the function to enable/disable.

DVD SETUP

When the SETUP button on the remote controller is pressed, the DVD OSD will display the DVD setup as follows:

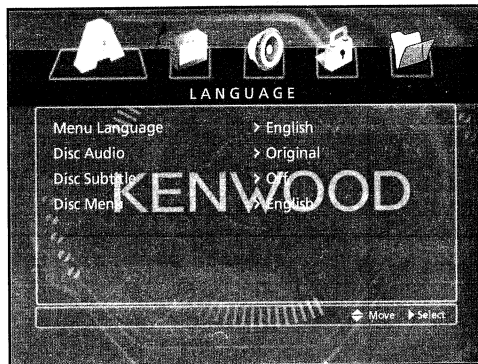

Language

Select Language in OSD Menu, Disc Audio, Subtitle & Disc Menu



Display

Select Display mode(Screen frame) & TV Output(AUTO/PAL/NTSC)



Audio

Select Audio format(Dolby Digital), Sample frequency & Digital output On/Off



Lock

Input Rating & Password




Others

Select Load Default & Screen Saver

Press the up▲ / down▼ arrow buttons on the remote controller to move the highlight cursor up/down in the menu list, and press the left ◀ or right ▶ arrow buttons to change the value / level while the menu OSD is still displayed on the screen.

DVD SETUP

LANGUAGE

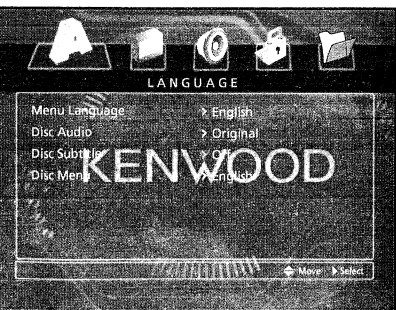


1. Use to setup Language Settings for **Menu, Disc Audio, Subtitle & Disc Menu**

- Menu Language : Language for OSD menu
- Disc Audio : Language for DVD movie
- Disc Subtitle : Select for Showing/Hiding of subtitle
- Disc Menu : Language for DVD movie menu

2. Select Language/values with the left/right arrow buttons after highlighting the menu to change.

※ Notice

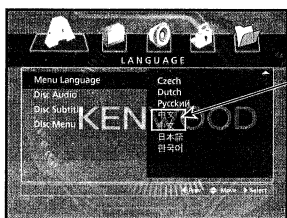

There are two types of Chinese in the menu languages. The upper is the Simplified Chinese, and the lower is the Traditional Chinese.

※ Special Tip

- Original : The original language of the disc.
- Other : If there is not a user's desired language in Disc Audio, Disc Subtitle & Disc Menu, a user may choose one from the below other language code list.

▶ **Inputting Method** : After selecting 'Other', input 4 digit numbers referring to the below language code list.

For example, if a user prefer to Abkhazian as a wish language, a user input '6566' by a remote controller, and press 'ENT'.




Input 4 digit numbers here.

► Other Language Code List

Language Code	Country	Language Code	Country
6566	Abkhazian	7678	Lingala
6565	Afar	7684	Lithuanian
6570	Afrikaans	7775	Macedonian
8381	Albanian	7771	Malagasy
6577	Ameharic	7783	Malay
6582	Arabic	7776	Malayalam
7289	Armenian	7784	Maltese
6583	Assamese	7773	Maori
6588	Aymara	7782	Marathi
6590	Azerbaijani	7779	Moldavian
6665	Bashkir	7778	Mongolian
6985	Basque	7865	Nauru
6678	Bengali; Bangla	7869	Nepali
6890	Bhutani	7879	Norwegian
6672	Bihari	7982	Oriya
6682	Breton	8065	Panjabi
6671	Bulgarian	8083	Pashto, Pushto
7789	Burmese	7065	Persian
6669	Byelorussian	8076	Polish
7577	Cambodian	8084	Portuguese
6765	Catalan	8185	Quechua
9072	Chinese	8277	Rhaeto-Romance
6779	Corsican	8279	Rumanian
7282	Croatian	8285	Russian
6783	Czech	8377	Samoan
6865	Danish	8365	Sanskrit
7876	Dutch	7168	Scots Gaelic
6978	English	8382	Serbian
6979	Esperanto	8372	Serbo-Croatian
6984	Estonian	8378	Shona
7079	Faroese	8368	Sindhi
7074	Fiji	8373	Singhalese
7073	Finnish	8375	Slovak
7082	French	8376	Slovenian
7089	Frisian	8379	Somali
7176	Galician	6983	Spanish
7565	Georgian	8385	Sudanese
6869	German	8387	Swahili
6976	Greek	8386	Swedish
7576	Greenlandic	8476	Tagalog
7178	Guarani	8471	Tajik
7185	Gujarati	8465	Tamil
7265	Hausa	8484	Tatar
7387	Hebrew	8469	Telugu
7273	Hindi	8472	Thai
7285	Hungarian	6679	Tibetan
7383	Icelandic	8473	Tigrinya
7378	Indonesian	8479	Tonga
7365	Interlingua	8482	Turkish
7165	Irish	8475	Turkmen
7384	Italian	8487	Twi
7465	Japanese	8576	Ukrainian
7487	Javanese	8582	Urdu
7578	Kannada	8590	Uzbek
7583	Kashmiri	8673	Vietnamese
7575	Kazakh	8679	Volapük
7589	Kirghiz	6789	Welsh
7579	Korean	8779	Wolof
7585	Kurdish	8872	Xhosa
7679	Laothian	7473	Yiddish
7665	Latin	8979	Yoruba
7686	Latvian, Lettish	9085	Zulu

DVD SETUP

DISPLAY

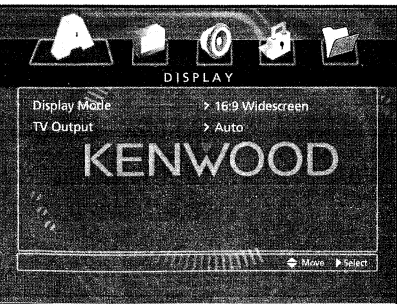


1. Use to achieve the desired settings for **Display & TV Output**.

- **Display Mode** : Selecting 4:3 Letterbox, 4:3 Panscan or 16:9 Widescreen.
- **TV Output** : Selecting Auto, PAL or NTSC.

2. Select values with the left/right arrow buttons after highlighting the menu to change.

 ※ Special Tip : SCREEN DISPLAY



4:3 Letterbox




4:3 Panscan



16:9 Widescreen

AUDIO

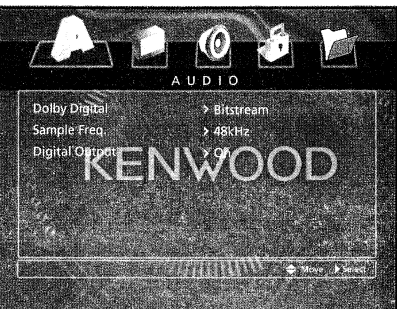


1. Use to achieve the desired settings for **Audio Format(Dolby Digital), Sample Frequency & Digital Output**

- **Dolby Digital** : Selecting Bitstream or PCM
- **Sample Frequency** : Selecting 48KHz or 96KHz
- **Digital Output** : Selecting On / Off

2. Select values with the left/right arrow buttons after highlighting the menu to change.

LOCK

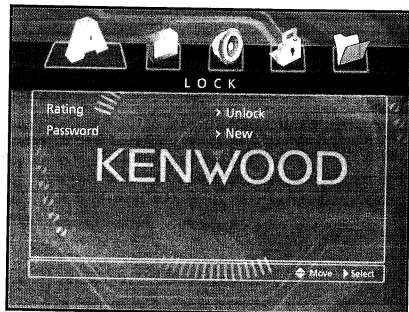


1. Use to achieve the desired settings for **Rating & Password**

- **Rating** : Selecting Lock/Unlock for Parental mode. Determining how the unit re-acts to a movie disc according to rating.
- **Password** : No factory default is registered at the initial mode. It only displays 'New'. A user can register a password with 4 digit numbers on the remote controller.


2. Select values with the left/right arrow buttons after highlighting the menu to change.

※ Special Tip : Rating & Parental Lock

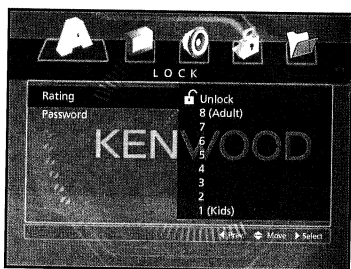

The parental lock is a rating limit system for DVD movies. It works with DVD discs that have been assigned a rating. A user can decide which ratings can be played without blocking. (The factory default is Unlock.)

OTHERS

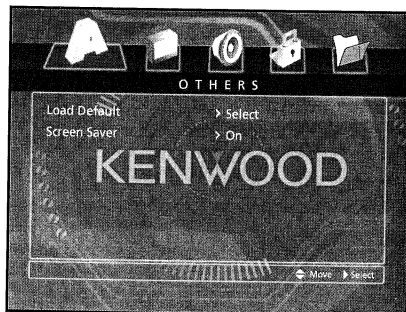

1. Use to achieve the desired settings for **Load Default & Screen Saver**.

- **Load Default** : Loading the factory default for re-setting system.
- **Screen Saver** : Selecting Enable/Disable of Screen saver. If it is on, Screen saver activates when the system is inactive for 5 minutes

2. Select values with the left/right arrow buttons after highlighting the menu to change.

DVD movie setup

When the SETUP(OSD) button on the remote controller is pressed, the DVD movie setup OSD will display DVD movie setup as follows. The DVD movie setup menu is available only if Disc is loaded in the unit.



Title

Shows current Title & total number of titles in the disc.



Chapter

Shows current Chapter.



Time

Shows Play Time.



Audio

Selects Audio Channel Format.
(Speaker Channel)



Subtitle

Selects Subtitle Language.




Angle

Selects Camera Shooting Angle

Press the up▲/ down▼ arrow buttons on the remote controller to move the highlight cursor up / down in the menu list, and press the left ◀ or right ▶ arrow buttons to change the value / level.


Music mode

When a user inserts Music Disc, the screen will show the belows.

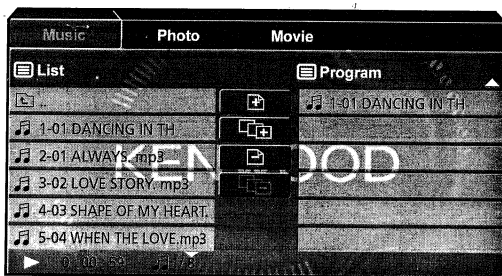

ADD One

 Add a selected song on the List, and move to the Program.



ADD All

Add all songs on the List, and move to the Program.



DELETE One

Delete a song from the Program.



DELETE All

Delete all songs from the Program.

Press the up ▲ / down ▼ arrow buttons on the remote controller, and moves the highlight cursor up▲ / down ▼ on the List or the Program, and select the desired song or menu, and press the ENT button for adding or deleting songs.

If a user wants to select an other song or a folder during MP3 is on playing, press the STOP button on the remote controller or the unit and select a song or a folder.

※ Special Tip

In the Mode of Music or Photo, press the DM button to shift the Modes between Music, Photo & Movie Mode if it is a multi-media disc.

Music mode

Playability of MP3 & JPG

The below table shows the playability of the unit for MP3 & JPG format.


Category	Item	MP3	JPG
Playable Format	ISO9660 Level 1	○	○
	ISO9660 Level 2	○	○
	Romeo(Expansion Format)	○	○
	Joliet(Expansion Format)	○	○
	Packet Write	×	×
	Multi Session	○	○
Displayable Max. Number of letters	Full file name (inclusive '.' & expansion name) Ex.) beauty.jpg (10 letters)	15	15
Displayable Letters	One-byte Character of English & Figures	○	○
	Double-byte Character of English	×	×
	Others	×	×
Playable Sample Frequency(kHz)	8	○	/
	11.025	○	
	12	○	
	16	○	
	22.05	○	
	24	○	
	32	○	
	44.1	○	
	48	○	
	Bit Rate(kbps)	Lowest	
Highest		320	
VBR		○	
ID3 Tag	Ver 1.0	×	
	Ver 1.1	×	
	Ver 2	×	

※ Remarks

○: Playable, ×: Non-playable

Photo mode


When a user inserts Photo Disc, the screen will show the belows.
 In this mode, a user can enjoy photo previews as well as slide show.

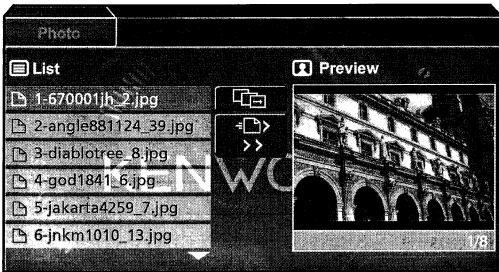

<Photo mode main>



 
<Photo mode slideshow>




Start Slideshow

 Press Slideshow button to change the screen to be entire view, and it starts the slideshow.



Change the speed of Slideshow <Fastest>

 Press the speed button for changing the speed of Slideshow. >>> is the fastest mode in speed.



Manual change of the Slideshow <No Auto-sliding>

It is a non-auto-sliding mode.

※ Available Photo Format : JPG

Press the up ▲ /down ▼ arrow buttons on the remote controller or the unit, and move the highlight cursor up ▲ /down ▼ in the List or Menu, and see the desired photo by the preview screen or slideshow the selected photo on the full screen.

During the full screen mode if a user wants to escape, press the STOP button on the remote controller or the unit.

※ Special Tip

A user can rotate the photo on the full screen mode by pressing the below buttons.

- On the remote controller

VOL ▲ : ↻ 90°

VOL ▼ : ↻ 90°

- On the unit

▶▶ : ↻ 90°

◀◀ : ↻ 90°

※ Special Tip

The number of photo or music format files detectable in a CD disc is limited.

When you write a CD with JPG, MP3 or MPG files which are representative photo, music & Video formats, you are sure to remind the following principles.

No. 1 The detectable number of the files in a CD disc is max. 199 ea respectively in format.

No. 2 The detectable number of folder in a CD disc is max. 199 ea.

No. 3 The detectable depth level of folder in a CD disc is max. 14 ea.

For example,


- if there are 250 ea of MP3 in a CD disc, the unit detects only 199 ea out of 250 ea.

- if there are 250 ea of MP3 and 250 ea of JPG in a CD disc, the unit detects only 199 ea of MP3 and 199 ea of JPG.

- if there are 250 ea of folder and 150 ea of MP3 are in the 240th folder, the folder would not be detected at all according to the above principle No.2.

- if there are 100 ea of folder and 100 ea of MPG are in the 20th depth folder, the MPG would not be detected at all according to the above principle No. 3.


< Table : Detectable number of folders & files in a CD disc >

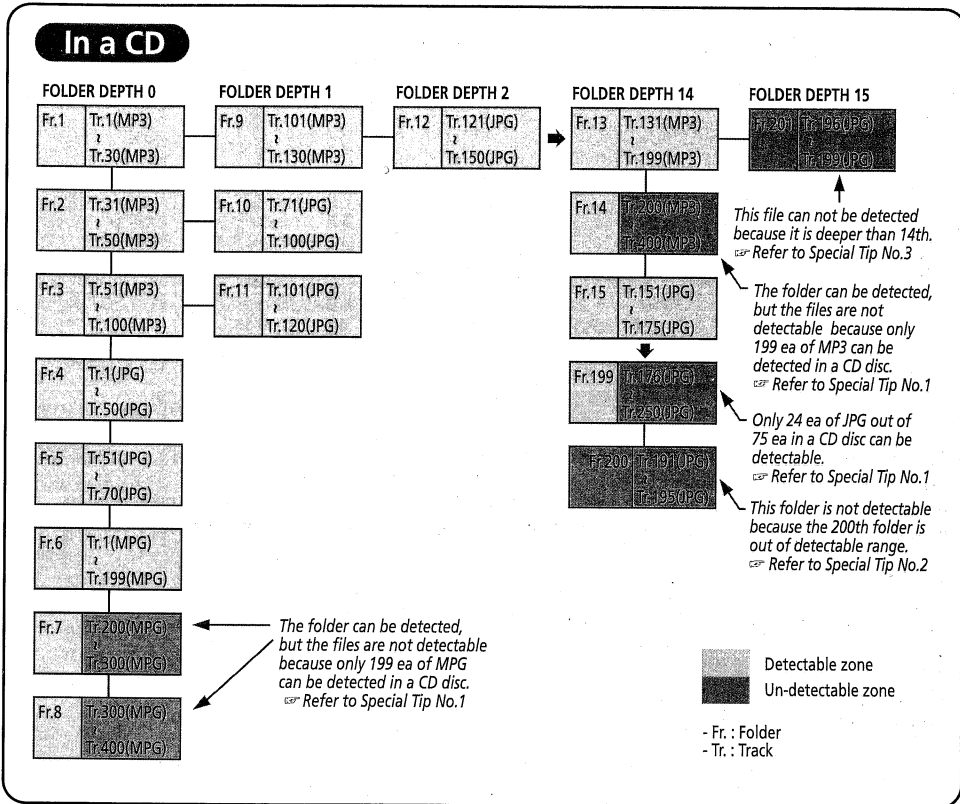


Connecting external devices

You can connect several external devices, as shown in the diagram below.

1. Connect all devices correctly like shown on the below diagram, and be sure to shut off all power prior to connection.

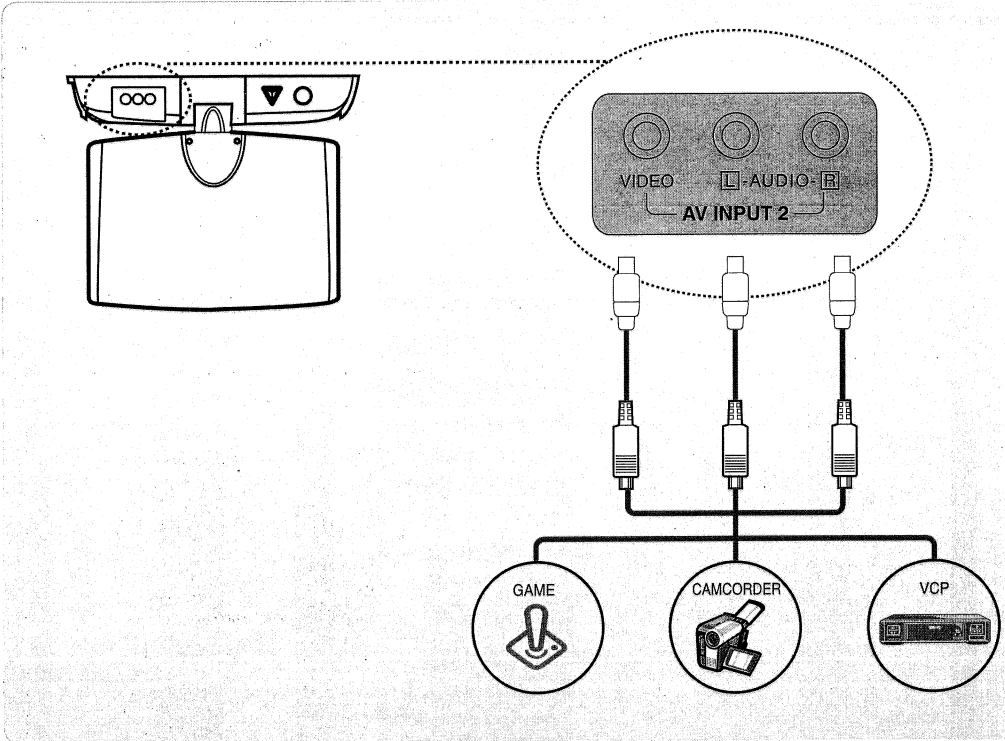

 
2. Turn on the power of the unit and other devices
3. Press the **SRC**(Source) button on the remote controller or on the unit to select a desired auxiliary mode(AV1, AV2) or DVD mode. To change the source, press the **SRC**(Source) button repeatedly.




4. Play an external device.

Installation (Professional installation recommended)


1. Unpack and check the contents.

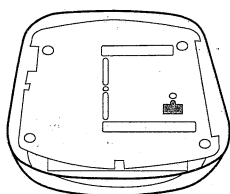

Unit

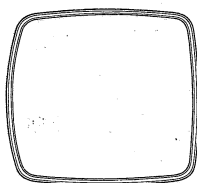

Trim Ring

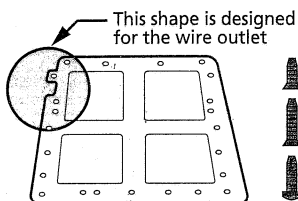

Bracket



X4 : Bracket Screw (Short)




X4 : Bracket Screw (Long)



X4 : Unit Screw

Installation Screw

2. Remove the protection screw before you install the unit.

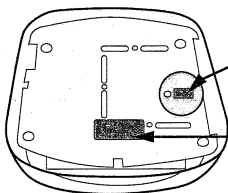


Protection screw for Pickup.
You must remove it
before you install.

Protection sheet for Digital Output.
Please remove it when you install.


3. Attach the metal support bracket to the ceiling support beam(s) of your vehicle by using the supplied screws. There are long and short screws for the bracket. A user can use either of them dependant upon the situation. Take extra care not to penetrate the roof of your vehicle.

4. Connect the wiring harness (according to the diagram under "Connection diagram" on page 28) to the wires located in the dome light of your vehicle.

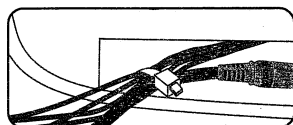


※ **Special Tip**

Use the provided cable tie to fasten the Cables from the unit.

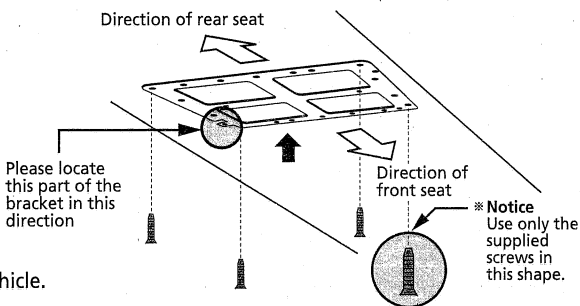

5. Open the left/right dome Lamp covers carefully and flip the monitor screen down, and you can find the screw holes inside dome Lamp covers and on the main body of unit. Screw the main unit to the support bracket by using the supplied screws. After installation, Please make sure to place the lamp covers back to the unit.

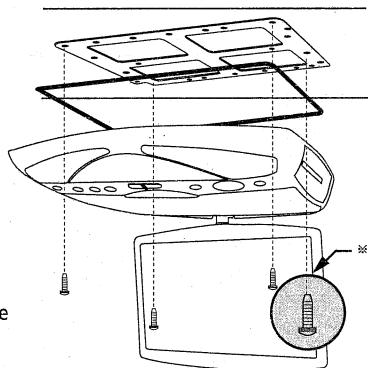

※ Notice
Use only the
supplied
screws in
this shape.



※ **Special Tip**

Regarding to Trim Ring, a user can choose either of the below installation methods.




Case A. Installation with Bracket only

Case B. Installation with Bracket and Trim Ring. (Using Trim Ring recommended)

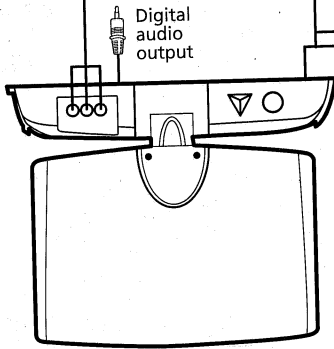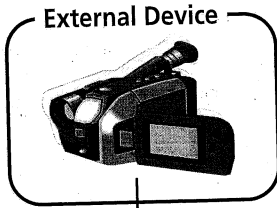


Connection diagram

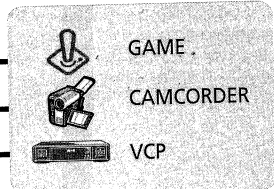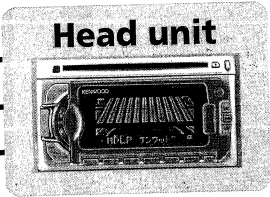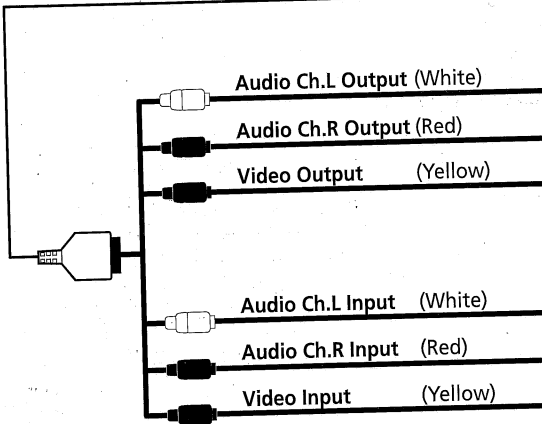

 - (YELLOW) • Battery (DC +14.4 V)
- Fuse Holder (5A)
- (BLACK) • GND
- Filter Box
- (YELLOWGREEN) • Door Switch
- (RED) • ACC
- Fuse Holder (1A)
- (ORANGE) • Lamp+ (iLL +)
- (BLUE) • Lamp- (iLL -)



Troubleshooting

TROUBLE		CORRECTIVE ACTION
No Power	➔	Check that DC power cable is connected properly
No Picture	➔	<ol style="list-style-type: none">1. Make sure that the equipment is connected properly.2. Check that the connected monitor is turned on.
Stopped picture	➔	<ol style="list-style-type: none">1. Check that the video cable is connected.2. Check that the monitor is turned on.
The playback picture is poor.	➔	Clean the disc.
No color	➔	Adjust the video system by changing TV output mode (AUTO, PAL, NTSC)  Refer to Page 19(Display Setting)
The remote control doesn't work properly.	➔	Remove any obstacles between the remote controller and remote control sensor of the unit. Operate the remote control at a closer distance to the unit.
'ERROR-DISC' is displayed on the screen.	➔	<ol style="list-style-type: none">1. Turn the power off, then turn it on.2. Turn the power off, disconnect the power plug, then reconnect it.
'ERROR-DISC Check Regional Code' is displayed on the screen.	➔	Check in which region the DVD Disc can be played. The DVD Disc is not available if the region code of the DVD Disc is not in conformity to the one of the unit.  Refer to Page 5 (Region codes in the world)
No function with the remote control	➔	Check the batteries and make sure that the batteries are fresh & new, or have enough battery life.
Unable to insert Disc	➔	<ol style="list-style-type: none">1. Check if the protection screw was removed before installation of the unit. (Only at the first insertion after installation.)2. Pull out Disc and wait for 3 seconds, and insert Disc again.
No function with all buttons on the unit & remote control	➔	Press the Hard Reset Key,  Refer to Page 9 (Name & function of each Part)

Check Point

When a disc is brought from a cold environment to a hot one, there may be steam on the face of the disc, or water will appear on the pickup lens. It will affect the play.

1. Remove the disc from the DVD player.
2. Turn on the power and leave it on for an hour to vaporise the condensation.

Changing the Dome Lamp Bulbs

1. Use a screwdriver to pry the dome lamp cover off.
2. Remove the burned-out bulb.
3. Replace the bulb with a 3-Watt(12V) Type T-8 Wedge bulb.(ϕ 8.5X29mm(Length))
4. Snap the dome lamp cover back on.

Specifications

Operating Voltage	DC 12V
Power Consumption	23 W
Screen Format	16:9 Wide, 4:3 adjustable with OSD menu
Resolution	2400 (W) X 480 (H) 1,152,000 pixels (RGB)
Brightness	400 cd / m ²
Video System	NTSC / PAL
A/V Input	Audio : 2.0 Vrms (10K Ω), Video : 1.0 Vp-p (75 Ω)
A/V Output	Audio : 1.2 Vrms (10K Ω), Video : 1.0 Vp-p (75 Ω)
Screen size	10.2 Inch (Diagonal)
IR Transmitter	Lch : 2.3 MHz Rch : 2.8MHz
FM Transmitter	88.0 MHz ~ 89.5 MHz (100KHz STEP)
Dimensions	285mm(W) X 310mm(D) X 54mm(H) 11.2"(W) X 12.2"(D) X 9.1"(H)

※ The effective pixels for the liquid crystal panel is given as 99.99% or more.
0.01% of pixels may not light or may light incorrectly.

NOTE

FCC Rule

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These Limits are designed to provide reasonable protection against harmful interference when the equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Macrovision

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Dolby

Manufactured under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

DVD

DVD is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

LZH-100W

Instruction Manual
Kenwood Corporation