

## Simplified Remote Control Operation Guide



1. Confirm the brand of Product that you are trying to control and write down the 3 digit code
2. Press and hold the SOURCE POWER Key
3. While holding the SOURCE POWER Key enter the 3 digit Code for the device
4. The Remote control will respond with the word O.K (RC-R0816 Only) or ERROR. (Please Begin from Step 1 if ERROR Shows)
5. Release the SOURCE POWER key
6. Select and press the button of the type of Device that you have just input the code for in the REMOTE MODE AREA...There are 6 Choices
7. Press and Hold the SOURCE POWER Key and point the remote control at the device you are programming
8. If the Unit turns OFF or ON, the code the you have input is correct
9. If the Unit does not respond, please try another code or use the remote controls Learning Functions (RC-R0816 Only)

## Simplified Remote Control Learning

Functions of your devices can be learned onto your Kenwood remote control and is handy in the following situations:

- a. The remote control does not contain a code or appropriate code to control your device
- b. The Code that has been inputted has limited functionality and you need to add functions to the Kenwood remote control.

In either of these situations, please follow these steps

1. Place the 2 remote controls on a table with the Infra Red Transmitters pointed at each other
2. Press the LEARN Key
3. Select the input corresponding to the device that you are programming ie. DVD
4. Select the key on the Kenwood Remote control that you want to learn...IE. Play function of your DVD Player
5. The Remote will say WAIT
6. Press the corresponding key of the devices remote (Make sure that it is transmitting into the front of the Kenwood Remote Control)
7. The Remote will say OK if the function is learned. If the remote control says AGAIN, please repeat STEP 6.
8. Continue to program other functions from your devices remote onto the Kenwood remote using Steps 1 Thru 8

