

---

# Kodak EasyShare LS755 zoom digital camera



## User's Guide

[www.kodak.com](http://www.kodak.com)

For interactive tutorials, [www.kodak.com/go/howto](http://www.kodak.com/go/howto)

For help with your camera, [www.kodak.com/go/ls755support](http://www.kodak.com/go/ls755support)




Eastman Kodak Company  
Rochester, New York 14650  
© Eastman Kodak Company, 2004

All screen images are simulated.

Kodak and EasyShare are trademarks of Eastman Kodak Company.



P/N 4J1473

## Front View

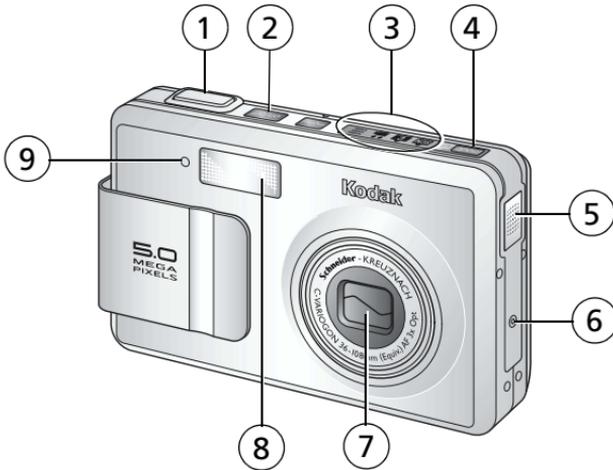


- |   |                        |   |                  |
|---|------------------------|---|------------------|
| 1 | Shutter button         | 6 | Microphone       |
| 2 | On/Off button          | 7 | Lens/Lens cover  |
| 3 | Camera modes indicator | 8 | Flash unit       |
| 4 | Mode button            | 9 | Self timer light |
| 5 | Speaker                |   |                  |

## Bottom view (with the slot cover open)

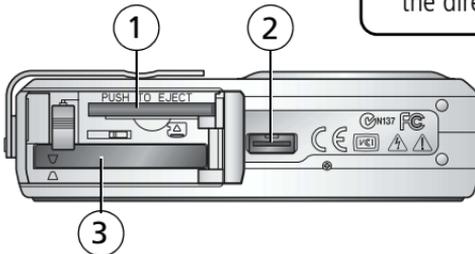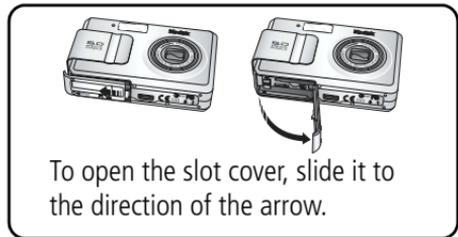


- |   |                |
|---|----------------|
| 1 | Card slot      |
| 2 | Dock connector |
| 3 | Battery slot   |

## Back view

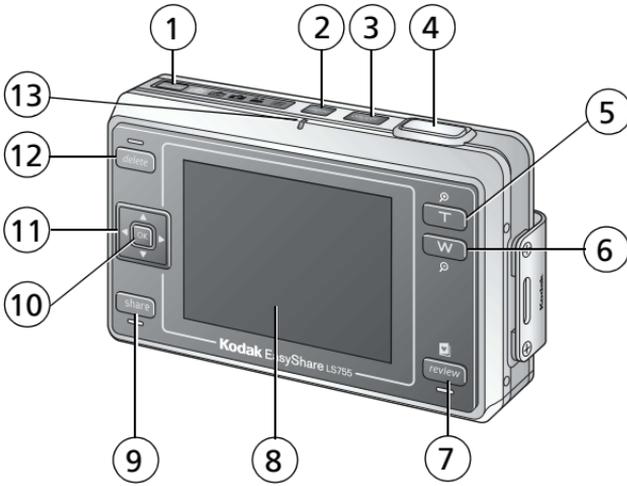

- |                               |   |
|-------------------------------|---|
| 1 Mode button                 | 8 Camera screen (LCD)   |
| 2 Menu button                 | 9 Share button  |
| 3 On/Off button / Power light | 10 OK button  |
| 4 Shutter button              | 11 5-way controller  |
| 5 Zoom button T (Telephoto)   | 12 Delete button  |
| 6 Zoom button W (Wide Angle)  | 13 Ready light  |
| 7 Review button               |   |

## Using the 5-way controller

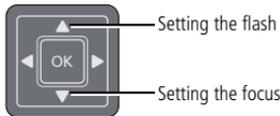

-  View previous./next picture or video
-  Make menu selections

---

# Table of contents

<b>1 Getting started</b> .....	<b>1</b>
Package contents .....	1
Installing the software first .....	1
Loading the battery .....	2
Important battery information .....	2
Charging the battery .....	3
Turning the camera on and off .....	4
Setting the date and time .....	4
Icons that appear on the camera screen.....	5
Storing pictures and videos on an xD-Picture Card™ .....	8
<b>2 Taking pictures and videos</b> .....	<b>9</b>
Taking a picture .....	9
Taking a video .....	9
Camera modes.....	10
Focus setting.....	12
Using the AF frame .....	13
Reviewing pictures and videos just taken (Quickview) .....	14
Using optical zoom .....	15
Using digital zoom .....	15
Using the flash.....	16
Manually setting the white balance .....	18
Changing picture-taking settings .....	19
Customizing your camera .....	26
Putting yourself in the picture.....	29
Putting yourself in the video .....	29
Recording in Time Lapse Capture Mode.....	30
Pre-tagging for album names .....	31
<b>3 Reviewing pictures and videos</b> .....	<b>32</b>
Review mode and Favorites mode .....	32
Viewing single pictures and videos .....	32
Viewing multiple pictures and videos .....	33
Playing a video.....	33
Editing videos .....	34
Deleting pictures and videos.....	34
Magnifying pictures.....	35
Changing review settings .....	35
Protecting pictures and videos from deletion.....	36


Running a slide show .....	36
Copying pictures and videos .....	38
Resizing Pictures .....	39
Viewing picture and video information.....	40
<b>4 Using the Kodak Photo Frame Dock .....</b>	<b>41</b>
Photo Frame display settings .....	41
<b>5 Installing the software .....</b>	<b>43</b>
Minimum system requirements .....	43
Install the software .....	44
<b>6 Sharing pictures and videos .....</b>	<b>45</b>
Tagging pictures for printing.....	46
Printing tagged pictures .....	46
Tagging pictures and videos for emailing .....	46
Tagging pictures as favorites .....	47
Optional settings.....	48
Removing all favorites from your camera .....	49
Printing and emailing favorites .....	49
Picture and video album settings .....	49
<b>7 Transferring and printing pictures .....</b>	<b>51</b>
Transferring pictures and videos with the USB cable.....	51
Printing pictures from your computer .....	51
Ordering prints online .....	53
Printing from an optional xD-Picture Card™.....	53
Printing without a computer .....	53
Dock compatibility.....	54
<b>8 Troubleshooting .....</b>	<b>55</b>
Camera problems.....	55
Computer/connectivity problems.....	56
Picture quality problems .....	57
Camera ready light status.....	58
Camera power light status .....	59
Still having problems? .....	59
<b>9 Getting help .....</b>	<b>60</b>
Helpful links.....	60
Telephone customer support .....	61

---

<b>10 Appendix</b> .....	<b>62</b>
Camera specifications .....	62
Tips, safety, maintenance .....	65
Maximum number of pictures .....	65
Power-saving features .....	66
Upgrading your software and firmware .....	66
Regulatory compliance .....	67

# 1 Getting started

## Package contents

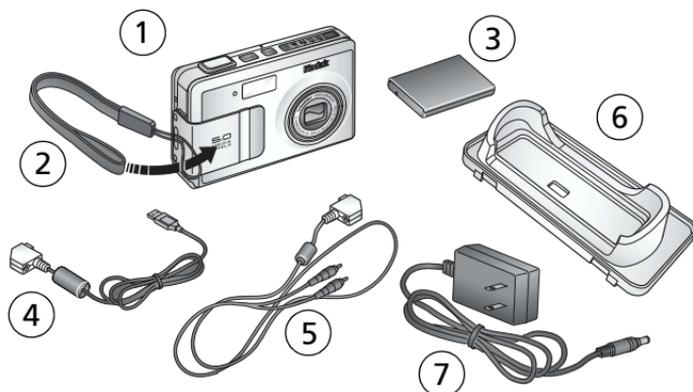

- |                                    |                      |
|------------------------------------|----------------------|
| 1 Camera                           | 5 Audio/Video cable  |
| 2 Wrist strap                      | 6 Custom dock insert |
| 3 Lithium-ion rechargeable battery | 7 AC adapter         |
| 4 USB cable                        |                      |

Not shown: User's guide, Start Here! guide, Welcome kit, Kodak EasyShare software CD.

Contents may change without notice.

## Installing the software first

Install the software from the Kodak EasyShare software CD before connecting the camera (or optional printer dock or Photo Frame Dock) to the computer. Otherwise, the software may load incorrectly. See [page 43](#) or the Start Here! guide.

## Loading the battery



### CAUTION:

**Use only a Kodak EasyShare Li-Ion rechargeable battery (KLIC-7000) and orient it as shown. Using other batteries may damage the camera.**

Always turn the camera off when inserting and removing the battery.



- 1 Open the slot cover.
- 2 Insert the battery as illustrated.
- 3 Close the slot cover.

*To remove the battery, slide the release tab and pull the battery out.*

## Important battery information


### Battery safety and handling

- Do not allow batteries to touch metal objects, including coins. Make sure that the battery contacts do not touch metal clips or keys during transportation or storage. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- For battery disposal information, check with your local authorities.

### Battery life

Your box contains a Kodak EasyShare Li-Ion rechargeable battery. Actual battery life may vary based on usage.

Li-Ion rechargeable battery  
(KLIC-7000)

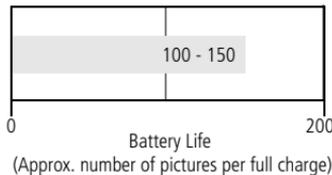


## Extending battery life

Use only a Kodak EasyShare Li-Ion rechargeable battery (KLIC-7000). Damage caused by accessories not manufactured by Kodak is not covered under warranty.

- Limit the following activities that quickly deplete battery power:
  - Repeatedly using the zoom and holding the Shutter button halfway down
  - Extensive use of the flash
- Dirt on the battery contacts can affect battery life.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

## Charging the battery

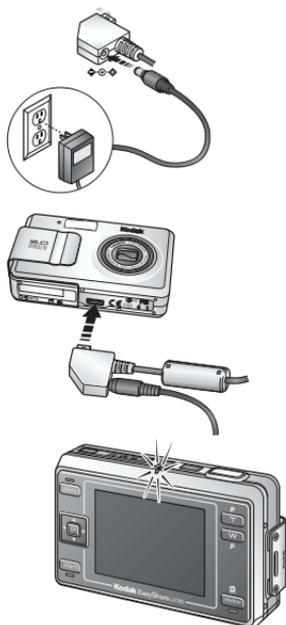

- 1 Plug the small end of the AC adapter into the DC-IN jack on the camera end of the USB cable.
- 2 Plug the camera end of the USB cable into the dock connector on the camera.
- 3 Plug the other end of the AC adapter into the outlet.  
*The Ready light flashes orange during charge.*
- 4 Unplug the USB cable and the power cord when the ready light comes on.  
*Charging takes approximately 4 hours.*  
For expected battery life, see [page 2](#).

NOTE: You can also charge the battery using an optional printer dock or Photo Frame Dock. Purchase these and other accessories at a dealer of Kodak products or visit [www.kodak.com/go/l5755accessories](http://www.kodak.com/go/l5755accessories).

## Turning the camera on and off



- To turn the camera on:  
Press the On/Off button.

*The "Date and time have been reset" message appears the first time you turn on the camera.*

- To turn the camera off:  
Press the On/Off button.

*The camera completes the operations that are in process and turns off.*

NOTE: The lens retracts if it encounters an obstruction when you turn on the camera. Make sure the lens is unobstructed and press the On/Off button again.

## Setting the date and time

### Setting the date & time, first time

The "Date and time have been reset" message appears the first time you turn on the camera or if the battery is removed for an extended period of time.

- 1 SET DATE & TIME is highlighted. Press the OK button. (Select Cancel to set the date and time at a later time.)
- 2 Go to step 4 below, [Setting the date & time, anytime](#).

### Setting the date & time, anytime

- 1 Turn on the camera.
- 2 Press the Menu button to highlight Camera setup .
- 3 Press  to highlight SET DATE & TIME, then press the OK button.
- 4 Press  to adjust the date and time. Press  to advance to the next setting.
- 5 When finished, press the OK button.

NOTE: Depending on your computer operating system, Kodak EasyShare software may let your computer update the camera clock when you connect the camera. See the EasyShare software Help for details.

## Icons that appear on the camera screen

Icons appear on the camera screen when the camera is turned on. These icons indicate active camera and picture settings, and information about image storage.

Different information is displayed in capture and in review mode.

### Picture taking screen

Pressing the OK button switches on and off the Icon Display mode.




In custom mode, press the OK button to cycle through the Icon Display ON mode, the Histogram Display mode, and the Icon Display OFF mode.



## Icon display

The active camera settings are displayed.

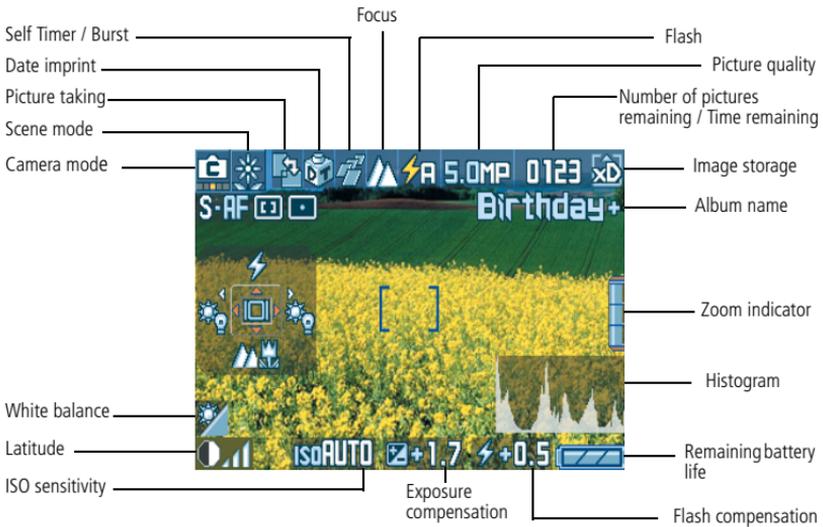


NOTE: A histogram is a graph that shows the distribution of the subject's brightness. Optimal exposure is achieved when the peak is in the middle area of the graph. If the peak is to the right, the subject is too bright. If it is to the left, it is too dark.

## Review screen

Pressing the OK button cycles through the Icon Display ON mode, the Picture Information mode, and the Icon Display OFF mode.




## Icon display

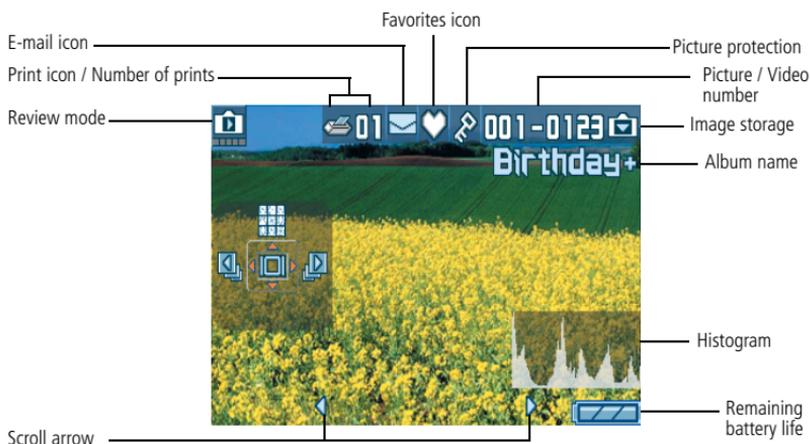

## Remaining battery life

	Remaining battery life is sufficient.
	Battery life is getting low.
	Battery life is low. Charge or replace the battery.
	The battery is completely exhausted. Charge or replace the battery.

## Picture information screen

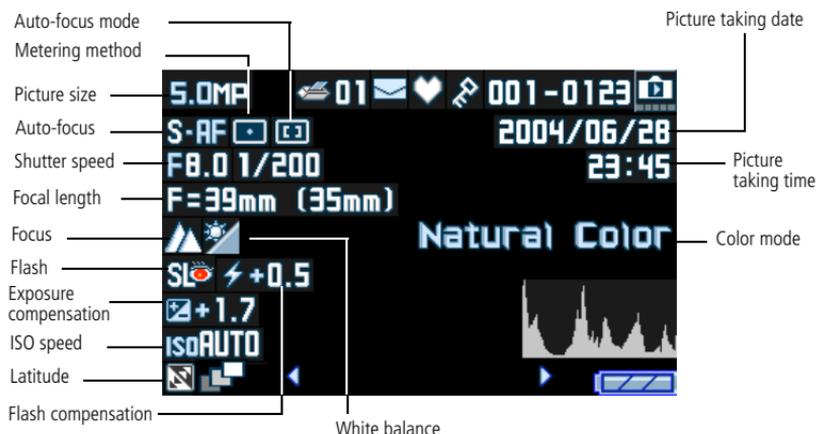

## Storing pictures and videos on an xD-Picture Card™

You can purchase optional xD-Picture Card™ for removable, reusable storage for your pictures and videos.

The camera has 16 MB of internal memory. Pictures and videos can be saved on the internal memory without xD-Picture Card™, but for more storage, use xD-Picture Card™.



### CAUTION:

**Do not force the card in. Forcing it may damage the camera or card.**

**Do not insert or remove a card when the ready light is blinking. Doing so may damage your card, camera, or pictures.**

### Using the xD-Picture Card™



- 1 Turn off the camera and open the slot cover.
- 2 Orient the card as shown on the camera body.
- 3 Push the card into the slot and close the slot cover.


*To remove the card, turn off the camera. Push the card in, then release it. When the card is partially ejected, pull it out.*

NOTE: When using a card for the first time, we suggest you format it before you take pictures (see [page 28](#)).

See [page 65](#) for storage capacities. To see which xD-Picture Card™ may be used, check at a dealer of Kodak products or at [www.kodak.com/go/ls755accessories](http://www.kodak.com/go/ls755accessories).

## 2 Taking pictures and videos


### Taking a picture

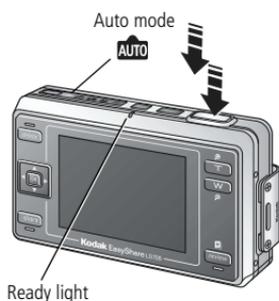

- 1 Use the camera screen to frame your subject.
- 2 Hold the Shutter button halfway down to set the exposure and focus.
- 3 If the AF frame is red, the exposure and focus are not set correctly. Repeat Step 2.
- 4 When the AF frame (see [page 13](#)) turns green, continue pressing the Shutter button completely down to take the picture.
- 5 When the ready light blinks green, the picture is being saved; you can still take pictures. When the ready light is red, wait until it blinks green.


NOTE: The default picture taking mode is Auto . See [page 10](#) for other picture and video modes.

### Taking a video

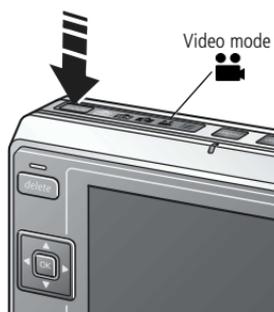

- 1 Press the Mode button repeatedly to highlight Video mode .
- 2 Use the camera screen to frame your subject.
- 3 Press the Shutter button completely down and release. To stop recording, press and release the Shutter button again.
- 4 If you hold the Shutter button down for more than two seconds, the camera will record until you release the Shutter button.
- 5 You can set the camera to automatically stop recording after a specified period of time (see [page 25](#)).


## Camera modes

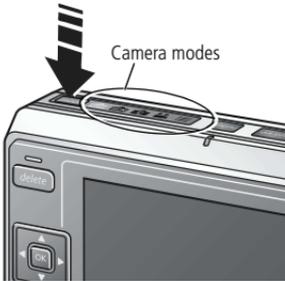

Use the Mode button to highlight the mode mark that suits your shooting conditions.

Use this mode	For
 Auto	General picture-taking. Automatically sets exposure, focus, and flash.
 Scene	Point-and-shoot simplicity for taking pictures under various conditions (see <a href="#">page 11</a> ).
 Custom	Use when fine-tuning the picture-taking settings according to the subject or shooting conditions (see <a href="#">page 19</a> ).
 Video	Record video with sound. See <a href="#">page 9</a> .
 Setup	Customize your camera. See <a href="#">page 26</a> .

## Scene modes

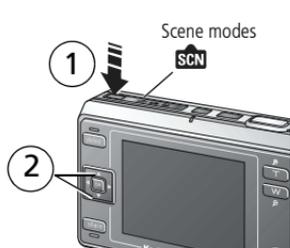

- 1 Press the Mode button to highlight Scene mode **SCN**.
- 2 Press  $\blacktriangle/\blacktriangledown$   $\blacktriangleleft/\blacktriangleright$  to select an appropriate Scene mode.

Use this mode	For
 Portrait	Close up shots of people (within 9 ft. 10 in. (3 m)). The flash is fired to brighten and beautifully show faces, and the pictures come out with a soft finish.
 Sport	Taking pictures of people playing sports or other high-speed activities. The fast shutter speed captures one frame of a moving subject.
 Landscape	Taking pictures of landscapes. Take sharp pictures of mountains or buildings that spread out into the distance.
 Night Portrait	Including people in pictures of night landscapes. While focusing on the person(s), a slow shutter speed is used to beautifully depict the night background. Place the camera on a flat and steady surface to avoid hand movements.
 Night Landscape	Taking pictures of night landscapes. Clearly depicts scenes of lit-up buildings, etc., by using a slow shutter speed. Place the camera on a flat and steady surface to avoid hand movements.
 Snow	For taking pictures of snow scenes or subjects with snow in the background. Properly takes pictures of snow scenes and adjusts for the bright environment.
 Beach	For taking pictures of beach scenes or subjects with beaches in the background. Properly takes pictures of beach scenes and adjusts for the bright environment.
 Text	Pictures of text in printed materials.
 Flower	For taking close up pictures of subjects such as flowers. Reproduces colors of flowers vividly.

Use this mode	For
 Museum	For taking pictures in museums and other places where flash photography and sounds are prohibited. The sounds and flash are disabled.
 Nagashidori (Panning Shot)	Shooting while following a fast-moving subject, such as a car. Using a slow shutter speed, the background of the picture appears to be moving while the subject stays in one place.
 TV Screen	Taking pictures of TV screens. Slow shutter speed prevents horizontal lines from appearing in the taken picture. Place the camera on a flat and steady surface to avoid hand movements.
 Candle Light	Subjects illuminated by candlelight. Retains the feel of candlelight colors in the pictures.
 Sunset	Subjects at dusk. Vividly reproduces the sunset.
 Auction	Pictures of merchandise. Vividly and precisely accentuates merchandise. Pictures taken are VGA size.

## Focus setting



You can choose a focus setting to a desired distance. Use for taking close-ups or shooting a background without focusing on a close object.

Pressing the ▼ button when shooting toggles between Auto, Macro, Super Macro, Partial AF, and Inf.


Focus setting	Details
Auto	Normal auto-focus
 Macro	The focus can be adjusted for subjects as close as 6 in. (15 cm) from the lens in Wide Angle; and 20 in. (50 cm) from the lens in Telephoto.
 Super macro	The focus can be adjusted for subjects as close as 2 in. (5 cm) to the camera. The lens is automatically set to Wide Angle and the zoom function is disabled.

Focus setting	Details
 Partial AF	For focusing on subjects between 20 in. (50 cm) and 9 ft. 10 in. (3 m) away. This is automatically selected in Portrait mode. This cannot be selected in other scene modes, Auto mode, or Video mode.
 Inf	Focus is set to infinity; close objects will be out of focus.

## Using the AF frame

The AF frame appears on the camera screen indicating the area of focus.

NOTE: This procedure does not apply to videos.

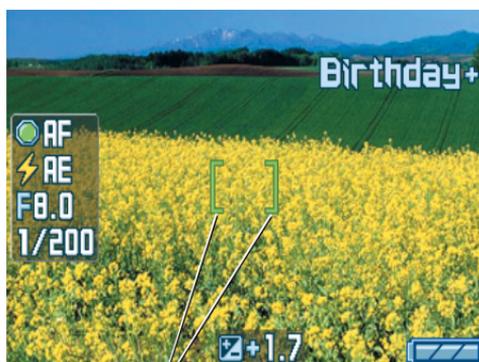

AF frame

- 1 Press the Shutter button halfway down and hold.

*The AF frame turns from red to green when the subject is in focus.*

NOTE: If the camera is not focusing on the desired subject, the AF frame turns red. Recompose the scene and repeat the previous Step.

- 2 Press the Shutter button completely down to take the picture.

NOTE: The AF frame does not appear when Focus is set to Inf.

## Reviewing pictures and videos just taken (Quickview)

After you take a picture or video, the camera screen displays the picture or the first frame of the video for approximately 5 seconds. If you take no action, the video/picture is saved. While the picture is displayed, you can:



- Play (video): Press  $\blacktriangledown$  to highlight Video mode, then press the OK button to play the video. Press the Zoom button to adjust the sound volume.
- Share: Press the Share button to tag a picture/video for e-mail or as a favorite, or to tag a picture for printing (see [page 46](#)).
- Delete: Press the Delete button while the picture/video and  are displayed.

**NOTE:** Only the final picture of a burst series is displayed during Quickview. If you press the Delete button, all pictures in the burst series are deleted. To delete selectively, do so in Review mode (see [page 34](#)).


## Using optical zoom

Use optical zoom to enlarge your subject by up to 3X. You can change the optical zoom during video recording.



- 1 Use the camera screen to frame your subject.
- 2 Press the Zoom button T (Telephoto) to zoom in. Press W (Wide Angle) to zoom out.
- 3 The zoom indicator appears on the camera screen. Press the Zoom button T to move the indicator upward, and the Zoom button W to move it downward.
- 4 Take a picture or video.

Zoom indicator

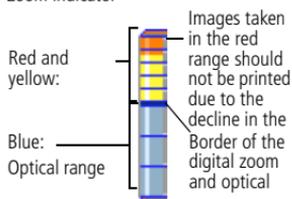

## Using digital zoom

Use digital zoom in any still mode to get additional magnification beyond optical zoom. Combined zoom settings are from 3X to 15X.

- 1 Press the Zoom button T (Telephoto) to the optical zoom limit.
- 2 Release the button, then press it again.

*The camera screen displays the zoomed image and the zoom indicator.*

**IMPORTANT:** You may notice decreased print image quality when using digital zoom. The blue slider on the zoom indicator pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6 in. (10 x 15 cm) print.

- 3 Take a picture normally.

NOTE: You cannot use digital zoom during video recording.


## Using the flash

Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows.

	Flash range
<b>Wide Angle</b>	1.5 - 7.2 ft (0.5 - 2.2 m)
<b>Telephoto</b>	1.5 - 4.3 ft (0.5 - 1.3 m)

## Turning the flash on

Press the  button to change the Flash mode. The active flash icon is displayed in the camera screen status area.

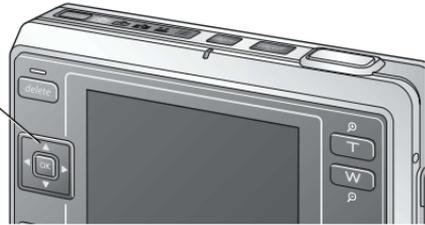

Flash Mode	Flash Fires
 Auto	When the lighting conditions require it (in a dark environment or the subject is "backlit", for example).
 Off	Never. Use to deactivate the flash even in a dark environment. Hold the camera steady.
 Red-eye	Once so the subject's eyes become accustomed to the flash, then fires again when the picture is taken.
 Fill	Every time you take a picture, regardless of the lighting conditions. Use to soften the shadow on a face, for example.
 Slow Sync Red-eye	Activates red-eye mode at slow shutter speed. Taking pictures of people with night backgrounds. Hold the camera steady.

## Flash setting for each mode

Capture mode		Default setting	Available settings
	Auto	Auto*	Auto, Off, Fill, Auto red-eye reduction
 <b>Scene Modes</b>			
	Portrait	Fill	Auto, Off, Auto red-eye reduction
	Sport	Off	Fill
	Landscape	Off	
	Night Portrait	Slow Sync Red-eye	
	Night Landscape	Off	Fill
	Snow	Auto	Auto, Off, Fill, Auto red-eye reduction
	Beach	Auto	
	Text	Off	Fill
	Flower	Off	
	Museum	Off	
	Nagashidori (Panning Shot)	Off	Fill
	TV Screen	Off	None

Capture mode		Default setting	Available settings
	<b>Candle Light</b>	Off	Auto red-eye reduction
	<b>Sunset</b>	Off	Fill
	<b>Auction</b>	Off	Auto, Fill, Off
	<b>Video</b>	Off	None
	<b>Burst</b>	Off	

\* When you change to Red-eye in this mode, it remains on until you change it. All other flash settings return to the default when you exit the mode or turn off the camera.

## Manually setting the white balance

You can manually set the white balance when shooting in custom mode.

- 1 In Custom mode, press the Menu button.
- 2 Press  to highlight White balance , then press the OK button.
- 3 Press  to highlight Manual, then press the OK button.  
*The white balance screen is displayed.*
- 4 Take a picture of a blank sheet of white paper in the entire camera screen.
- 5 Press the OK button.  
To retake the picture, select Retry, then press the OK button.  
*The white balance setting is recorded in the camera.*

## Changing picture-taking settings

You can change settings to get best results from your camera. (Some settings are unavailable in some modes.)

- 1 In any picture taking mode, press the Menu button.
- 2 Press ▲/▼ to highlight the setting you wish to change, then press the OK button.
- 3 Choose an option, then press the OK button.
  - Press ◀ or the Menu button to exit.
  - Press ◀, to return to the previous screen, and press the Menu button to exit.

Setting	Icon	Options
<p><b>Self Timer</b></p> <p>Create a 10-second delay before the picture or video is taken.</p>		<p><b>ON</b> or <b>OFF</b> (default)</p> <p>For details, see <a href="#">page 29</a>.</p> <p>Unavailable in Burst mode.</p>
<p><b>Digital Zoom</b></p> <p>Choose how digital zoom is employed.</p> <p>This setting remains until you change modes or turn off the camera.</p>		<p><b>CONTINUOUS</b>—no pause between optical and digital zoom.</p> <p><b>PAUSE (default)</b>—after reaching the limit of optical zoom, the zoom button must be released, then activated again to begin digital zoom.</p> <p><b>NONE</b>—digital zoom is disabled</p>

Setting	Icon	Options
<p><b>Burst</b></p> <p>Take up to 4 pictures in quick succession (approximately 3 fps).</p> <p>This setting remains until you change the mode.</p>		<p>ON or OFF (default)</p> <ol style="list-style-type: none"> <li>1 Press the Shutter button halfway and hold to set the exposure, focus, and white balance. <i>The exposure, focus and white balance set by pressing the button halfway are applied to all the pictures taken in succession.</i></li> <li>2 Press the Shutter button completely down to take the picture. <i>Stops taking pictures when the Shutter button is released, when 4 pictures are taken, or when storage space is full.</i></li> </ol> <p>Flash and Self-Timer are disabled in Burst.</p> <p>Unavailable in Night Landscape, Night Portrait, Candle Light, and Video mode.</p>
<p><b>Picture Size</b></p> <p>Choose number of pixels for recording.</p> <p>This setting remains until you change it.</p>		<p><b>5.0MP (default)</b>—2592 x 1944 pixels. Ideal for printing on A3 or smaller size sheet of paper.</p> <p>NOTE: When the orientation sensor converts a picture in 5.0MP, the dimensions are 1920 x 2550 pixels.</p> <p><b>4.5MP (3:2)</b>—2592 x 1728 pixels. Ideal for printing on A4 or smaller size sheet of paper.</p> <p><b>4.0MP</b>—2288 x 1712 pixels. Ideal for printing on A4 or smaller size sheet of paper.</p> <p><b>3.1MP</b>—2048 x 1536 pixels. Ideal for printing on A4 or smaller size sheet of paper.</p> <p><b>1.2MP</b>—1280 x 960 pixels. Ideal for printing on postcard or smaller size sheet of paper.</p> <p><b>VGA</b>—640 x 480 pixels. Ideal for e-mail attachments or pictures placed on web pages.</p> <p><b>QVGA 240 x 320</b>—240 x 320 pixels. Ideal for sending to cell phones.</p>
<p><b>Scene Customizing</b></p> <p>Choose a scene mode to be used in custom mode.</p>		<p>None (default), Portrait, Sport, Landscape, Night Portrait, Night Landscape, Snow, Beach, Text, Flower, Museum, Nagashidori (Panning Shot), TV Screen, Candle light, Sunset, Auction.</p>

Setting	Icon	Options
<p><b>White Balance</b> Choose your lighting condition. This setting remains until you change modes or turn off the camera.*</p>		<p><b>AUTO (default)</b>—automatically corrects white balance. Ideal for general picture-taking.</p> <p><b>WEAK AUTO</b>—without adjusting the white balance, retains the color makeup of the light source and creates pictures with atmosphere (available only in Custom mode).</p> <p><b>DAYLIGHT</b>—for taking pictures under bright sunlight.</p> <p><b>OPEN SHADE</b>—(available only in Custom mode) for taking pictures in shadows.</p> <p><b>FLUORESCENT</b>—prevents the picture from being greenish under fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.</p> <p><b>TUNGSTEN</b>— prevents the picture from being reddish under household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.</p> <p><b>MANUAL (M)</b>—set the white balance manually (available only in Custom mode).</p>


\* If Setting Memory (see [page 27](#)) is set to ON, these settings remain even if you turn off the camera.

Setting	Icon	Options
<p><b>Color Mode</b> Choose color tones. This setting remains until you change modes or turn off the camera.*</p>		<p><b>High Color</b>—for taking pictures with highly saturated, vivid colors.</p> <p><b>NATURAL COLOR (default)</b>—for normal color pictures.</p> <p><b>LOW COLOR</b>—for taking pictures with subdued colors.</p> <p><b>BLACK &amp; WHITE</b>—for black-and-white pictures.</p> <p><b>SEPIA</b>—for taking pictures in sepia.</p> <p>EasyShare software also lets you change a color picture to black-and-white or sepia using a computer.</p> <p>Unavailable in Video mode.</p>
<p><b>ISO Speed</b> Choose the ISO sensitivity. This setting remains until you change modes or turn off the camera.*</p>		<p><b>AUTO (default), ISO 64, ISO 100, ISO 200 (standard picture quality)</b></p> <p>Choose a high ISO setting for dark scenes, when you want to eliminate hand movement or take pictures without the flash.</p> <p>Raising the ISO level increases digital noise in the picture.</p> <p>Unavailable in Video, Auto, and Scene modes.</p>
<p><b>Sharpness</b> Adjust how much to define the outline of the subject in the picture. This setting remains until you change modes or turn off the camera.*</p>		<p><b>HIGH</b>—boldly defines the subject's outline. Use this to take sharp pictures.</p> <p><b>NORMAL (default)</b>—defines the subject with a standard level of outline definition.</p> <p><b>LOW</b>—tones down the outline definition of the subject. Use this to produce soft pictures of people, etc.</p> <p>Unavailable in Video, Auto, Scene modes.</p>

\* If Setting Memory (see [page 27](#)) is set to ON, these settings remain even if you turn off the camera.

Setting	Icon	Options
<p><b>Focus Zone</b></p> <p>Select the zone that the camera focuses on.</p> <p>This setting remains until you change modes or turn off the camera.*</p>		<p><b>MULTI-ZONE (default)</b>—from three zones, the camera selects the best one to focus on.</p> <p><b>CENTER-ZONE</b>—evaluates the small area centered in the camera screen.</p> <p>Unavailable in Video, Auto, and Scene modes.</p>
<p><b>Exposure Metering</b></p> <p>Select the method to evaluate lighting conditions in order to achieve the proper exposure.</p> <p>This setting remains until you change modes or turn off the camera.*</p>		<p><b>MULTI-PATTERN (default)</b>—evaluates the lighting conditions throughout the camera screen to set the optimum exposure.</p> <p><b>CENTER-WEIGHT</b>—evaluates the lighting evenly for the whole picture, with an emphasis placed on the center of the camera screen.</p> <p><b>CENTER-SPOT</b>— only evaluates the lighting conditions of the center section of the camera screen.</p> <p>Unavailable in Video, Auto, and Scene modes.</p>
<p><b>Latitude</b></p> <p>By adjusting the contrast, you can achieve more realistic pictures under certain lighting conditions.</p> <p>This setting remains until you change modes or turn off the camera.</p>		<p><b>Shadows</b>—use for scenery with heavy shadows. Improves the gradation of darkened areas, but may intensify highlights under some lighting conditions.</p> <p><b>Normal (default)</b>—ideal for standard lighting.</p> <p><b>Highlights</b>—use for scenery with bright highlights. Improves the gradation of highlighted areas, but may intensify shadows under some lighting conditions.</p> <p>Unavailable in Video, Auto, and Scene modes.</p>

\* If Setting Memory (see [page 27](#)) is set to ON, these settings remain even if you turn off the camera.

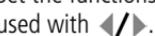Setting	Icon	Options
<p><b>Flash Strength Control</b> Select the brightness of the flash. This setting remains until you change modes or turn off the camera.*</p>		<p><b>-1.0, -0.7, -0.3, 0.0 (default), +0.3, +0.7, +1.0, Max Power</b> At Max Power, the flash is fired at full strength with no compensation for the pre-flash. Unavailable in Video, Auto, and Scene modes.</p>
<p><b>AF Control</b> Choose auto-focus method. This setting remains until you change modes or turn off the camera.</p>		<p><b>CONTINUOUS AF</b>—When picture taking is enabled, the focus is continuously adjusted. <b>SINGLE AF (default)</b>—Correct focus is obtained once when the Shutter button is pressed halfway down. Unavailable in Auto and Scene modes.</p>
<p><b>Exposure Compensation</b> Choose how much light enters the camera. This setting remains until you change modes or turn off the camera.*</p>		<p><b>For Custom mode</b>—0.0 (default), <math>\pm 0.3</math>, <math>\pm 0.7</math>, <math>\pm 1.0</math>, <math>\pm 1.3</math>, <math>\pm 1.7</math>, <math>\pm 2.0</math> <b>For Auto mode</b>—0.0, <math>\pm 1.0</math>, <math>\pm 2.0</math> When the majority of the subject is white, positive compensation prevents the white areas from turning out gray. When the majority of the subject is black, use negative compensation. In backlit situations when you are not using the flash, positive compensation prevents faces from coming out dark.</p>
<p><b>Set Left Right Button</b> Set the functions to be used with  This setting remains until you change modes or turn off the camera.*</p>		<p><b>Exposure Compensation (default), Flash Strength Control, WHITE BALANCE, ISO SPEED, LATITUDE</b> Only available in Custom mode.</p>

\* If Setting Memory (see [page 27](#)) is set to ON, these settings remain even if you turn off the camera.

Setting	Icon	Options
<p><b>Image Storage</b> Choose a storage location for pictures and videos. This setting remains until you change it.</p>		<p><b>AUTO... (default)</b>—the camera uses the card if one is in the camera. If not, the camera uses internal memory. <b>INTERNAL MEMORY...</b>—the camera always uses internal memory, even if a card is installed.</p>
<p><b>Set Album</b> Choose Album names.</p>		<p>Pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names. See <a href="#">page 49</a>.</p>
<p><b>Video Quality</b> Choose number of pixels for recording. This setting remains until you change it.</p>		<p><b>VGA (default)</b>—video is recorded in a 640 x 480 pixel window. <b>QVGA</b>—video is recorded in a 320 x 240 pixel window. Available only in Video mode.</p>
<p><b>Sound Recording</b> Choose whether you record sound with the videos.</p>		<p><b>ON or OFF (default)</b> Available only in Video mode.</p>
<p><b>Image Stabilizer</b> Choose whether camera stabilization is on or off while recording videos.</p>		<p><b>ON (default) or OFF</b> Available only in Video mode.</p>
<p><b>Video Length</b> Choose video duration.</p>		<p><b>CONTINUOUS (default)</b>—as long as there is room on the card or internal memory. <b>5, 15, or 30 SECONDS.</b> Available only in Video mode.</p>

Setting	Icon	Options
<p><b>Time Lapse Capture</b></p> <p>Record a continuous video of a series of pictures taken with a time delay between each picture. This setting is cleared when you end Time Lapse Capture mode.</p>		<p><b>OFF (default)</b>—Turn the Time Lapse Capture mode off.</p> <p><b>ON</b>—Use the Time Lapse Capture mode as you would record a video. See <a href="#">page 30</a> for details on how to set and use the Time Lapse Capture mode.</p>

## Customizing your camera

- 1 Press the Mode button to highlight Camera setup .
- 2 Press / to highlight the setting you wish to change, then press the OK button.
- 3 Choose an option, then press the OK button.

Setting	Icon	Options
<p><b>Quickview</b></p> <p>Set whether or not to display Quickview after taking a picture or video.</p>		<p><b>ON (default)</b>—After you take a picture or video, Quickview displays it on the camera screen for approximately 5 seconds.</p> <p><b>OFF</b>—Pictures and videos are saving without being shown in Quickview.</p>
<p><b>Sound</b></p> <p>Choose whether the camera makes a sound when you power up, release the shutter, for the self-timer, and for warnings.</p>		<p><b>ON (default)</b>—Shutter sound, and several sound themes.</p> <p><b>Shutter Only</b>—Only the shutter sound.</p> <p><b>OFF</b>—Turn off all sounds (warnings only).</p>
<p><b>Shutter Sound</b></p> <p>Choose the sound to be heard when you press the Shutter button.</p>		<p><b>Sound 1 (default)</b></p> <p><b>Sound 2</b></p>

Setting	Icon	Options
<b>Sound Volume</b> Choose the sound volume.		<b>HIGH</b> <b>MEDIUM (default)</b> <b>LOW</b>
<b>LCD Brightness</b> Choose the brightness of the camera screen.		<b>HIGH</b> <b>MEDIUM (default)</b> <b>LOW</b>
<b>Setting Memory</b> Set whether the camera settings are stored when the camera is turned off.		<b>OFF (default)</b> —The camera powers up in Auto mode, no matter what mode it was turned off in. <b>ON</b> —The camera powers up in the last picture-taking mode.
<b>Orientation Sensor</b> Orient pictures so they are displayed with the correct side up. NOTE: It may take up to 5 seconds for the camera to convert a picture.		<b>ON (default)</b> <b>OFF</b> The orientation sensor is turned off in Burst mode.
<b>Mode Description</b> Set whether description of the selected mode is displayed when changing modes.		<b>OFF</b> <b>ON (default)</b> —A brief description of the picture-taking mode is displayed for 3 seconds.
<b>Date &amp; Time</b> Set date and time.		See <a href="#">page 4</a> .
<b>Date Time Format</b> Set a format for the date and time display.		<b>Date</b> —Choose a format for the date display. <b>Time</b> —Choose a format for the time display.

Setting	Icon	Options
<p><b>Date Stamp</b></p> <p>Imprint the date on pictures and videos taken in the Time Lapse Capture mode. Note that the date once imprinted cannot be erased.</p>		<p><b>OFF (default)</b></p> <p><b>Date</b></p> <p><b>Date and Time</b></p>
<p><b>Language</b></p>		<p>Choose a language.</p>
<p><b>Video Out</b></p> <p>Choose the regional setting that lets you connect the camera to a television or other external device.</p>		<p><b>NTSC (default)</b>—used in North America and Japan; most common format.</p> <p><b>PAL</b>—used in Europe and China.</p>
<p><b>Photo Frame Setting</b></p> <p>Set the Photo Frame function that can be used when the camera is set in the Kodak Photo Frame Dock.</p>		<p>See <a href="#">page 41</a>.</p>
<p><b>Format</b></p> <p>Formatting deletes all pictures and videos, including those that are protected. Removing a card during formatting may damage the card.</p>		<p><b>Memory Card</b>—deletes everything on the card; formats the card.</p> <p><b>Exit (default)</b>—exits without making a change.</p> <p><b>Internal Memory</b>—formats the internal memory and deletes everything including e-mail addresses, album names, and Favorites.</p>
<p><b>About...</b></p>		<p>View the camera information.</p>

## Putting yourself in the picture

Use the Self-Timer to create a 10-second delay between the time you press the Shutter button and the time the picture or video is taken.

- 1 Place the camera on a flat surface.
- 2 In any picture-taking mode, press the Menu button.
- 3 Highlight SELF TIMER  and then press the OK button.
- 4 Highlight ON, then press the OK button.
- 5 Compose the scene. Then press the Shutter button halfway and hold to set the exposure and focus, then press completely down. Move so that you are in the scene.

*The Self-Timer light on the front of the camera blinks slowly for 8 seconds (then quickly for 2 seconds) before the picture is taken. The Self-Timer turns off after you take the picture or if you change modes.*

## Putting yourself in the video

- 1 Place the camera on a flat surface.
- 2 Press the Mode button to highlight Video mode , and then press the Menu button.
- 3 Highlight SELF TIMER , then press the OK button.
- 4 Highlight ON, then press the OK button.
- 5 Compose the scene, then press the Shutter button completely down. Move so that you are in the scene.

*The default video length is Continuous. The video stops when you press the Shutter button or when no storage space remains. To change the video length, see [page 25](#). To turn off the Self-Timer camera sounds, see [page 29](#). The Self-Timer turns off after you take the video or if you change modes.*

## Recording in Time Lapse Capture Mode

You can take a series of pictures with a time delay between each picture.

- 1 Press the Mode button to highlight Video  then press the Menu button.
- 2 Press  to highlight Time Lapse Capture , then press the OK button.
- 3 Press  to highlight ON, then press the OK button.
- 4 Press  to highlight Option, then press the OK button.

**Interval**—Set the time between each picture.

Choose from 10 sec, 30 sec, 1 min, 5 min, 10 min, 15 min, 30 min, 1 hrs, 3 hrs, 6 hrs, 12 hrs, or 24 hrs.

**Number of frames**—Set the number of pictures to be taken.

When Auto is selected, the full remaining capacity of a card will be used for one video. Note, however, that recording will stop when 10,000 frames are taken.

When User Define is selected, you can set the length from 10 frames to 500 frames, in 10 frame increments.

**AE/AF/AWB Lock**—Set whether or not the exposure, focus, and white balance are fixed.

When No Lock is selected, the camera automatically adjusts the exposure, focus, and white balance for every picture.

When Lock at first shot is selected, the exposure, focus, and white balance are automatically set when the first picture is taken. The same settings will be used from the second picture on.

- 5 Compose the scene, then press the Shutter button completely down to start Time Lapse Capture.
- 6 Press the Shutter button again to end Time Lapse Capture.

## Pre-tagging for album names

Use the Set Album (Still or Video) feature to pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names.

Create an album name in advance. That way, when you transfer pictures or videos to your computer, Kodak EasyShare software opens and categorizes your pictures and videos in the appropriate album.

### First—on your computer

Use Kodak EasyShare software (V 4.0 or later) to create album names on your computer. Then copy up to 32 album names to the album name list the next time you connect the camera to the computer. See Kodak EasyShare software Help for details.

### Second—on your camera

- 1 In any mode, press the Menu button.
- 2 Press  $\blacktriangle/\blacktriangledown$  to highlight Set Album , then press the OK button.
- 3 Press  $\blacktriangle/\blacktriangledown$  to highlight an album name, then press the OK button. Repeat step 3 to select more than one album name.

*Selected albums are noted with a check mark. To remove a selection, highlight an album name and press the OK button. To remove all album selections, select CLEAR ALL.*

- 4 Highlight EXIT, then press the OK button.

*Your selections are saved. If you turn on the camera screen, your album selection is displayed on the screen. A plus sign (+) after the album name means more than one album is selected.*

- 5 Press the Menu button to exit.

# 3

## Reviewing pictures and videos

### Review mode and Favorites mode

Press the Review button to view pictures and videos in Review mode.

Press the Review button in picture-taking mode to display and manage pictures. Press the Review button in video mode to display and manage videos.

In Review mode, press the Review button again to switch to Favorites mode. In Favorites mode, you can display and manage shared pictures saved in the Favorites section of the camera's internal memory. For more details see [page 47](#).

To save battery power during review, use an optional printer dock, or a Kodak Photo Frame Dock. (Visit [www.kodak.com/go/ls755accessories](http://www.kodak.com/go/ls755accessories).)

### Viewing single pictures and videos

- 1 Press the Review button.
- 2 Press ◀/▶ to scroll backward or forward through pictures and videos. (For fast scrolling, press and hold ◀/▶.)
- 3 Press the Review button to exit.

NOTE: Pictures taken at the 3:2 setting are displayed at a 3:2 aspect ratio with a black bar at the top of the screen.

## Viewing multiple pictures and videos

- 1 Press the Review button.
- 2 Press ▲ .  
*Up to 9 thumbnails are shown in the Multi-up view.*
  - A frame appears around the selected thumbnail.
  - Press ◀/▶, ▲/▼ to select a different picture.
  - When there are more than 9 picture and/or video files, pressing ▲/▼ at the top or bottom edge of the screen will take you to the previous or next row of thumbnails.
  - To display the selected picture, press the OK button.
- 3 Press the Review button to exit.

## Playing a video

- 1 Press the Review button.
- 2 Press ◀/▶ to locate a video. (In Multi-up view, highlight a video, then press the OK button.)
- 3 Press ▼ to highlight Normal, then press the OK button.  
*Video playback starts.*
  - To adjust the volume, press the Zoom button.
  - To pause the video, press ▼ during playback.
  - To rewind the video, press ◀ during playback.
  - To replay the video, press the OK button.
  - To go to the previous or next picture or video, press ◀/▶.
  - Pressing ▶ after stopping video playback brings up the Review menu.

## Editing videos

- 1 Press  $\blacktriangledown$  during playback to pause the video.
- 2 Press the OK button.
- 3 Press  $\blacktriangle/\blacktriangledown$  to highlight one of the next options, then press the OK button.
  - Erase Before: Deletes from the first frame until the frame before the paused screen. Go to step 4.
  - Erase After: Deletes from the frame after the paused screen until the last frame. Go to step 4.
  - Make Picture: Saves the frame of the paused screen as a still picture. Go to step 5.
  - Cancel: Returns to the pause screen.
- 4 To save the video, press  $\blacktriangle/\blacktriangledown$  to highlight New or Overwrite, then press the OK button.
- 5 To make a still picture, press  $\blacktriangle/\blacktriangledown$  to highlight OK, then press the OK button.

## Deleting pictures and videos

- 1 Press the Review button.
- 2 Press  $\blacktriangle/\blacktriangleright$  to locate a picture or video (or highlight a picture or video in the Multi-up view), then press the Delete button.
- 3 Press  $\blacktriangle/\blacktriangledown$  to highlight an option, then press the OK button:
  - PICTURE/VIDEO: Deletes the displayed picture or video.
  - EXIT: Exits the Delete screen.
  - ALL... Deletes all pictures and videos from your current storage location.
- 4 To delete more pictures and videos, go to Step 2.

NOTE: You cannot delete protected pictures and videos. Remove protection before deleting (see [page 36](#)).

## Magnifying pictures

- 1 Press the Review button, then locate a picture.
- 2 To magnify, press the Zoom button. To magnify further, press the Zoom button. Press the OK button to redisplay the picture at the 1X (original) size.
  - To see different parts of the picture, press ▲/▼ or ◀/▶.
  - To exit Magnify, press the OK button.
- 3 To exit the Review mode, press the Review button.

## Changing review settings

In Review mode, press the Menu button for review settings.

	PROTECT ( <a href="#">page 36</a> )
	SLIDE SHOW ( <a href="#">page 36</a> )
	COPY ( <a href="#">page 38</a> )
	Resize ( <a href="#">page 39</a> )
	IMAGE STORAGE ( <a href="#">page 25</a> )

## Protecting pictures and videos from deletion

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press  $\blacktriangle/\blacktriangleright$  to highlight PROTECT , then press the OK button.

*The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.*

- 4 To remove protection, press the OK button again.
- 5 Press the Menu button to exit.



### CAUTION:

**Formatting internal memory or xD-Picture Card™ deletes all (including protected) pictures and videos. Formatting internal memory also erases e-mail addresses, album names, and favorites. To restore them, see Kodak EasyShare software Help.**

## Running a slide show

Use the Slide Show to display your pictures and videos on the camera screen. To run a slide show on a television or any other external device, see [page 37](#). To save battery power use the optional AC adapter.

### Starting the slide show

- 1 Press the Review button, then press the Menu button.
- 2 Press  $\blacktriangle/\blacktriangleright$  to highlight SLIDE SHOW , then press the OK button.
- 3 Press  $\blacktriangle/\blacktriangleright$  to highlight BEGIN SHOW, then press the OK button.

*Each picture and video is displayed once, in the order in which you took them.*

To cancel the Slide Show, press the OK button.

## Changing the slide show display interval

The default interval setting displays each picture for 5 seconds. You can increase the display interval up to 60 seconds.

- 1 On the Slideshow menu, press ▲/▼ to highlight INTERVAL, then press the OK button.
- 2 Select a display interval. To scroll through the seconds quickly, press and hold ▲/▼.
- 3 Press the OK button.

*The interval setting remains until you change it.*

## Running a continuous slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slideshow menu, press ▲/▼ to highlight LOOP, then press the OK button.
- 2 Press ▲/▼ to highlight ON, then press the OK button.

*The slide show repeats until you press the OK button or until battery power is exhausted.*

## Displaying pictures and videos on a television

You can display pictures and videos on a television, computer monitor, or any device equipped with a video input. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

- 1 Ensure that the Video Out setting (NTSC or PAL) is correct (see [page 28](#)).
- 2 Connect the audio/video cable (included) to the camera's dock connector and to the television video-in port (yellow) and audio-in port (white). See your television's user's guide for details.
- 3 Review pictures and videos on the television.

## Copying pictures and videos

You can copy pictures and videos from a card to internal memory or from internal memory to a card.

### Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location from which you are copying.

### To copy pictures or videos:

- 1 Press the Review button, then press the Menu button.
- 2 Press  to highlight Copy , then press the OK button.
- 3 Press  to highlight an option.
  - **PICTURE/VIDEO:** Copies the current picture or video.
  - **EXIT:** Returns to the Review menu.
  - **ALL...** Copies all pictures and videos from your selected storage location to the other location.
- 4 Press the OK button.
  - Pictures and videos are copied, not moved. To remove pictures and videos from the original location after they are copied, delete them (see [page 34](#)).
  - Tags that you applied for print, e-mail, Favorites, and Protect settings are not copied. To apply protection to a picture or video, see [page 36](#).

## Resizing Pictures

You can reduce the size of a picture.

NOTE: As you reduce a picture's size, the picture quality decreases.

- 1 Press the Review button, then locate the picture you want to resize.
- 2 Press the Menu button.
- 3 Press  to highlight Resize , then press the OK button.
- 4 Press  to highlight the size you want to make the picture, then press the OK button.

*Choose from 4.5MP (3:2), 4MP, 3MP, 1MP, VGA, or 240X320. You can only choose a size smaller than the current size. For details on each size, see [page 20](#).*

*When you selected 240X320, follow the procedure described in the Resizing to 240 x 320 section (see [page 39](#)).*

- 5 Press  to highlight New or Overwrite, then press the OK button.  
*A confirmation screen appears.*

NOTE: If you select Overwrite, you cannot return the picture to its original size.

- 6 Press  to highlight OK, then press the OK button.

## Resizing to 240 x 320

### To rotate

- 1 Press ▲/▼ to highlight Rotate, then press the OK button.  
*The picture is rotated 90° clockwise.*
- 2 Press ◀/▶ to rotate the picture to the desired position.
- 3 Press the OK button.
- 4 Press ▲/▼ to highlight New or Overwrite, then press the OK button.  
*A confirmation screen appears. To rotate the picture again, select Redo and start over from step 2.*
- 5 Press ▲/▼ to highlight OK, then press the OK button.

## Viewing picture and video information

- 1 Press the Review button, then press the OK button.
- 2 To view information on the next or previous picture or video, press ◀/▶.
- 3 Press the OK button to exit.

# 4

## Using the Kodak Photo Frame Dock

In certain regions, the Kodak Photo Frame Dock is included. By connecting the camera to the Photo Frame Dock, the camera can be used like a picture frame to display pictures saved in the camera.

- 1 Place the camera in the Photo Frame Dock.
- 2 Plug the Photo Frame Dock's power cord into the outlet.
- 3 Press the Photo Frame button on the Photo Frame Dock.

NOTE: For details about connecting the camera to the Photo Frame Dock or connecting the power cable, see the Photo Frame Dock's user guide.

### Photo Frame display settings

- 1 Press the Mode button on the camera to highlight Camera setup .
- 2 Press / to highlight Photo Frame settings , then press the OK button.
- 3 Press / to highlight the option you want to change, then press the OK button.

**Interval**—The picture changes after the set time has passed. The interval can be set for 1 second, 5 seconds, 10 seconds, 30 seconds, 1 minute, or 5 minutes.

**Order**—Set the order of the pictures to be displayed. Select One time to cycle through all the saved pictures once, select Loop to show continuously, and select Random to display randomly.

**Effect**—Add an effect to be used when the picture is displayed. You can choose from: Fade, Block, Vertical Blind, Center to Left/Right, Left to Right, Right to Left, Center to Up/Bottom, Up to Bottom, Bottom to Up.

**Display Clock**—Show a clock with the picture. You can choose from Analog clock and Big/Small Digital clock.

**Photo Frame Image**—Select whether to display pictures from the camera's internal memory, Favorites mode in internal memory, or from an xD-Picture Card™.

**Running Time**—Set how long you want Photo Frame Dock to run. Once the set time has passed, Photo Frame Dock and the camera turn off. The time can be set from 0.5 to 12 hours.

- 4 Press ▲/▼ to highlight the option value, then press OK.

# 5

## Installing the software

### Minimum system requirements

#### Windows OS-based computers

- Windows 98, 98SE, ME, 2000, or XP
- Internet Explorer 5.01 or higher
- 233 MHz processor or greater
- 64 MB RAM (128 MB for Windows 2000, XP)
- 200 MB hard disk space available
- CD-ROM drive
- Available USB port
- Color monitor, 800 x 600 pixels or more (16-bit or 24-bit color recommended)

#### Macintosh computers

- Power Mac G3, G4, G4 Cube, iMac, eMac, PowerBook G3, G4; or iBook computers
- Mac OS X 10.2.3 to 10.2.8 or Mac OS 10.3
- Safari 1.0 or later
- 128 MB RAM
- 200 MB hard disk space available
- CD-ROM drive
- Available USB port
- Color monitor, 1024 x 768 pixels or more (thousands or millions of colors recommended)

NOTE: Mac OS 8.6 and 9.x do not support the Share button functions, including Favorites. Mac OS X 10.2.3 to 10.2.8 or Mac OS 10.3 is recommended for full functionality. To download EasyShare software for Mac OS 8.6 and 9.x, visit [www.kodak.com/go/ls755support](http://www.kodak.com/go/ls755support).

## Install the software



### CAUTION:

**Install Kodak EasyShare software before connecting the camera or optional dock to the computer. Failure to do so may cause the software to load incorrectly.**

- 1 Close all software applications that are open on your computer (including anti-virus software).

- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.

- 3 Load the software:

**Windows OS-based computer**—if the install window does not appear, choose Run from the Start menu and type d:\setup.exe where d is the drive letter that contains the CD.

**Mac OS X**—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.

**Windows OS-based computer**—select Typical to automatically install the most commonly used applications. Select Custom to choose the applications you wish to install.

**Mac OS X**—follow the on-screen instructions.

NOTE: When prompted, take a few minutes to electronically register your camera and software.

This lets you receive information regarding software updates and registers some of the products included with the camera. You must be connected to your Internet service provider to register electronically. To register later, see [www.kodak.com/go/register](http://www.kodak.com/go/register).

- 5 Restart the computer. If you turned off anti-virus software, turn it back on. See the anti-virus software manual for details.

For information on the software applications included on the Kodak EasyShare software CD, click the Help button in the Kodak EasyShare software.

## 6 Sharing pictures and videos



When you press the Share button to “tag” your pictures and videos, they can be shared by the following methods when transferred to your computer.

When they are transferred to your computer, you can share them by:

	Pictures	Videos
 CANCEL PRINTS	✓	
 PRINT ALL	✓	
 PRINT	✓	
 E-MAIL	✓	✓
 FAVORITE for easy organization on your computer and for sharing on your camera	✓	✓
 ALBUM	✓	

NOTE: Tags remain until removed. If a tagged picture/video is copied, the tag is not copied. In a burst series, only the last picture is tagged during Quickview.

## Tagging pictures for printing

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight PRINT , then press the OK button.
- 3 Press ▲/▼ to select the number of copies (0-99). Zero removes the tag for that picture.  
*The Print icon  appears in the status area. The default quantity is one.*
- 4 **Optional:** You can apply a print quantity to other pictures. Press ◀/▶ to locate a picture. Keep the print quantity as is, or press ▲/▼ to change it.
- 5 Press the OK button. Then press the Share button to exit.

\* To tag all pictures in the storage location, press ▲ to highlight PRINT ALL , press the OK button, then indicate the number of copies as described above. PRINT ALL is not available in Quickview.

To remove the print tagging for all pictures in the storage location, press ▲ to highlight CANCEL PRINTS , then press the OK button. CANCEL PRINTS is not available in Quickview.

## Printing tagged pictures

When you transfer the tagged pictures to your computer, the Kodak EasyShare software print screen opens. For details on printing, click the Help button in the Kodak EasyShare software.

For more information on printing from your computer, printer dock, or card, see [page 51](#).

NOTE: For the best 4 x 6 in. (10 x 15 cm) prints, set the camera to the 4.5 MP (3:2) print quality setting. See [page 20](#).

## Tagging pictures and videos for emailing

### First—on your computer

Use Kodak EasyShare software to create an e-mail address book on your computer. Use Kodak EasyShare software to create an e-mail address book. Then, copy up to 32 e-mail addresses to the camera's internal memory. For details, click the Help button in the Kodak EasyShare software.

## Second—tag pictures/videos on your camera

- 1 Press the Share button, then press ◀/▶ to locate a picture/video.
- 2 Press ▲/▼ to highlight E-MAIL , then press the OK button.
- 3 Press ▲/▼ to highlight an e-mail address, then press the OK button.  
To tag other pictures/videos with the same address, press ◀/▶ to scroll through them. When the picture/video you want is displayed, press the OK button.  
To send the pictures/videos to more than one address, repeat step 3 for each address.  
*Selected addresses are checked.*  
To remove a selection, highlight a checked address, then press the OK button.
- 4 To remove all e-mail selections, highlight CLEAR ALL.
- 5 Press ▲/▼ to highlight EXIT, then press the OK button.  
*The e-mail icon  appears in the status area.*
- 6 Press the Share button to exit the menu.

## Third—transfer and e-mail

When you transfer the tagged pictures/videos to your computer, the e-mail screen opens and lets you send them to the addresses you specified. For details, click the Help button in the Kodak EasyShare software.


## Tagging pictures as favorites

You can store your favorite pictures in the Favorites  section of your camera's internal memory, then share them with friends and family. Favorites are loaded into your camera after you transfer pictures to your computer. Favorites are approximately 1 MP, good for 4 x 6 in. (10 x 15 cm) prints.

Share your favorite pictures in 4 easy steps:

1. Take pictures

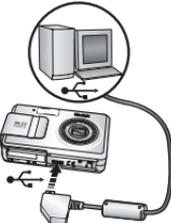

<p>2. Tag pictures as favorites</p> 	<ol style="list-style-type: none"> <li>1 Press the Share button. Press   to locate a picture.</li> <li>2 Press   to highlight FAVORITE  , then press the OK button. <i>The Favorite icon  appears in the status area. To remove the tag, press the OK button again.</i></li> <li>3 Press the Share button to exit.</li> </ol>
<p>3. Transfer pictures to your computer</p> 	<ol style="list-style-type: none"> <li>1 If it's not already installed, install Kodak EasyShare software (V 4.0 or later) on your computer. (See <a href="#">page 43</a>.)</li> <li>2 Connect the camera to the computer using the USB cable (see <a href="#">page 1</a>), or an optional printer dock or Photo Frame Dock. <i>The first time you transfer pictures, a software wizard prompts you to carefully review and make some choices. Then, your pictures are transferred to the computer. Favorites are loaded to the Favorites section of your camera's internal memory.</i></li> </ol>
<p>4. View favorites on your camera</p> <p>Entering Favorites...</p>  <p>Pictures tagged as Favorites will appear at next transfer</p>	<ol style="list-style-type: none"> <li>1 Press the Review button to enter the Review mode, then press the Review button again.</li> <li>2 Press   to scroll through your Favorites.</li> </ol> <p>To exit Favorites mode, press the Review button. To view pictures or videos saved on a card or in non-favorite internal memory, press the Review button to enter the Review mode. (See <a href="#">page 32</a>.)</p>

NOTE: The camera holds a limited number of favorites. Use Camera Favorites in the Kodak EasyShare software to customize the size of your camera Favorites section. For more information, click the Help button in the software.

## Optional settings

In Favorites mode, press the Menu button to access optional settings.

	<p>SLIDE SHOW (<a href="#">page 36</a>)</p>		<p>REMOVE FAVORITES (<a href="#">page 49</a>)</p>
---	---	---	---

NOTE: Favorites are cropped slightly to the 3:2 format. To prevent cropping, take pictures with the picture quality set to 4.5 MP (3:2). (See [page 20](#).)

## Removing all favorites from your camera

- 1 In Favorites mode, press the Menu button.
- 2 Highlight REMOVE FAVORITES , then press the OK button.  
*All pictures stored in the Favorites section of internal memory are removed. Favorites are restored the next time you transfer pictures to the computer.*
- 3 Press the Menu button to exit the menu.

## Preventing favorites from transferring to the camera

- 1 Open the Kodak EasyShare software.
- 2 Click the Album tab in My Collection and select a favorites album.
- 3 Delete the pictures that you no longer want to keep in the Favorites section of the camera's internal memory.
- 4 Connect the camera to the computer using the USB cable (see [page 1](#)), or an optional printer dock or Photo Frame Dock.  
*EasyShare software removes the favorites on your camera.*

## Printing and emailing favorites

You can tag your favorites for print and e-mail the same way you tag the full-size pictures stored in your camera.

- 1 In Favorites mode, locate a picture and press the Share button.
- 2 Highlight PRINT  or E-MAIL , then press the OK button.

NOTE: Favorites are good for up to a 4 x 6 inch (10 x 15 cm) print.

## Picture and video album settings

You can tag album names of pictures and videos in the camera when using the album function in Review mode.

### First—on your computer

Use Kodak EasyShare software (V 4.0 or later) to create album names. Up to 32 album names can be copied to the camera's internal memory. See the EasyShare software Help for details.

## Second—on your camera

- 1 Press the Share button.
- 2 Press ◀/▶ to select a picture or video.
- 3 Press the Menu button.
- 4 Press ▲/▼ to highlight ALBUM , then press the OK button.
- 5 Press ▲/▼ to highlight an album folder, then press the OK button.  
To add more pictures to the same album, press ◀/▶ to scroll through the pictures.

When the picture you want to add is highlighted, press the OK button. If you want to add a picture to multiple albums, repeat step 4 for each album.

*The album name is displayed next to each picture. A plus sign (+) after the album name means the picture is included in multiple albums.*

To remove a selection, highlight an album name and press the OK button. To remove all album selections, select CLEAR ALL.

## Third—transfer to your computer

When you transfer the tagged pictures or videos to your computer, Kodak EasyShare software opens and categorizes your pictures in the appropriate album folder. See the EasyShare software Help for details.

# 7


## Transferring and printing pictures



### CAUTION:

Install Kodak EasyShare software before connecting the camera or optional printer dock to the computer. Failure to do so may cause the software to load incorrectly.

### Transferring pictures and videos with the USB cable

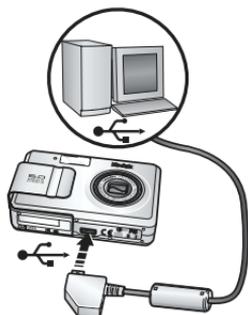

- 1 Turn off the camera.
- 2 Plug the ↔ labeled end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 3 Plug the other end of the USB cable into the labeled USB port on the camera.
- 4 Turn on the camera.
- 5 Kodak EasyShare software opens on your computer. Transfer pictures and videos according to the instructions displayed.

*The green ready light blinks during transfer.*

Visit [www.kodak.com/go/howto](http://www.kodak.com/go/howto) for a tutorial on connecting.

### Also available for transferring

You can also use the Kodak products such as the Kodak EasyShare printer dock, to transfer your pictures and videos.

Purchase these and other accessories at a dealer of Kodak products or [www.kodak.com/go/ls755accessories](http://www.kodak.com/go/ls755accessories).

### Printing pictures from your computer

For details on printing pictures from your computer, click the Help button in the Kodak EasyShare software.

## Direct printing with a PictBridge printer

Your camera features PictBridge technology, which allows printing directly to PictBridge printers by connecting the camera to the printer using the USB cable (included).

When printing, use an optional AC adapter to power your camera in order to save the battery power.

## Connecting the camera to the printer

- 1 Turn off the camera and printer.
- 2 Plug the  labeled end of the USB cable into the USB port on the printer. See your printer's user's guide for details.
- 3 Plug the other end of the USB cable into the USB port on the camera.
- 4 **Optional:** If you are using an AC adapter, plug the small end of the AC adapter into the DC-IN jack on the camera end of the USB cable and plug the other end of the AC adapter into the outlet. See page 2 for details.

## Printing pictures

- 1 Turn on the printer.
- 2 Turn on the camera, then press the Mode button to highlight Auto  .  
*The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu interface turns off, press any button to redisplay it.*
- 3 Press  /  to choose a printing option, then press the OK button.  
**Current Picture**—Press  /  to choose a picture. Choose the number of copies.  
**Tagged Pictures**—If your printer supports tagged pictures, choose a print size and print pictures that you tagged for printing.  
**Index Print**—Print thumbnails of all pictures. This may require more than one sheet of paper, depending on the number of pictures.  
**All Pictures**—Print all pictures in internal memory, on a card, or in Favorites. Choose the number of copies.  
**Image Storage**—Print the pictures in either the internal memory, on a card, or in Favorites.

NOTE: During direct printing pictures are not permanently transferred and saved to the computer or printer. To transfer pictures to your computer, see [page 51](#).

### Disconnecting the camera from the printer

- 1 Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

### Ordering prints online

Online print service is offered in the Kodak EasyShare software. You can easily:

- Upload your pictures
- Store pictures
- Share with family and friends
- Order high-quality prints

### Printing from an optional xD-Picture Card™

Automatically print pictures when you insert your card into a printer with an xD-Picture Card™ slot. See your printer's user's guide for details.

Take the card to your local photo retailer for professional printing.

### Printing without a computer


Dock your camera to the Kodak EasyShare printer dock and print directly without a computer. With the Kodak EasyShare printer dock, you can print directly - with or without a computer. Purchase this and other accessories at a dealer of Kodak products or [www.kodak.com/go/ls755accessories](http://www.kodak.com/go/ls755accessories).

You can print pictures by connecting your camera to a PictBridge compatible printer using a USB cable.

## Dock compatibility


Use the adapter and the custom dock insert if you are docking your LS755 camera on the EasyShare:

- printer dock
- printer dock 6000
- printer dock plus
- camera dock 6000

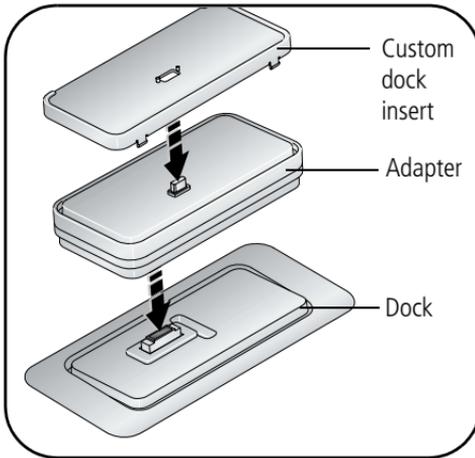

NOTE: The charging lights on the dock will not illuminate when using the adapter. However, charging does take place.

**Use the custom dock insert if you are docking your LS755 camera on any other EasyShare dock. Do not use the adapter.**

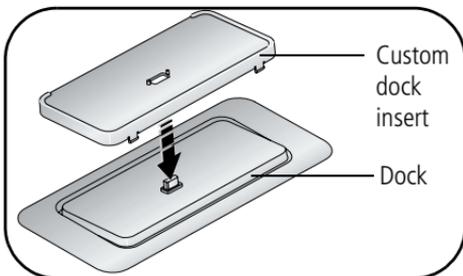

NOTE: The EasyShare LS755 camera is not compatible with these docks:

- EasyShare printer dock 4000
- EasyShare camera dock II
- EasyShare LS420, LS443 camera docks

Additional technical information is available in the ReadMe file located on the Kodak EasyShare software CD. For updates to Troubleshooting information, see [www.kodak.com/go/l5755support](http://www.kodak.com/go/l5755support).

## Camera problems

If...	Try one or more of the following
The camera does not turn on	<ul style="list-style-type: none"> <li>■ Remove, then reinsert the battery (<a href="#">page 2</a>).</li> <li>■ Recharge the battery (<a href="#">page 3</a>).</li> </ul>
The camera does not turn off and the lens does not retract	<ul style="list-style-type: none"> <li>■ Place the camera on an optional printer dock or an optional Photo Frame Dock, then try again.</li> <li>■ Connect the camera to an AC adapter, then try again.</li> </ul>
Camera buttons do not function	<ul style="list-style-type: none"> <li>■ If the slot cover is open, you cannot turn the camera on.</li> </ul>
The camera screen does not turn on	Turn the camera off, then on again.
In Review, a blue or black screen is displayed instead of a picture	Transfer the picture or all pictures to the computer ( <a href="#">page 51</a> ). Format the internal memory or card after transfer.
The pictures remaining number does not decrease after taking a picture	Continue taking pictures. The camera is operating normally. (The remaining number of pictures that can be taken varies according to picture quality and content.)
You cannot take a picture or video	<ul style="list-style-type: none"> <li>■ Turn the camera off, then on again.</li> <li>■ Press the Shutter button all the way.</li> <li>■ Battery is exhausted. Recharge the battery or insert a new one (<a href="#">page 2</a>).</li> <li>■ Wait until the ready light is green before attempting to take another picture.</li> <li>■ Transfer pictures to the computer (<a href="#">page 51</a>), delete pictures from the camera (<a href="#">page 34</a>), switch image storage locations (<a href="#">page 25</a>), or insert a card with available memory (<a href="#">page 8</a>).</li> </ul>

If...	Try one or more of the following
Picture orientation is not accurate	Set the Orientation Sensor ( <a href="#">page 27</a> ).
Flash does not fire	Check flash setting, and change as needed ( <a href="#">page 16</a> ).
Battery life is short	Recharge the battery fully or insert a new one ( <a href="#">page 2</a> ).
Camera displays an error code	<ul style="list-style-type: none"> <li>■ Press the Shutter button all the way.</li> <li>■ Battery is exhausted. Recharge the battery fully (<a href="#">page 3</a>).</li> <li>■ Wait until the ready light is green before attempting to take another picture.</li> <li>■ Transfer pictures to the computer (<a href="#">page 51</a>), delete pictures from the camera (<a href="#">page 34</a>), switch image storage locations (<a href="#">page 25</a>), or insert a card with available memory (<a href="#">page 8</a>).</li> <li>■ Contact your local service provider or visit <a href="http://www.kodak.com/go/support">www.kodak.com/go/support</a>.</li> </ul>

## Computer/connectivity problems

If...	Try one or more of the following
The camera does not communicate with the computer	<ul style="list-style-type: none"> <li>■ Make sure the EasyShare software is installed (<a href="#">page 43</a>).</li> <li>■ Turn on the camera.</li> <li>■ Recharge the battery or insert a new one (<a href="#">page 2</a>).</li> <li>■ Make sure USB cable is securely connected on camera and computer USB port (<a href="#">page 51</a>).</li> <li>■ Try another USB port on the computer.</li> <li>■ See the EasyShare software Help.</li> </ul>
Slide Show does not run on an external video device	<ul style="list-style-type: none"> <li>■ Adjust the camera Video Out setting (NTSC or PAL, <a href="#">page 28</a>).</li> <li>■ Make sure the external device settings are correct (see the device's user's guide).</li> </ul>

## Picture quality problems


If...	Try one or more of the following
The picture is too dark or underexposed	<ul style="list-style-type: none"> <li>■ Use Fill flash (<a href="#">page 16</a>) or change your position so light is not behind the subject.</li> <li>■ Move so that the distance between you and the subject is within the effective flash range (<a href="#">page 16</a>).</li> <li>■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, press the Shutter button completely down to take the picture.</li> <li>■ Increase Exposure Compensation (<a href="#">page 24</a>) and try again.</li> </ul>
The picture is too light	<ul style="list-style-type: none"> <li>■ Turn flash off (<a href="#">page 16</a>).</li> <li>■ Move so that the distance between you and the subject is within the effective flash range (see <a href="#">page 16</a>).</li> <li>■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, press the Shutter button completely down to take the picture.</li> <li>■ Decrease Exposure Compensation (<a href="#">page 24</a>) and try again.</li> <li>■ Check if you are in Beach or Snow scene mode.</li> </ul>
The picture is not clear	<ul style="list-style-type: none"> <li>■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, gently press the Shutter button completely down to take the picture.</li> <li>■ Clean the lens (<a href="#">page 65</a>).</li> <li>■ Make sure camera is not in Close-up mode if you are further than 0.4 in (1 cm) from your subject.</li> <li>■ Place the camera on a flat, steady surface.</li> </ul>

## Camera ready light status



Status	Cause
Ready light glows steady green	Shutter button is pressed halfway down. Focus and exposure are set.
Ready light blinks green	Picture is being processed and saved to the camera.
	Pictures are being transferred to computer; camera is connected.
	Camera is starting up or shutting down.
	Camera firmware upgrade is in process.
Ready light glows steady orange	Camera is in Favorites mode.
Ready light blinks orange	Flash is not charged. Wait. Resume picture taking when the light stops blinking and turns off.
	Auto exposure or auto focus are not locked. Release the Shutter button and recompose the picture.
Ready light glows steady red	<ul style="list-style-type: none"> <li>■ Camera's internal memory or card is full.</li> <li>■ Transfer pictures to the computer (<a href="#">page 51</a>), delete pictures from the camera (<a href="#">page 34</a>), switch storage locations (<a href="#">page 25</a>), or insert a card with available memory (<a href="#">page 8</a>).</li> </ul>
	Camera processing memory is full. Wait. Resume picture taking when the light turns green.
	Card is read-only. Change storage location to internal memory ( <a href="#">page 25</a> ), or use a different card.
	<p>Memory card speed is slow. Card cannot be used to take videos.</p> <p>Change storage location to internal memory (<a href="#">page 25</a>). Use this card to take pictures only.</p>
Ready light blinks red and camera turns off	Battery is low or exhausted. Recharge the battery ( <a href="#">page 2</a> ).

## Camera power light status

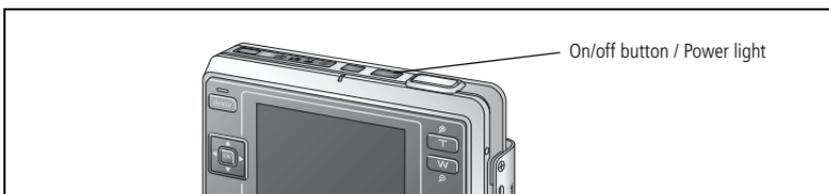

Status	Cause
Power light glows steady	Camera is on; ready to take a picture or video.
Power light does not turn on and the camera does not work	Camera is not turned on. Press the On/Off button.
	Battery is exhausted. Recharge the battery ( <a href="#">page 2</a> ).

## Still having problems?

Visit [www.kodak.com/go/ls755support](http://www.kodak.com/go/ls755support).

# 9

## Getting help

### Helpful links

#### Camera

Get support for your product (FAQs, troubleshooting information, etc.)	<a href="http://www.kodak.com/go/ls755support">www.kodak.com/go/ls755support</a>
Purchase camera accessories (camera docks, printer docks, lenses, cards, etc.)	<a href="http://www.kodak.com/go/ls755accessories">www.kodak.com/go/ls755accessories</a>
Download the latest camera firmware and software	<a href="http://www.kodak.com/go/ls755downloads">www.kodak.com/go/ls755downloads</a>
See online demonstrations of your camera	<a href="http://www.kodak.com/go/howto">www.kodak.com/go/howto</a>

#### Software

Get information on EasyShare software	<a href="http://www.kodak.com/go/easysharesw">www.kodak.com/go/easysharesw</a> (or click the Help button in the EasyShare software)
Get help with the Windows operating system and working with digital pictures	<a href="http://www.kodak.com/go/pcbasics">www.kodak.com/go/pcbasics</a>

#### Other

Get support for other cameras, software, accessories, more	<a href="http://www.kodak.com/go/support">www.kodak.com/go/support</a>
Get information on Kodak EasyShare printer docks	<a href="http://www.kodak.com/go/printerdocks">www.kodak.com/go/printerdocks</a>
Get information on Kodak inkjet products	<a href="http://www.kodak.com/go/inkjet">www.kodak.com/go/inkjet</a>
Optimize your printer for truer, more vibrant colors	<a href="http://www.kodak.com/go/onetouch">www.kodak.com/go/onetouch</a>
Register your camera	<a href="http://www.kodak.com/go/register">www.kodak.com/go/register</a>

## Telephone customer support

If you have questions concerning the operation of the software or camera, you may speak with a customer support representative.

### Before you call

Have the camera, camera dock, or printer dock connected to your computer. Be at your computer, and have the following information available:

- Computer model
- Operating system
- Processor type and speed (MHz)
- Amount of memory (MB)
- Amount of free hard disk space
- Camera serial number
- Version of Kodak EasyShare software
- Exact error message you received

Australia	1800 147 701	Netherlands	020 346 9372
Austria	0179 567 357	New Zealand	0800 440 786
Belgium	02 713 14 45	Norway	23 16 21 33
Brazil	0800 150000	Philippines	1 800 1 888 9600
Canada	1 800 465 6325	Portugal	021 415 4125
China	800 820 6027	Singapore	800 6363 036
Denmark	3 848 71 30	Spain	91 749 76 53
Ireland	01 407 3054	Sweden	08 587 704 21
Finland	0800 1 17056	Switzerland	01 838 53 51
France	01 55 1740 77	Taiwan	0800 096 868
Germany	069 5007 0035	Thailand	001 800 631 0017
Greece	00800 441 25605	United Kingdom	0870 243 0270
Hong Kong	800 901 514	United States	1 800 235 6325
India	91 22 617 5823	Outside the US	585 726 7260
Italy	02 696 33452	International Toll Line	+44 131 458 6714
Japan	03 5540 9002	International Toll Fax	+44 131 458 6962
Korea	00798 631 0024		

For the most up-to-date listings, visit:

[www.kodak.com/US/en/digital/contacts/DAllInternationalContacts.shtml](http://www.kodak.com/US/en/digital/contacts/DAllInternationalContacts.shtml)

# 10 Appendix

## Camera specifications

For more specifications, visit [www.kodak.com/go/ls755support](http://www.kodak.com/go/ls755support).

LS755 zoom digital camera specifications	
CCD	
CCD	1/2.5 type CCD, 4:3 aspect ratio
Output image size (image quality mode)	5.0MP: 2592 x 1944 pixels 4.5MP (3:2): 2592 x 1728 pixels 4.0MP: 2288 x 1712 pixels 3.1MP: 2048 x 1536 pixels 1.2MP: 1280 x 960 pixels VGA:640 x 480 pixels 240x320:240 x 320 pixels
Display	
Color display	2.5 in. hybrid LCD, 862 x 240 (207K) dots
Preview	Frame rate: 30 fps; Field-of-view: 100%
Lens	
Taking lens	3X optical zoom lens, 36 - 108 mm (35 mm film camera equivalent), f/2.8 - 4.8
Focus system	Auto focusing, TTL-AF, Multi Spot or Center-weighted selectable TTL-AF locked at 1/2-way shutter press in both still and video capture modes Working range: 28 in. (70 cm) -infinity @wide 43 in. (110 cm) - infinity @telephoto 6 - 28 in. (15 - 70 cm) @wide macro 20 - 43 in. (50 - 110 cm) @telephoto macro 2 - 6 in. (5 - 15 cm) @super macro (wide only) Focus is set to infinity in Landscape mode.
Digital zoom	1.0 - 5.0X
Lens barrier	In-camera

Exposure	
Exposure metering	TTL-AE
Exposure range	Wide: EV 6.1 - 16.1; f/2.8, 2 sec. to f/4.7, 1/2000 sec. Tele: EV 7.6 - 17.6; f/4.8, 2 sec. to f/8.0, 1/2000 sec.
Exposure mode	Exposure compensation: $\pm 2.0$ EV with 1/3 EV step
Shutter speed	Mechanical shutter also used; 1/2000 - 2 sec.
ISO sensitivity	Auto: 64 - 100; Selectable: 64, 100, 200
Flash	
Electronic flash	GN. 6.0 @ ISO 100 Auto flash Metering range @ ISO 100: 1.5 - 7.2 ft (0.5 - 2.2 m) @ Wide 1.5 - 4.3 ft (0.5 - 1.3 m) @ Tele
Flash modes	Auto, Fill, Red-eye, Off, Slow sync
Capture	
Capture modes	Auto, 17 scene modes (Portrait, Sport, Landscape, Night Portrait, Night Landscape, Snow, Beach, Text, Flower, Museum, Nagashidori (Panning Shot), TV Screen, Candle Light, Sunset, Auction, Custom, Video)
5-way controller	Used to select camera modes
Burst mode	Maximum 4 pictures AE, AF, AWB executed for first shot only
Video capture	Image size: QVGA (320 x 240), VGA (640 x 480) selectable Frame rate: 12.5 fps VGA, 30 fps QVGA
Image file format	Still: Exif 2.2 (JPEG compression), DCF Video: QuickTime (Motion JPEG)
Image storage	16 MB internal memory xD-Picture Card™ (sold separately)
Review	
Quickview	Yes
Video output	NTSC or PAL
Power	

Kodak EasyShare Li-ion rechargeable battery (KLIC-7000) 5V AC adapter	
Number of shots for battery operation	
Battery	KLIC-7000
Possible number of pictures	Approx. 150 according to the CIPA (Camera & Imaging Products Association) standard. * * "CIPA DC-002-2003 (Standard Procedure for Measuring Digital Still Battery Consumption)" Temperature 23° C, Camera screen is ON, every 30 seconds the zoom lens is cycled between full Wide Angle and full Telephoto, maximum flash is used for every other picture, and the camera is turned off and on once after every 10 pictures.
Communication with computer	
USB 2.0 (PTP), via USB cable, PTP using printer dock or Photo Frame Dock	
Languages	
English/French/German/Spanish/Italian/Portuguese/Chinese/Korean/Japanese	
Other features	
Self timer	10 seconds
White balance	Auto, Weak auto, Daylight, Tungsten, Fluorescent, Open shade, Manual
Auto sleep mode	8 minutes
Date stamp	None, YYYYMMDD, MMDDYYYY, DDMMYYYY
Tripod mount	No
Size	3.7 in. (95 mm) x 2.4 in. (61.5 mm) x 1.0 in. (25 mm) (W x H x D) @ power off
Mass (camera only)	6.0 oz (170.5 g) without battery or card

## Tips, safety, maintenance

If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the batteries and card. Allow all components to air-dry for at least 24 hours before using the camera again.

Blow gently on the lens or camera screen to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.

Service agreements are available in some countries. Contact a dealer of Kodak products for more information.

For rechargeable battery disposal information, visit the Rechargeable Battery Recycling Corporation Web site at [www.rbc.com](http://www.rbc.com).

For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at [www.eiae.org](http://www.eiae.org).

## Maximum number of pictures

The numbers listed are approximate and can vary due to file size or if your card contains other files. You may be able to store more or fewer pictures/videos.

### Maximum number of pictures by picture quality

Picture quality	Internal memory	xD-Picture Card™				
		16MB	32MB	64MB	128MB	256MB
5.0 MP	10	12	24	49	98	197
4.5 MP (3:2)	12	13	27	55	111	222
4.0 MP	13	15	31	62	124	249
3.1 MP	16	19	38	76	153	307
1.2 MP	37	43	86	173	347	695
VGA	96	110	221	443	888	1776
240 x 320	173	199	399	799	1598	3198

NOTE: \*Pictures stored in Favorites reduce capacity in internal memory.

## Maximum time for recording videos (unit: seconds)

Video quality	Internal memory	xD-Picture Card™				
		16MB	32MB	64MB	128MB	256MB
VGA (with sound)	18	21	42	86	172	345
VGA (without sound)	18	21	43	87	174	350
QVGA (with sound)	20	23	47	95	190	381
QVGA (without sound)	21	24	48	96	193	387

NOTE: \*Videos stored in Favorites reduce capacity in internal memory.

## Power-saving features

No Action For	The Camera	To Turn It Back On
1 minute	Screen turns off.	Press any button.
8 minutes	Enters auto power off.	Press the On/Off button.

## Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See [www.kodak.com/go/ls755downloads](http://www.kodak.com/go/ls755downloads).

## Regulatory compliance

### FCC compliance and advisory

Kodak EasyShare LS755 zoom digital camera  
Tested to comply with FCC Standards.  
FOR HOME OR OFFICE USE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

### Canadian DOC statement

DOC Class B Compliance

This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

---

## VCCI Class B ITE

---

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

---

English translation:

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

### Motion JPEG

Use of this product in any manner that complies with the Motion JPEG visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

---

# Index

## Numerics

5-way controller, ii

## A

about

camera firmware, 28

picture, video, 40

accessories, 51

buying, 60

action shots

burst, 20

sport mode, 11

advanced digital zoom, 15

AF frame, 13

albums, tagging pictures for, 31

auction mode, 12

audio/video cable, 1, 37

auto

flash, 16

focus, 11

picture taking mode, 10

power-down, 66

## B

battery

expected life, 3

extending life, 3

safety, 2

battery slot, dock

connector, i

beach mode, 11

black & white pictures, 22

burst mode, 20

button

location on camera, ii

review, ii, 32

share, 45

zoom, 15

## C

cable

audio/video, 1, 37

USB, 1, 51

camera screen

reviewing pictures, 32

reviewing videos, 32

specifications, 62

Canadian compliance, 67

candle light mode, 12

capture specifications, 63

card slot, i

card, memory

change from internal, 25

format, 28

printing from, 53

storage capacities, 65

caring for your camera, 65

ccd, 62

clock, setting, 4

color mode, 22

computer

system requirements, 43

copy pictures

card to memory, 38

memory to card, 38

cover, lens, i

customer support, 61

customizing camera

settings, 26—28

## D

date stamp, 28

date, setting, 4

deleting

pictures/videos, 34

protecting pictures, videos, 36

digital zoom, 15

disposal, recycling, 65

dock connector, i, 3

- E**  
emailing pictures, videos, 46  
exposure  
    compensation, 24  
    metering, 23  
    specifications, 63
- F**  
favorites  
    removing, 49  
    settings, 47  
    tagging, 47  
    viewing, 47  
FCC compliance, 67  
fill flash, 16  
firmware  
    upgrading, 66  
    version, check, 28  
flash  
    range, 16  
    settings, 16, 17  
    specifications, 63  
    strength, 24  
flower mode, 11  
focus  
    AF frame, 13  
    zone, 23  
format memory, 28
- G**  
guidelines, battery, 3
- H**  
help  
    camera, 55  
    web links, 60
- I**  
icons  
    camera modes, 10  
image stabilizer, 25  
image storage, 25  
information  
    about pictures, videos, 40  
    camera firmware version, 28  
installing  
    battery, 2  
internal memory  
    change from card, 25  
    format, 28  
    storage capacity, 65  
ISO speed, setting, 22
- K**  
Kodak EasyShare software  
    upgrading, 66  
Kodak web sites, 60
- L**  
landscape mode, 11  
language, change display, 28  
latitude, 23  
LCD (liquid crystal display). See  
    camera screen  
lens, i, 62  
lights  
    status, power light, 59  
    status, ready light, 58  
loading  
    battery, 2
- M**  
Macintosh computers  
    installing software on, 44  
    system requirements, 43  
macro, 12  
magnify picture, 35  
maintenance, camera, 65  
memory  
    changing locations, 25  
    storage capacities, 65  
menu button, ii  
microphone, i  
mode button, ii

modes, picture taking, 10  
museum mode, 12

## N

nagashidori (Panning Shot)  
mode, 12  
night landscape mode, 11  
night portrait mode, 11  
NTSC, video out, 28

## O

OK button, ii  
online prints, ordering, 53  
optical zoom, 15  
orientation sensor, 27  
overview  
picture taking modes, 10

## P

package contents, 1  
PAL, video out, 28  
photo frame dock, 3  
pictures  
copying, 38  
deleting, 34  
emailing tagged, 46  
magnifying, 35  
picture size, 20  
print tagging, 46  
printing, 51  
protecting, 36  
quality problems, 57  
reviewing, 32  
storage capacity, 65  
tagging, 31  
taking, modes, 10  
playing slide show, 36  
portrait mode, 11  
power  
auto off, 66  
light, ii  
on/off, 4

power light status, 59  
printer dock, 51  
printing  
from a card, 53  
optimizing printer, 60  
order online, 53  
pictures, 51  
tagged pictures, 52  
protecting pictures, videos, 36

## Q

quickview, 14

## R

ReadMe file, 55  
ready light, ii, 58  
recycling, disposal, 65  
red-eye, flash, 16  
regulatory information, 67  
removing favorites, 49  
requirements, computer system, 43  
resizing pictures, 39  
review button, ii, 32  
reviewing pictures  
camera screen, 32  
deleting, 34  
magnifying, 35  
protecting, 36  
slide show, 36  
reviewing videos  
camera screen, 32  
deleting, 34  
protecting, 36  
running slide show, 36

## S

safety  
battery, 2  
camera, 65  
scene modes, 11  
self timer  
pictures/videos, 29

- sepia pictures, 22
  - service and support
    - telephone numbers, 61
  - setting
    - date and time, 4
    - flash, 16
    - picture taking mode, 10
    - picture taking options, 19—26
    - self timer, 29
  - share button, ii
  - sharpness, setting, 22
  - shutoff, auto, 66
  - shutter
    - button, i, ii
    - self timer delay, 29
  - sleep mode, 66
  - slide show
    - continuous loop, 37
    - on tv, 37
    - problems, 56
    - running, 36
  - slow sync, flash, 16
  - snow mode, 11
  - software
    - upgrading, 66
  - sound recording, 25
  - speaker, i
  - specifications, camera, 62
  - sport mode, 11
  - storage capacity, 65
  - sunset mode, 12
  - super macro, 12
  - support, technical, 61
  - system requirements, computer, 43
- T**
- tagging
    - favorites, 47
    - for albums, 31
    - for email, 46
    - for print, 46
  - technical specifications, camera, 62
  - telephone support, 61
  - telephoto zoom, 15
  - television, slide show, 37
  - text mode, 11
  - time lapse capture, 30
  - time, setting, 4
  - timer, shutter delay, 29
  - tips
    - battery guidelines, 3
    - maintenance/safety, 65
    - ReadMe file, 55
  - troubleshooting
    - camera, 55
    - computer/connectivity, 56
    - picture quality, 57
  - turning camera on and off, 4
  - TV Screen mode, 12
- U**
- upgrading software, firmware, 66
  - URLs, Kodak web sites, 60
- V**
- VCCI compliance, 68
  - video out, 28
  - videos, 37
    - choosing mode, 10
    - copying, 38
    - date/time stamp, 27
    - deleting, 34
    - editing, 34
    - emailing tagged, 46
    - length, 25
    - playing, 33
    - protecting, 36
    - quality, 25
    - recording, 9
    - setting length, 25
    - setting resolution, 25
    - storage capacities, 65
    - viewing, 32

viewing picture  
  after taking, 32  
  magnified, 35

**W**

white balance, 21  
wide angle zoom, 15  
Windows OS-based computers  
  installing software, 44  
  system requirements, 43

**Z**

zoom  
  button, ii  
  using, 15