

Electronics Division Box 1246 2876 Culver Ave. Dayton, Ohio 45401 Telephone (513) 296-0330

Operating Instructions For Model 1314

For Model 131A PURSUIT Atari

•	SL?							SA2		<u></u>		5 Y	
LLP	SL†	212 , 213	LRP	¥	R START 1	RLP	s a 1	x SAS	SR3	RRP	ON	OFF	
1	×	X H		1			•	K \$84	K	*			
	SL6	X SL7		, COIN			# \$86	ĸ	SA7		POWER		
	R	•		b.	Ħ		1		I.	¥	ÓΝ	OFF	

- 1. Insert 13th card in program A connector.
- 2. Insert Pursuit game board in 25 pin connector using 22 pin orientation.
- 3. Connect speaker to red and black wires from program card.
- 4. RRP is vertical motion. RLP is horizontal motion.
- 5. Coin is coin switch.
- 6. Trigger is SR-6.
- 7. Leds are for 16, 12, 8 and 4 points and EXT is for extended play.