



**PRINTER OPTIONS**

**PF-2**

# **PARTS CATALOGUE**

# PF-2 Parts Catalogue

## Table of Contents

|                                          |    |
|------------------------------------------|----|
| Covers (Fig.1) .....                     | 3  |
| Internal Parts of Main Unit (Fig.2)..... | 5  |
| Trays (Fig.3).....                       | 8  |
| Harness (Fig.4).....                     | 11 |


## Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

- 'Ref No.' .....Reference number which corresponds to the parts in the figure
- 'Part code'.....Part code which identifies the part
- 'Part description' .....A brief description of the part
- 'Quantity'.....Quantity of the part used in the printer or option


Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

Fig.1 - Covers

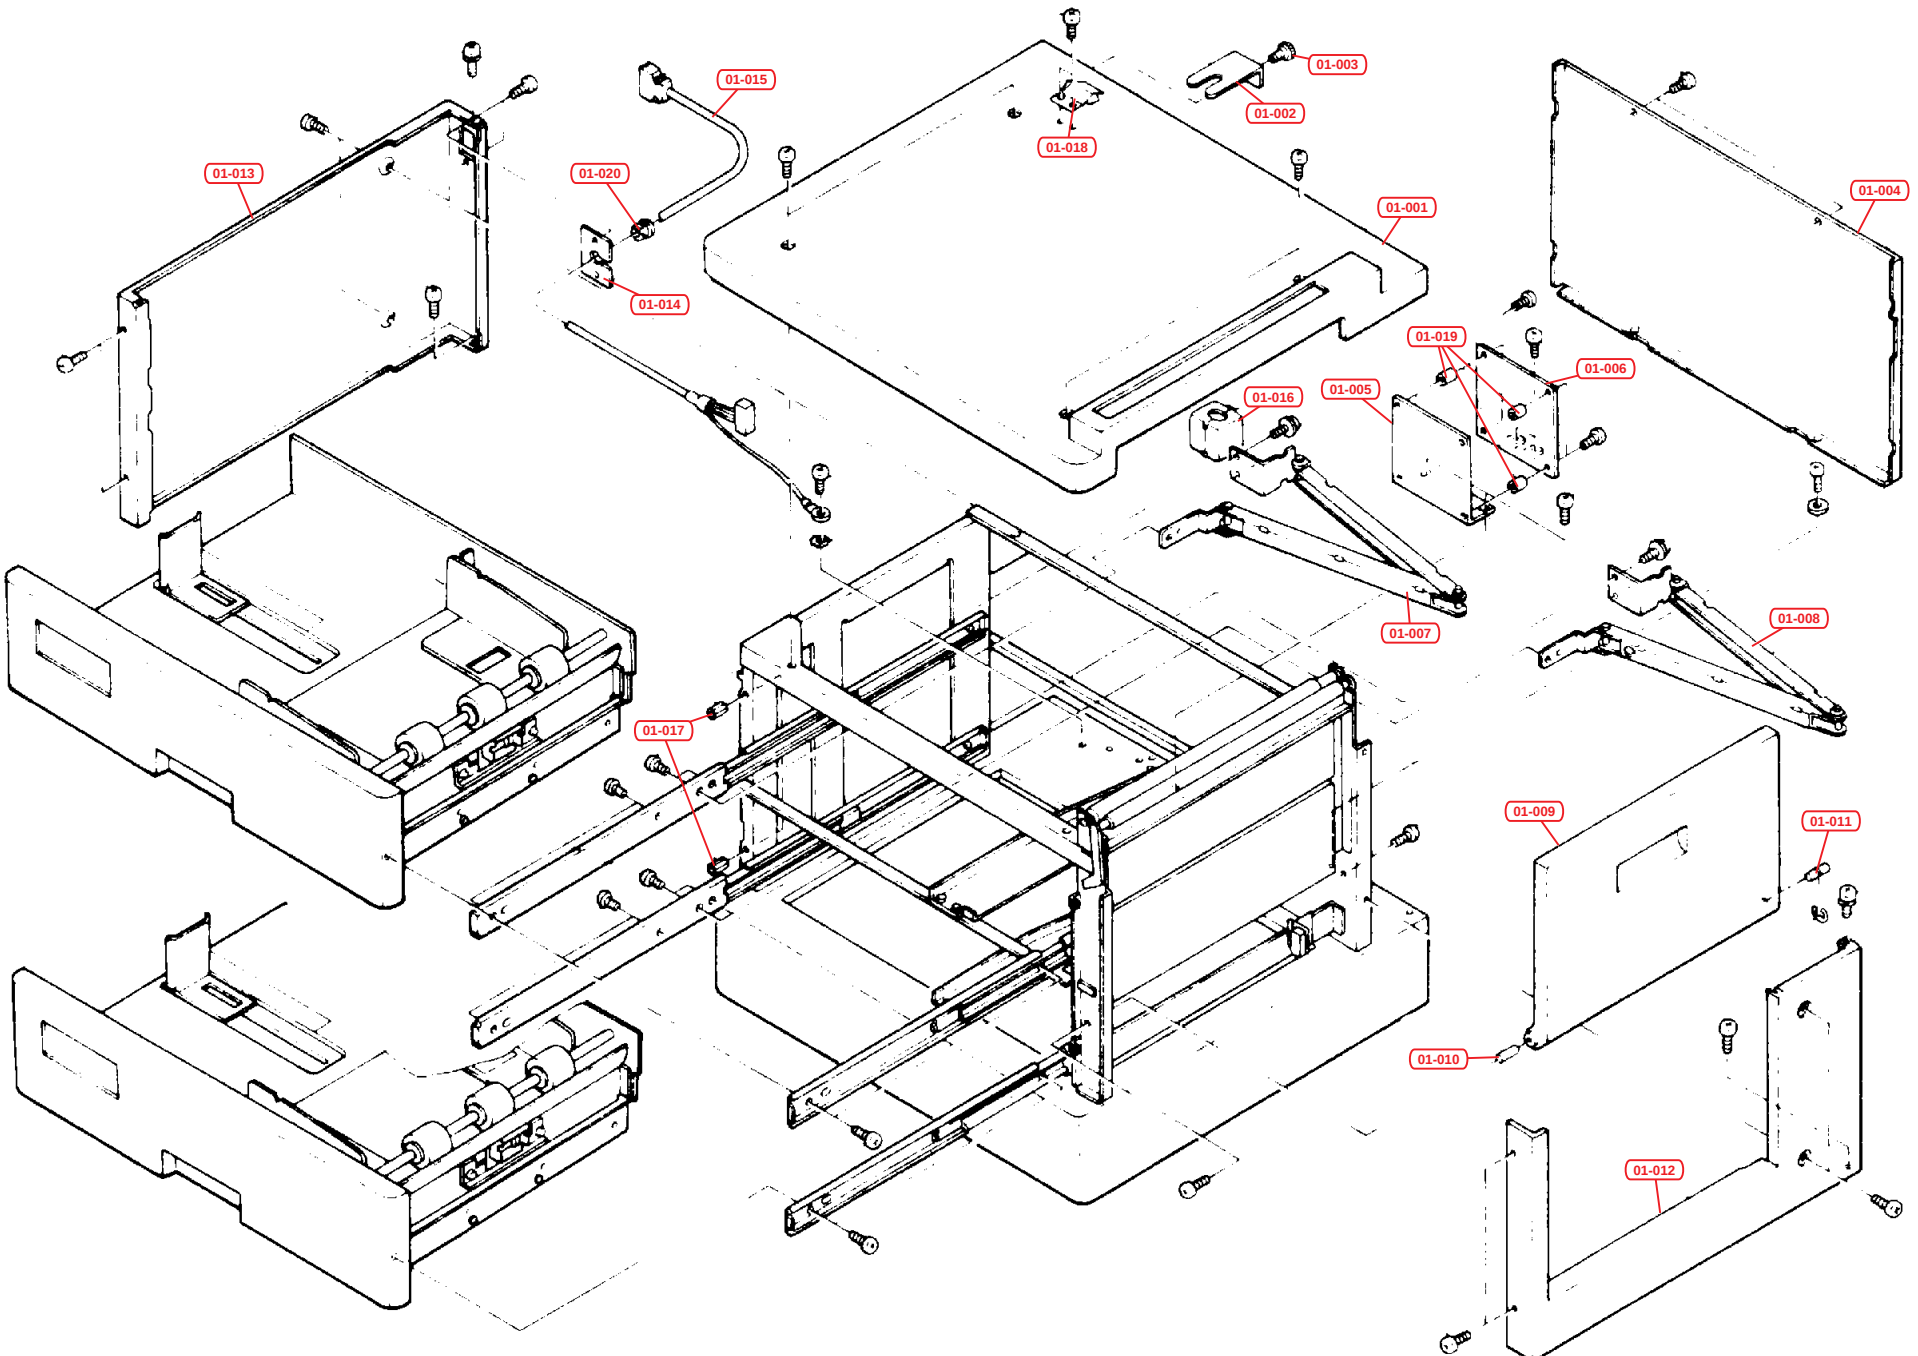

| Ref No.       | Part Code           | Description                   | Quantity |
|---------------|---------------------|-------------------------------|----------|
| 01-001        | 5SNSP0006304        | TOP COVER                     | 1        |
| 01-002        | 5SNSP0006306        | FOOT SPACER                   | 1        |
| 01-003        | 5SNSP0006309        | SET SCREW                     | 1        |
| 01-004        | 5SNSP0006306        | REAR COVER                    | 1        |
| 01-005        | 5SNSP0008342        | SOARD BRACKET                 | 1        |
| <b>01-006</b> | <b>5SNSP0006341</b> | <b>P.W. BOARD ASSY (MAIN)</b> | <b>1</b> |
| <b>01-007</b> | <b>5SNSP0008335</b> | <b>UPJOINTCORDASSY</b>        | <b>1</b> |
| <b>01-008</b> | <b>5SNSP0006336</b> | <b>LOW JOINT CORD ASSY</b>    | <b>1</b> |
| <b>01-009</b> | <b>5SNSP0008320</b> | <b>FEED COVER ASSY</b>        | <b>1</b> |
| 01-010        | 5SNSP0006310        | FEED COVERPINA                | 1        |
| 01-011        | 5SNSP0006311        | FEED COVER PIN B              | 1        |
| 01-012        | 5SNSP0006316        | RIGHT COVER                   | 1        |
| 01-013        | 5SNSP0006303        | LEFTCOVER                     | 1        |
| 01-014        | 5SNSP0006305        | BUSHING PLATE                 | 1        |
| <b>01-015</b> | <b>5SNSP0006345</b> | <b>CONN CORD ASSY(I/F)</b>    | <b>1</b> |
| 01-016        | 5SNSP0006436        | FERRITE CDRE                  | 1        |
| 01-017        | 5SNSP0008307        | SPACERPIN                     | 2        |
| 01-016        | 5SNSP0008436        | FERRITE CORE                  | 1        |
| 01-018        | 5SNSP0008378        | EARTH PLATE                   | 1        |
| 01-019        | 5SNSP0008379        | SPACER COLLAR                 | 4        |
| 01-020        | 5SNSP0006347        | BUSHING                       | 1        |


Fig.2 - Internal Parts of Main Unit

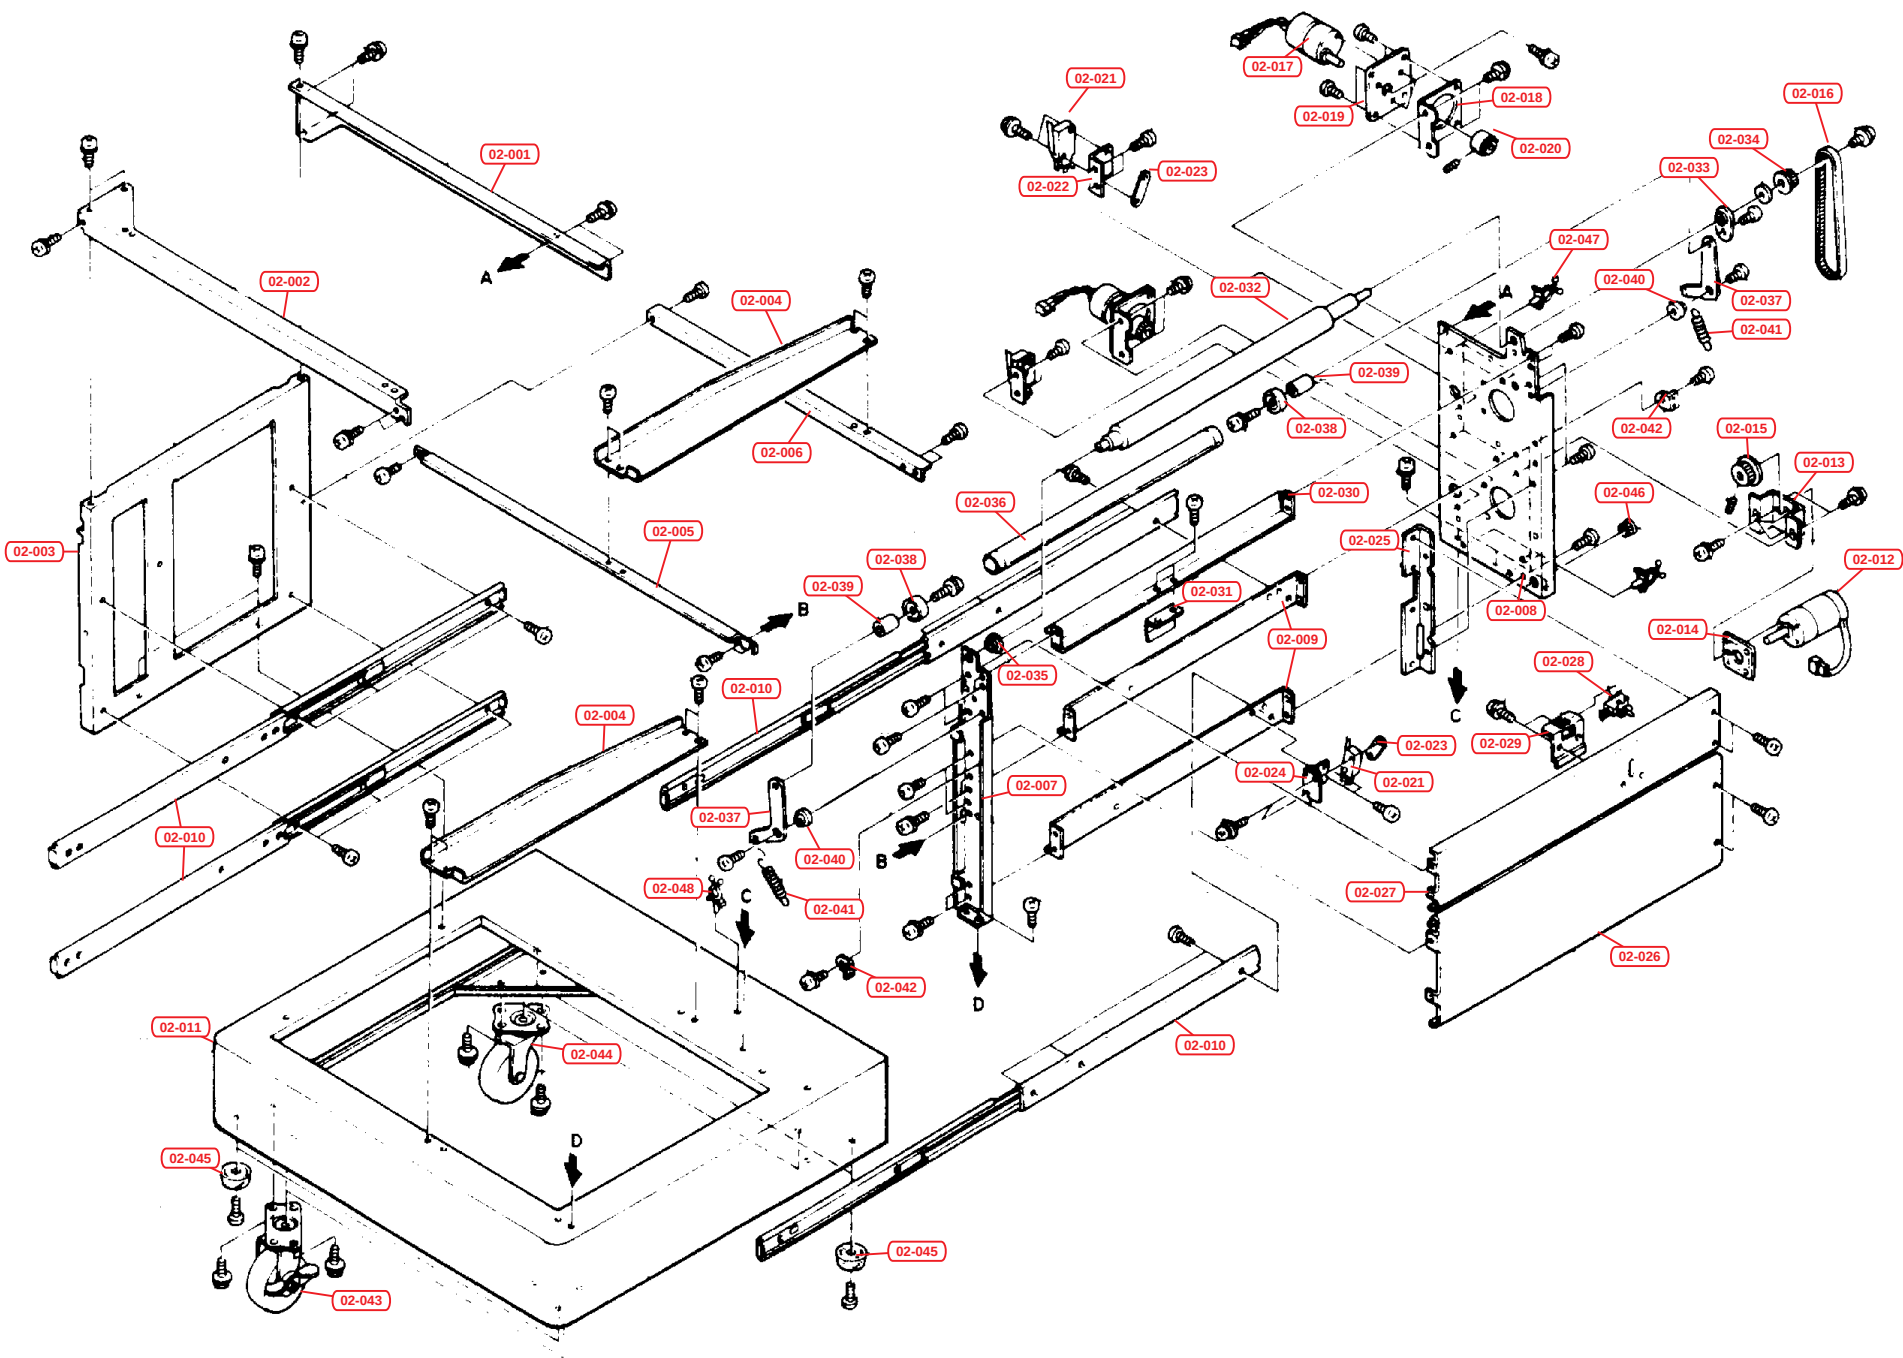

| Ref No.       | Part Code           | Description                 | Quantity |
|---------------|---------------------|-----------------------------|----------|
| 02-001        | 5SNSP0008319        | UPPER CHANNEL R             | 1        |
| 02-002        | 5SNSP0008318        | UPPER CHANNEL F             | 1        |
| 02-003        | 5SNSP0008334        | FRAME U FT                  | 1        |
| 02-004        | 5SNSP0008317        | GUIDE RAIL                  | 2        |
| 02-005        | 5SNSP0008329        | LOWER CHANNEL F             | 1        |
| 02-006        | 5SNSP0008330        | LOWER CHANNEL R             | 1        |
| 02-007        | 5SNSP0008271        | GUIDE FRAME F               | 1        |
| 02-008        | 5SNSP0008272        | GUIDE FRAME R               | 1        |
| 02-009        | 5SNSP0008273        | CHANNEL FRAME               | 2        |
| 02-010        | 5SNSP0008292        | SUDE RAIL                   | 4        |
| 02-011        | 5SNSP0008312        | BASE FRAME                  | 1        |
| <b>02-012</b> | <b>5SNSP0008297</b> | <b>CARRIER MOTOR ASSY</b>   | <b>1</b> |
| 02-013        | 5SNSP0008298        | CARRIER MOTOR BKT           | 1        |
| 02-014        | 5SNSP0008289        | RUBBER PLATE                | 1        |
| 02-015        | 5SNSP0008300        | TIMING PULLEY B             | 1        |
| 02-016        | 5SNSP0008301        | TIMING BELT                 | 1        |
| <b>02-017</b> | <b>5SNSP0008293</b> | <b>FEEDMOTORASSY</b>        | <b>2</b> |
| 02-018        | 5SNSP0008294        | FEED MOTOR BRACKET          | 2        |
| 02-019        | 5SNSP0008295        | MOTOR PLATE                 | 2        |
| 02-020        | 5SNSP0008286        | MOTOR GEAR Z20B             | 2        |
| <b>02-021</b> | <b>5SNSP0008302</b> | <b>MICRO SWITCH</b>         | <b>3</b> |
| 02-022        | 5SNSP0008331        | SWITCH BRACKET              | 2        |
| 02-023        | 5SNSP0008332        | SCREW PLATE                 | 3        |
| 02-024        | 5SNSP0008333        | COVER SW BRACKET            | 1        |
| 02-025        | 5SNSP0008274        | GUIDE PLATE BRACKET         | 1        |
| 02-026        | 5SNSP0008275        | GUIDE PLATE LOWER           | 1        |
| 02-027        | 5SNSP0008276        | GUIDE PLATE MIDDLE          | 1        |
| <b>02-028</b> | <b>5SNSP0008277</b> | <b>PHOTO SENSOR</b>         | <b>1</b> |
| 02-029        | 5SNSP0008278        | SEN80R BRACKET B            | 1        |
| 02-030        | 5SNSF0008279        | GUIDE PLATE UPPER           | 1        |
| 02-031        | 5SNSP0008280        | MAGNET PLATE                | 1        |
| 02-032        | 5SNSP0008281        | CARRIER ROLL LOW            | 1        |
| 02-033        | 5SNSP0006282        | ROLLEUSH                    | 1        |
| <b>02-034</b> | <b>5SNSP0008283</b> | <b>TIMING PULLEY ASSY**</b> | <b>1</b> |
| 02-035        | 5SNSP0008192        | BUSH METAL                  | 1        |
| 02-036        | 5SNSP0008265        | CARRIER ROLL UP             | 1        |
| 02-037        | 5SNSP0006286        | PRESSURE LEVER              | 2        |
| 02-038        | 5SNSP0006267        | BEARING                     | 2        |
| 02-039        | 5SNSP0006288        | STOPPER PIN                 | 2        |
| 02-040        | 5SNSP0006288        | LEVER PIN                   | 2        |
| 02-041        | 5SNSP0006290        | PRESSURE SPRING             | 2        |
| 02-042        | 5SNSP0006291        | SPRING PLATE                | 2        |
| 02-043        | 5SNSP0008313        | FRONT CASTER                | 2        |
| 02-044        | 5SNSP0008314        | REARCASTER                  | 2        |
| 02-045        | 5SNSP0008315        | FOOT                        | 4        |

| Ref No. | Part Code    | Description         | Quantity |
|---------|--------------|---------------------|----------|
| 02-046  | 5SNSP0006360 | OPEN CLOSED BUSHING | 1        |
| 02-047  | 5SNSP0008361 | CABLE HOLDER A      | 4        |
| 02-048  | 5SNSP0006382 | CABLE HOLDER B      | 3        |

Fig.3 - Trays

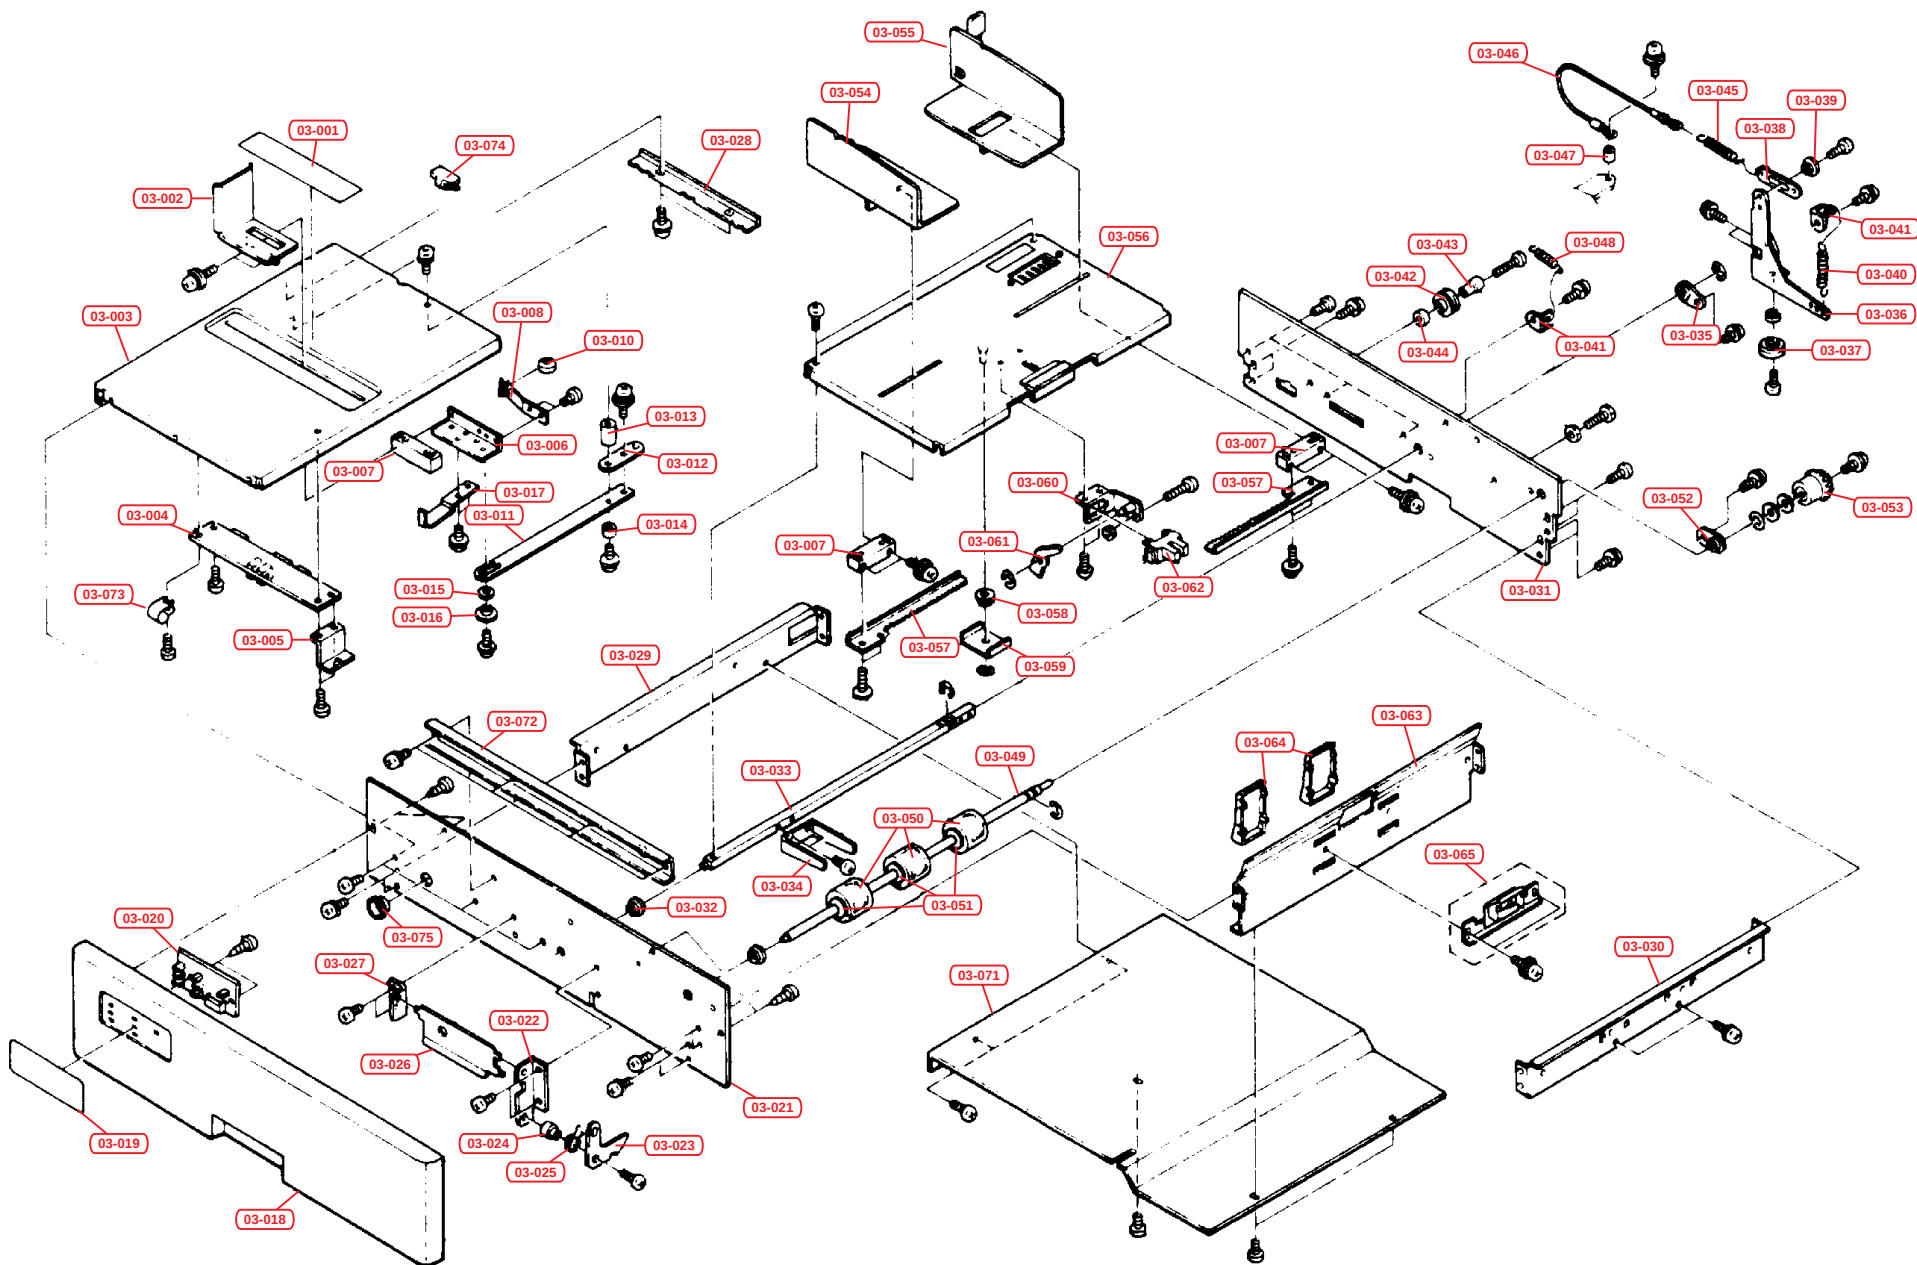

| Ref No.       | Part Code           | Description                   | Quantity |
|---------------|---------------------|-------------------------------|----------|
| 03-001        | 5SNSP0008197        | LABEL PAPER SIZE              | 2        |
| 03-002        | 5SNSP0008201        | PAPER STOPPER                 | 2        |
| 03-003        | 5SNSP0008196        | FEED BASE                     | 2        |
| <b>03-004</b> | <b>5SNSP0008196</b> | <b>PW BOARD ASSY (SENSOR)</b> | <b>2</b> |
| 03-005        | 5SNSP0008270        | BASE SUPPORT                  | 2        |
| 03-006        | 5SNSP0008196        | SLIDE BRACKET                 | 2        |
| 03-007        | 5SNBP0008199        | SLIDE BASE                    | 6        |
| 03-008        | 5SNSP0008200        | FLAT SPRING                   | 2        |
| 03-010        | 5SNSP0008203        | ROLL STOPPER                  | 2        |
| 03-011        | 5SNSF0008204        | JOINT LINK                    | 2        |
| 03-012        | 5SNSP0008205        | ADJUST PLATE                  | 2        |
| 03-013        | 5SNSP0008206        | PIVOT SPACER                  | 2        |
| 03-014        | 5SNSP0008207        | PIVOT PIN                     | 2        |
| 03-015        | 5SNSP0008206        | SLIDE BRACKET PIN             | 2        |
| 03-016        | 5SNSP0008208        | SLIDE COLLAR                  | 2        |
| 03-017        | 5SNSP0008210        | SENSOR PLATE                  | 2        |
| 03-018        | 5SNSP0003336        | FRONTCOVER                    | 2        |
| 03-019        | 5SNSP0006339        | PANEL                         | 2        |
| <b>03-020</b> | <b>5SNSF0008340</b> | <b>P.W. BOARD ASSY (LED)</b>  | <b>2</b> |
| 03-021        | 5SNSF0008191        | FRAME FRONT                   | 2        |
| 03-022        | 5SNSP0003259        | LEVER BRACKET R               | 2        |
| 03-023        | 5SNSP0008260        | HOOK PLATE                    | 2        |
| 03-024        | 5SNSP0008261        | HOOK PIN                      | 2        |
| 03-025        | 5SNSP0008262        | HOOK SPRING                   | 2        |
| 03-026        | 5SNSP0003263        | OPEN LEVER                    | 2        |
| 03-027        | 5SNSP0003264        | LEVER BRACKET L               | 2        |
| 03-028        | 5SNSP0008202        | STOPPER PLATE                 | 2        |
| 03-029        | 5SNSP0008195        | STAY LEFT                     | 2        |
| 03-030        | 5SNSP0008194        | STAY RIGHT                    | 2        |
| 03-031        | 5SNSP0003193        | FRAME REAR                    | 2        |
| 03-032        | 5SNSP0003192        | BUSH METAL                    | 4        |
| 03-033        | 5SNSF0008236        | HINGE ROD                     | 2        |
| 03-034        | 5SNSF0008237        | HINGE BRACKET                 | 2        |
| 03-035        | 5SNSF0008236        | HINGE BUSH                    | 2        |
| 03-036        | 5SNSF0003239        | HINGE LEVER                   | 2        |
| 03-037        | 5SNSP0003240        | GUIDE ROLL                    | 2        |
| 03-038        | 5SNSP0008241        | SPRING PLATE                  | 2        |
| 03-039        | 5SNSF0008242        | SPRING PLATE PIN              | 2        |
| 03-040        | 5SNSP0006243        | TENSION SPRING A              | 2        |
| 03-041        | 5SNSP0008244        | ANGLE PLATE                   | 4        |
| 03-042        | 5SNSP0006245        | PULUEY                        | 2        |
| 03-043        | 5SNSP0008246        | PULUEY PIN                    | 2        |
| 03-044        | 5SNSP0008247        | COU AR                        | 2        |
| 03-045        | 5SNSP0008248        | TENSION SPRING B              | 2        |
| 03-046        | 5SNSP0008249        | TENSION WIRE                  | 2        |

| Ref No.       | Part Code           | Description           | Quantity |
|---------------|---------------------|-----------------------|----------|
| 03-047        | 5SNSP0008250        | WIRE PIN              | 2        |
| 03-048        | 5SNSP0008251        | TENSION SPRING C      | 2        |
| 03-049        | 5SNSP0008252        | FEED ROLLSHAFT        | 2        |
| <b>03-050</b> | <b>5SNSP0008253</b> | <b>FEED ROLL</b>      | <b>6</b> |
| <b>03-051</b> | <b>5SNSP0008254</b> | <b>WHEEL ROLL</b>     | <b>6</b> |
| 03-052        | 5SNSP0008255        | FEED BUSH             | 2        |
| <b>03-053</b> | <b>5SNSP0008256</b> | <b>FEED GEAR ASSY</b> | <b>2</b> |
| 03-054        | 5SNSP0008230        | GUIDE PLATE F         | 2        |
| 03-055        | 5SNSP0008231        | GUIDE PLATE R ASSY    | 2        |
| 03-056        | 5SNSP0008219        | BOTTOM PLATE ASSY     | 2        |
| 03-057        | 5SNSP0008224        | RACK                  | 4        |
| 03-058        | 5SNSP0008225        | GEAR Z145             | 2        |
| 03-059        | 5SNSP0008226        | RACK GUIDE PLATE      | 2        |
| 03-060        | 5SNSP0008227        | SENSOR BRACKET A      | 2        |
| 03-061        | 5SNSP0008226        | FEED ACTUATOR         | 2        |
| <b>03-062</b> | <b>5SNSP0008229</b> | <b>PHOTO SENSOR</b>   | <b>2</b> |
| 03-063        | 5SNSP0008211        | PAPER FEED PLATE      | 2        |
| 03-064        | 5SNSP0008212        | GUIDE LIB             | 4        |
| <b>03-065</b> | <b>5SNSP0008213</b> | <b>SEPARATOR ASSY</b> | <b>2</b> |
| 03-071        | 5SNSP0008268        | BASE PLATE            | 2        |
| 03-072        | 5SNSP0008363        | CHANNEL               | 1        |
| 03-073        | 5SNSP0008364        | CABLE CLAMP           | 1        |
| 03-074        | 5SNSP0008385        | CORD KEEP             | 1        |
| 03-075        | 5SNSP0008349        | OPEN CLOSED BUSHING   | 1        |

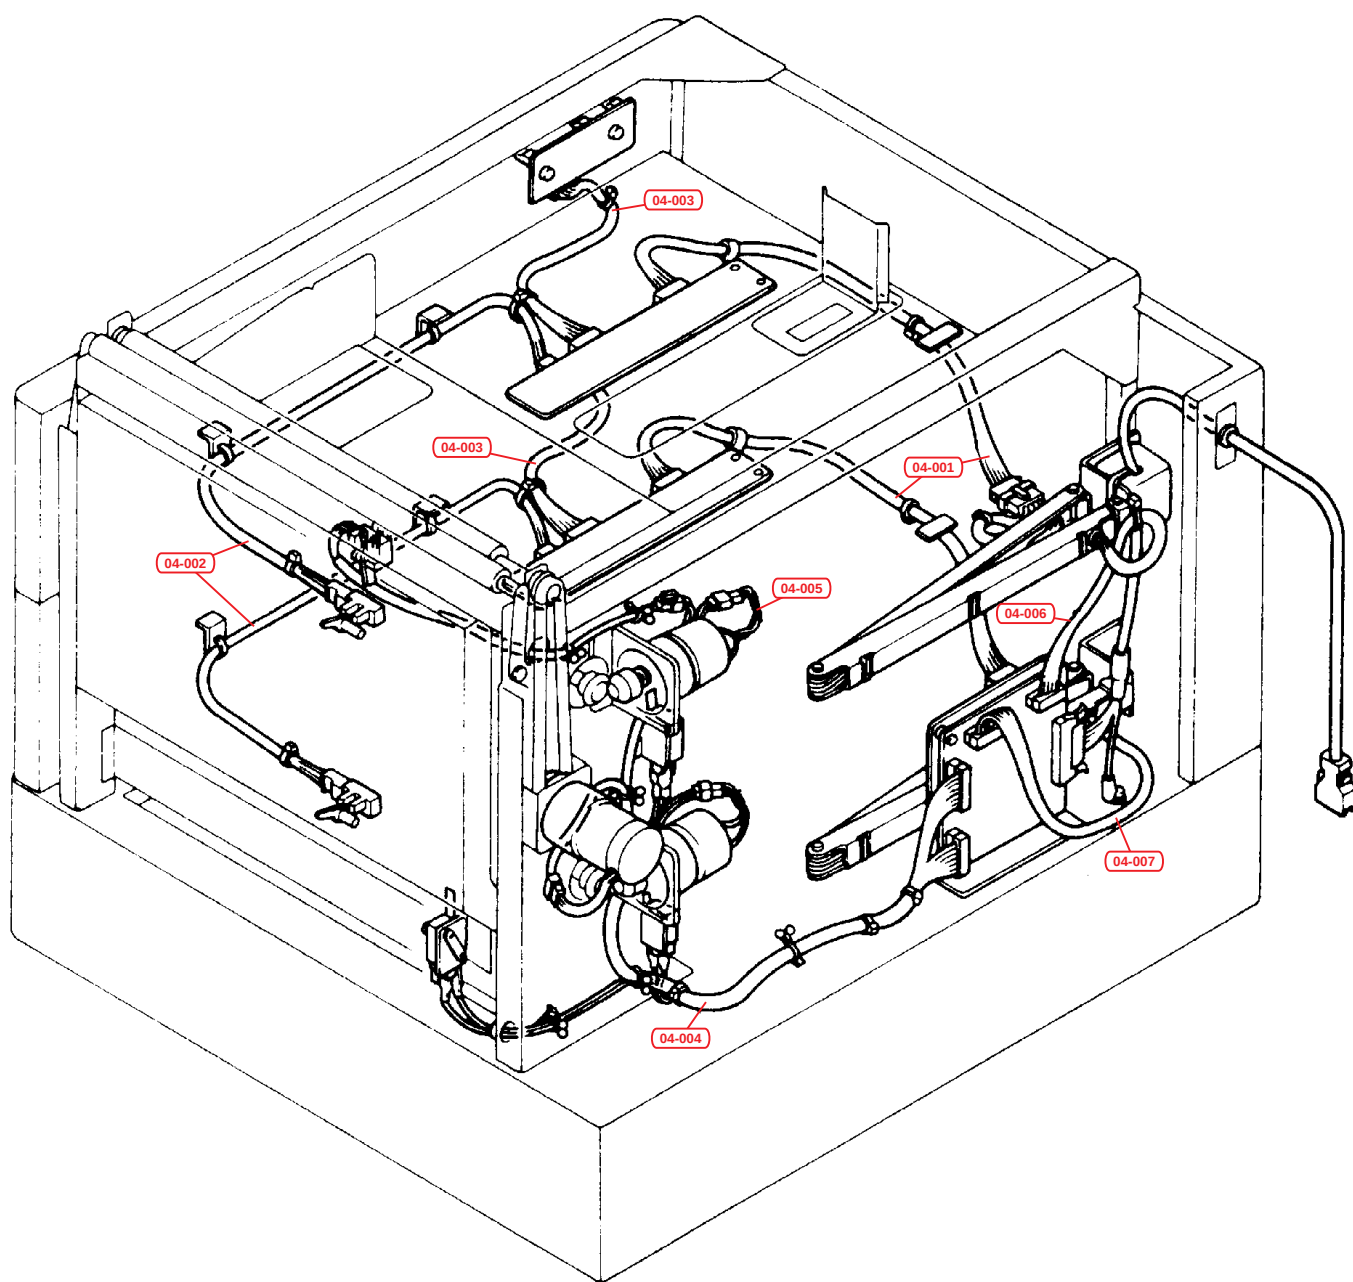


Fig.4 - Harness

| Ref No. | Part Code    | Description             | Quantity |
|---------|--------------|-------------------------|----------|
| 04-001  | 5SNSP0008266 | CONN CORD ASSY(CONNECT) | 2        |
| 04-002  | 5SNSP0008267 | CONN CORD ASBY(SENSOR)  | 2        |
| 04-003  | 5SNSP0008266 | CONN CORD ASSY(DISPLAY) | 2        |
| 04-004  | 5SNSP0008343 | CONN CORD ASSY(MAIN)    | 1        |
| 04-005  | 5SNSP0008344 | CONN CORD ASSY(MOTOR)   | 2        |
| 04-006  | 5SNSP0008327 | UPPER CORD ASSY         | 1        |
| 04-007  | 5SNSP0008328 | LOWER CORD ASSY         | 1        |