



PRINTER OPTIONS

PF-7

PARTS CATALOGUE

PF-7 Parts Catalogue

Table of Contents


Paper Feed Assembly PF-7 (Fig.1).....3

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

- 'Ref No.'Reference number which corresponds to the parts in the figure
- 'Part code'.....Part code which identifies the part
- 'Part description'A brief description of the part
- 'Quantity'.....Quantity of the part used in the printer or option

Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

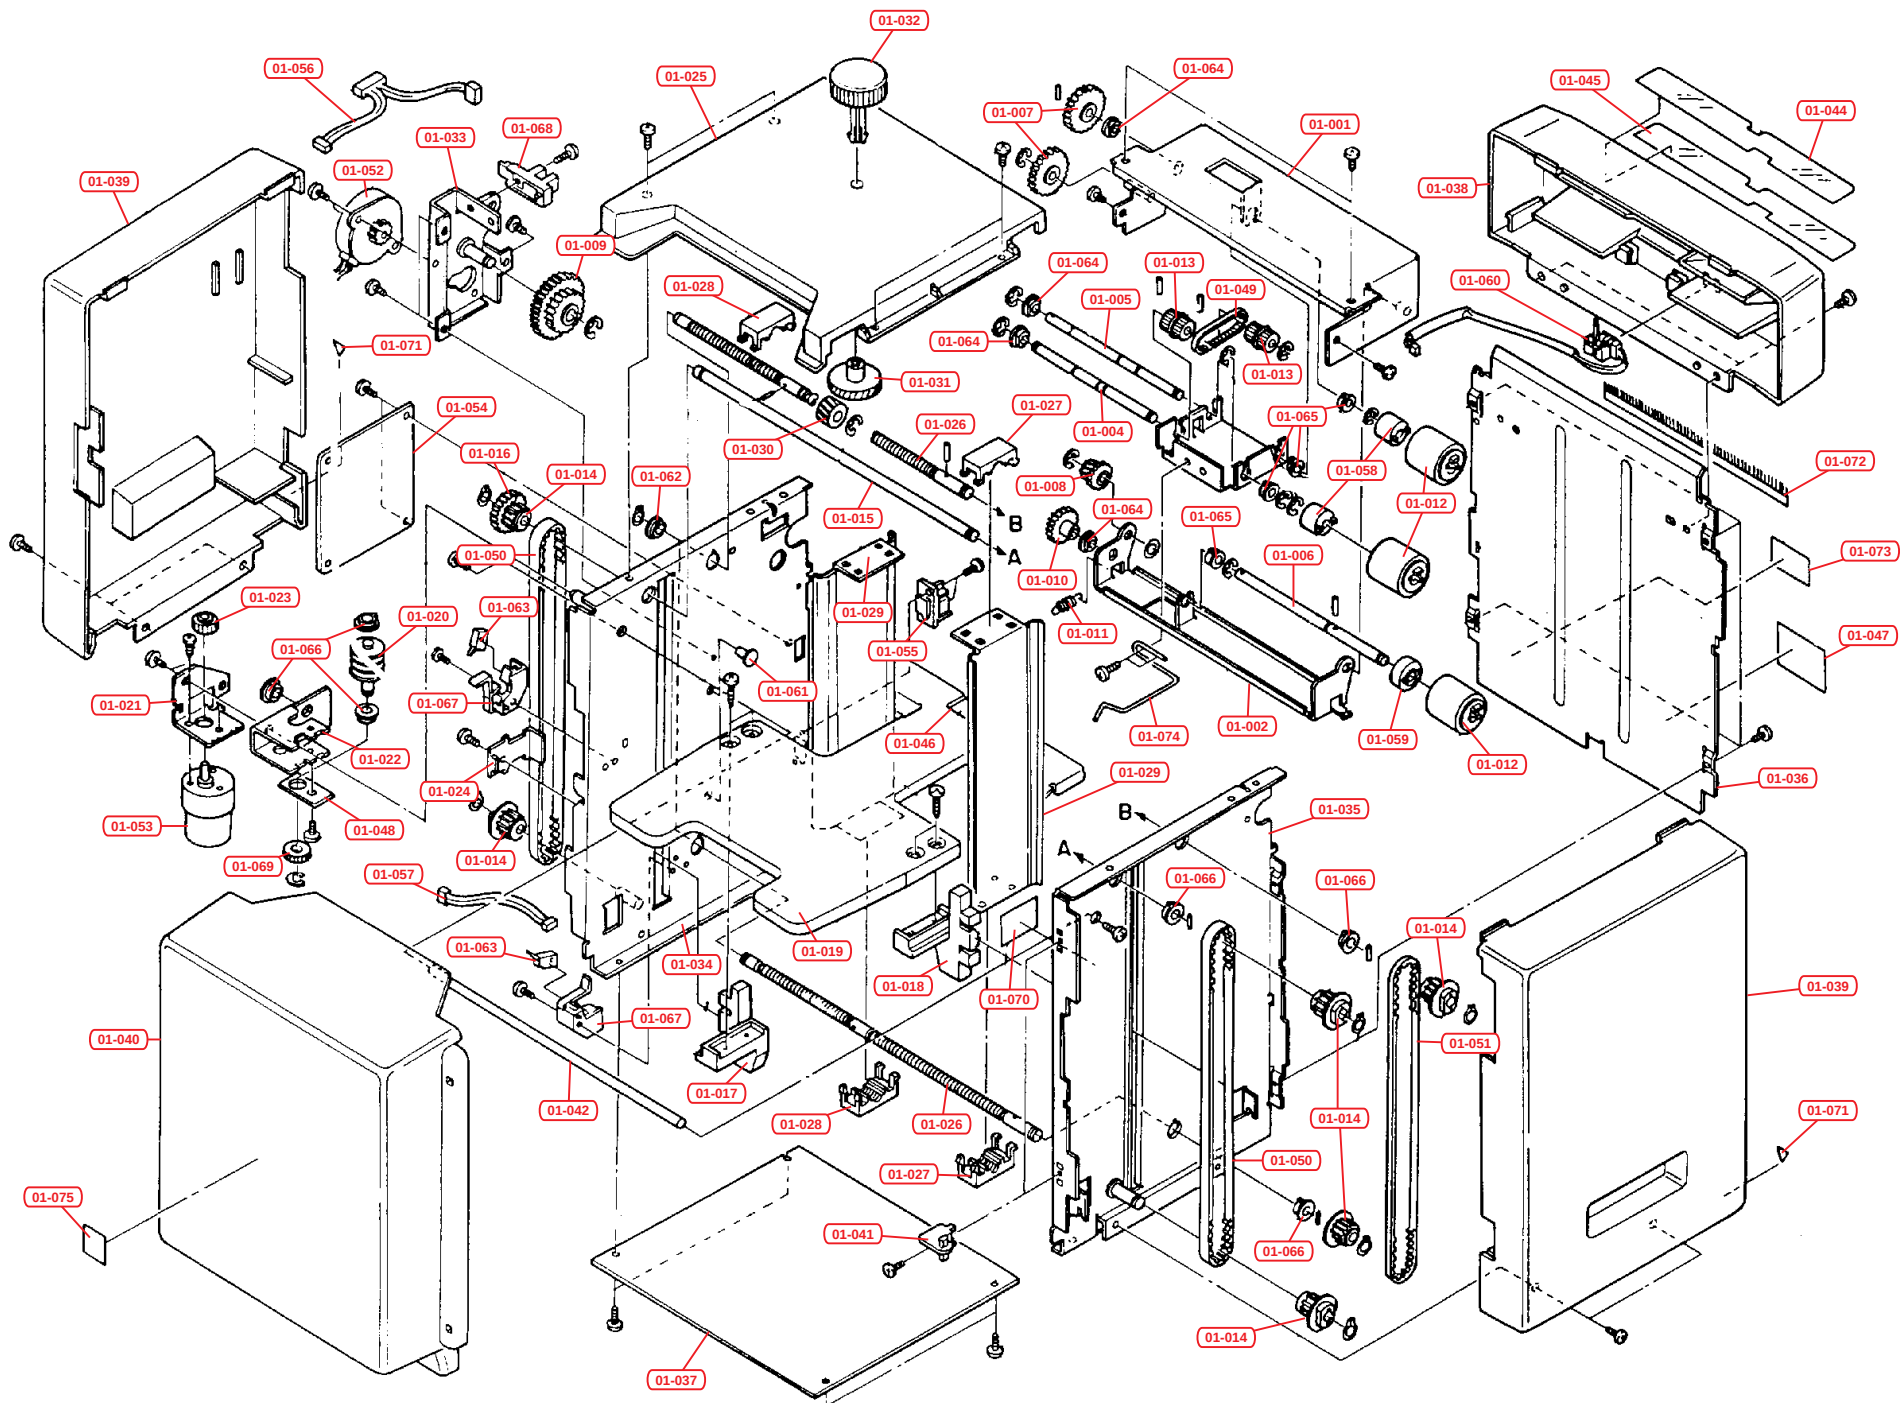

Ref No.	Part Code	Description	Quantity
01-000	PF-7	PAPER FEED ASSY	1
01-001	5MMX866SL006	FRAME FEED UP	1
01-002	5MMB884SL004	FRAME FEED LOW	1
01-003	5MMB663SL004	BKT PICK	1
01-004	5MMT766SN003	SHAFT FEED PICK	1
01-005	5MMT766SN001	SHAFT FEED UP	1
01-006	5MMT766SN002	SHAFT FEED LOW	1
01-007	5MVG148DN012	GEAR Z36	2
01-008	5MVG028DN002	GEAR Z15-Z19	1
01-009	5MVG069DN001	GEAR Z33-Z51	1
01-010	5MVG133DN002	GEAR Z26	1
01-011	5MMW354LD002	SPRING FEED	2
01-012	5AAMPF7A**03	ROLLER ASSY	3
01-013	5MVG337DN002	PULLEY P20-P21	2
01-014	5MVG318DN001	PULLEY XL14	6
01-015	5MMT866SN015	SHAFT ELEV	1
01-016	5MVG138DN018	GEAR WHEEL H30	1
01-017	5MVX665DN001	GUIDE ELEVATOR R	1
01-018	5MVX665DN002	GUIDE ELEVATOR L	1
01-019	5MMB882SN001	TABLE PAPER	1
01-020	5MVG117DN001	GEAR WORM	1
01-021	5MML654SL002	BKT DC MOTOR	1
01-022	5MMU654SL001	BKT WORM	1
01-023	5MVG127DN031	GEAR MOTOR	1
01-024	5MVL332SB002	ACTUATOR ELEVATOR	1
01-025	5MVB882SW002	COVER TOP	1
01-026	5MMT866SN017	SCREW GUIDE	2
01-027	5MVX422DN002	NUT GUIDE R	2
01-028	5MVX422DN003	NUT GUIDE L	2
01-029	5MMU864SL001	GUIDE PAPER	2
01-030	5MVG127DN030	GEAR H15-R	1
01-031	5MVG134DN001	GEAR H30-R	1
01-032	5MVN653SW001	KNOB SIZE	1
01-033	5MMM765SL011	BKT MOTOR	1
01-034	5MMX885SL001	FRAME R	1
01-035	5MMX884SL001	FRAME L	1
01-036	5MMU882SN001	STAY FRONT	1
01-037	5MMS887SL002	PLATE BOTTOM	1
01-038	5MVB876SW007	COVER FEED	1
01-039	5MVB886SW008	COVER SIDE	2
01-040	5MVB887SS001	COVER TRAY	1
01-041	5MVX332DN002	PIVOT TRAY	2
01-042	5MMT866SN016	SHAFT STAY F	1
01-043	5MVVL865WN01	LABEL ADJUST	1
01-044	5MVS442KC001	SHEET GUIDE UP	2

Ref No.	Part Code	Description	Quantity
01-045	5MVS442KC002	SHEET GUIDE LOW	2
01-046	5MVS336RF004	PAD CASSETTE	1
01-047	5MVVSPF7A**1	LABEL SERIAL	1
01-048	5MMS336SL008	PLATE WORM	1
01-049	5MVX19ODB001	BELT MXL60-3.2	1
01-050	5MVX190DB002	BELT XL250-9.6	2
01-051	5MVX19ODB003	BELT XL230-6.4	1
01-052	5EZNT2400201*01	MOTOR STEPPING	1
01-053	5AAYPF7A**07	DC MOTOR ASSY	1
01-054	5AAPRLGC2002AH	P.W BOARD ASSY	1
01-055	5AACCNNA8GEA	CONN. CORD ASSY S00839	1
01-056	5AACCNNA9GEA	CONN. CORD ASSY S00840	1
01-057	5AACCNNB1GEA	CONN. CORD ASSY S00842	1
01-058	5AAZPF7A**02	BEARING FEED	2
01-059	5AAZPF7A**03	TORQUE LIMITER	1
01-060	5ENXOS573533*01	PT. SENSOR	1
01-061	5MVX211NN019	LOCKING CARD SPACER	3
01-062	5MMM176CJ003	METAL BUSH KD	3
01-063	5ESM010235***01	MICRO SWITCH	3
01-064	5MMM121CX001	BUSH DRUM	4
01-065	5MVM176DN009	BEARING	4
01-066	5MVM122DB003	BUSH POM	6
01-067	5MVX532DN001	BKT SENSOR BOTTLE	2
01-068	5ENXGP1A05HR*	PHOTO SENSOR	1
01-069	5MVG137DB024	GEAR CLUTCH Z22	1
01-070	5MVVL431WN13	PAPER LIMIT LABEL	2
01-071	5MVVL111WN02	LEVER LABEL	4
01-072	5MVS824XF002	DIS CHARGER FEED	1
01-073	M5VVL665WN01	LABELHAND CAUTION	1
01-074	5MMW802LD002	ACTUATOR TRAY	1
01-075	5MVVL221AC02	SEAL TRAY	1