



TU-108

PARTS LIST

Published in Dec.'00
5FD70770

TU-108

NOTE

1. Indicate parts number and machine model when placing an order.

eg.	Parts Number	Parts Name	Machine Model	Cycle	Quantity
	5FD00110	STOPPER PART	TU-108	60Hz	1

2. Service calls and freight will be charged separately.

3. Symbols in the "Parts Number" column.

- Parts with "●" indicates the service parts and the parts without "●" can not be supplied.

Parts List

TU-108

———— CONTENTS ————

FIG.1	TU-108 (1)	2
FIG.2	TU-108 (2)	4
FIG.3	TU-108 (3)	6
FIG.4	TU-108 (4)	8
FIG.5	TU-108 (5)	10
FIG.6	TU-108 (6)	12
FIG.7	TU-108 (7)	14
FIG.8	TU-108 (8)	16
FIG.9	TU-108 (9)	18
FIG.10	TU-108 (10)	20
FIG.11	TU-108 (11)	22
FIG.12	TU-108 (12)	24
FIG.13	TU-108 (13)	26
FIG.14	TU-108 (14)	28
	• INDEX	30

FIG. 1 TU-108 (1)

5FD

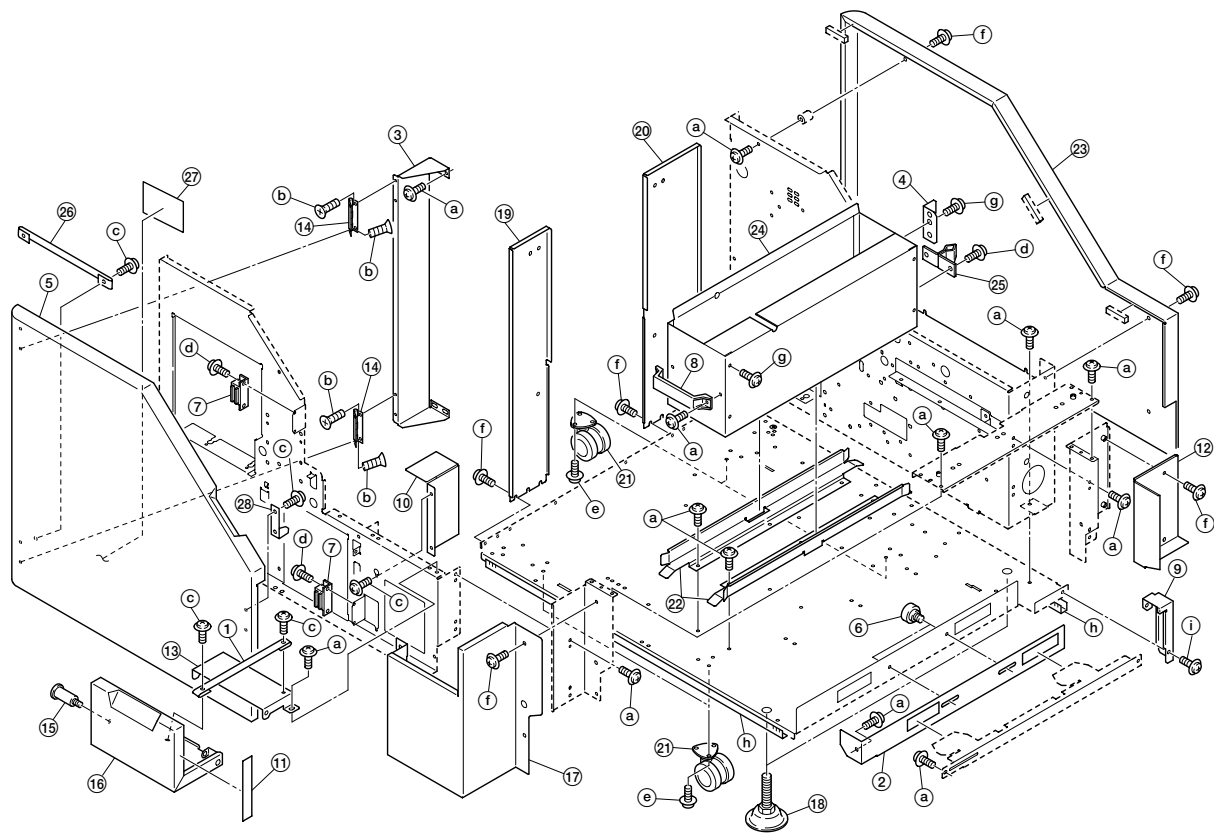 


FIG. 1 TU-108 (1)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD00300	STOPPER PART		a-B4004060
	2	5FD00080	CONNECTING PLATE		b-B1003060
	3	5FD00250	FULCRUM PLATE/UPPER		c-B4003060
	4	5FD00180	ACTUATOR/1		d-B1003040
	5	5FD00190	FRONT DOOR		e-B1004060
	6	5FD02040	PAPER EXIT UP/DOWN SCREW		f-5C331390
	7	5A825890	MAGNET CATCH		g-B0013060
	8	5A822121	KNOB		h-5C332300
	9	5FD00340	REAR AUXILIARY COVER		i-B1603060
	10	5FD00040	SENSOR COVER		
	11	5FD00330	PROTECTION PART/3		
	12	5FD00280	REAR COVER/RIGHT		
	13	5FD00240	HINGE MOUTING PLATE		
	14	5FD00290	HINGE PLATE		
	15	5A910730	BELT DETECTING SCREW		
	16	5FD00260	CONVEYANCE DOOR		
	17	5FD00270	FRONT COVER/LOWER		
	18	5FD02100	BOTTOM PLATE SUPPORT PART		
	19	5FD00220	SIDE COVER/FRONT		
	20	5FD00230	SIDE COVER/REAR		
	21	5FD02090	CARRIAGE ROLLER		
	22	5FD00010	PAPER COLLECTING BOTTOM PLATE		
	23	5FD00210	REAR COVER		
	24	5FD00020	BOX		
	25	5FD00110	STOPPER PART		
	26	5A808560	FRONT DOOR HANGER BAND (RIGHT)		
	27	5FD01670	JAM PROCESSING LABEL		
	28	5A907720	ACTUATOR		

The parts with "●" only are available as spare parts.

FIG. 2 TU-108 (2)

5FD

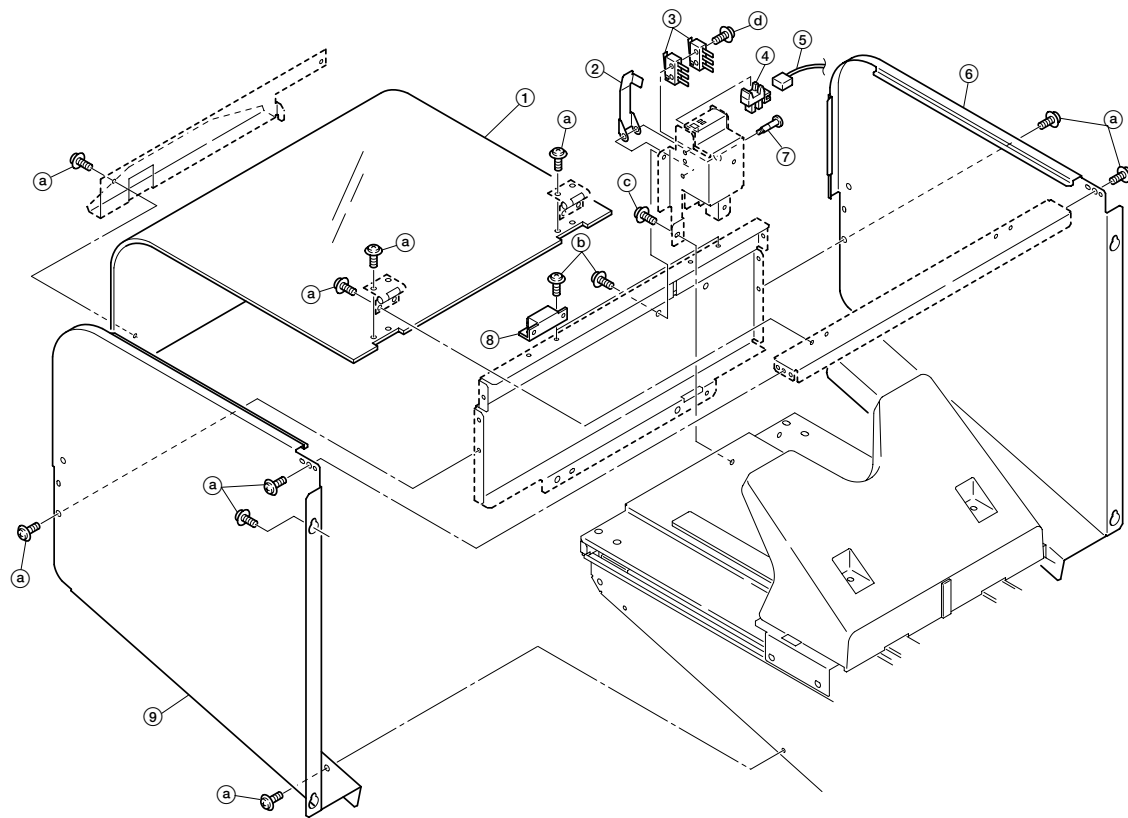 


FIG. 2 TU-108 (2)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD00160	PAPER EXIT COVER/A		a-5A808350
	2	5FD00170	ACTUATOR		b-B1603060
●	3	5C710620	INTER LOCK SWITCH		c-B4004060
●	4	5C319250	PHOTO SENSOR		d-B3012120
	5	5FD01650	FNS WIRING/V		
●	6	5FD00150	COVER/REAR		
	7	5FD02260	DEVELOPING PRESSURE SCREW		
	8	5A825890	MAGNET CATCH		
●	9	5FD00140	COVER/FRONT		

The parts with "●" only are available as spare parts.

FIG. 3 TU-108 (3)

5FD

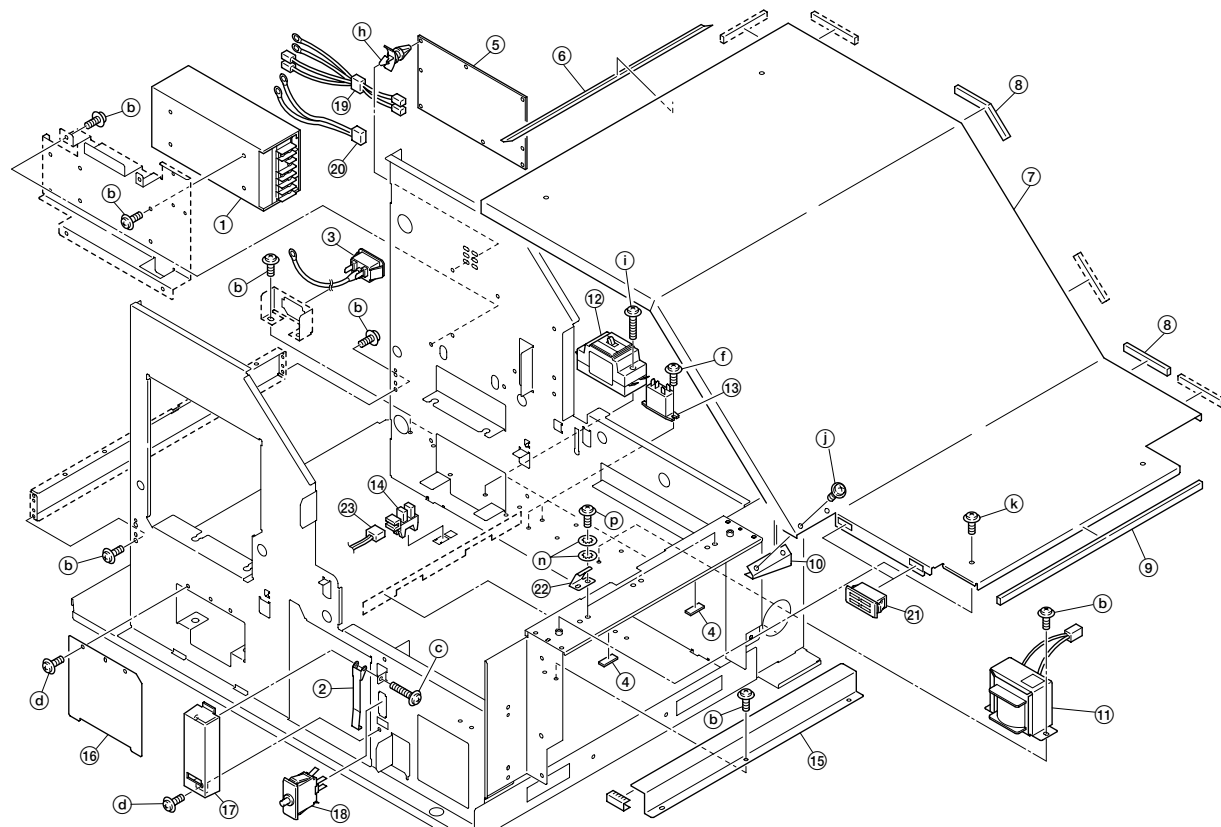 


FIG. 3 TU-108 (3)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD01480	DE POWER SOURCE		b-B4004060
	2	5BA08000	ACTUATOR		c-5BA08320
	3	5FD02280	POWER SOURCE SOCKET ASSEMBLY		d-B4003060
●	4	5FD02060	RUBBER		f-B1003060
●	5	5FD01660	MOTOR DRIVING BOARD ASSEMBLY		h-5A819980
	6	5FD00360	GUIDE SHEET		i-5A809710
●	7	5FD00200	TOP PLATE		j-B1603060
	8	5FD00320	PROTECTION PART/2		k-5C331390
	9	5FD00310	PROTECTION PART/1		n-C2003080
	10	5FD00350	FRONT AUXILIARY COVER		p-B0013060
	11	5A823330	COIL (220V/240V)		
●	12	5A823281	CIRCUIT BREAKER		
	13	5C317550	POWER SOURCE RELAY		
●	14	5C319250	PHOTO SENSOR		
	15	5FD00090	WIRING COVER		
	16	5FD00130	PREVENTING PLATE/1		
	17	5FD00030	SWITCH COVER		
●	18	5A807730	DOOR SWITCH		
	19	5FD01580	FNS WIRING/O		
	20	5FD01560	FNS WIRING /L		
	21	5A826430	MAGNET CATCH(2)		
	22	5A821250	EARTH PLATE		
	23	5FD01500	FNS WIRING/B		

The parts with "●" only are available as spare parts.

FIG. 4 TU-108 (4)

5FD

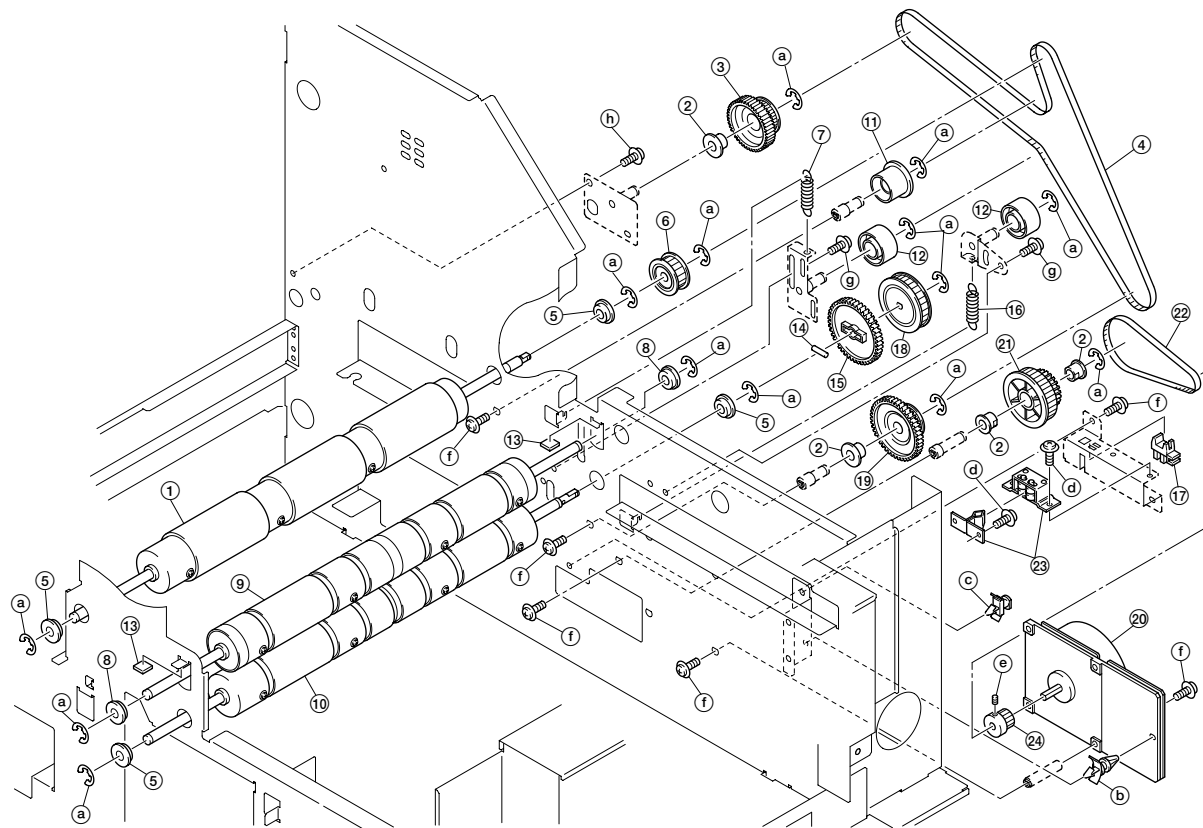 


FIG. 4 TU-108 (4)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5FD00890	DRIVING SHAFT ASSEMBLY		a-D1100600
	2	5A909510	SHAFT HOLDER		b-5C332260
	3	5FD01260	IDLING PULLEY/2		c-5C332280
	4	5FD01400	DRIVE BELT/3		d-B1003040
●	5	5C319220	BALL BEARING(B)		e-B5003060
	6	5A908190	DRIVING PULLEY/A		f-B4003060
●	7	5FD00120	TENSION SPRING/2		g-B0024080
●	8	5FD02010	TENSION SHAFT HOLDER(A)		h-B4004060
	9	5FD00660	DRIVEN ROLLER/4 ASSEMBLY		
	10	5FD00650	DRIVING ROLLER/3 ASSEMBLY		
	11	5A910530	TENSION ROLLER		
	12	5A910510	TENSION ROLLER		
	13	5A909230	STICKING PART		
	14	5A813790	PIN(A)(3X16)		
●	15	5FD01280	DRIVE GEAR/1		
●	16	5FD00100	TENSION SPRING/1		
●	17	5C319250	PHOTO SENSOR		
	18	5FD01240	DRIVE PULLEY/1		
	19	5FD01230	IDLING PULLEY/1		
●	20	5C411310	CONVEYANCE MOTOR		
	21	5FD01270	IDLING GEAR/1		
	22	5FD01470	DRIVING BELT/6		
	23	5FD00110	STOPPER PART		
	24	5A909480	MOTOR PULLEY(Z=16)		

The parts with "●" only are available as spare parts.

FIG. 5 TU-108 (5)

5FD

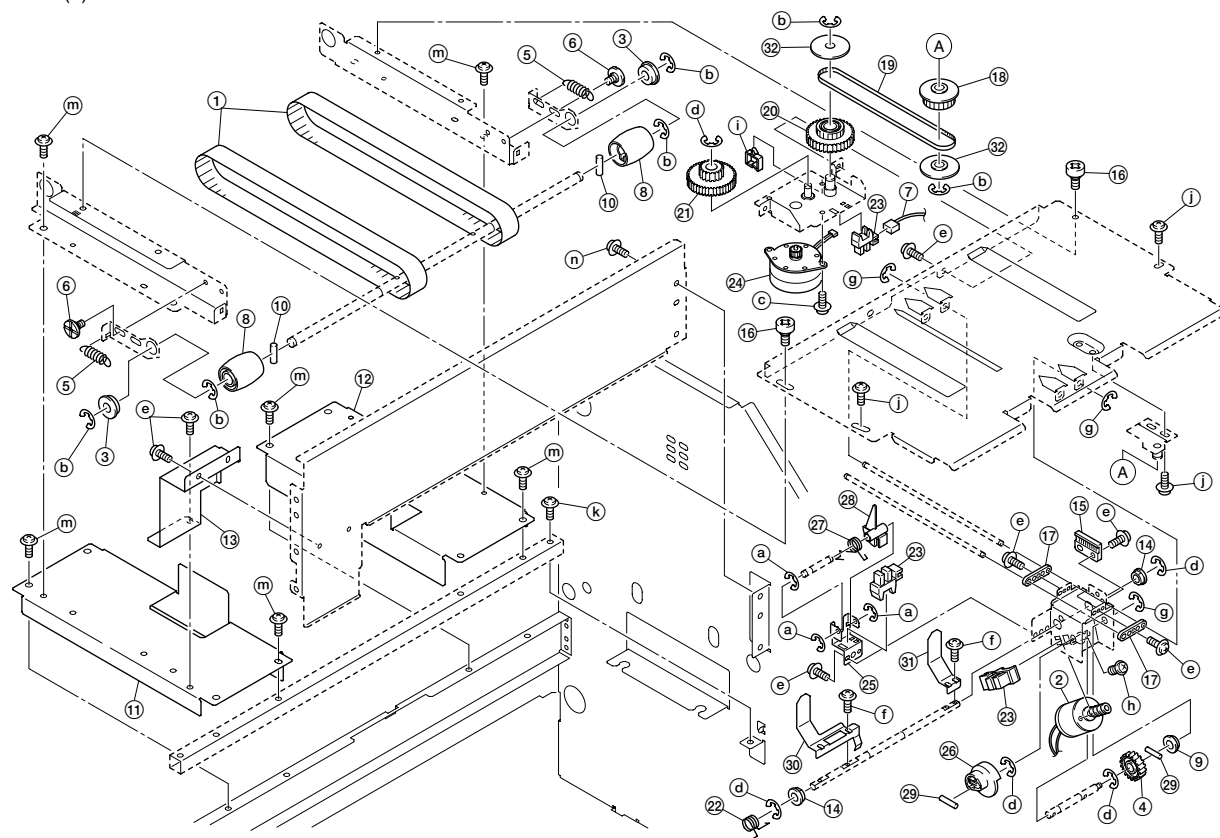 


FIG. 5 TU-108 (5)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD01370	CONVEYANCE BELT/1		a-D1100250
●	2	5FD00910	STOPPER MOTOR ASSEMBLY		b-D1100600
●	3	5C330500	PAPER FEED SHAFT HOLDER		c-B1003040
●	4	5FD01320	LEVER ROCKING GEAR		d-D1100400
●	5	5FD00790	TENSION SPRING		e-B4003060
●	6	5C330320	GUIDE SCREW		f-B1003060
●	7	5FD01620	FNS WIRING/S		g-D1100300
●	8	5FD00480	DRIVEN ROLLER		h-5A912130
●	9	5C510200	SHAFT SUPPORT COLLAR		i-5A818080
●	10	5A815900	PIN(B)(3X14)		j-B0024080
●	11	5FD00680	CONVEYANCE FIXING PLATE		k-B0004160
●	12	5FD00810	CONVEYANCE FIXING PLATE/REAR		m-B4004060
●	13	5FD00830	PROTECTION COVER/2		n-5C331630
●	14	5A824700	SHAFT HOLDER(A)		
●	15	5A911690	FIXED BLOCK		
●	16	5FD02120	INDEX REGULATING SCREW		
●	17	5FD00770	SLIDE PART		
●	18	5A910850	IDLER PULLEY(Z=28)		
●	19	5FD01380	DRIVE BELT/1		
●	20	5A910820	REGULATION GEAR/S(Z=55,28)		
●	21	5A911500	STAPLE DRIVING GEAR(Z=51,21)		
●	22	5FD00780	SPRING/1		
●	23	5C319250	PHOTO SENSOR		
●	24	5C411310	CONVEYANCE MOTOR		
●	25	5FD00850	SENSOR MOUNTING PLATE/1		
●	26	5C510180	LEVER LOCKING CAM		
●	27	5FD00880	SENSOR PRESSING SPRING/1		
●	28	5C510570	ACTUATOR/3		
●	29	5FD02240	PIN		
●	30	5FD00760	STOPPER PLATE/2		
●	31	5FD00750	STOPPER PLATE/1		
●	32	5A910840	BELT HOLDER/B		

The parts with "●" only are available as spare parts.

FIG. 6 TU-108 (6)

5FD

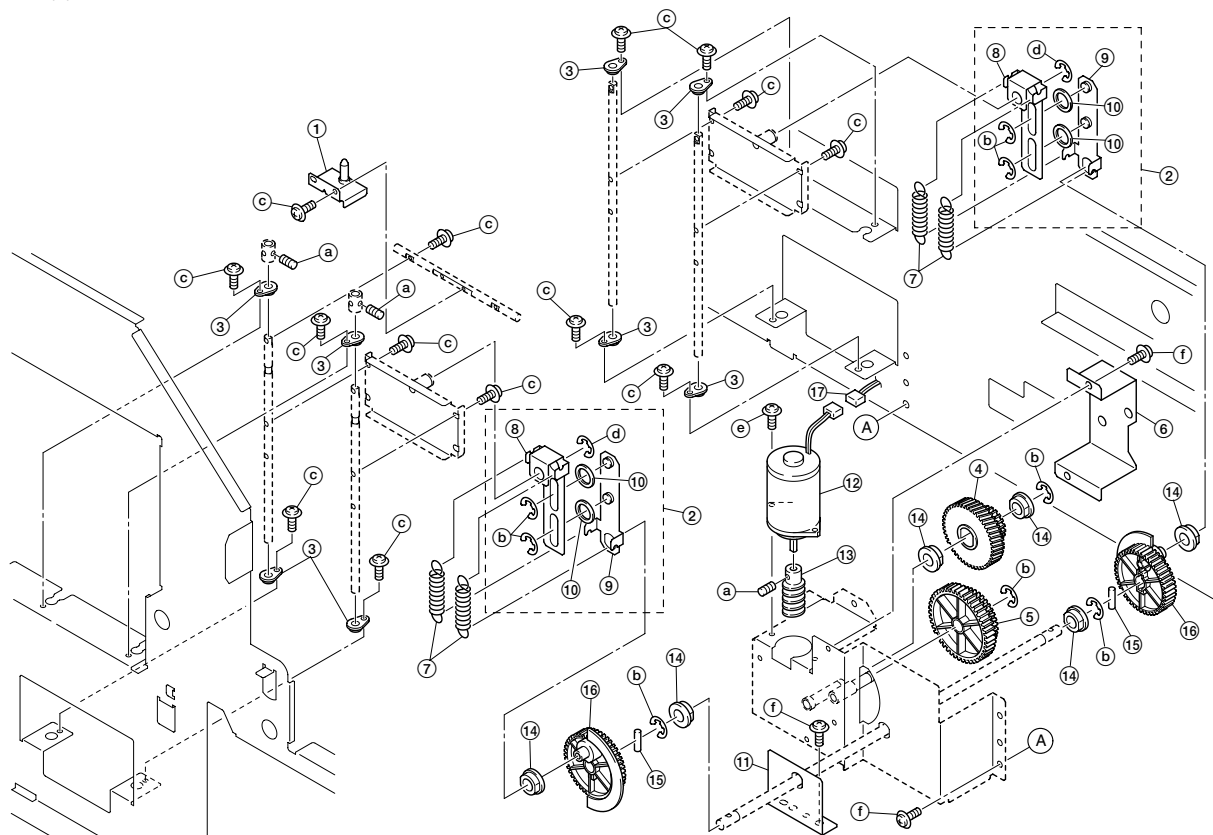 


FIG. 6 TU-108 (6)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5FD00930	POSITIONING PLATE CAULKING		a-B5004040
	2	5FD00900	PRESS RELEASE LEVER ASSEMBLY		b-D1100600
	3	5C510440	GUIDE SHAFT HOLDER/A		c-B4003060
	4	5A909970	UP-DOWN GEAR/A(Z=44,21)		d-D1100800
	5	5FD01300	IDLING GEAR/3		e-B0003060
●	6	5FD00870	REINFORCE PLATE/1		f-B4004060
	7	5FD00710	PRESSING SPRING/1		
	8	5FD00840	RELEASE PLATE/1		
	9	5FD00920	RELEASE LEVER CAULKING ASSEMBLY		
	10	5A819260	POLYSIDER (8)		
●	11	5FD00700	FULCRUM PLATE/FRONT		
	12	5C411330	CORRECTION MORTOR		
	13	5C511110	UP-DOWN WORM		
●	14	5A811470	METAL		
●	15	5A811120	PIN (B) (3X12)		
●	16	5FD01310	SLIDE GEAR/A		
	17	5FD01490	FNS WIRING/A		

The parts with "●" only are available as spare parts.

FIG. 7 TU-108 (7)

5FD

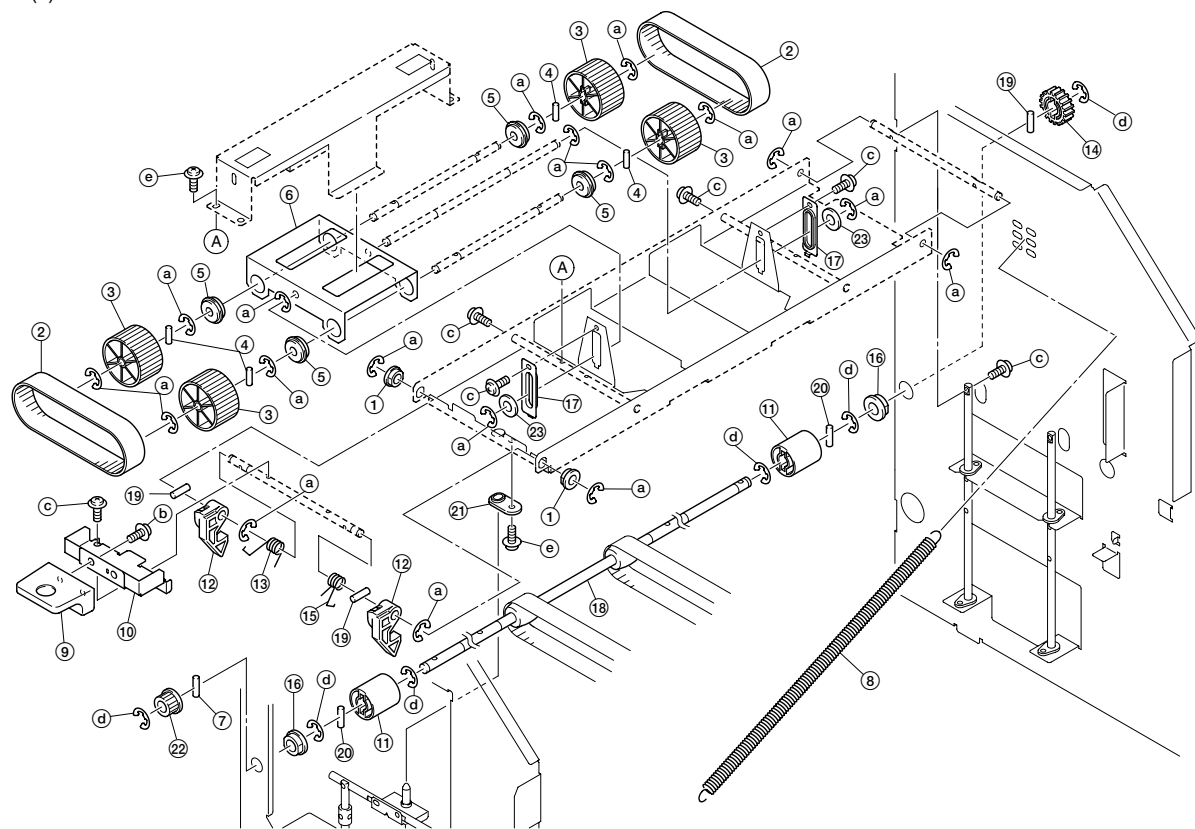 


FIG. 7 TU-108 (7)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5A811720	PAPER FEED DELIVERY SHAFT HOLDER		a-D1100400
	2	5FD01410	CONVEYANCE BELT/2		b-5A809280
	3	5FD00430	DRIVEN ROLLER		c-B4003060
	4	5A813790	PIN(A)(3X16)		d-D1100600
●	5	5FD02270	SHAFT HOLDER		e-B4004060
	6	5FD00820	DRIVEN PLATE/1		
	7	5A824740	PIN(A)(2X12)		
	8	5FD00730	SUPPORT SPRING		
	9	5FD02230	LEVER(A)		
	10	5FD00690	MOUTING PLATE		
	11	5FD00860	DRIVE ROLLER/1		
	12	5C314110	BOTTOM PLATE LOCK CLAW		
●	13	5FD00740	LOCKING SPRING/2		
●	14	5FD01290	DRIVE GEAR/2		
●	15	5FD00720	LOCKING SPRING/1		
●	16	5C319220	BALL BEARING(B)		
	17	5FD00550	SLIDE BEARING		
●	18	5FD00800	DRIVE ROLLER/1		
●	19	5A811120	PIN (B) (3X12)		
●	20	5A815900	PIN(B)(3X14)		
	21	5FD02190	CARRIAGE POSITIONING PART		
●	22	5FD02070	PULLEY/D		
	23	5A819160	POLYSLIDER (6)		

The parts with "●" only are available as spare parts.

FIG. 8 TU-108 (8)

5FD

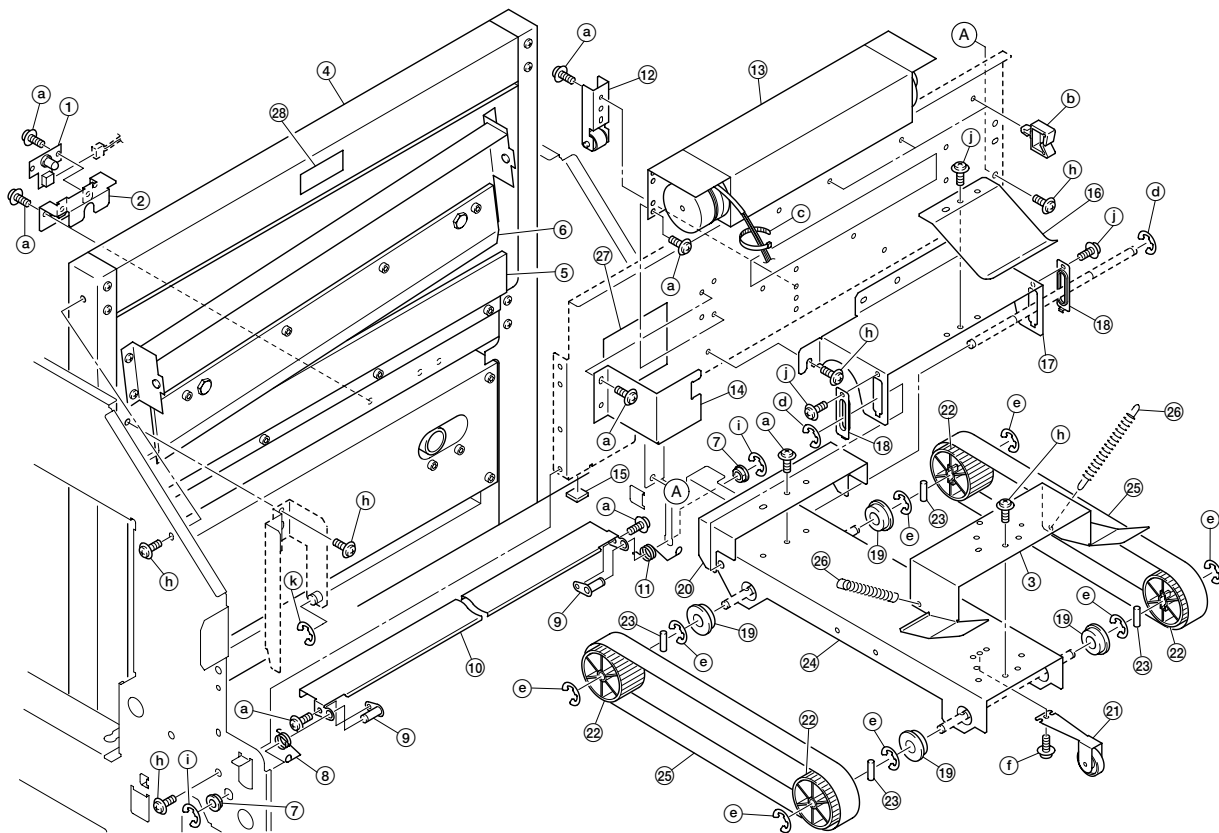 


FIG. 8 TU-108 (8)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD02150	DETECTING LED		a-B4003060
	2	5FD00060	SENSOR MOUNTING PLATE/2		b-5C332250
	3	5FD00490	ENTRANCE GUIDE PLATE		c-5C332270
	4	5FD00070	PAPER ADJUSTING PART		d-D1100400
●	5	5FD01720	CUTTER EDGE/LOWER		e-D1000400
●	6	5FD01710	CUTTER EDGE/UPPER		f-B4003040
●	7	5A811720	PAPER FEED DELIVERY SHAFT HOLDER		h-B4004060
	8	5FD00540	SPRING/1		i-D1000500
	9	5A909440	ROTARY DISK ASS'Y		j-B0013060
	10	5FD00510	CONVEYANCE GUIDE PLATE/E		k-D1100800
	11	5FD00560	SPRING/2		
	12	5FD00670	PAPER HOLDING STAY ASSEMBLY		
●	13	5FD02210	FIXING FAN MOTOR		
	14	5FD00640	FANM COVER		
	15	5A909230	STICKING PART		
●	16	5FD00520	PRESSING SPRING		
	17	5FD00450	SUPPORT PLATE		
	18	5FD00550	SLIDE BEARING		
●	19	5FD02270	SHAFT HOLDER		
	20	5FD00500	BELT HOLDING PLATE		
	21	5FD02180	CONVEYANCE PRESSING SPRING/B ASSEMBLY		
	22	5FD00430	DRIVEN ROLLER		
	23	5A813790	PIN(A)(3X16)		
	24	5FD00440	DRIVEN PLATE		
	25	5FD01440	CONVEYANCE BELT/5		
	26	5FD00620	DRIVEN SPRING		
	27	5FD01680	CAUTION LABEL/1		
	28	5FD01690	CAUTION LABEL/2		

The parts with "●" only are available as spare parts.

FIG. 9 TU-108 (9)

5FD

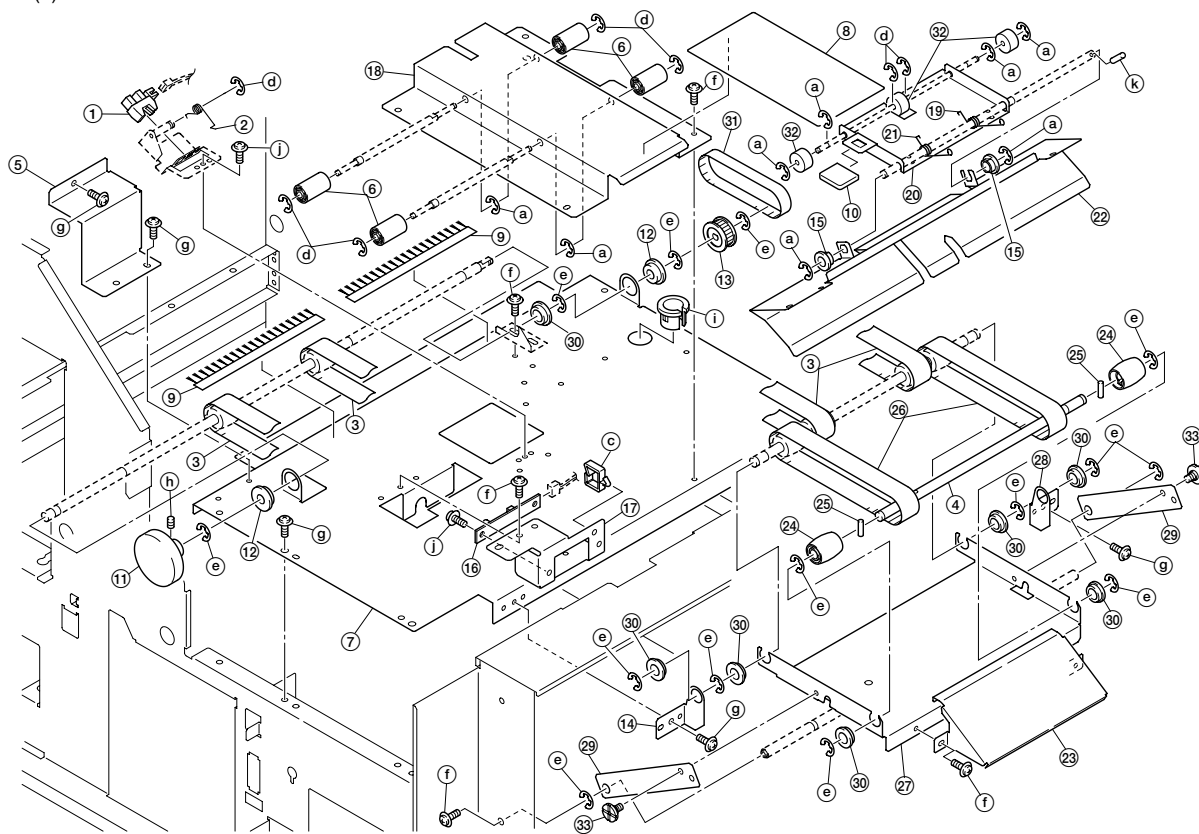 


FIG. 9 TU-108 (9)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5C319250	PHOTO SENSOR		a-D1100400
	2	5FD00570	SENSOR SPRING		c-5A811610
	3	5FD01430	CONVEYANCE BELT/4		d-D1100300
	4	5FD00470	DRIVEN SHAFT/3		e-D1100600
	5	5FD00530	COVER/RIGHT		f-B4003060
	6	5A819430	PAPER EXIT GUIDE ROLLER		g-B4004060
	7	5FD00380	CONVEYANCE FIXING PLATE/2		h-B5004040
	8	5FD00630	ENTRANCE SHEET		i-5C332290
	9	5FD02110	NEUTRALIZING BRUSH/REAR		j-B0013060
	10	5C710710	OPEN-CLOSE LEVER		k-E0030180
	11	5C511140	RELEASE KNOB		
●	12	5C319220	BALL BEARING(B)		
	13	5FD01250	DRIVE PULLEY/2		
●	14	5FD00580	SHAFT HOLDER PLATE/FRONT		
●	15	5A811720	PAPER FEED DELIVERY SHAFT HOLDER		
●	16	5FD02130	DETECTING SENSOR		
	17	5FD00050	SENSOR MOUNTING PLATE/1		
	18	5FD00400	CONVEYANCE GUIDE PLATE/B		
	19	5FD00610	ENTRANCE SPRING/REAR		
	20	5FD00420	CONVEYANCE GUIDE PLATE/D		
	21	5FD00600	ENTRANCE SPRING/FRONT		
	22	5FD00410	CONVEYANCE GUIDE PLATE/C		
	23	5FD00390	CONVEYANCE GUIDE PLATE/A		
	24	5FD00480	DRIVEN ROLLER		
●	25	5A815900	PIN(B)(3X14)		
	26	5FD01420	CONVEYANCE BELT/3		
	27	5FD00370	CONVEYANCE FIXING PLATE/1		
	28	5FD00590	SHAFT HOLDER PLATE/REAR		
	29	5FD00460	FIXING PLATE/1		
●	30	5C330500	PAPER FEED SHAFT HOLDER		
	31	5FD01390	DRIVE BELT/2		
	32	5FD02140	PAPER EXIT DRIVING ROLLER		
	33	5FD02250	PAPER EXIT OPEN/SHUT SCREW		

The parts with "●" only are available as spare parts.

FIG. 10 TU-108 (10)

5FD

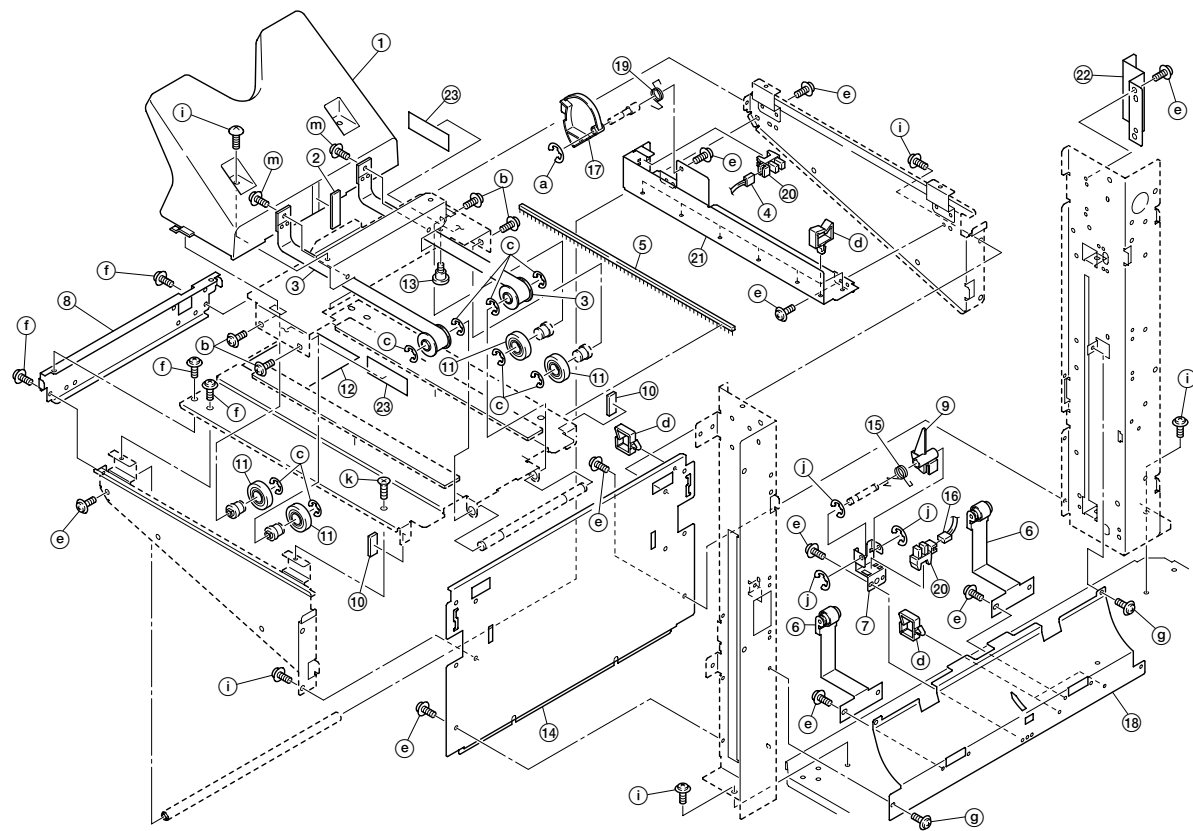 


FIG. 10 TU-108 (10)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD00940	PAPER EXIT TRAY		a-D1100300
	2	5FD01200	PREVENTING PART		b-5A808350
	3	5FD01070	PRESSING PART		c-D1100800
	4	5FD01540	FNS WIRING/I		d-5A818080
	5	5A909330	NEUTRALIZING BLUSH		e-B4003060
	6	5FD01210	PAPER EXIT PRESSING PLATE CAULKING		f-B1603060
	7	5FD00850	SENSOR MOUNTING PLATE/1		g-B4003040
	8	5FD01060	STOPPER PLATE		i-5C331390
	9	5C510570	ACTUATOR/3		j-D1100250
●	10	5FD02060	RUBBER		k-B2003060
	11	5A909770	ROLLER		m-B4004060
	12	5FD01700	CAUTION LABEL/3		
	13	5FD02160	ADJUSTING SCREW		
	14	5FD00950	PAPER EXIT COVER/1		
	15	5FD00880	SENSOR PRESSING SPRING/1		
	16	5FD01630	FNS WIRING/T		
	17	5BA07020	STAPLE PAPER EXIT ACTUATOR		
	18	5FD00960	PAPER EXIT GUIDE PLATE/1		
	19	5FD01080	SENSOR FULCRUM SPRING		
●	20	5C319250	PHOTO SENSOR		
	21	5FD00970	SENSOR COVER/1		
	22	5A907660	SIDE MT PLATE		
	23	5FD02170	SLIDE SHEET		

The parts with "●" only are available as spare parts.

FIG. 11 TU-108 (11)

5FD

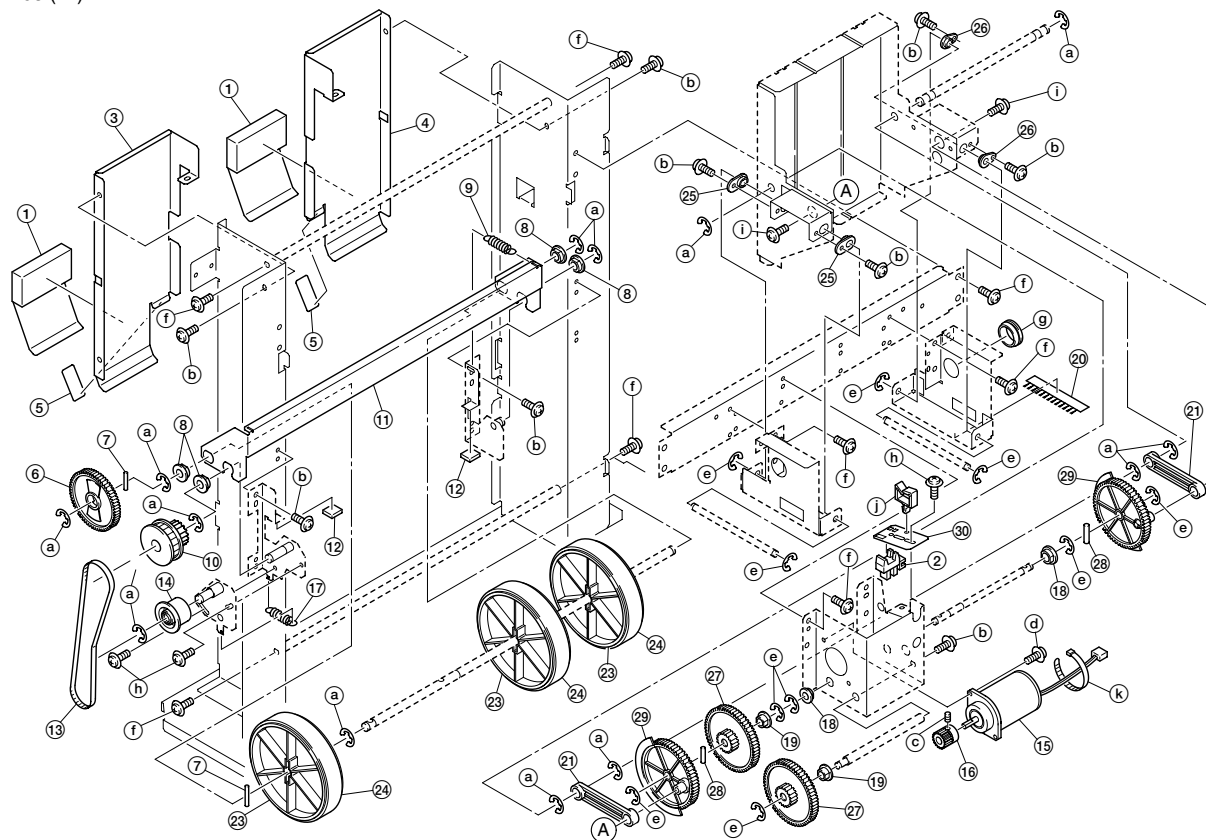 


FIG. 11 TU-108 (11)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5FD01220	PAPER EXIT PAD ASSEMBLY		a-D1100600
●	2	5C319250	PHOTO SENSOR		b-B4003060
●	3	5FD01090	SIDE COVER/1		c-B5003040
●	4	5FD01100	SIDE COVER/2		d-B0003060
●	5	5FD01180	PAPER EXIT GUIDE SHEET/1		e-D1100400
●	6	5FD01340	PAPER EXIT GEAR/2		f-B4004060
●	7	5FD02220	PIN		g-5C332290
●	8	5A811470	METAL		h-B0023060
●	9	5FD01120	SPRING		i-5A809280
●	10	5FD01330	PAPER EXIT DRIVING GEAR/1		j-5A818080
●	11	5FD01150	PAPER EXIT ROCKING PLATE		k-5C332310
●	12	5A909230	STICKING PART		
●	13	5FD01450	DRIVING BELT/4		
●	14	5A910530	TENSION ROLLER		
●	15	5C510110	FNS MOTOR		
●	16	5FD01360	MOTOR GEAR/1		
●	17	5FD01010	PAPER EXIT TENSION SPRING		
●	18	5A824700	SHAFT HOLDER(A)		
●	19	5A818490	PAPER LIFT UP LEVER SHAFT HOLDER		
●	20	5A815150	NEUTRALIZING BRUSH(A)		
●	21	5FD00980	CONNECTING LEVER/1		
●	22	5FD00990	ROLLER/1		
●	23	5FD01000	ROLLER/2		
●	24	5C510450	GUIDE SHAFT HOLDER/B		
●	25	5C510440	GUIDE SHAFT HOLDER/A		
●	26	5A907970	SLIDE GEAR/A		
●	27	5A811120	PIN (B) (3X12)		
●	28	5A907980	SLIDE GEAR/B		
●	29	5FD01130	SENSOR MOUTING PLATE/3		

The parts with "●" only are available as spare parts.

FIG. 12 TU-108 (12)

5FD

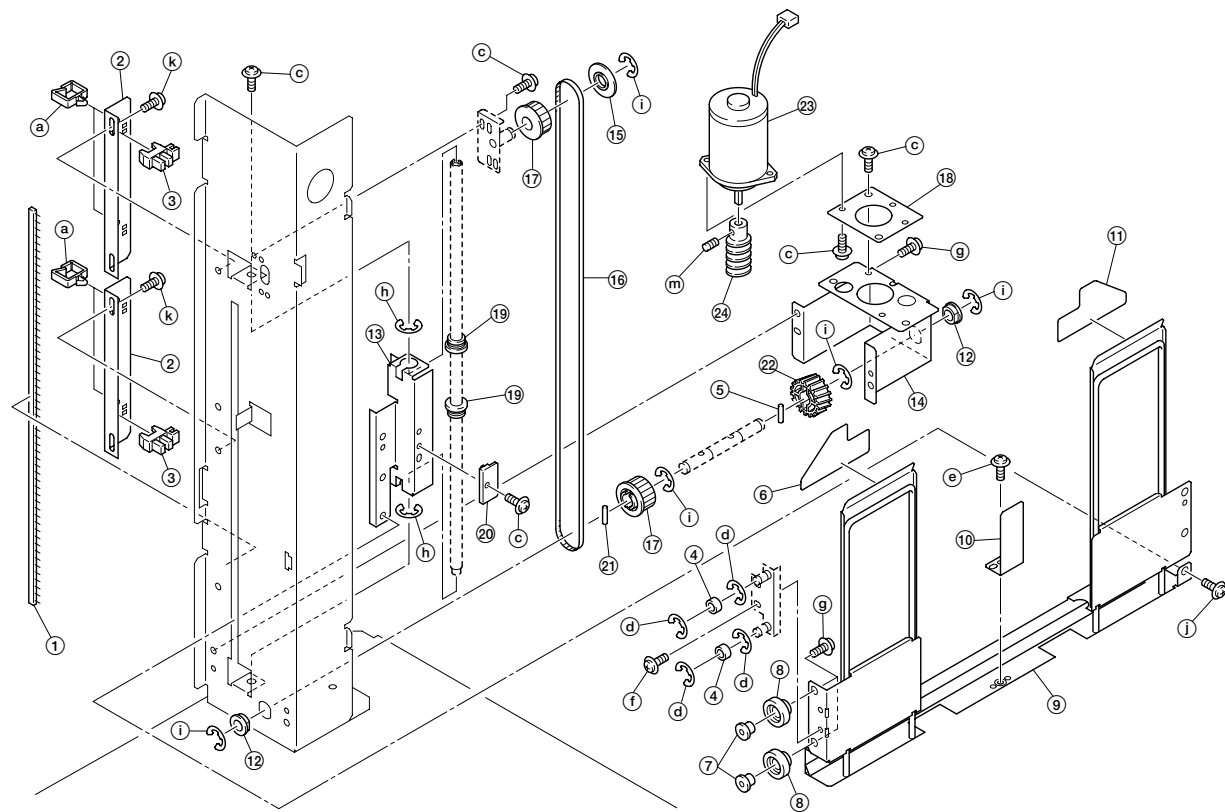 


FIG. 12 TU-108 (12)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
●	1	5A909330	NEUTRALIZING BLUSH		a-5A818080
	2	5FD01050	SENSOR MOUTING PLATE/2		c-B4003060
	3	5C319250	PHOTO SENSOR		d-D1100400
	4	5C330150	PRESURE ROLLER		e-B4003040
●	5	5A815900	PIN(B)(3X14)		f-B0023080
	6	5FD01140	HOLDING SHEET/FRONT		g-B4004060
	7	5FD01190	HOLDING SHAFT/2		h-D2001200
	8	5FD02030	DRIVE GUIDE ROLLER		i-D1100600
	9	5FD01030	HOLDING PLATE		j-B0024060
	10	5FD01170	HOLDING CLAW		k-B0023060
	11	5FD01160	HOLDING SHEET/REAR		m-B5003040
●	12	5A811470	METAL		
	13	5FD01040	SLIDE PLATE		
	14	5FD01020	MOTOR MOUTING PLATE/2		
	15	5A910840	BELT HOLDER/B		
	16	5FD01460	DRIVING BELT/5		
●	17	5FD02080	PULLEY/F		
	18	5FD02020	MOTOR MOUTING PLATE		
	19	5FD02200	LENS SLIDE BEARING		
	20	5FD01110	FIXING PART		
●	21	5A811120	PIN (B) (3X12)		
●	22	5FD01350	UP/DOWN GEAR		
	23	5FD02050	FNS DRIVING MOTOR/1		
	24	5C511110	UP-DOWN WORM		

The parts with "●" only are available as spare parts.

FIG. 13 TU-108 (13)

5FD

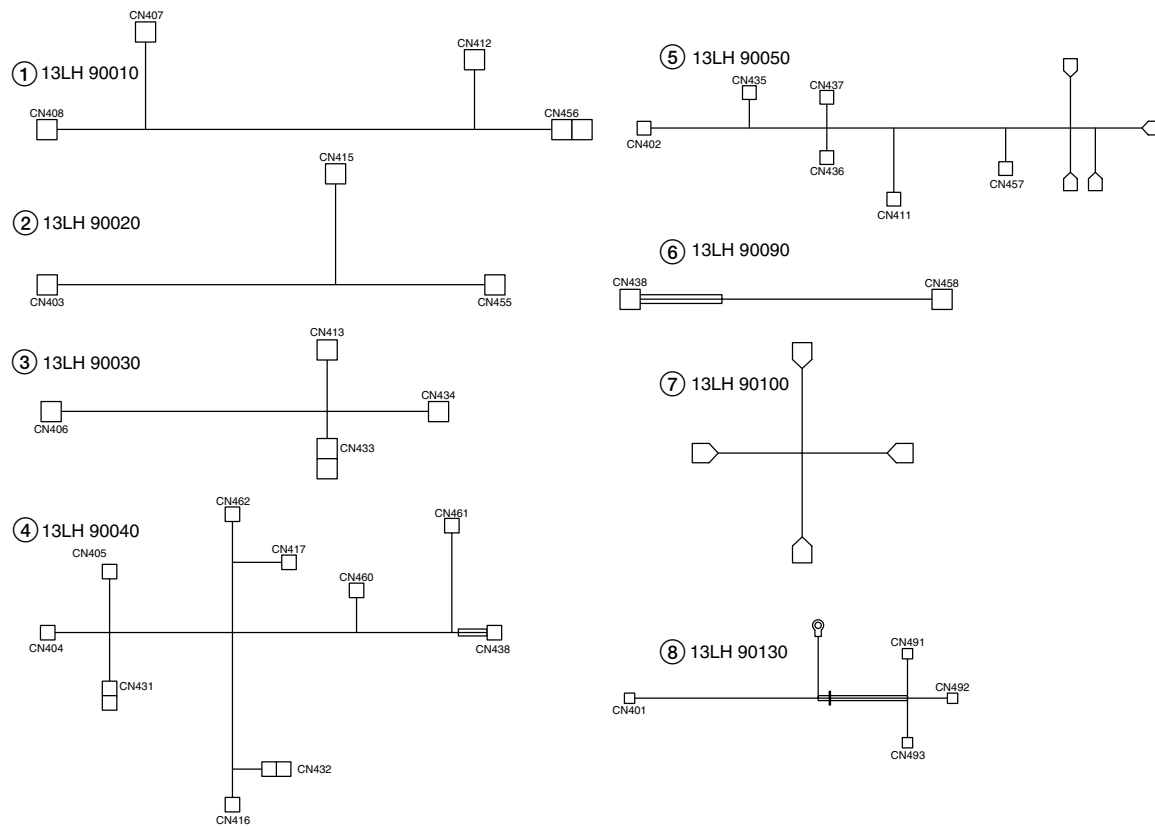 


FIG. 13 TU-108 (13)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5FD01490	FNS WIRING/A		
	2	5FD01500	FNS WIRING/B		
	3	5FD01510	FNS WIRING/C		
	4	5FD01520	FNS WIRING/D		
	5	5FD01530	FNS WIRING/E		
	6	5FD01540	FNS WIRING/I		
	7	5FD01550	FNS WIRING/J		
	8	5FD01570	FNS WIRING/M		

The parts with "●" only are available as spare parts.

FIG. 14 TU-108 (14)

5FD

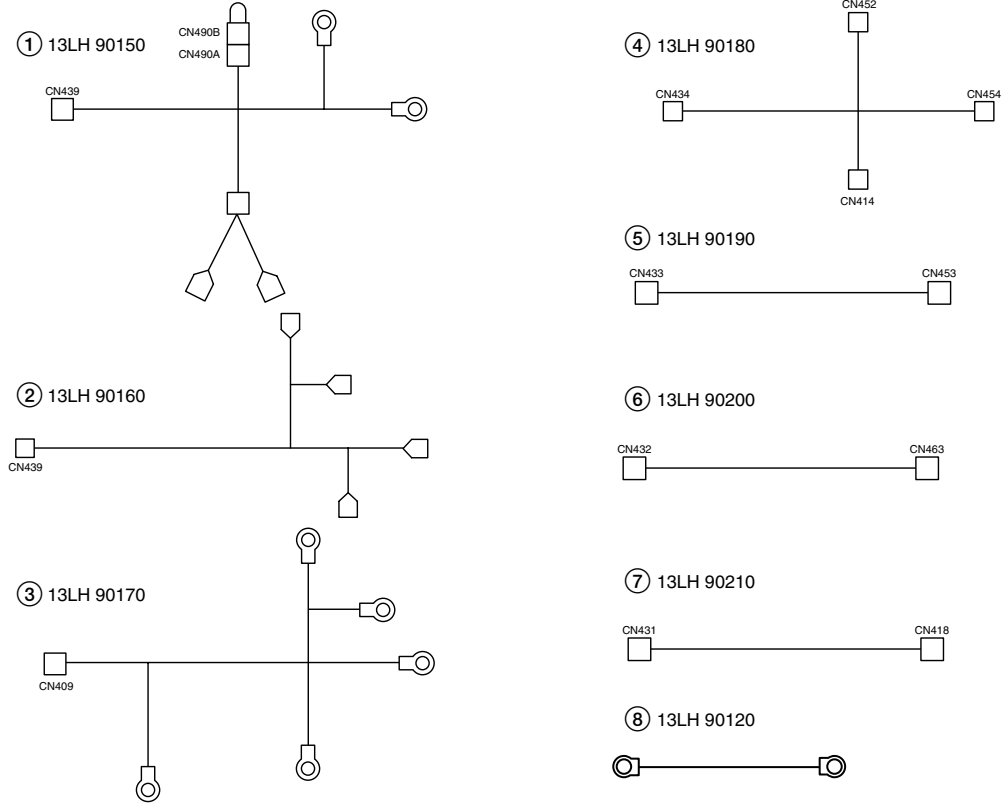 


FIG. 14 TU-108 (14)

5FD

SP	Ref.No.	Parts No.	Description	Destinations	Standard parts
	1	5FD01580	FNS WIRING/O		
	2	5FD01590	FNS WIRING/P		
	3	5FD01600	FNS WIRING/Q		
	4	5FD01610	FNS WIRING/R		
	5	5FD01620	FNS WIRING/S		
	6	5FD01630	FNS WIRING/T		
	7	5FD01640	FNS WIRING/U		
	8	5FD01560	FNS WIRING /L		

The parts with "●" only are available as spare parts.

INDEX

5FD

SP	Parts No.	Description	Fig. No.
●	5A807730	DOOR SWITCH	3
●	5A808560	FRONT DOOR HANGER BAND (RIGHT)	1
●	5A811120	PIN (B) (3X12)	6, 7, 11, 12
●	5A811470	METAL	6, 11, 12
●	5A811720	PAPER FEED DELIVERY SHAFT HOLD	7, 8, 9
●	5A813790	PIN(A)(3X16)	4, 7, 8
●	5A815150	NEUTRALIZING BRUSH(A)	11
●	5A815900	PIN(B)(3X14)	5, 7, 9, 12
●	5A818490	PAPER LIFT UP LEVER SHAFT HOLDER	11
●	5A819160	POLYSIDER (6)	7
●	5A819260	POLYSIDER (8)	6
●	5A819430	PAPER EXIT GUIDE ROLLER	9
●	5A821250	EARTH PLATE	3
●	5A822121	KNOB	1
●	5A823281	CIRCUIT BREAKER	3
●	5A823330	COIL (220V/240V)	3
●	5A824700	SHAFT HOLDER(A)	5, 11
●	5A824740	PIN(A)(2X12)	7
●	5A825890	MAGNET CATCH	1, 2
●	5A826430	MAGNET CATCH(2)	3
●	5A907660	SIDE MT PLATE	10
●	5A907720	ACTUATOR	1
●	5A907970	SLIDE GEAR/A	11
●	5A907980	SLIDE GEAR/B	11
●	5A908190	DRIVING PULLEY/A	4
●	5A909230	STICKING PART	4, 8, 11
●	5A909330	NEUTRALIZING BLUSH	10, 12
●	5A909440	ROTARY DISK ASS'Y	8
●	5A909480	MOTOR PULLEY(Z=16)	4
●	5A909510	SHAFT HOLDER	4
●	5A909770	ROLLER	10
●	5A909970	UP-DOWN GEAR/A(Z=44,21)	6
●	5A910510	TENSION ROLLER	4
●	5A910530	TENSION ROLLER	4, 11
●	5A910730	BELT DETECTING SCREW	1
●	5A910820	REGULATION GEAR/S(Z=55,28)	5
●	5A910840	BELT HOLDER/B	5, 12
●	5A910850	IDLER PULLEY(Z=28)	5

SP	Parts No.	Description	Fig. No.
●	5A911500	STAPLE DRIVING GEAR(Z=51,21)	5
●	5A911690	FIXED BLOCK	5
●	5BA07020	STAPLE PAPER EXIT ACTUATOR	10
●	5BA08000	ACTUATOR	3
●	5C314110	BOTTOM PLATE LOCK CLAW	7
●	5C317550	POWER SOURCE RELAY	3
●	5C319220	BALL BEARING(B)	4, 7, 9
●	5C319250	PHOTO SENSOR	2, 3, 4
●	5C330150	PRESURE ROLLER	5, 9, 10, 11, 12
●	5C330320	GUIDE SCREW	12
●	5C330500	PAPER FEED SHAFT HOLDER	5
●	5C411310	CONVEYANCE MOTOR	5, 9
●	5C411330	CORRECTION MORTOR	4, 5
●	5C510110	FNS MOTOR	6
●	5C510180	LEVER LOCKING CAM	11
●	5C510200	SHAFT SUPPORT COLLAR	5
●	5C510440	GUIDE SHAFT HOLDER/A	6, 11
●	5C510450	GUIDE SHAFT HOLDER/B	11
●	5C510570	ACTUATOR/3	5, 10
●	5C511110	UP-DOWN WORM	6, 12
●	5C511140	RELEASE KNOB	9
●	5C710620	INTER LOCK SWITCH	2
●	5C710710	OPEN-CLOSE LEVER	9
●	5FD00010	PAPER COLLECTING BOTTOM PLATE	1
●	5FD00020	BOX	1
●	5FD00030	SWITCD COVER	3
●	5FD00040	SENSOR COVER	1
●	5FD00050	SENSOR MOUNTING PLATE/1	9
●	5FD00060	SENSOR MOUNTING PLATE/2	8
●	5FD00070	PAPER ADJUSTING PART	8
●	5FD00080	CONNECTING PLATE	1
●	5FD00090	WIRING COVER	3
●	5FD00100	TENSION SPRING/1	4
●	5FD00110	STOPPER PART	1, 4
●	5FD00120	TENSION SPRING/2	4
●	5FD00130	PREVENTING PLATE/1	3
●	5FD00140	COVER/FRONT	2
●	5FD00150	COVER/REAR	2

The parts with "●" only are available as spare parts.

SP	Parts No.	Description	Fig. No.
●	5FD00160	PAPER EXIT COVER/A	2
	5FD00170	ACTUATOR	2
	5FD00180	ACTUATOR/1	1
●	5FD00190	FRONT DOOR	1
●	5FD00200	TOP PLATE	3
●	5FD00210	REAR COVER	1
●	5FD00220	SIDE COVER/FRONT	1
●	5FD00230	SIDE COVER/REAR	1
	5FD00240	HINGE MOUTING PLATE	1
	5FD00250	FULCRUM PLATE/UPPER	1
●	5FD00260	CONVEYANCE DOOR	1
●	5FD00270	FRONT COVER/LOWER	1
●	5FD00280	REAR COVER/RIGHT	1
	5FD00290	HINGE PLATE	1
	5FD00300	STOPPER PART	1
	5FD00310	PROTECTION PART/1	3
	5FD00320	PROTECTION PART/2	3
	5FD00330	PROTECTION PART/3	1
	5FD00340	REAR AUXILIARY COVER	1
	5FD00350	FRONT AUXILIARY COVER	3
	5FD00360	GUIDE SHEET	3
	5FD00370	CONVEYANCE FIXING PLATE/1	9
	5FD00380	CONVEYANCE FIXING PLATE/2	9
	5FD00390	CONVEYANCE GUIDE PLATE/A	9
	5FD00400	CONVEYANCE GUIDE PLATE/B	9
	5FD00410	CONVEYANCE GUIDE PLATE/C	9
	5FD00420	CONVEYANCE GUIDE PLATE/D	9
	5FD00430	DRIVEN ROLLER	7, 8
	5FD00440	DRIVEN PLATE	8
	5FD00450	SUPPORT PLATE	8
	5FD00460	FIXING PLATE/1	9
	5FD00470	DRIVEN SHAFT/3	9
	5FD00480	DRIVEN ROLLER	5, 9
	5FD00490	ENTRANCE GUIDE PLATE	8
	5FD00500	BELT HOLDING PLATE	8
●	5FD00510	CONVEYANCE GUIDE PLATE/E	8
	5FD00520	PRESSING SPRING	8
	5FD00530	COVER/RIGHT	9
	5FD00540	SPRING/1	8
	5FD00550	SLIDE BEARING	8

SP	Parts No.	Description	Fig. No.
	5FD00560	SPRING/2	8
	5FD00570	SENSOR SPRING	9
	5FD00580	SHAFT HOLDER PLATE/FRONT	9
	5FD00590	SHAFT HOLDER PLATE/REAR	9
	5FD00600	ENTRANCE SPRING/FRONT	9
	5FD00610	ENTRANCE SPRING/REAR	9
	5FD00620	DRIVEN SPRING	8
	5FD00630	ENTRANCE SHEET	9
	5FD00640	FANM COVER	8
	5FD00650	DRIVING ROLLER/3 ASSEMBLY	4
	5FD00660	DRIVEN ROLLER/4 ASSEMBLY	4
	5FD00670	PAPER HOLDING STAY ASSEMBLY	8
	5FD00680	CONVEYANCE FIXING PLATE	5
	5FD00690	MOUTING PLATE	7
	5FD00700	FULCRUM PLATE/FRONT	6
●	5FD00710	PRESSING SPRING/1	6
●	5FD00720	LOCKING SPRING/1	7
	5FD00730	SUPPORT SPRING	7
●	5FD00740	LOCKING SPRING/2	7
	5FD00750	STOPPER PLATE/1	5
	5FD00760	STOPPER PLATE/2	5
	5FD00770	SLIDE PART	5
	5FD00780	SPRING/1	5
●	5FD00790	TENSION SPRING	5
●	5FD00800	DRIVE ROLLER/1	7
	5FD00810	CONVEYANCE FIXING PLATE/REAR	5
	5FD00820	DRIVEN PLATE/1	7
	5FD00830	PROTECTION COVER/2	5
	5FD00840	RELEASE PLATE/1	6
	5FD00850	SENSOR MOUNTING PLATE/1	5, 10
	5FD00860	DRIVE ROLLER/1	7
	5FD00870	REINFORCE PLATE/1	6
	5FD00880	SENSOR PRESSING SPRING/1	5, 10
	5FD00890	DRIVING SHAFT ASSEMBLY	4
	5FD00900	PRESS RELEASE LEVER ASSEMBLY	6
●	5FD00910	STOPPER MOTOR ASSEMBLY	5
	5FD00920	RELEASE LEVER CAULKING ASSEMBLY	6
	5FD00930	POSITIONING PLATE CAULKING	6
●	5FD00940	PAPER EXIT TRAY	10
	5FD00950	PAPER EXIT COVER/1	10

The parts with "●" only are available as spare parts.

SP	Parts No.	Description	Fig. No.
●	5FD00960	PAPER EXIT GUIDE PLATE/1	10
	5FD00970	SENSOR COVER/1	10
	5FD00980	CONNECTING LEVER/1	11
	5FD00990	ROLLER/1	11
	5FD01000	ROLLER/2	11
	5FD01010	PAPER EXIT TENSION SPRING	11
	5FD01020	MOTOR MOUTING PLATE/2	12
	5FD01030	HOLDING PLATE	12
	5FD01040	SLIDE PLATE	12
	5FD01050	SENSOR MOUTING PLATE/2	12
	5FD01060	STOPPER PLATE	10
	5FD01070	PRESSING PART	10
	5FD01080	SENSOR FULCRUM SPRING	10
	5FD01090	SIDE COVER/1	11
	5FD01100	SIDE COVER/2	11
	5FD01110	FIXING PART	12
	5FD01120	SPRING	11
	5FD01130	SENSOR MOUTING PLATE/3	11
	5FD01140	HOLDING SHEET/FRONT	12
	5FD01150	PAPER EXIT ROCKING PLATE	11
	5FD01160	HOLDING SHEET/REAR	12
	5FD01170	HOLDING CLAW	12
	5FD01180	PAPER EXIT GUIDE SHEET/1	11
	5FD01190	HOLDING SHAFT/2	12
	5FD01200	PREVENTING PART	10
	5FD01210	PAPER EXIT PRESSING PLATE CAULKING	10
	5FD01220	PAPER EXIT PAD ASSEMBLY	11
	5FD01230	IDLING PULLEY/1	4
	5FD01240	DRIVE PULLEY/1	4
	5FD01250	DRIVE PULLEY/2	9
	5FD01260	IDLING PULLEY/2	4
	5FD01270	IDLING GEAR/1	4
	5FD01280	DRIVE GEAR/1	4
	5FD01290	DRIVE GEAR/2	7
	5FD01300	IDLING GEAR/3	6
	5FD01310	SLIDE GEAR/A	6
	5FD01320	LEVER ROCKING GEAR	5
	5FD01330	PAPER EXIT DRIVING GEAR/1	11
	5FD01340	PAPER EXIT GEAR/2	11
	5FD01350	UP/DOWN GEAR	12

SP	Parts No.	Description	Fig. No.
●	5FD01360	MOTOR GEAR/1	11
	5FD01370	CONVEYANCE BELT/1	5
	5FD01380	DRIVE BELT/1	5
	5FD01390	DRIVE BELT/2	9
	5FD01400	DRIVE BELT/3	4
	5FD01410	CONVEYANCE BELT/2	7
	5FD01420	CONVEYANCE BELT/3	9
	5FD01430	CONVEYANCE BELT/4	9
	5FD01440	CONVEYANCE BELT/5	8
	5FD01450	DRIVING BELT/4	11
	5FD01460	DRIVING BELT/5	12
	5FD01470	DRIVING BELT/6	4
	5FD01480	DE POWER SOURCE	3
	5FD01490	FNS WIRING/A	6, 13
	5FD01500	FNS WIRING/B	3, 13
	5FD01510	FNS WIRING/C	13
	5FD01520	FNS WIRING/D	13
	5FD01530	FNS WIRING/E	13
	5FD01540	FNS WIRING/I	10, 13
	5FD01550	FNS WIRING/J	13
	5FD01560	FNS WIRING/L	3, 14
	5FD01570	FNS WIRING/M	13
	5FD01580	FNS WIRING/O	3, 14
	5FD01590	FNS WIRING/P	14
	5FD01600	FNS WIRING/Q	14
	5FD01610	FNS WIRING/R	14
	5FD01620	FNS WIRING/S	5, 14
	5FD01630	FNS WIRING/T	10, 14
	5FD01640	FNS WIRING/U	14
	5FD01650	FNS WIRING/V	2
	5FD01660	MOTOR DRIVING BOARD ASSEMBLY	3
	5FD01670	JAM PROCESSING LABEL	1
	5FD01680	CAUTION LABEL/1	8
	5FD01690	CAUTION LABEL/2	8
	5FD01700	CAUTION LABEL/3	10
	5FD01710	CUTTER EDGE/UPPER	8
	5FD01720	CUTTER EDGE/LOWER	8
	5FD02010	TENSION SHAFT HOLDER(A)	4
	5FD02020	MOTOR MOUTING PLATE	12
	5FD02030	DRIVE GUIDE ROLLER	12

The parts with "●" only are available as spare parts.

SP	Parts No.	Description	Fig. No.
	5FD02040	PAPER EXIT UP/DOWN SCREW	1
	5FD02050	FNS DRIVING MOTOR/1	12
●	5FD02060	RUBBER	3, 10
●	5FD02070	PULLEY/D	7
●	5FD02080	PULLEY/F	12
	5FD02090	CARRIAGE ROLLER	1
	5FD02100	BOTTOM PLATE SUPPORT PART	1
	5FD02110	NEUTRALIZING BRUSH/REAR	9
	5FD02120	INDEX REGULATING SCREW	5
●	5FD02130	DETECTING SENSOR	9
	5FD02140	PAPER EXIT DRIVING ROLLER	9
●	5FD02150	DETECTING LED	8
	5FD02160	ADJUSTING SCREW	10
	5FD02170	SLIDE SHEET	10
	5FD02180	CONVEYANCE PRESSING SPRING/B ASSEM	8
	5FD02190	CARRIAGE POSITIONING PART	7
	5FD02200	LENS SLIDE BEARING	12
●	5FD02210	FIXING FAN MOTOR	8
	5FD02220	PIN	11
	5FD02230	LEVER(A)	7
	5FD02240	PIN	5
	5FD02250	PAPER EXIT OPEN/SHUT SCREW	9
	5FD02260	DEVELOPING PRESSURE SCREW	2
●	5FD02270	SHAFT HOLDER	7, 8
	5FD02280	POWER SOURCE SOCKET ASSEMBLY	3

The parts with "●" only are available as spare parts.

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Show Room:

149 West 51st street,
New York, NY 10019
TEL : (212) 554-2679
FAX : (212) 554-2625

Northeastern Region:

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60191
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
P.O.Box 57006, Irvine,
California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 570-4704

Dallas Parts Distribution Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road,
Mississauga, Ontario L5T 1S8
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
Delegación Azcapotzalco
México, D.F. C.P. 02130
TEL : 3-83-27-41
FAX : 3-83-78-04

© 2000 KYOCERA MITA CORPORATION

 **KYOCERA** is a trademark of Kyocera Corporation

mita is a registered trademark of KYOCERA MITA CORPORATION

Printed in U.S.A.