

Selection & Configuration Guide


Human Vibration Configuration Guide

Hand -Arm Vibration (requires IIVM-IIA)

ADP084A
Adapter kit



 ADP080A
Hand Adapter



ADP081A
Handle Adapter



ADP082A
Clamp Adapter



ADP063
Palm Adapter

Only

SEN040F-CBL
SEN041F-CBL
Triax and cable

SEN040F (Impulsive machines)
1 mV/g triaxial Accelerometer
SEN041F (Rotating machines)
10 mV/g triaxial Accelerometer



5-40 Female mount thread

CBL158
4-pin, ¼-28 to 4-pin LEMO™



SEN026-CBL
Triax and cable

SEN026
10 mV/g triaxial Accelerometer




CBL125
4-pin mini to 4-pin LEMO™



Whole Body Vibration (HVM-WB req)

SEN027-CBL
CBL158
Triaxial Seat Pad Sensor

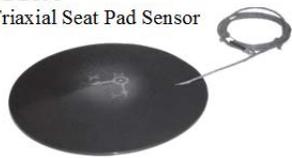

HVM100-L1 Human Vibration Meter



Accessories

HVM100-ACC
CBL006
CBL124
PSA027
DVX011
SWW-BLAZE
In CCS020



CCS028
Belt Pouch



394C06
Hand held Shaker
1 g @ 159.2 Hz



CBL124
3 x BNC to 5-pin Switchcraft
Used for AC output



CBL120
3 x 10-32 to 4-pin LEMO™



CBL121
3 x BNC to 4-pin LEMO™



General Vibration

SEN020-CBL
SEN021F-CBL
Triax and cable

SEN020
1 mV/g triaxial Accelerometer
SEN021F
10 mV/g triaxial Accelerometer



10-32 female mount

CBL158
4-pin, ¼-28 to 4-pin LEMO™

