


Selection & Configuration Guide


Human Vibration Configuration Guide (HVM200)

 **LARSON DAVIS**
A PCB PIEZOTRONICS DIV.

Hand -Arm Vibration

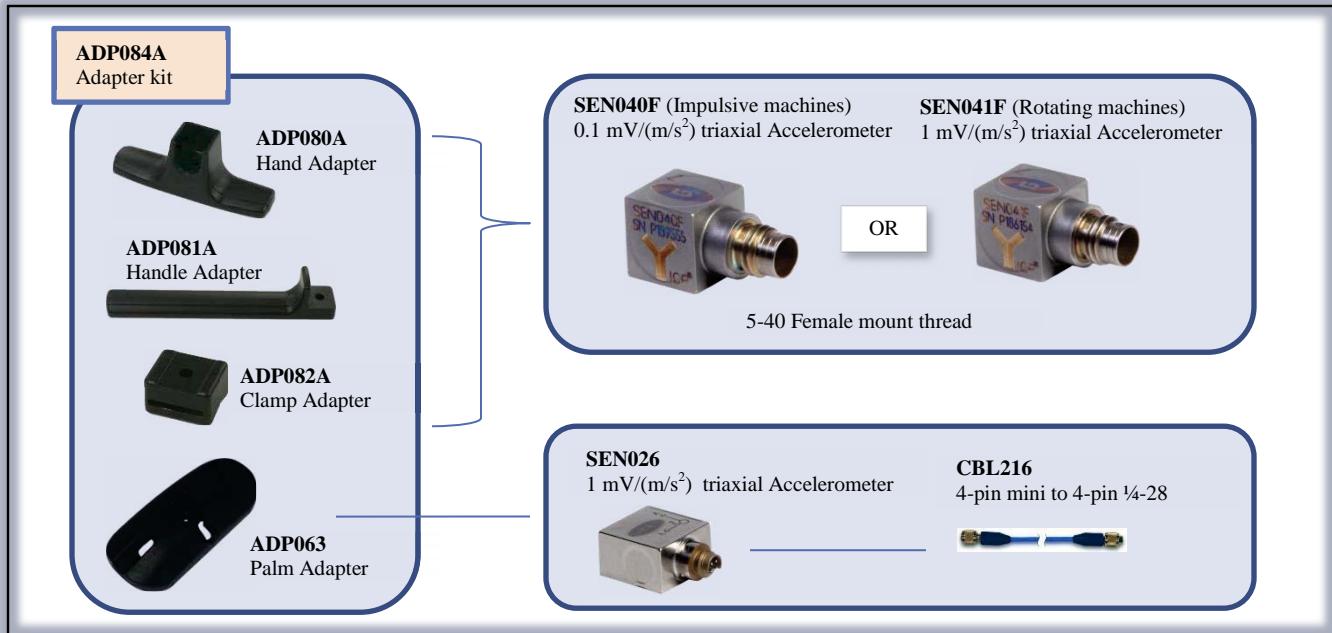


Whole Body Vibration

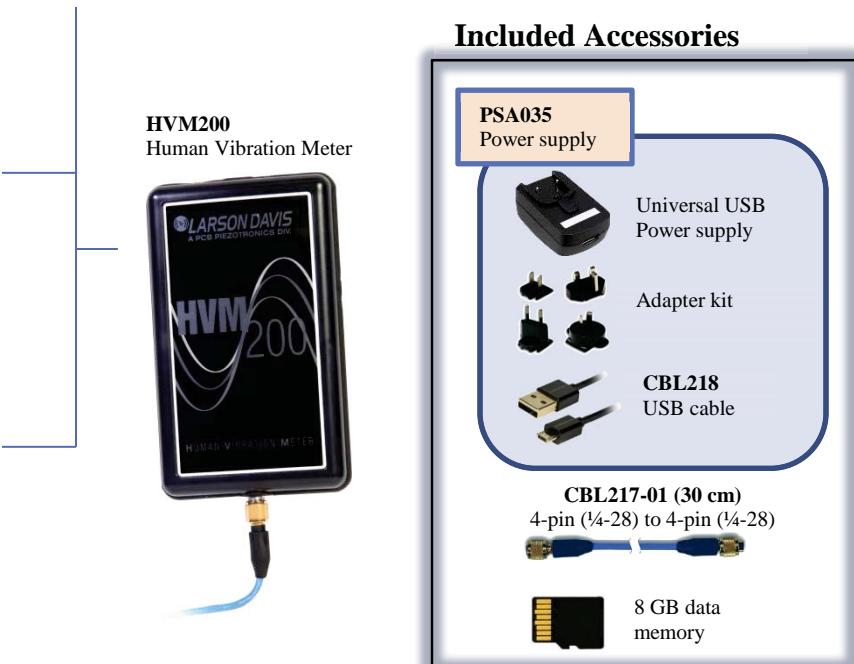

Included Accessories



General Vibration

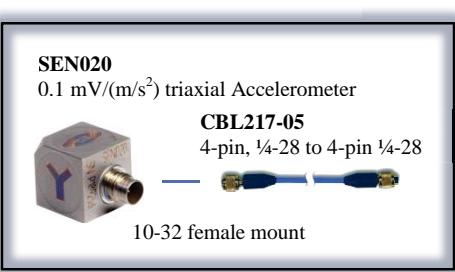

Selection & Configuration Guide

Human Vibration Configuration Guide (HVM200)

HVM200 Bundled Systems

HVM200-HA-40F or HVM200-HA-41F
Hand-arm vibration kit

HVM200
Human Vibration Meter



CCS047
Hard Shell Case



CCS048-L
Large Arm Band



SWW-G4-HVM
G4 license for
HVM200 & HVM100



ADP081A
Handle Adapter



SEN040F (Impulsive machines)
0.1 mV/(m/s²) triaxial Accelerometer



SEN041F(Rotating machines)
1 mV/(m/s²) triaxial Accelerometer



OR

HVM200-WB
Whole body vibration kit

SEN027
Triaxial Seat Pad Sensor



HVM200
Human Vibration Meter



CCS047
Hard Shell Case



SWW-G4-HVM
G4 license for
HVM200 & HVM100



HVM200-ALL-40F or HVM200-ALL-41F
Hand-arm & whole body vibration kit

CCS047
Hard Shell Case



CCS048-L
Large Arm Band




HVM200
Human Vibration Meter



SWW-G4-HVM
G4 license for
HVM200 & HVM100



 ADP081A
Handle Adapter



SEN027
Triaxial Seat Pad Sensor



SEN040F (Impulsive machines)
0.1 mV/(m/s²) triaxial Accelerometer



SEN041F(Rotating machines)
1 mV/(m/s²) triaxial Accelerometer

