





Table of Contents

First Things...First.....	1
WHEN YOUR DIGITIZER IS DELIVERED	1
<i>Check That You Have Everything</i>	<i>1</i>
<i>Be Sure To Read This Warranty</i>	<i>1</i>
<i>Take Advantage Of Maintenance Agreements</i>	<i>2</i>
<i>Obtain Assistance.....</i>	<i>2</i>
<i>Return a Product for Service or Repair.....</i>	<i>2</i>
<i>Stay Up-to-Date.....</i>	<i>2</i>
 SAFETY INFORMATION	3
<i>Safety Symbols.....</i>	<i>3</i>
<i>Warnings</i>	<i>4</i>
<i>If Safety Features Are Impaired.....</i>	<i>5</i>
<i>Care and Maintenance</i>	<i>5</i>
INSTALL AND POWER UP THE DIGITIZER	6
<i>Install NI Software Components</i>	<i>6</i>
<i>Install LcPXD222 Instrument Driver.....</i>	<i>7</i>
<i>Install the PXD 222 Digitizer</i>	<i>9</i>
<i>Launch Measurement and Automation Explorer (MAX)</i>	<i>14</i>
<i>Install Quick-Start Application Software.....</i>	<i>15</i>
<i>Copy Complementary Files onto Your Hard Drive (optional).....</i>	<i>15</i>
<i>Install LcIVIScopeDemo (optional)</i>	<i>16</i>
Operation.....	9
INTRODUCTION.....	17
<i>A. Acquisition Modes</i>	<i>17</i>
<i>B. Run Modes.....</i>	<i>20</i>
<i>C. Trigger Modes</i>	<i>20</i>
<i>D. PXD 222 Digitizer Waveform Measurements.....</i>	<i>21</i>
PXD 222 QUICK START APPLICATION SOFTWARE	22
<i>Soft Front Panel.....</i>	<i>22</i>
USING THE PXD 222 DIGITIZER IVI INSTRUMENT DRIVERS	26
PXD 222 Digitizer Specifications	27
 VERTICAL SYSTEM	27

PXD 222 Digitizer

HORIZONTAL SYSTEM.....	27
TRIGGER.....	28
PHYSICAL DIMENSIONS	30
POWER REQUIREMENTS	30
ENVIRONMENTAL CONDITIONS	30
 SAFETY	31
 CERTIFICATIONS	33