


**MODEL : MFJ-113 (#1212)**  
**PART NO : M396**  
**DATE : 17.05. 2000**

# MFJ

## Instructions for Superbright MFJ-113 LED Alarm Clock

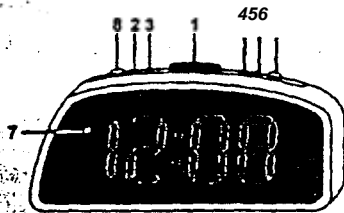

### To Operate Clock

#### Blinking Display/Alarm On Indicator

When the clock is plugged in, the display will blink on and off meaning the incorrect time is being displayed. You should always check the time when this is indicated. When the Alarm Indicator (7) is on, the alarm will sound at the time set.

#### Set Time

To set the time, press the TIME SET button (4) and the HOUR SET button (2) until the correct hour is displayed, then release the HOUR SET button and press the MINUTE SET button (3) until the correct time is displayed.

#### Set Alarm

To set the alarm time, press and hold the ALARM SET button (5) and the HOUR SET (2) or MINUTE SET button (3) as above.

#### Snooze

Touch the SNOOZE button (1) and get an extra 9 minutes of sleep. This may be repeated up to six times within one hour.

### To Operate Alarm

Slide the ON/OFF switch (6) located on the clock to the ON position. The alarm will sound at the time set. To shut off the alarm for longer times, slide the ON/OFF switch (6) to the OFF position.

### Set Time Mode

Slide the 12/24 hour switch (8) located on the control panel to 12 or 24 hour position. The time will show American time format with AM/PM indicator in 12 hour position or European time format in 24 hour position.

**Battery Back-up (BATTERY NOT INCLUDED)** Located on the back of the clock is a battery hatch which can be easily removed. Inside is a 9 volt transistor battery connector - A battery, such as Eveready No. 216 or equivalent, may be installed or changed without unplugging the clock from the line. The battery will keep time if the power ever fails but the display will not show. But don't worry, we'll still get you up because the alarm will still sound.

If you have a long power failure, the clock uses an internal clock that is less accurate than the line frequency. You may need to make a slight adjustment in this case. Just follow the "Time Set" instructions. The alarm will be correct.

Warning: To prevent fire or shock hazard, do not expose this product to rain or moisture.



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.**

This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

**SIZE : W\*H=200\*160mm**