 
 


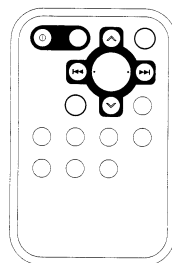

Model Nr. CSR-3036U

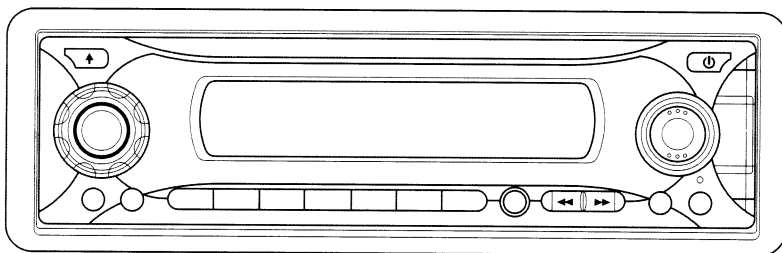

**GEBRUIKSHANDLEIDING
INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI**

ATTENTION

**CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT
PRODOTTO LASER DI CLASSE 1
LASER SAFETY**



INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.

DANGER**LASER SAFETY**

This unit employs an optical laser light beam system in the CD mechanism, designed with built-in safeguards.

Do not attempt to disassemble, refer to qualified service personnel. Exposure to this invisible laser light beam may be harmful to the human eye.

THIS IS A CLASS-1 LASER PRODUCT, USE OF CONTROLS, OR ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS LASER LIGHT BEAM EXPOSURE.

CONTENTS


Installation	27	CD operation	43
Take out screw before installation ...	27	Switching to CD mode	43
DIN Front-Mount (Method A)	28	Selecting tracks	43
Installing the unit	28	Pausing playing	43
Removing the unit	29	Previewing all tracks	43
DIN Rear-Mount (Method B)	30	Repeating the same track	43
Using the detachable front panel ..	31	Playing all tracks in random	43
Wiring Connection	33	Ejecting a disc	43
Operation	34	MP3 operation	44
Location of keys	34	Switching to CD (MP3) mode	44
Switching on/off the unit	34	Ejecting a disc	44
Faceplate release	34	Selecting tracks in single step ...	44
Remote control Handset	35	Pausing playing	44
Sound adjustment	36	Previewing all tracks	44
Loudness	38	Repeating the same track	44
Display	38	Playing all tracks in random	44
Equalization	39	Selecting tracks by AS/PS button ...	44
Liquid crystal display	39	Display information	46
Flashing LED	39	WMA operation	47
Reset function	39	USB play operation	47
Radio operation	39	SD/MMC OPERATION.....	47
Switching to radio mode	40	Disc notes	47
Selecting the frequency band	40	Trouble shooting	49
Selecting station	40	N.B.:	
Automatic memory storing & program scanning	40	Important	
Station storing	40	The USB port of this product is fully compatible with the USB 1.1 and 2.0 standard.	
RDS (radio data system) operation	40	If MP3 players connected to this port are not written in compliance with the official USB 1.1 or 2.0 standard it may occur that those MP3 players do not work on this port.	

This is not a defective of this product.
The MP3 player does not comply with
the official USB 1.1 or 2.0 standard.

INSTALLATION

Notes:

 - Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.



- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

DIN FRONT/REAR-MOUNT

 
This unit can be properly installed either from “Front” (conventional DIN Frontmount) or “Rear” (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis).

For details, refer to the following illustrated installation methods.

TAKE OUT SCREW BEFORE INSTALLATION

Before install the unit, please remove the two screws.

Take out screws before installation

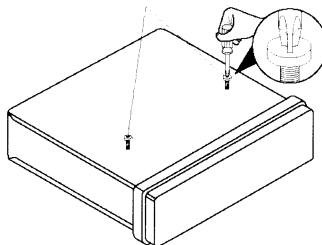


INSTALLATION

DIN FRONT-MOUNT (Method A)

Installation Opening

 
This unit can be installed in any dashboard having an opening as show below:

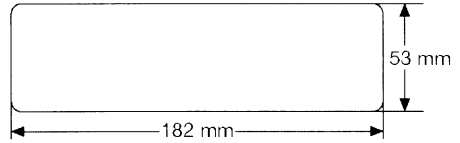


Installing the unit

Be sure you test all connections first, and then follow these steps to install the unit.

 1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and the antenna.
3. Press the release button on the front panel and remove the control panel (see the steps of "using the detachable front panel").
4. Lift the top of the outer trim ring then pull it out to remove it.
5. The two supplied keys release tabs inside the unit's sleeve so you can remove it. Insert the keys as far as they will go (with the notches facing up) into the appropriate slots at the middle left and right sides of the unit. Then slide the sleeve off the back of the unit.

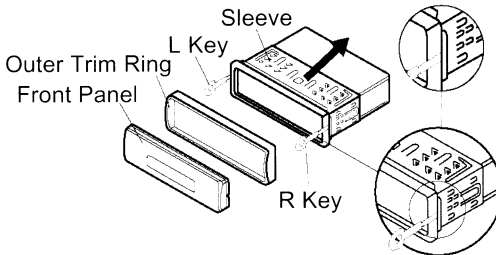

 
6. Mount the sleeve by inserting the sleeve into the opening of the dashboard and bend open the tabs located around the sleeve with a screwdriver. Not all tabs will be able to make contact, so examine which ones will be most effective. Bending open the appropriate tabs behind the dashboard to secure the sleeve in place.

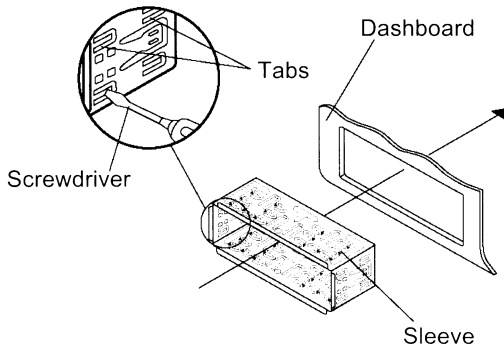

INSTALLATION

7. Reconnect the wire harness and the antenna and be careful not to pinch any wires or cables.
8. Slide the unit into the sleeve until it locks into place.
9. To further secure the unit, use the supplied metal strap to secure the back of the unit in place. Use the supplied hardware (Hex Nut (M5mm) and Spring Washer) to attach one end of the strap to the mounting bolt on the back of the unit. If necessary, bend the metal strap to fit your vehicle's mounting area. Then use the supplied hardware (Tapping Screw (5x25mm) and Plain Washer) to attach the other end of metal strap to a solid metal part of the vehicle under the dashboard. This strap also helps ensure proper electrical grounding of the unit.

 
Note: to install the short threading terminal of the mounting bolt to the back of the unit and the other long threading terminal to the dashboard.

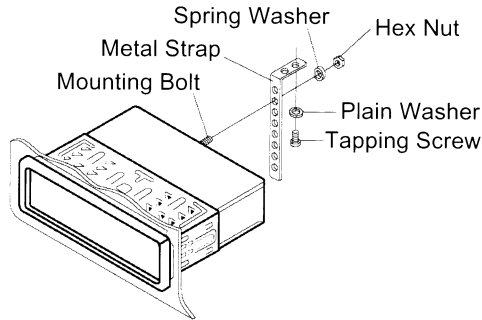

10. Reconnect the cable to the vehicle battery's negative (-) terminal. Then replace the outer trim ring and install the unit's front panel. (see the steps of "using the detachable front panel").

Removing the unit

 
1. Make sure the ignition is turned off, then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Remove the metal strap attached the back of the unit (if attached).
3. Press the release button to remove the front panel.
4. Lift the top of the outer trim ring then pull it out to remove it.
5. Insert both of the supplied keys into the slots at the middle left and right sides of the unit, then pull the unit out of the dashboard.

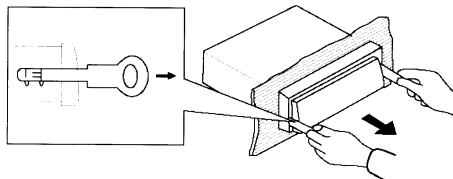

INSTALLATION

DIN REAR-MOUNT (Method B)

 If your vehicle is a Nissan, Toyota, follow these mounting instructions. Use the screw holes marked T (Toyota), N (Nissan) located on both sides of the unit to fasten the unit to the factory radio mounting brackets supplied with your vehicle.

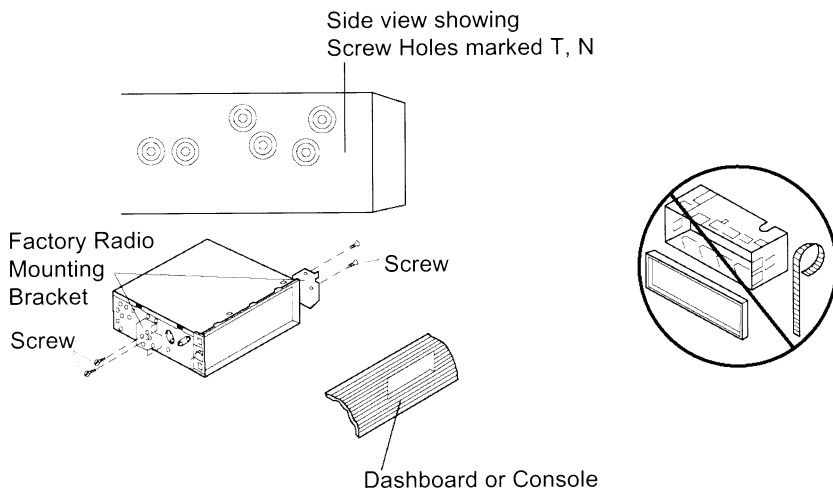


To fasten the unit to the factory radio mounting brackets. Align the screw holes on the bracket with the screw holes on the unit, and then tighten the screws (5x5mm) on each side.

Note: *the outer trim ring, sleeve and the metal strap are not used for method B installation.*


USING THE DETACHABLE FRONT PANEL

To Detach the Front Panel

 
1. Press the **OPEN** button, then the front panel will be folded down.

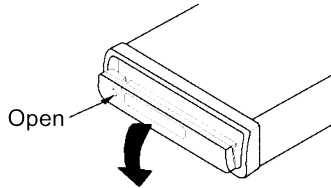

 2. To remove the front panel, lift it up at a little angle from horizontal position, then first pull out the right side and then pull out the left side.

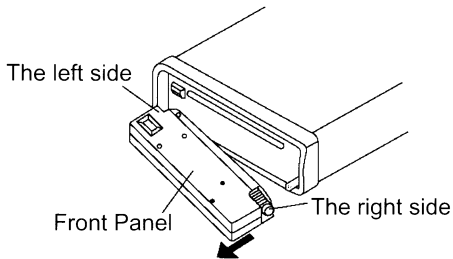

 
3. For safekeeping, store the front panel in the supplied protective case immediately after being removed.

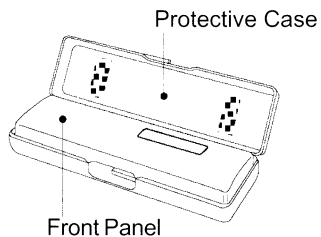


USING THE DETACHABLE FRONT PANEL

To Install the Front Panel

 1. To install the front panel, first insert the left side into proper position then insert the right side into place.

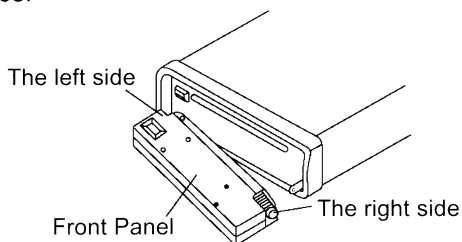

 2. When the two sides fixed into place, push the front panel into main unit.

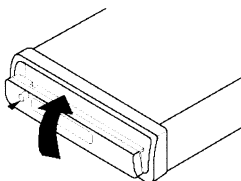

3. Note that if the front panel fails to lock in position properly, pressing control button may not function and the display may be missing some segments. Press the **OPEN** button and then reinstall the front panel again.

 
Precautions when handling

1. Do not drop the front panel.
2. Do not put pressure on the display or control buttons when detaching or reinstalling the front panel.
3. Do not touch the contacts on the front panel or on the main unit body. It may result in poor electrical contact.
4. If any dirt or foreign substances adhered on the contacts, they can be removed with a clean and dry cloth.
5. Do not expose the front panel to high temperatures or direct sunlight in anywhere.
6. Keep away any volatile agents (e.g. benzene, thinner, or insecticides) from touching the surface of the front panel.
7. Do not attempt to disassemble the front panel.

This car radio is equipped on the backside with the standard European ISO connector. If your car has been provided with the standard ISO connector cable you can connect this cable directly to connector A and B. Connection for RCA line-out is available in connector C. Full lay-out of all connectors is available in the wiring diagram on top of your car radio. The full wiring diagram is also available on this sheet for easy reference.

Wiring connection

ISO Connector

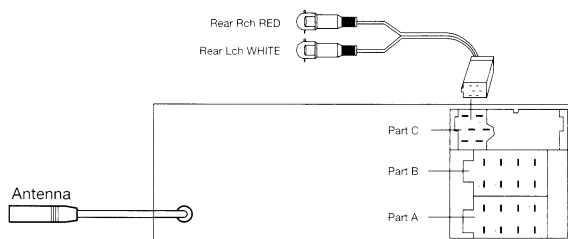

Connector A

- 1.
- 2.
- 3.
4. MEMORY +12V
5. AUTO ANTENNA OUTPUT
- 6.
7. +12V (TO IGNITION KEY)
8. GROUND

Note: RED wire (connector A, no. 7) must be connected by car ignition key in order to avoid that car battery becomes weak when the car will be not used for long period.

Connector B

 
1. REAR RIGHT SPEAKER (+)
2. REAR RIGHT SPEAKER (-)
3. FRONT RIGHT SPEAKER (+)
4. FRONT RIGHT SPEAKER (-)
5. FRONT LEFT SPEAKER (+)
6. FRONT LEFT SPEAKER (-)
7. REAR LEFT SPEAKER (+)
8. REAR LEFT SPEAKER (-)

Connector C (RCA)

1. AUDIO FREQUENCY OUT, REAR LEFT
2. AUDIO FREQUENCY OUT, REAR RIGHT
3. AUDIO FREQUENCY OUT GROUND
- 4.
- 5.
- 6.

OPERATION

LOCATION OF KEYS

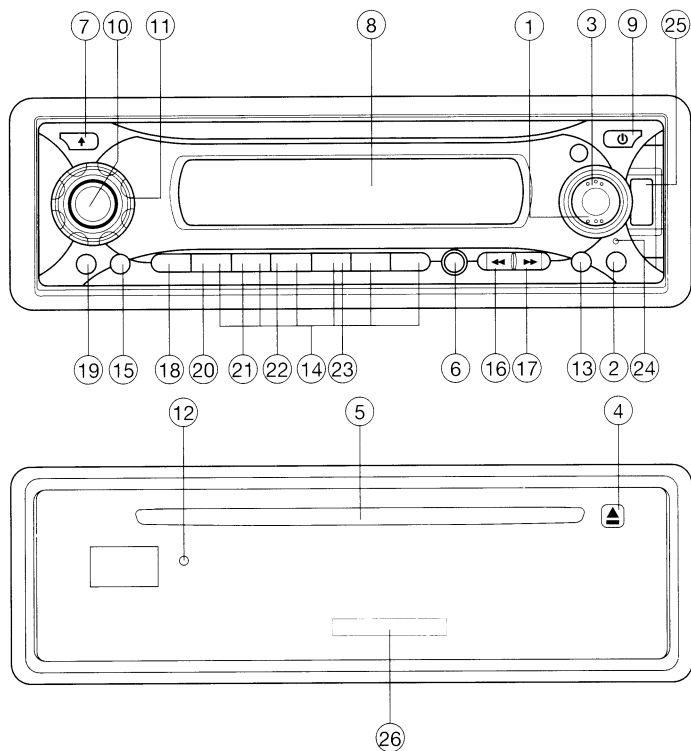

• SWITCHING ON/OFF THE UNIT

 
Switch on the unit by pressing any button (except **OPEN** button (7) and ▲ button (4)).

• FACEPLATE RELEASE

Press **OPEN** button (7) to fold down the removable faceplate.

OPERATION

Remote Control Handset

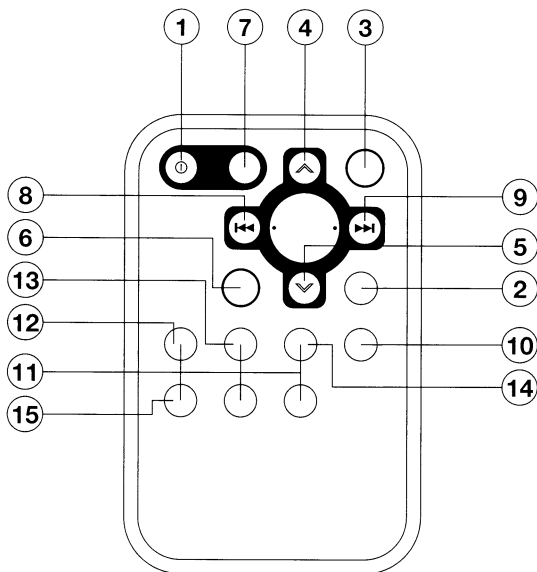

FUNCTION KEYS & CONTROL

- | | | |
|---------------------|---|--|
| 1. PWR | = | Power ON/OFF Button |
| 2. DSP (0) | = | Display Button (L, -, +, 0 For MP3/WMA Operation) |
| 3. SEL | = | Sound mode |
| 4. VOL ▲ | = | Select Button (Character Shift Right For MP3/WMA Operation) |
| 5. VOL ▼ | = | Volume Up Button [Character Select (A, B ~ 8, 9, 0) For MP3/WMA Operation] |
| 6. BND (LOU/ENT) | = | Volume Down Button [Character Select (A, B ~ 8, 9, 0) For MP3/WMA Operation] |
| 7. MOD (7) | = | Band Select Button (when pressed shortly) / Loudness Button (when pressed long) (Enter Button For MP3/WMA Operation) |
| 8. TUNE/SEEK ◀◀ (8) | = | Mode Button (S, T, U, 7 For MP3/WMA Operation) |
| 9. TUNE/SEEK ▶▶ (9) | = | Tune/Seek Down Button (V, W, X, 8 For MP3/WMA Operation) |
| 10. AMS (D-AUD) | = | Tune/Seek Up Button (Y, Z, SPACE, 9 For MP3/WMA Operation) |
| 11. M1 - M6 | = | Automatic Memory Storing & Program Scanning Button (Mode Select Button For MP3/WMA Operation) |
| 12. PAU | = | Preset Buttons (A~R, 1~6 For MP3/WMA Operation) |
| 13. SCN | = | Pause Button (A, B, C, 1 For MP3/WMA Operation) |
| 14. RPT | = | Scanning Button (D, E, F, 2 For MP3/WMA Operation) |
| 15. SHF | = | Repeat Button (G, H, I, 3 For MP3/WMA Operation) |
| | = | Shuffle Button (J, K, L, 4 For MP3/WMA Operation) |

OPERATION

 
• SOUND ADJUSTMENT

Press **SEL** button (10) to select the desired adjustment mode.
 The adjustment mode will change in the following order:



By rotating the **AUDIO** knob button (11) clockwise or counter-clockwise, it is possible to adjust the desired sound quality.

Press **SEL** Button (10) for several seconds, it is activated as cyclical mode of following functions for user's selection.



a) TA SEEK or TA ALARM

- TA SEEK mode:

When newly tuned station does not receive TP information for several seconds, the radio retunes to next station which has not the same station (PI) as the last station, but has the TP information.

When TP information gets lost at the current station for retune time which is set by RETUNE SHORT (30 sec.) or RETUNE LONG (90 sec.), the radio start to retune to next same PI station.

When same PI station does not catch in 1 cyclic search, the radio retunes to next station with TP information.

- TA ALARM mode:

When this mode is selected, any automatic retune mode is not activated. Only double beep sound (ALARM) is output.

When newly tuned station does not have TP information for several seconds, beeps come out.

When TP information gets lost at the current station for retune time, the beep sound is out-putted.

When newly tuned station has not RDS signal, "PI SEEK" is suppressed somewhat.

OPERATION

 
B) PI SOUND or PI MUTE

While AF switching is implemented in C201 station, AF can switch to 100 MHz, which is non genuine AF (where, different PI with same AF) in short "DIP".

If a car cruises that critical area back and forth, an oscillation phenomenon can be occurred, because the different PI code can be received from 100 MHz with "XXX" PI.

The car radio has special procedure to reduce even this kind of unavoidable situation however there is a limit to be escaped from this serious case perfectly.

In that serious case, 2 mode is selectable as follows:

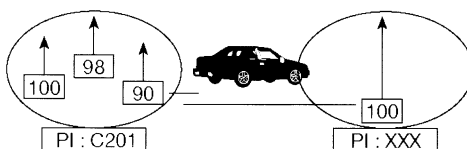

- **PI SOUND mode:**

When above different PI sound (DIP) is heard once in a while, the DIP's sound will be heard for a short time.

- **PI MUTE mode:**

Under above same situation, a mute sound will be heard for a short time.

c) RETUNE L, RETUNE S mode

The initial time of automatic TA search or PI search mode is selected.

When PI information is not caught for retune time, the radio starts to retune to next same PI station. When same PI station does not catch 1 cyclic search, the radio goes to last station and waits for several minutes until PI code is received.

- **RETUNE L mode:**

Selected as 90 seconds.

- **RETUNE S mode:**

Selected as 30 seconds.

OPERATION

D) MASK DPI or MASK ALL mode

The AF frequency (which has different PI or NO RDS signal with high field strength) is masked during checking PI when the unit searches AF. The unit doesn't search this AF (DIP) for few minutes. In the case of the AF of NO RDS signal with high field strength, if the real AF is wrongly masked as DIP by some interference, the unit hesitates to search real Afs. For this reason, the unit has the user option (MASK DPI) which doesn't mask the AF of NO RDS signal with high field strength. In MASK DPI mode, the wrong sound or long mute (according to PI SOUND or PI MUTE) can be heard from the AF station which has NO RDS signal and of which the field strength is higher than that of the currently tuning AF (station). But, these phenomenon are rare and the user will hardly hear the wrong sound in whole Europe.

- **MASK DPI mode:**
Masked only the AF which has different PI.
- **MASK ALL mode:**
Masked the AF which has different PI and NO RDS signal with high field.

E) BEEP 2'ND, BEEP ALL, BEEP OFF mode

The situation of beep sound is selected. The 3 mode is selected as also rotating **AUDIO** knob (11) clockwise or counter-clockwise.

- **BEEP 2'nd mode:**
The beep is only generated when all allowed double key is pressed long (1 sec). e.g.
When preset button (14) is pressed.
When **BND/LOU** button (13) is pressed.
When **AS/PS** button (18) is pressed.
BEEP ALL mode:
The beep is generated when every key is pressed.
- **BEEP OFF mode:**
The beep is disabled.
- **LOUDNESS**
Press **BND/LOU** button (13) for several seconds to reinforce the bass output. Press it for several seconds again to release this function.
- **DISPLAY**
Press **DSP** button (15) to operate as the conversion of each display mode as follows:
 - In case of receiving a RDS station In radio mode:
-> PS -> CT -> FREQ. -> PTY ->
 - In CD mode:
-> CD -> CT -> PS -> FREQ. -> PTY
->

OPERATION

- In case of no receiving CT or PTY information, the display shows as “NO CLOCK” or “NO PTY”.
- In case of receiving a non RDS station
In radio mode:
-> “NO CLOCK” -> FREQ. -> “NO PTY” ->
In CD mode:
-> CD -> CT -> FREQ. -> “NO PTY” ->

Each displaying time is several seconds, and come back to 1'st position after several seconds.

Notes:

- CT = clock time
- FREQ = frequency

• EQUALIZATION

Press **EQ** button (19) to turn on equalization function and to select desired audio mode. There are five kinds of mode as below:

→FLAT→ CLASSICS → POP M → JAZZ → DSP OFF →

• LIQUID CRYSTAL DISPLAY

Exhibit current frequency and activated functions on the display (8).

• FLASHING LED

If the front panel does not install in the main unit, the **LED** (12) will be flashing.

• RESET FUNCTION

RESET button (24) must be activated with either a ball point pen or thin metal object. The **RESET** button (24) is to be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

Note: If press **RESET** button (24), the unit can't work yet, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the front panel.

OPERATION

 
RADIO OPERATION

- **SWITCHING TO RADIO MODE**

Press **MOD** button (6) shortly to select radio mode, the radio mode appears in the display together with the memory band and frequency.

- **SELECTING THE FREQUENCY BAND**

At radio mode, press **BND/LOU** button (13) shortly to select the desired band. The reception band will change in the following order:



- **SELECTING STATION**

Press **TUN/TRK** ►► button (17) or **TUN/TRK** ◀◀ button (16) shortly to activate automatic seek function.

Press for several seconds until “**MANUAL**” appears on the display, the manual tuning mode is selected.

If both buttons have not been pressed for several seconds, they will return to seek tuning mode and “**AUTO**” appears on the display.

- **AUTOMATIC MEMORY STORING & PROGRAM SCANNING**

- Automatic Memory Storing

Press **AS/PS** button (18) for several seconds, the radio searches from the current frequency and checks the signal strength until one cycle search is finished. And then 6 strongest stations are stored into the corresponding preset number button.

- Program Scanning

Press **AS/PS** button (18) shortly to scan preset station. When the field strength level is more than the threshold level of stop level, the radio is holding at that preset number for several seconds with releasing mute, then searches again.

- **STATION STORING**

Press any one of the preset buttons (14) (1 to 6) to select a station which had been stored in the memory.

Press this button for several seconds (until 2ND beeps come out), current station is stored into the number button.

- **RDS (RADIO DATA SYSTEM) OPERATION**

- Setting RDS Mode

Press **AF** button (3) and release immediately to switch on or off RDS mode.

Whenever RDS is switched on, symbol “**AF**” appears on the display.

Program name is displayed on receiving a RDS station.

OPERATION

“**AF**” starts blinking if the broadcasting signal getting worse.

 
“**ALARM**” will be displayed when an emergency broadcasting is received, meanwhile sound output level will be adjusted to the preset output level automatically when the volume control is set at minimum.

- Regional Program Operation

Press **AF** button (3) for several seconds to switch on or off region mode.

Some broadcasting stations change their program from normal broadcasting to regional broadcasting for a certain time period. When region is on, the current listening program remains unchanged. When region is off, it allows the reception moves to the regional station.

- Using **PTY** to Select Program **PTY** button (1) is operated as follows:




While selecting **PTY** engagement, its selection is implemented by preset buttons as described in notes.

When **PTY** is selected, the radio starts to search corresponding **PTY** information, and stops if the corresponding **PTY** information is detected.

If corresponding **PTY** information is not existed any more, **PTY** engaging is automatically exit to normal mode.

 Notes: When **PTY** mode is engaged, the **PTY** switch is shared as follows:



According to above 2 allotted group, the preset number is used for **PTY** selection as follows:

MUSIC group

- POP M, ROCK M
- EASY M, LIGHT M
- CLASSICS, OTHER M
- JAZZ, COUNTRY
- NATION M, OLDIES
- FOLK M, SPEECH group
- NEWS, AFFAIRS, INFO
- SPORT, EDUCATE, DRAMA
- CULTURE, SCIENCE, VARIED
- WEATHER, FINANCE, CHILDREN
- SOCIAL, RELIGION, PHONE IN
- TRAVEL, LEISURE, DOCUMENT

OPERATION

- Listening to Traffic Announcement **TA** button (2) is operated as follows:
 When pressed short, it is engaging whether **TA** mode on or off.
 When **TA** mode is on and a traffic announcement is transmitted:
 When the unit was in CD (MP3) mode, it will switch temporarily to radio mode.
 Temporary switch over to an EON linked station when EON detects a traffic announcement on that other program. If the volume level was under the threshold point it will be raised to the threshold point.
 But the user changed the volume level which was more than the threshold point (min. **TA** volume level), it will be set to the last level.
 When **TA** mode is on, **TA** of individual segment is turned on.
 When a TP station is received, TP of individual segment is turned on.

TA interruption function

The current traffic announcement is cancelled by pressing this key.

But the TA mode will not be off.

When pressed long, it is selected EON TA LOCAL/EON TA DISTANCE mode.

The purpose of this key is to reduce unwanted EON TA switching, which EON TA information was received from current station and the radio switched to that EON linked station, but no information could not be received because the EON linked station is located too far from that area. So the radio is switched back to current station again.

In above operation, a customer listen to a wrong program or mute sound for a while.

EON TA LOCAL mode

When the filed strength level of EON linked is less than threshold level, the radio does not switch that station, and a customer can hardly listen to any disturbances. When EON TA LOCAL mode is selected, "EON TA LO" on numeric display is indicated for a few seconds.

EON TA DISTANCE mode

EON TA switch is tried to implemented by the information of current station.

When EON TA DISTANCE mode is selected, "EON TA DX" on numeric display is indicated for a few seconds.

The RDS data used are the PI, PS, AF, TP, TA, EON and PTY data.

PI: Program Identification Code

Code for identifying programs

PS: Program Service Name

Broadcast station name data expressed in alphanumerically characters

AF: Alternative Frequencies

Frequency list of broadcasting stations transmitting the same program

OPERATION

- TP:** Traffic Program Identification
Identification data for traffic information-broadcasting station
- TA:** Traffic Announcement
Identification
Identification data showing traffic information is being transmitted or not
- EON:** Enhanced Other Networks
Information
Broadcasting information on PI, AF, TP, TA, etc. relating to networks other than the network used for current reception
- PTY:** Program Type Code
Contents of programs such as news, light music, sports etc.

CD OPERATION

- **SWITCHING TO CD MODE**

If there is no CD inserted in the driver:

Gently insert the CD with the printed side uppermost into the CD compartment until you feel some resistance. The CD is drawn into the driver automatically. CD playback begins.

If a CD is already inserted in the driver:

Keep pressing **MOD** button (6) shortly until the CD mode display appears.

- **SELECTING TRACKS**

Press **TUN/TRK** ◀ button (16) or **TUN/TRK** ▶ button (17) to move to the previous track or the following track. Track number shows on display.

Hold **TUN/TRK** ◀ button (16) or **TUN/TRK** ▶ button (17) to fast reverse or fast forward. CD play starts from when you release the button.

- **PAUSING PLAYING**

Press **PAU** button (20) to pause CD player. Press it again to resume play.

- **PREVIEWING ALL TRACKS**

Press **SCN** button (21) to play first several seconds of each track on the current disc. Press again to stop intro and listen to track.

- **REPEATING THE SAME TRACK**

Press **RPT** button (22) to continuously repeat the same track. Press it again to stop repeat.

- **PLAYING ALL TRACKS IN RANDOM**

Press **SHF** button (23) to play all tracks on CD in random order. Press again to cancel the function.

- **EJECTING A DISC**

Press ▲ button (4) to stop CD playing and eject the disc from the disc slot (5).

OPERATION

MP3 OPERATION

- **SWITCHING TO CD (MP3) MODE**

If there is no MP3 disc inserted in the driver:

Gently insert the MP3 disc with the printed side uppermost into the disc slot (5) until you feel some resistance.

The MP3 disc is drawn into the driver automatically. The MP3 playback begins.

If a MP3 disc is already inserted in the driver:

Keep pressing **MOD** button (6) shortly until the CD (MP3) mode display appears.

- **EJECTING A DISC**

Press **▲** button (4) to stop MP3 playing and eject the disc from the disc slot (5).

- **SELECTING TRACKS IN SINGLE STEP**

Press **TUN/TRK** **◀** button (16) or **TUN/TRK** **▶** button (17) to move to the previous track or the following track. Track number shows on display.

Hold **TUN/TRK** **◀** button (16) or **TUN/TRK** **▶** button (17) to fast reverse or fast forward. CD play starts from when you release the button.

- **PAUSING PLAYING**

Press **PAU** button (20) to pause MP3 player. Press it again to resume play.

- **PREVIEWING ALL TRACKS**

Press **SCN** button (21) to play first several seconds of each track on the current disc. Press again to stop intro and listen to track.

- **REPEATING THE SAME TRACK**

Press **RPT** button (22) to continuously repeat the same track. Press it again to stop repeat.

- **PLAYING ALL TRACKS IN RANDOM**

Press **SHF** button (23) to play all tracks on MP3 disc in random order. Press again to cancel the function.

- **SELECTING TRACKS BY AS/PS BUTTON (18)**

AS/PS button (18) is assigned as Digital Audio Mode selection button in MP3 operation.

When pressed, it is activated as selecting each mode of Digital Audio.

“Searching track directly” =>

“Searching Directory or File Name”=>

“Navigation” from root by **TUN/TRK**

UP/DOWN buttons=> “Navigation” from current directory by **TUN/TRK UP/DOWN** buttons.

OPERATION

Searching Track Directly

Press **AS/PS** button (18) for one time.

It enters into "Searching track directly" in Digital Audio CD.

The unit searches the track selected by following direct numeric buttons:

M1-M6, MOD (7), TUN/TRK DOWN (8), TUN/TRK UP (9), DSP(0).

If selected three digits, the unit searches the track at once. If selected one or two digits, the unit wait for **ENT (BND/LOU)** button for seconds. The unit searches the track after few seconds, even if the enter button is not pressed.

Searching Directory or File Name

Press **AS/PS** button (18) for two times.

It enters into "Searching Directory or File Name" in Digital Audio CD.

The unit searches files and directories that have the same character which is inputted by the user pressing the corresponding buttons listed on the Table 1 below.

Explain as follows:

- Use the corresponding buttons to select the characters A to Z, blank, 0 to 9, _, -, +.
- Press **SEL** button to confirm entry of each characters.
- Press **BND/LOU (ENT)** button to start the title search.
In case the selected title is a directory name, display will show (' '), then
- Use the **TUN/TRK UP/DOWN** buttons to list all songs under this directory and select the title.
- Press **BND/LOU (ENT)** button to confirm and start the play.
- Repeat the above steps if the newly selected title is again a directory.

Searching From Root Directory

Press **AS/PS** button (18) for three times. The unit searches file or directory from root by **TUN/TRK UP/DOWN** buttons. (D-DIR icon turns on if the name is directory).

Display will list all available directories and songs. Select the desired directory/songs by using **TUN/TRK UP/DOWN** buttons and **BND/LOU (ENT)** button to confirm. If the selected title is a song, it starts to play.

If the selected title is a directory name, display will show (' '), then

- Use the **TUN/TRK UP/DOWN** buttons to list all songs under this directory and select the title.
- Press **BND/LOU (ENT)** button to confirm and start the play.
- Repeat the above steps if the newly selected title is again a directory.

OPERATION

Searching From Current Directory

Press **AS/PS** button (18) for four times. The unit searches file or directory from current directory by **TUN/TRK UP/DOWN** buttons. (D-DIR icon turns on if the name is directory).

The current directory name is displayed for a second and the currently playing file name is displayed (selected). The user can select the directory or file in the directory by **TUN/TRK UP/DOWN** buttons. The selected file can be played by pressing **BND/LOU (ENT)** button.

- **DISPLAY INFORMATION**

Press **DSP** button (15) to show following information, such as the clock, ID3 TAG (if available: song title, directory name, artist name, other contents...) and other information.

KEY Assigned IN Searching mode (Table 1)

AS/PS	Mode Select
BND/LOU	ENTER
M1	A, B, C, 1
M2	D, E, F, 2
M3	G, H, I, 3
M4	J, K, L, 4
M5	M, N, O, 5/ Directory DOWN
M6	P, Q, R, 6/ Directory UP
MOD	S, T, U, 7
TUN/TRK DOWN	V, W, X, 8
TUN/TRK UP	Y, Z, SPACE, 9
SEL	CHARACTER SHIFT RIGHT
DSP	_, -, +, 0
AUDIO KNOB	ALL CHARACTERS SELECT (A, B - 8, 9, 0)

AUDIO KNOB & TUN/TRK UP/DOWN buttons:
Searching file and directory during Navigation.

OPERATION

WMA OPERATION

The unit that can play the WMA disc and the operation is the same with MP3 operation described above.

USB PLAY OPERATION

In the front panel of the unit, there is an USB interface (25). You can connect an MP3 player or other device with the USB interface through this interface (25).

When you connect a player through the interface, the unit will search the MP3 files or WMA files in the player and start to play MP3 files or WMA files automatically.

When playing the MP3 files or WMA files in the device, the operation is the same with the MP3 operation described above.

RECORD OPERATION

This unit provides record function. In radio, CDP mode, CD Changer or AUX mode, press **TA(REC)** button (2) shortly to activate RECORD mode. The unit will record files to USB and the format of the file “.WMA”. The unit can find and play the record files in the device that connected to the unit through the USB interface.

There will be shown “file name” during recording.

Press TA (REC) button (2) once again to stop the Record function.

SD/MMC OPERATION

The SD/MMC interface is on the housing of the unit (26) . See below

SD/MMC INTERFACE



When you insert a SD/MMC card in the SD/MMC interface, the unit will search the MP3 files or WMA files in the card and start to play MP3 files or WMA files automatically. The operation is the same with the MP3 operation described above. If in other mode, you can also press **MOD** button to select SD/MMC mode.

In record mode, it will record to USB first. If USB is full, it will record to SD/MMC. The corresponding operation and cautions please refer to the record operation to USB. When there is no USB driver in the USB interface, you cannot record to SD/MMC directly. When there are important files in the SD/MMC card (not included), do not connect it to the main unit to play.

DISC NOTE

A. Notes on discs:

1. Attempting to use non-standard shape discs (e.g. square, start, heart) may damage the unit. Be sure to use round shape CD discs only for this unit.
2. Do not stick paper or tape etc., onto the label side or the recording side of any discs, as it may cause a malfunction.
3. Dirt, dust, scratches and warping discs will cause misoperation.

OPERATION

B. Notes on CD-Rs (recordable CDs)/CD-RWs (rewritable CDs):

1. Be sure to use discs with following marks only for the unit to play:



 
2. The unit cannot play a CD-R and CD-RW that is not finalized.
(Please refer to the manual of your CD-R/CD-RW recorder or CD-R/ CD-RW software for more information on finalization process).
3. Depending on the recording status, conditions of the disc and the equipment used for the recording, some CD-Rs/CD-RWs may not be played on this unit. (See *1)
*1: To have more reliable play back, please see following recommendations:
 - a. Use CD-RWs with speed 1x to 4x and write with speed 1x to 2x.
 - b. Use CD-Rs with speed 1x to 8x and write with speed 1x to 2x.
 - c. Do not play a CD-RW which has been written for more than 5 times.

C. Notes on MP3 files:

1. The disc must be in the ISO9660 level 1 or level 2 format, or Joliet or Romeo in the expansion format.
2. When naming a MP3 file, be sure the file name extension is “.MP3”.
3. For a non-MP3 file, even though the file name extension is “.MP3”, the unit cannot recognize it.

IMPORTANT

Note : Although this CD player can read CD-R, CD-RW and MP3 discs – in addition to normal CD's – the playability of CD-R, CD-RW and MP3 discs may be affected by the type of software that was used to create the discs, as well as the quality and condition of the blank media you are using. 100% playability cannot be guaranteed. This is not an indication of a problem with the player.



Instructions on environment protection

Do not dispose of this product in the usual household garbage at the end of its life cycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in its marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

TROUBLE SHOOTING

Before going through the checklist, check wiring connection. If any of the problems persist after checklist has been made, consult your nearest service dealer.

Symptom	Cause	Solution
No power.	The car ignition switch is not on.	If the power supply is connected to the car accessory circuits, but the engine is not moving, switch the ignition key to "ACC".
	The fuse is blown.	Replace the fuse.
Disc cannot be loaded or ejected.	Presence of CD disc inside the player.	Remove the disc in the player, then put a new one.
	Inserting the disc in reverse direction.	Insert the compact disc with the label facing upward.
	Compact disc is extremely dirty or defective disc.	Clean the disc or try to play a new one.
	Temperature inside the car is too high.	Cool off or until the ambient temperature return to normal.
No sound.	Condensation.	Leave the player off for an hour or so, then try again.
	Volume is in minimum.	Adjust volume to a desired level.
Sound skips.	Wiring is not properly connected.	Check wiring connection.
	The installation angle is more than 30 degrees.	Adjust the installation angle less than 30 degrees.
The operation keys do not work.	The disc is extremely or defective disc.	Clean the compact disc, then try to play a new one.
	The built-in microcomputer is not operating properly due to noise.	Press the RESET button. Front panel is not properly fixed into its place.
The radio does not work. The radio station automatic selection does not work.	The antenna cable is not connected.	Insert the antenna cable firmly.
	The signals are too weak.	Select a station manually.