



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org


INSTRUCTIONS


for use of the

MAMIYAFLEX

AUTOMATIC


Butkus

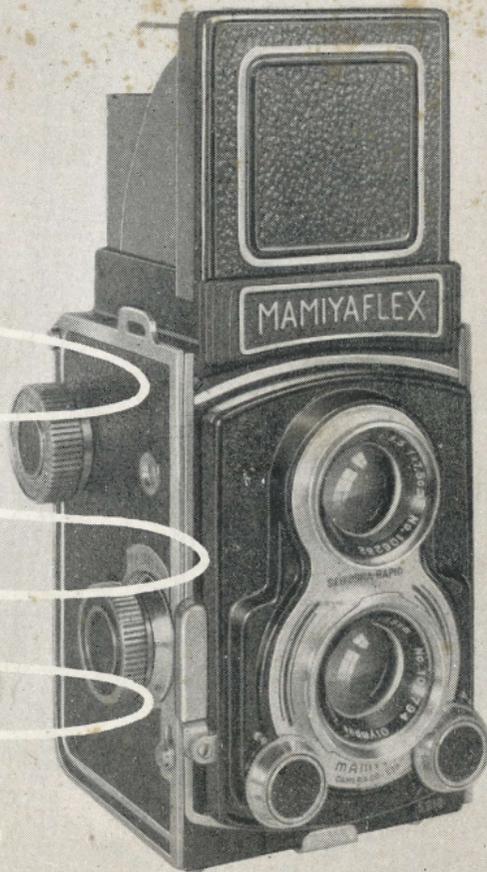

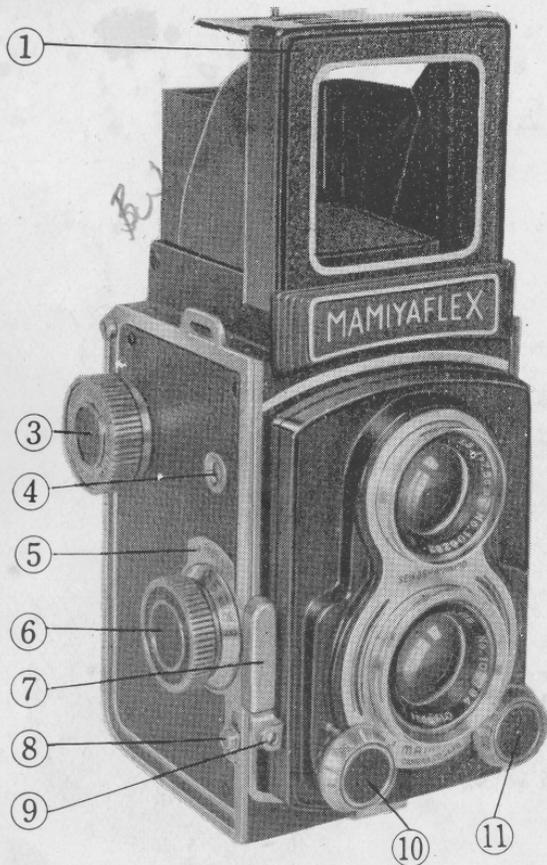


(Fig. 1)

1. Front Panel
2. Finder Image Magnifier
3. Film-Winding & Shutter-Cocking Knob
4. Film Frame Indicator
5. Depth of Focus Scale
6. Focussing Knob
7. Shutter Trip Bar
8. Trip Bar Safety Catch
9. Socket for Cable Shutter Release
10. Lens Stops Control Dial
11. Shutter Speed Control Dial
12. Back-Lid Lock Catch
13. Take-up Spool Holding Stud
14. Film Spool Holding Stud
15. Terminal for Synchro-Flash Attachment
16. Exposure Table
17. Back-Lid Panel
18. Film Pressure Plate

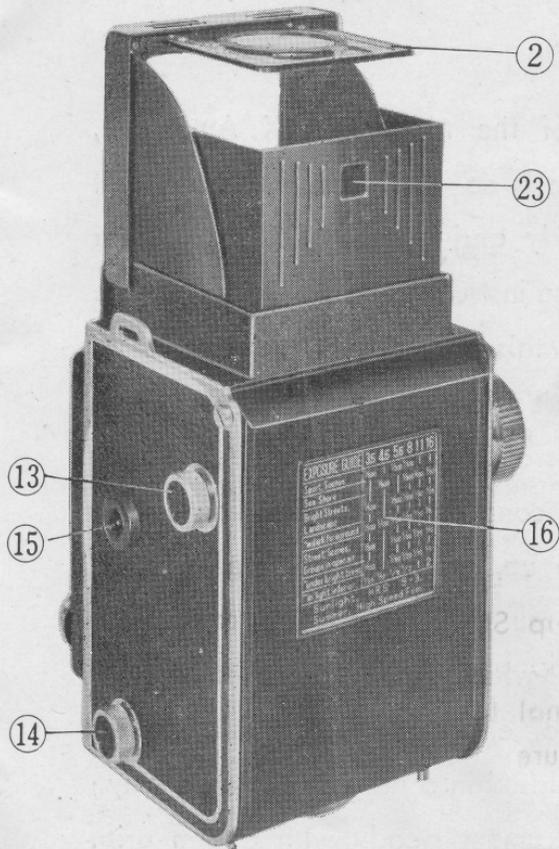

(Fig. 2)

- 19. Exposed Film Take-Up Spool Chamber
- 20. Unexposed Film Spool Chamber
- 21. Film Indicator Dial
- 22. Tripod Screw Socket
- 23. Rear Peep Hole

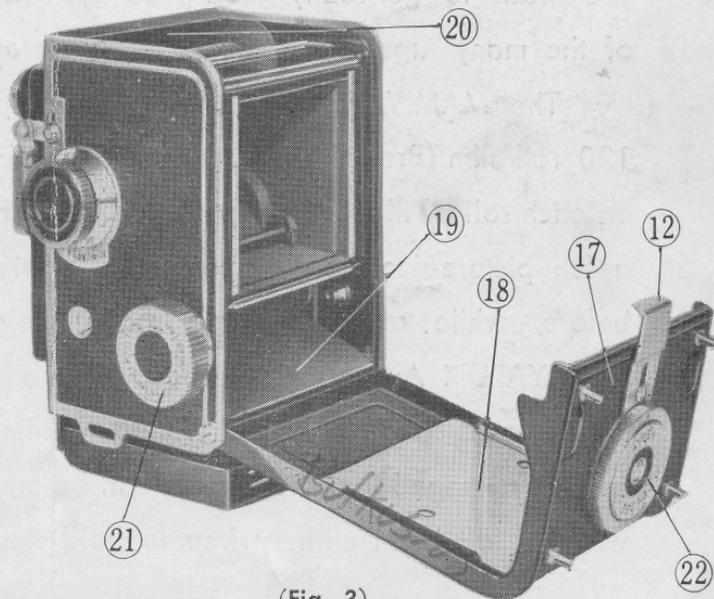

(Fig. 3)

GENERAL


THIS BOOKLET is a manual for users of the MAMIYAFLEX Automatic, precision camera. The MAMIYAFLEX Automatic is so well designed and built that anyone can take photographs easily, quickly and without mistakes. But if you want to get really good pictures, read these instructions and make full use of the many ingenious features incorporated in this superb instrument.

The MAMIYAFLEX Automatic is a super-precision automatic camera using 120 roll film (Brownie size). It takes 12 pictures of $2\frac{1}{4}'' \times 2\frac{1}{4}''$ (6 cm. \times 6 cm.) on each roll of film. The special MAMIYAFLEX construction permits you to see a full picture-size view of your shot, right side up, on a ground glass screen, before, while and after you make the exposure. This feature makes the MAMIYAFLEX Automatic the best camera with which good, sharp and clear photographs can be obtained with the minimum of effort and skill. All controls are so arranged that the camera can be manipulated in a natural effortless way; with the left hand entirely free to hold the instrument steady with a firm grip.

All settings are visible from above at a glance. A simple turn of a knob winds the film and cocks the shutter in one operation, so pictures can be taken in rapid succession with no fear of double or blank exposures.

FILM for the MAMIYAFLEX

The MAMIYAFLEX Automatic will take any standard make of black and white or color film of the 120 (Brownie) size. Each roll of film is sufficient for 12 exposures.

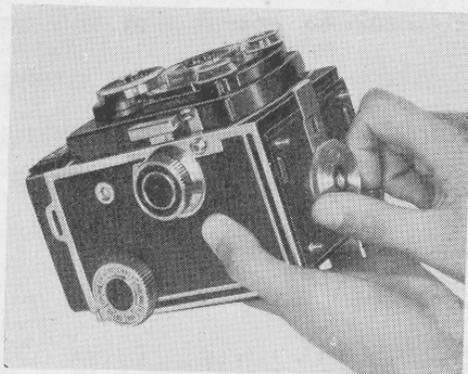

(Fig. 4)

Butkus-45

LOADING the MAMIYAFLEX with FILM

1. Disengage Back-Lid Lock Catch (12) and open up Back-Lid Panel (17).
2. Pull out Spool Stud (14), place the film in Film Chamber (20), fitting the grooved end of the spool to Spool Stud (14). The spool clips in by itself.



(Fig. 5)



(Fig. 6)

the Film-Winding Knob a little twist. (Fig. 6) In doing this, the Film-Winding Knob may happen to stop, but it is not a defect. Close the Back-Lid Panel, the Knob again runs free. Then load the film.

4. Close Back-Lid and lock. When this is done, the figure "O" will automatically appear in Film Frame Indicator Window (4).

3. Remove paper seal of film roll and pull out enough of the paper leader to reach Take-Up Spool (19.) Insert end of paper leader in slot of Take-Up Spool. (The black side of the paper leader should face the interior of the camera.) Check to see if film will be taken up properly by giving

5. Turn Film-Winding Knob (3) until it stops. Now everything is ready for exposing the first frame on the film: the Film Frame Indicator shows "1" and the shutter is in cock.

6. Disengage safety Catch (8).

FILM TAKE-UP

When the shutter is tripped and an exposure is made, the Film-Winding Knob is automatically released. Turn the Knob until it stops, the exposed frame will be taken up, the shutter will be recocked and the Film Frame Indicator will show the next number.

UNLOADING FILM

1. When 12 pictures have been taken, thus exposing the entire roll of film, the Film-Winding Knob is freed. Keep winding until all of the paper leader is taken up.

2. Open up Back-Lid, seal end of film roll with the gummed paper

provided, pull out Spool Stud (13) and remove exposed roll of film.

3. Transfer empty spool to Take-Up position (19).
4. Close Back-Lid and lock. The Film Frame Indicator will have returned to "O".


TAKING PICTURES WITH THE MAMIYAFLEX

In photography, there are three things to which attention must be given :


- 1) Distance**
- 2) Exposure Time**
- 3) Lens Opening**

Then, for obtaining a really good picture, the subject matter must be properly composed to fit into the frame.

The MAMIYAFLEX Automatic deals with distance and composition in a most ingenious way: Focus is checked by the sharpness of the image on the ground glass screen, which also is exactly as it will appear in the finished print. **Depth of Focus** — the range within which sharp images of the objects in the picture field will be registered, depending on the stopping of the lens opening — is automatically indicated by the Depth of Focus Scale (5).

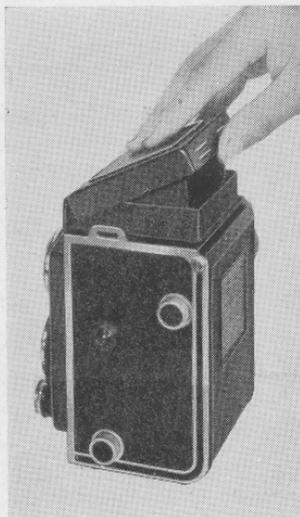

(Fig. 7)

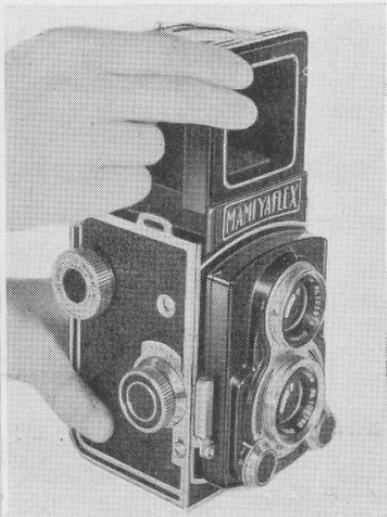

(Fig. 8)



(Fig. 9)

OPENING AND CLOSING THE FOCUSING HOOD :

The Focussing Hood snaps into position by holding up the Front Panel (1) of it. The Magnifier will spring into position when pulled out. The Front Panel of the Focussing Hood can be pushed downwards so as to leave a Finder



(Fig. 10)

Frame. When closing the Hood ; Push the Finder Frame slightly backwards, and the Frame will be closed automatically, after pressing down the Magnifier, the Focussing Hood folds itself when pressed down.

FOCUSSING :

1. Holding the MAMIYAFLEX Automatic : Manipulation of all the controls is done with the right hand ; so the left hand should be used to support and hold the camera. (Fig. 9)
2. Train the camera on the subject matter, look down on ground glass screen. The image of the subject matter will be seen projected on the screen.
3. With the thumb and middle finger of the right hand, turn the Focussing Knob (6) and bring the screen image into sharp focus. Push down Safety catch (8) to release Shutter Trip Bar. The right forefinger will be resting lightly on



(Fig. 11)

possible to the glass.

5. When taking a picture with the Eye Level View Finder, the camera must first be focused by using either the groundglass or by estimating the footage and setting the indicator on the Focussing Knob. The Finder should be used with eye close to the Rear Peep Hole (23). (Fig. 11).

the Shutter Trip Bar, ready to release the shutter at any instant without shifting the hand from the controls. (Fig. 10)

When the shutter is tripped and an exposure is made, it goes without saying that the two other essentials — Exposure Time and Lens Aperture Stopping — have already been attended to.

4. When specially sharp focussing must be done, the Image Magnifier (2) is used. The eye should be brought down as close as

SHUTTER SPEEDS AND LENS STOPS :

With the MAMIYAFLEX Automatic the setting of shutter speeds and lens stops can be done without shifting the hold on the camera.

1. Shutter Speeds: The shutter speeds (Bulb, 1, 1/2, 1/5, 1/10, 1/25, 1/50, 1/100, 1/250, and 1/500 Sec.) are set by turning the Shutter Control Dial (11) to the desired reading. (N. B.)... with the shutter set at 1/500 it is not advisable to change the setting unless the shutter has been tripped and uncocked. This warning applies to all **Compur** type shutters. As already stated, the shutter is automatically cocked when the Film-Winding Knob is turned to bring the next unexposed frame into position. The Cable Release Socket (9) provided beneath the Shutter Trip Bar enables you to use both cable release and self-timer.

2. Lens Aperture Stops: Lens opening is controlled by the Lens Stops Control Dial (10). Lens speeds can be varied from F 3.5 to F 22.

3. Notice: When releasing the shutter of the unloaded MAMIYAFLEX


Automatic, the shutter must be released after one complete revolution or more of the Film-Winding Knob.

FLASH PHOTOGRAPHY with the MAMIYAFLEX

The MAMIYAFLEX Automatic is fitted with a precision flash synchronizing mechanism. There is therefore no need for a special synchronizer; and when the MAMIYA FLASH EQUIPMENT is used, all that need be done is to connect the synchronizing lead wire to the Synchro-Flash Terminal (15). (Fig. 12)

Other flash attachments available on the market may be used with slight modifications to end of the wire lead.

When using MAMIYAFLEX with the MAMIYA FLASH EQUIPMENT, perfect

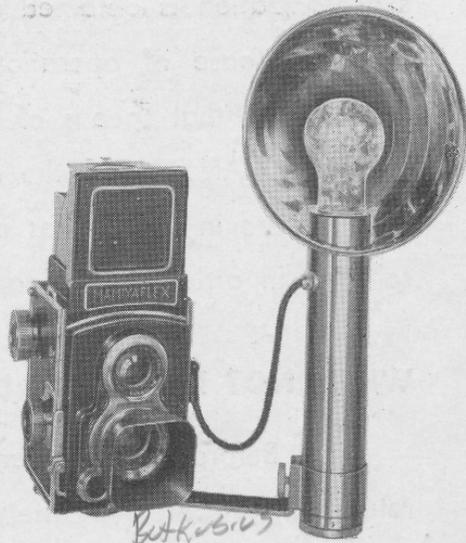

(Fig. 12)

synchronization is obtained at shutter speeds of less than 1/25 second, with the same ease of operation as when using the camera alone. Experiments have shown that speeds of up to 1/250 are possible with the combination of the MAMIYAFLEX and the MAMIYA FLASH EQUIPMENT. But since there are irregularities in flash, bulbs and batteries, the upper limit of 1/25 second was selected in order to eliminate any possibility of failure.

WHEN NOT IN ACTUAL USE

1. Before closing cover of the MAMIYAFLEX field case, it is advisable to return Safety Catch to safety position, then withdraw the lens-shutter assembly by turning the focussing knob to infinity (∞).
2. Care should be exercised not to lose the double lens cap which affords protection to the coated lens against scratches, dust and moisture.

MAMIYAFLEX ACCESSORIES



(Fig. 13)

1. Deluxe Genuine Leather Field Case (Fig. 13.).
2. MAMIYA SYNCHRO-FLASH EQUIPMENT
3. Filters
 - Yellow Y1, Y2, Y3
 - Green P0.0, P0.1
 - Orange YA3
 - Red R. 4
4. Lens Hood with Case
5. Proxar Lens
6. Self-Timer
7. MAMIYA PINT HOOD

◆

MAMIYA CAMERA CO., LTD.

HONGO 1-CHOME, BUNKYO-KU, TOKYO