 


Windows Quick Start Guide (Macintosh instructions on reverse side)

MAXTOR ONETOUCH™ III MINI EDITION

For detailed instructions, refer to the User's Guide located on the OneTouch III Mini Edition

1 Connect the OneTouch III Mini Edition

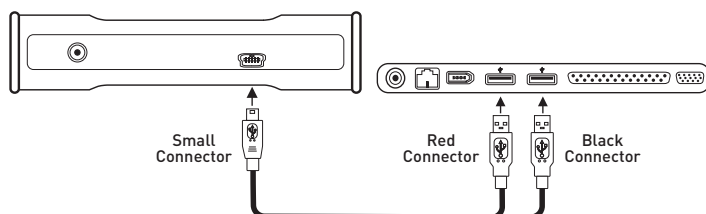


1. Plug the Power + Data connector into an available USB port on your system.
2. Plug the Power Only connector into an available USB port on your system.
3. Connect the Type "B" connector to the OneTouch III Mini Edition Drive.

If both ports fail to supply enough power to the drive, an optional power supply should be purchased from Maxtor at www.maxstore.com.

2 Install the Software

Highly Recommended – Copy all files on the OneTouch III Mini Edition to your local hard drive. When your OneTouch III Mini Edition is attached, the software installation will start. Select your language from the list. If the installer does not launch, click **Start → Run**, browse to the drive letter used for the OneTouch III Mini Edition, and open **Launch.exe**. Windows Vista will prompt you with User Account Control to proceed; click Continue. Follow the onscreen prompts to complete the installation.

3 Enable the OneTouch Feature

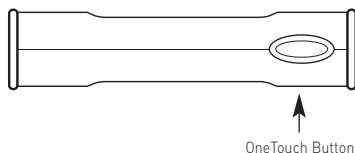

Push the button on the front of your OneTouch III Mini Edition. The OneTouch Manager software will open to the Backup Settings menu. Follow the onscreen steps to configure your backup.

4 Need Help?


Refer to the Knowledge Base at support.seagate.com for in-depth help and answers to frequently asked questions. To contact Seagate, please visit seagate.com and choose **Contact Us**.

Macintosh Quick Start Guide (Windows instructions on reverse side)

MAXTOR ONETOUCH™ III MINI EDITION

For detailed instructions, refer to the User's Guide located on the OneTouch III Mini Edition

1 Connect the OneTouch III Mini Edition

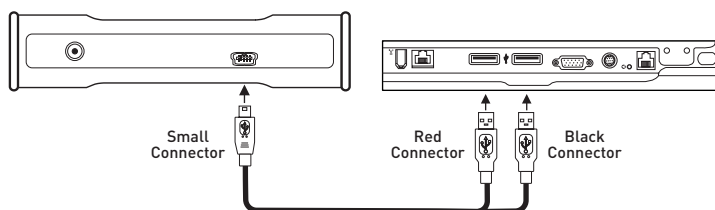

1. Plug the Power + Data connector into an available USB port on your system.
2. Plug the Power Only connector into an available USB port on your system.
3. Connect the Type "B" connector to the OneTouch III Mini Edition Drive.

If both ports fail to supply enough power to the drive, an optional power supply should be purchased from Maxtor at www.maxstore.com.

2 Install the Software

Highly Recommended – Copy all files on the OneTouch III Mini Edition to your local hard drive. Double-click the Mac OneTouch Mini.dmg file to mount it to your desktop. Open the Mac OneTouch Mini desktop icon and double-click the Mac OneTouch Mini installer icon to install the software. When finished, launch the Apple Disk Utility to format the drive for your Mac.

3 Enable the OneTouch Feature



Push the button on the front of your OneTouch III Mini Edition. The OneTouch Manager software will open to the Backup Settings menu. Follow the onscreen steps to configure your backup.

4 Need Help?

Refer to the Knowledge Base at support.seagate.com for in-depth help and answers to frequently asked questions. To contact Seagate, please visit seagate.com and choose **Contact Us**.

Maxtor Publication Print Specifications

Important – This is a non-printing page

**This page is intended solely as a printing specification for the publication it is included with.
It does not actually print along with the publication.**

Maxtor Document:	100476795 GUIDE, QSTART, MX0, OT_MINI, US
Document Description:	Maxtor OneTouch III Mini Edition Quick Start Guide, US
Publication Format:	11 inches (H) x 8.5 inches (W), double sided
Paper Stock/Weight:	60 lb. Gloss
Artwork Bleed:	No – art has .325" border along all edges
Number of Inks:	One (1) Black
Number of Folds:	Three (3) – refer to separate folding guide
Publication Folded Size:	4.25" (W) x 2.75" (H)
Production (print) File:	Quark XPress v6.5/Mac (100476795_print.qxd)
Proof File:	Adobe PDF 100476795(g).pdf, supplied
Prepared by:	InfoGraphics, Inc. infographics.usa@comcast.net contact: Scott Kear 303-776-7538 work 303-829-2270 cell