

Disney: ELECTRONICS




# User's Guide BOOMBOX

DB3000-C



## QUICK REFERENCE

 The Quick Reference is given to provide basic operation of the unit. Please completely read the user's guide to take advantage of all the features this unit has to offer.

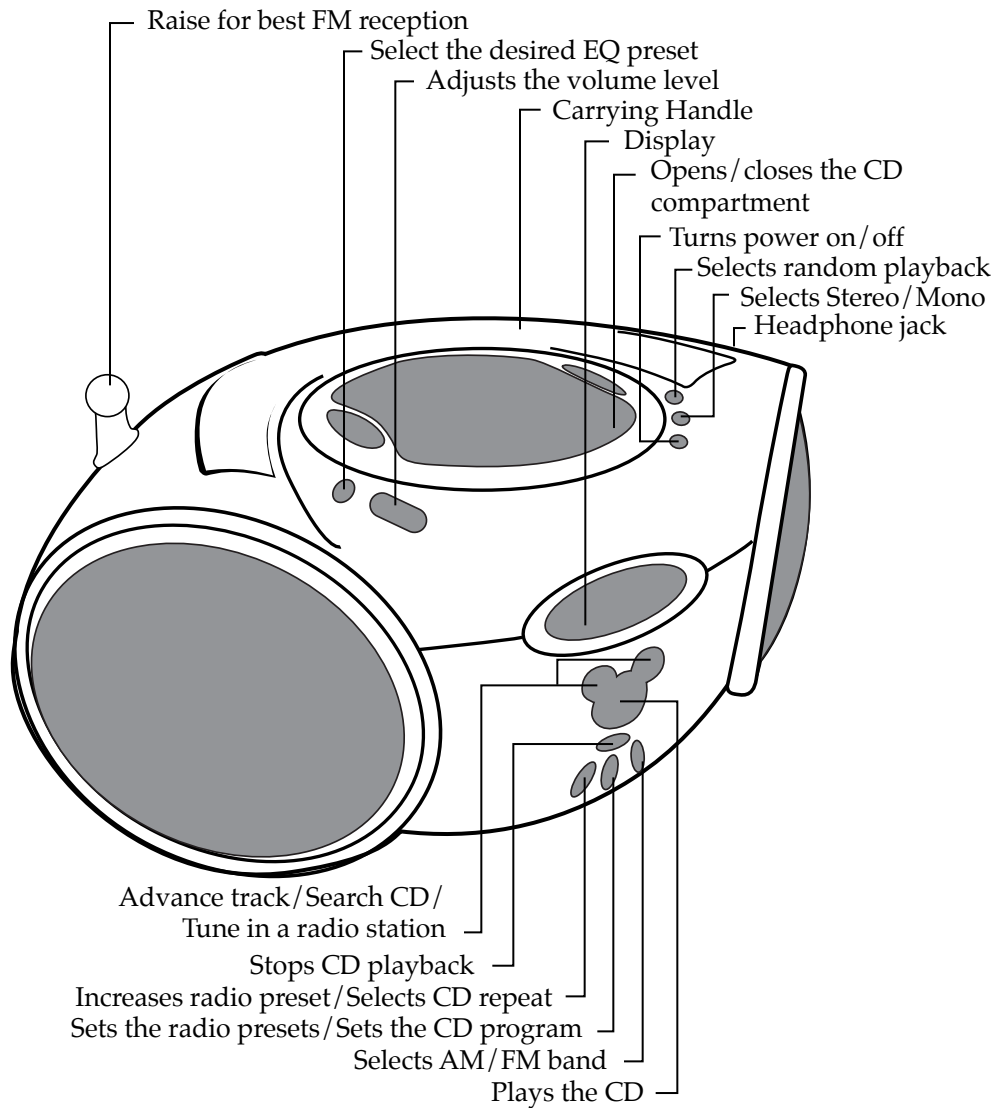

Disney Elements © Disney

## QUICK REFERENCE (CONTINUED)

### TO LISTEN TO THE RADIO:

1. Press the Power button to turn the unit on.
2. Press the Radio Band button to select radio and to select AM or FM.
3. If listening to FM, press the FM Mode button to select Stereo or Mono.
4. Tune a desired station by pressing the Skip/Search/Tune (◀◀) or (▶▶) button. Press and hold the Skip/Search/Tune (◀◀) or (▶▶) button for 1 second, then release for rapid search tuning.
5. Adjust the VOLUME control and Preset EQ button as desired.
6. To turn the radio off, press the Power button.

### TO PLAY A CD:

1. Press the Power button to turn the unit on and insert a CD.
2. Press the Play/Pause (▶||) button to start playback.
3. To **skip** forward or backward through the tracks on the disc, press the Skip/Search/Tune (◀◀) or (▶▶) button. To **search** forward or backward through a specific track on the disc, press and hold the Skip/Search/Tune (◀◀) or (▶▶) button.
4. When the disc is through playing, it will stop. Press the Stop (■) button to stop the disc before it is finished.
5. Adjust the VOLUME control and Preset EQ button as desired.
6. To turn the CD off, press the Power button.

### TO REPEATEDLY PLAY BACK ONE TRACK/ALL TRACKS:

1. Follow steps 1 and 2 in the TO PLAY A CD section above.
- 2a. ONE TRACK REPEAT: Select a track using the Skip/Search/Tune (◀◀) or (▶▶) button. Press the Preset Up/CD Repeat button once, the ↺ indicator will blink and the unit will play the selected track over and over until the Stop (■) button is pressed.
- 2b. ALL TRACKS REPEAT: Press the Preset Up/CD Repeat button twice, the ↺ indicator will light and the unit will play all tracks on the CD over and over until the Stop (■) button is pressed.

 
**TO CANCEL:** To cancel Repeat, repeatedly press the Preset Up/Repeat button so that the Repeat 1 or Repeat ALL indicator disappears in the display.

### TO RANDOMLY PLAY BACK THE TRACKS:

1. Follow steps 1 and 2 in the TO PLAY A CD section above.
2. Press the Random button once, the ✂ indicator will appear in the display and the unit will randomly play all the tracks on the CD.

**TO CANCEL:** To cancel Random, press the Random button or the Stop (■) button once while in the Stop mode.

## SAFETY PRECAUTIONS

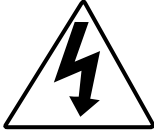


### DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



### ATTENTION:

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**LASER SAFETY:** This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD,  
DO NOT EXPOSE THIS UNIT TO RAIN OR  
MOISTURE.**

## SAFETY PRECAUTIONS (CONTINUED)

### INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

### Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

## SAFETY PRECAUTIONS (CONTINUED)

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

#### Decibel

| <u>Level</u> | <u>Example</u>   |
|--------------|--|
| 30           | Quiet library, soft whispers                                     |
| 40           | Living room, refrigerator, bedroom away from traffic             |
| 50           | Light traffic, normal conversation, quiet office                 |
| 60           | Air conditioner at 20 feet, sewing machine                       |
| 70           | Vacuum cleaner, hair dryer, noisy restaurant                     |
| 80           | Average city traffic, garbage disposals, alarm clock at two feet |

#### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:

|     |   |
|-----|---|
| 90  | Subway, motorcycle, truck traffic, lawn mower       |
| 100 | Garbage truck, chain saw, pneumatic drill           |
| 120 | Rock band concert in front of speakers, thunderclap |
| 140 | Gunshot blast, jet engine                           |
| 180 | Rocket launching pad                                |

Information courtesy of the Deafness Research Foundation.



## IMPORTANT SAFETY INFORMATION

**Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.**

### 1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

### 2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

### 3. HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

### 4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

### 5. CLEANING

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### 6. ATTACHMENTS

Do not use attachments not recommended by the product's manufacturer as they may cause hazards.

### 7. WATER AND MOISTURE

Do not use this product near water- for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

### 8. ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- 8A.** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING  
(symbol provided by RETAC)



### 9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation and to ensure reliable operation of the product and

to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### 10. POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

### 11. GROUNDING OR POLARIZATION

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

### 12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

### 13. LIGHTNING

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

### 14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## IMPORTANT SAFETY INFORMATION (CONTINUED)

**15. OVERLOADING**

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

**16. OBJECT AND LIQUID ENTRY**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

**17. OUTDOOR ANTENNA GROUNDING**

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes, and requirements for grounding electrode.

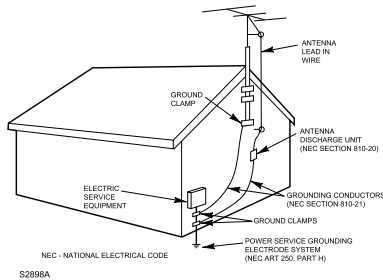

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

**18. SERVICING**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**19. REPLACEMENT PARTS**

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in

fire, electric shock or other hazards.

**20. SAFETY CHECK**

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**21. WALL OR CEILING MOUNTING**

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

**22. DAMAGE REQUIRING SERVICE**

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment or other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or the cabinet has been damaged.
- f. When the product exhibits a distinct change in performance - this indicates a need for service.

**23. HEAT**

 
The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**24. NOTE TO CATV SYSTEM INSTALLER**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



## LOCATION OF CONTROLS

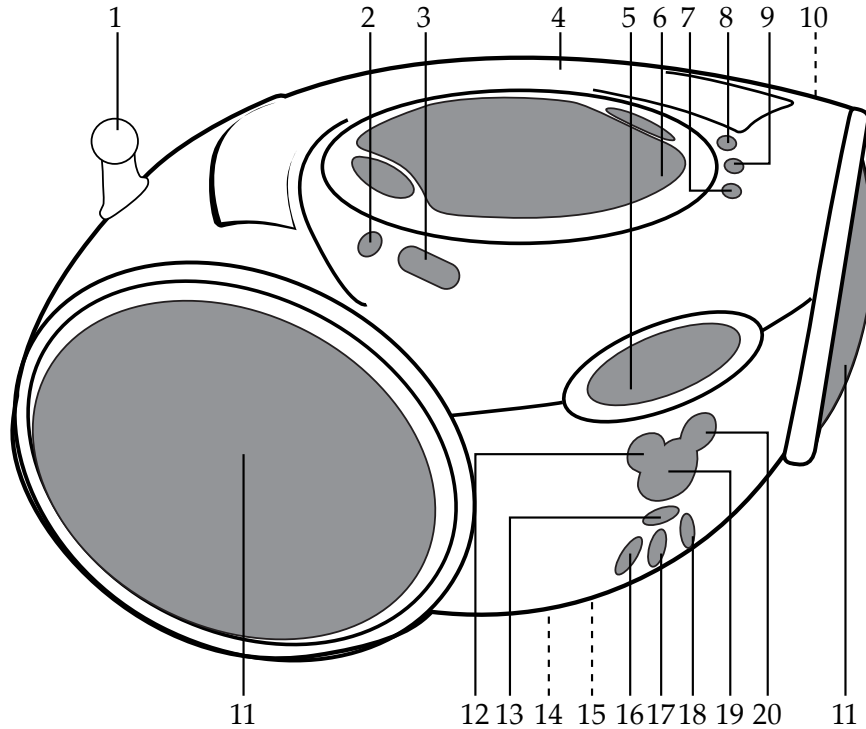


- |                       |  |
|-----------------------|--|
| 1. FM Rod Antenna     | 12. Skip/Search/Tune (⏮) Button          |
| 2. Preset EQ Button   | 13. Stop (■) Button                      |
| 3. Volume +/- Buttons | 14. Battery Compartment (Bottom of Unit) |
| 4. Carrying Handle    | 15. AC Power Jack (Rear of Unit)         |
| 5. Display            | 16. Preset Up/CD Repeat Button           |
| 6. CD Open/Close Area | 17. Preset Set/CD Program Button         |
| 7. Power Button       | 18. Radio Band (AM/FM) Button            |
| 8. Random Button      | 19. Play/Pause (▶/⏸) Button              |
| 9. FM Mode Button     | 20. Skip/Search/Tune (⏭) Button          |
| 10. Headphone Jack    |  |
| 11. Speaker           |  |

## POWER SOURCES

 This unit is designed to operate on AC household current or DC (batteries).

### AC:

Use the AC polarized line cord included with the unit for operation on AC power. Insert one end of the AC line cord into the AC power jack on the rear of the unit and the other end (with the 2 blades) into a conveniently located AC outlet having 120V, 60Hz. When the AC cord is plugged in, the batteries will be disconnected.

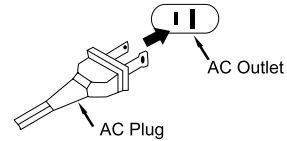

**NOTE:** The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

### DC:

Remove the Battery Compartment cover on the bottom of the unit by pressing in the two tabs (see figure 1) and lift the battery door off. Insert eight (8) "C" cell batteries (not included), observing the battery polarity indicated inside the compartment and in figure 2. Replace the Battery Compartment cover.

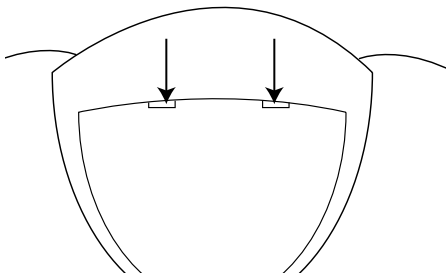 


Figure 1

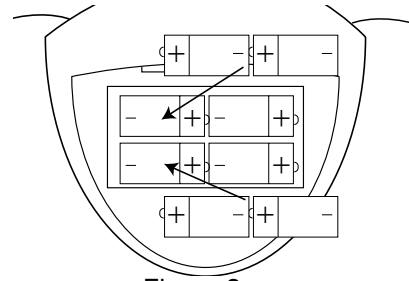 


Figure 2

### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

 
1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

### HEADPHONES JACK:


Insert headphones (not included) into the Headphones jack for private listening. The speakers will be disconnected when listening with headphones.

## OPERATION


### TO PLAY THE RADIO

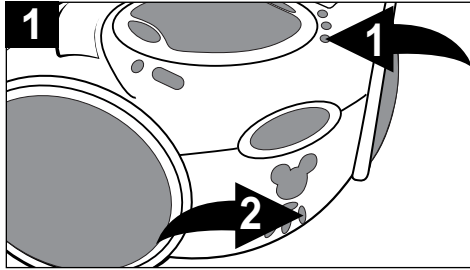

 
Press the Power button ❶ to turn the unit on. Press the Radio Band button ❷ to select radio and to select AM or FM.

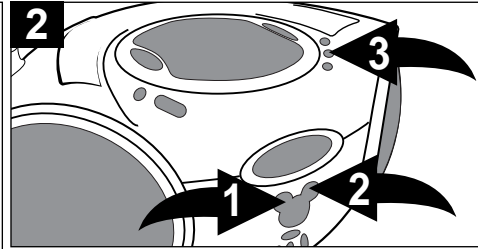

 Tune a desired station by pressing the Skip/Search/Tune (◀◀) ❶ or (▶▶) ❷ button. Press the FM Mode button ❸ to select Stereo (Stereo indicator will appear in the display) or Mono (no stereo indicator will appear).

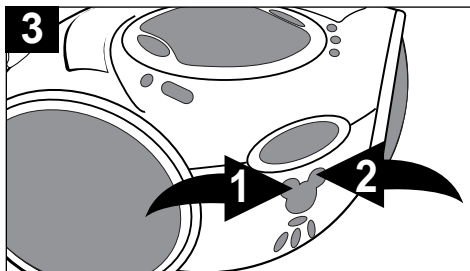

 If you press and hold the Skip/Search/Tune (◀◀) ❶ or (▶▶) ❷ button for one second, then release, the unit will automatically scan to the next broadcasting station.

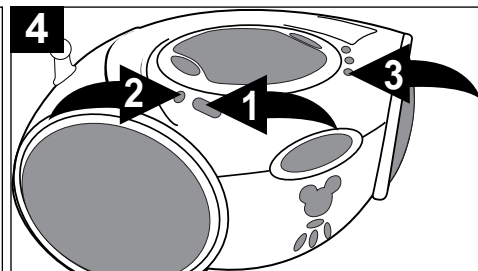

Adjust the volume using the VOLUME buttons ❶ as desired. Press the Preset EQ ❷ button repeatedly to select one of the Preset EQ settings (ROCK, JAZZ, POP, CLASSICAL). To turn the radio off, press the Power button ❸.


### ANTENNAS

 **AM** – This unit has a built-in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.


**FM** – The FM Rod Antenna is for FM reception only. If reception is weak, adjust the length of the antenna.

## OPERATION (CONTINUED)


### TO SET/RECALL THE RADIO PRESETS (12 AM and 20 FM)

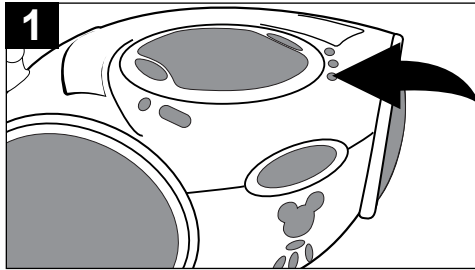

 
1 Press the Power button to turn the unit on and select a radio station as described on the previous page.

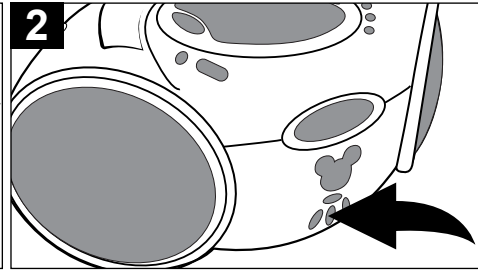

 2 Press the Preset Set/CD Program button; the preset number will blink in the display.

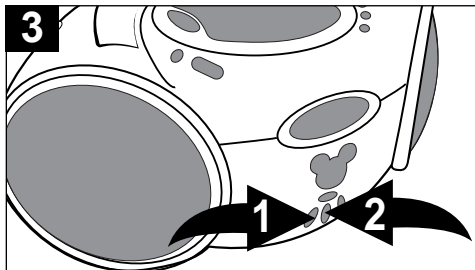

 
3 Repeatedly press the Preset Up/CD Repeat button ❶ until the desired preset number appears in the display. Press the Preset Set/CD Program button ❷ again to set the preset. Repeat steps 2 and 3 to preset more stations.

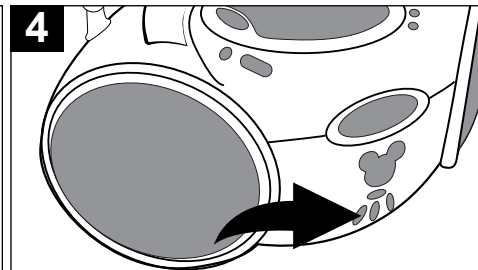


4 To recall a Preset, repeatedly press the Preset Up/CD Repeat button until the desired preset number appears in the display.

## OPERATION (CONTINUED)

 
### TO INSERT AND PLAY A CD

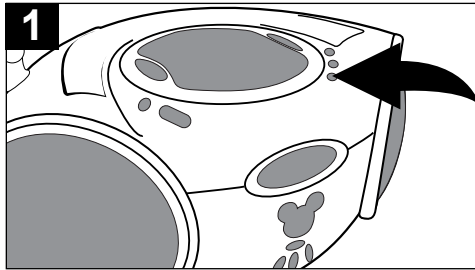

 
Press the Power button to turn the unit on.

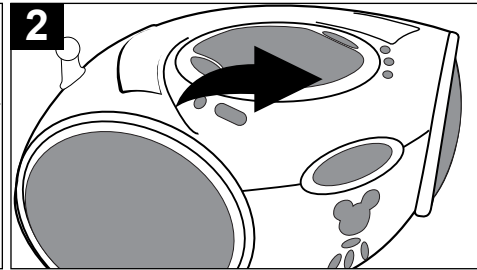

 Open the CD compartment by pressing the CD Open/Close area. Place a disc on the spindle, label side up, and close the CD compartment door.

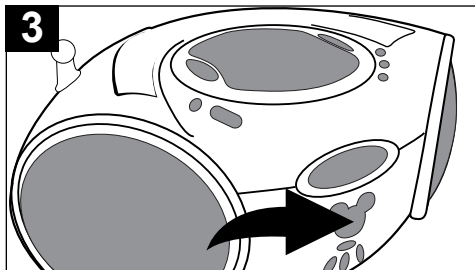


To play a disc from the beginning, press the Play/Pause (▶/||) button. Press the Play/Pause (▶/||) button again to pause playback; the display will blink.

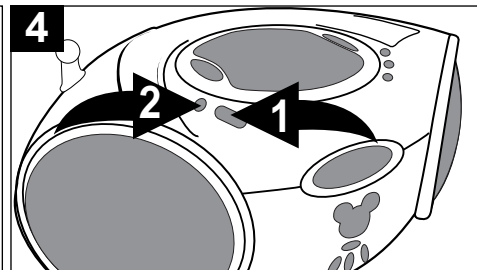 


Adjust the volume using the VOLUME buttons ❶. Press the Preset EQ ❷ button repeatedly to select one of the Preset EQ settings (ROCK, JAZZ, POP, CLASSICAL).

CONTINUED ON THE NEXT PAGE


## OPERATION (CONTINUED)

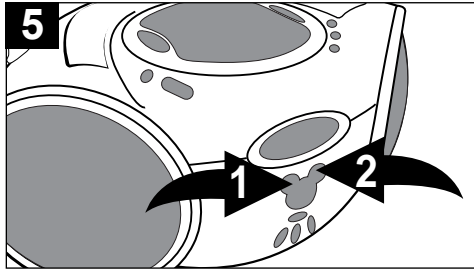 

 
To **skip** forward or backward through the tracks on the disc, press the Skip/Search/Tune (◀◀) ❶ or (▶▶) ❷ button.

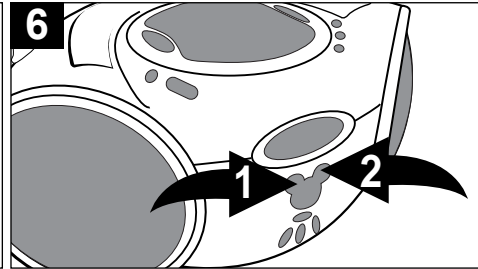

 To **search** forward or backward through the disc, press and hold the Skip/Search/Tune (◀◀) ❶ or (▶▶) ❷ button, a chattering noise will be heard.

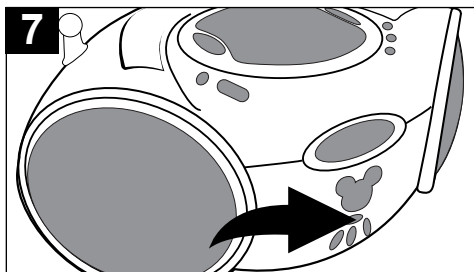

 When the disc is through playing, it will stop rotating. Press the Stop (■) button to stop the disc before it is finished.

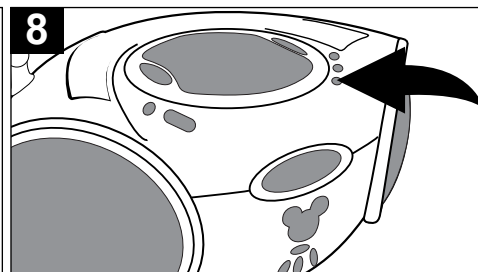


To turn the CD off, press the Power button.

### NOTES:

 
- If a disc is inserted incorrectly, dirty, damaged or not present at all, "no disc" will appear in the display.
- As each track is played, the track number is shown in the display.
- To prevent damage to the disc, never open the CD door while the disc is rotating. Wait for the disc to stop before opening the CD door. Never touch the lens when the CD compartment door is open.
- DO NOT use the carrying handle when playing a CD. The CD should only be used on a steady surface.
- This unit will play 3" CD singles, no adapter is needed.
- The maximum playing time is 74 minutes.
- This unit can play CD, CD-Rs and CD-RWs.

## OPERATION (CONTINUED)


### TO REPEATEDLY PLAY BACK ONE TRACK/ALL TRACKS

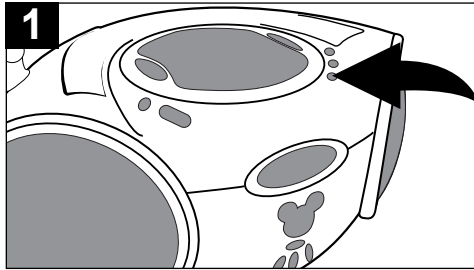

 Press the Power button to turn the unit on and insert a CD as described on page 12.

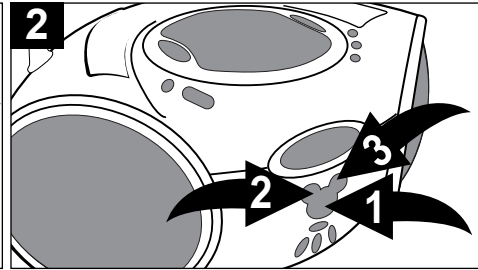


 Press the Play/Pause (▶/⏸) button ❶ to start playback, then select a track using the Skip/Search/Tune (⏮) ❷ or (⏭) ❸ button.

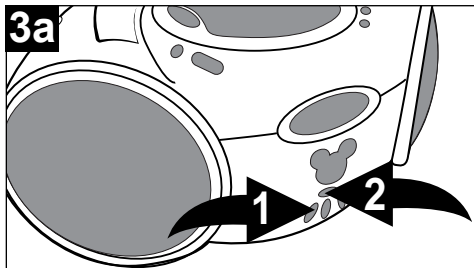

#### TO REPEATEDLY PLAY BACK ONE TRACK:

 Press the Preset Up/CD Repeat button ❶ once, the ↻ indicator will blink and the unit will play the selected track over and over until the Stop (■) button ❷ is pressed.

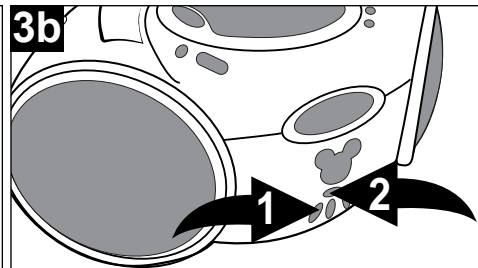


#### TO REPEATEDLY PLAY BACK ALL TRACKS:

Press the Preset Up/CD Repeat button ❶ twice, the ↻ indicator will light and the unit will play all tracks on the CD over and over until the Stop (■) button ❷ is pressed.


**TO CANCEL REPEAT:** To cancel Repeat, repeatedly press the Preset Up/Repeat button so that the Repeat 1 or Repeat ALL indicator disappears in the display. The unit will continue normal playback.

## OPERATION (CONTINUED)

 
### TO RANDOMLY PLAY BACK THE TRACKS

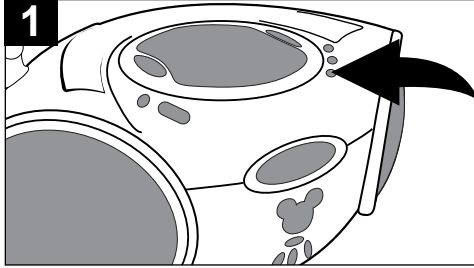

 
1 Press the Power button to turn the unit on and insert a CD as described on page 12.

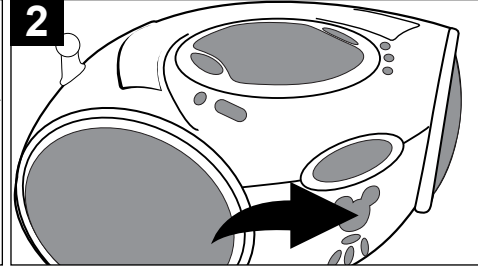

2 Press the Play/Pause (▶/||) button to start playback.

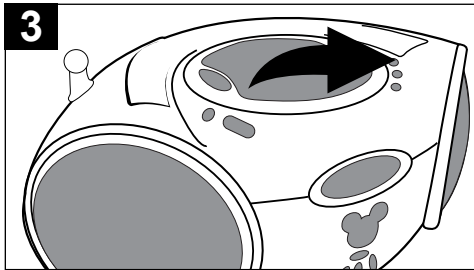 


3 Press the Random button once, the  indicator will appear in the display and the unit will randomly play all the tracks on the CD.

**TO CANCEL RANDOM:** To cancel Random, press the Random button or the Stop (■) button once while in the Stop mode.




## OPERATION (CONTINUED)

 
### TO PROGRAM THE MEMORY (UP TO 16 TRACKS)

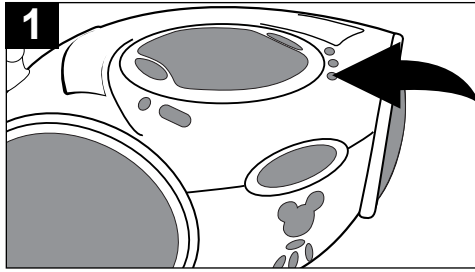

 
1 Press the Power button to turn the unit on and insert a CD as described on page 12.

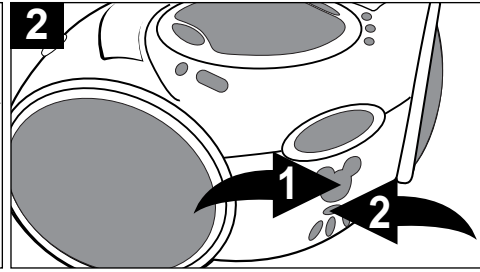

2 Press the Play/Pause (▶/||) button ❶ to select CD and start playback, then press the Stop (■) button ❷.

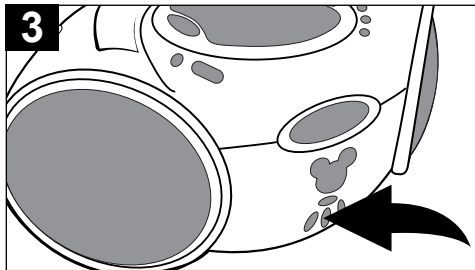 

 
3 Press the Preset Set/CD Program button; "Pr:01" will appear in the display.

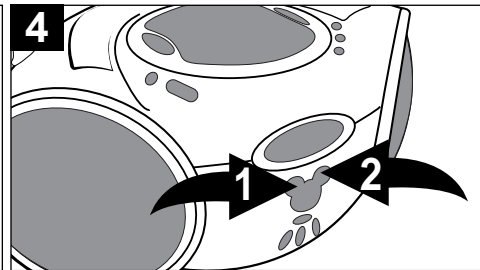


4 Use the Skip/Search/Tune (◀◀) ❶ or (▶▶) ❷ button to select the first track to be programmed.

CONTINUED ON THE NEXT PAGE


## OPERATION (CONTINUED)

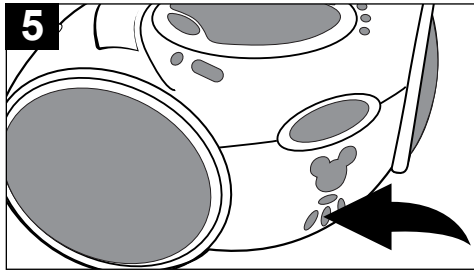 

 Press the Preset Set/CD Program button again; the selected track has now been programmed and counted as program 1.

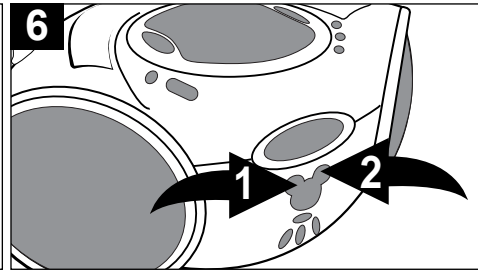

 Repeat steps 4 and 5 to program the other desired tracks in sequence (up to 16 tracks).

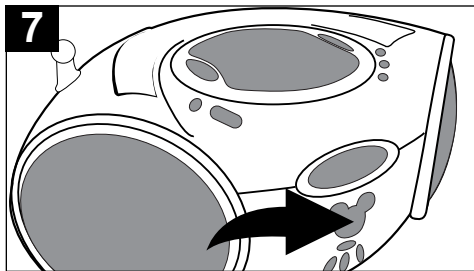

Press the Play/Pause (▶||) button to begin playback; the PROGRAM indicator will appear in the display and the tracks will play in the order programmed.



### NOTES:

  - Programming is the ability to preselect the order in which a series of tracks will be played.
- Each track may be stored in the program memory as many times as desired (up to 16).
- As each track is played, its track number will be displayed. You can move forward or backward through the programmed tracks with the Skip/Search/Tune ◀◀ or ▶▶ button.
- The CD player will stop after all programmed tracks have been played or the Stop (■) button is pressed.
- To cancel program playback, press the Stop (■) button while in the stop mode, or open the CD Door.
- To check the program, press the Preset Set/CD Program button once more; the display will show the track numbers in the order they were programmed.

## SAFETY PRECAUTIONS

### Caring for Compact Discs

- Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

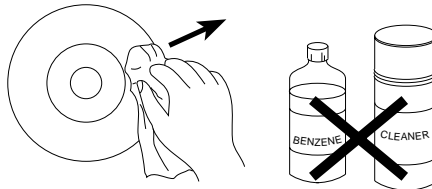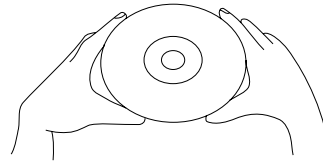

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the ink may damage the surface.



### Cleaning the unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

## TROUBLESHOOTING GUIDE

Should this unit exhibit a problem, check the following before seeking service:

| Symptom                                       | Possible Cause  | Solution   |
|---|---|--|
| <b>Radio</b>                                  |   |  |
| Noise or sound distorted on radio broadcasts. | Station not tuned properly for AM or FM.                            | Retune the AM or FM broadcast station.   |
|   | FM: Antenna is not properly adjusted.                               | Reorient FM Antenna.   |
|   | AM: Unit is not positioned correctly.                               | Rotate unit until best reception is obtained.  |
| FM station not heard in stereo.               | Poor FM signal being received or Radio Band button was not pressed. | Retune station, try another station press Radio Band button.   |
|   | Station is not broadcasting in stereo.                              | Change stations.   |
| AM or FM, no sound.                           | Radio Band button was not pressed.                                  | Press the Radio band button to select the radio.   |
|   | Volume at minimum.  | Increase volume.   |
| <b>Compact Disc Player</b>                    |   |  |
| CD Player will not play.                      | Play button was not pressed.  | Press the Play button to select and start playing the CD.  |
|   | CD is not installed or installed upside-down.                       | Insert CD with label side up.  |
| CD skips while playing.                       | Disc is dirty or scratched.   | Wipe disc with cloth (see page 18 or use another disc).  |
| <b>General</b>                                |   |  |
| No power.                                     | AC plug is not inserted properly.                                   | Connect AC power cord to AC wall outlet and jack on rear of unit. Make sure the plug is inserted securely. |
|   | Batteries are not inserted properly.                                | Make sure the batteries are inserted according to the polarity inside the battery compartment.             |
|   | Batteries are dead or weak.   | Replace batteries.   |

**General**

Power Source.....AC 120V, 60Hz  
Batteries .....DC 12V (8 x 1.5V "C" size batteries)  
Alkaline recommended for longer life  
Speaker .....2 x 8 Ohms

**Radio**

Frequency Range (FM) .....87.9 to 107.9MHz  
Frequency Range (AM).....520 to 1710KHz

**CD**

Disc Diameter .....4.72" (120mm)  
3.15" (80mm) Single CD  
Optical Source .....Semiconductor Laser

Specifications are subject to change without notice.

For additional set-up or operating assistance, please visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com) or contact customer service at 1-877-DISNYCE (1-877-347-6923).

Please keep all packaging material for at least 90 days in case you need to return this product to your place of purchase or Memcorp.

For parts and accessories, contact Fox International at 1-800-321-6993.

Distributed by Memcorp Inc., Weston FL  
Disney Elements © Disney 2003.