 


Memorex®

**ARMBAND AM/FM RADIO WITH
ALARM CLOCK**

 
MODEL: MB220

**BEFORE OPERATING THIS PRODUCT, PLEASE READ THESE
INSTRUCTIONS COMPLETELY.**

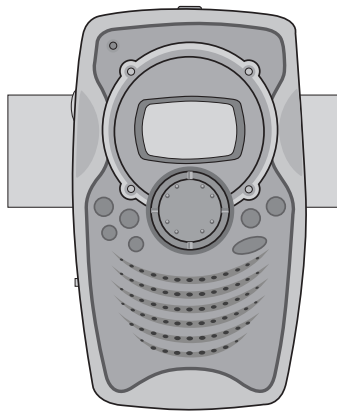

OPERATING INSTRUCTIONS

LOCATION OF CONTROLS

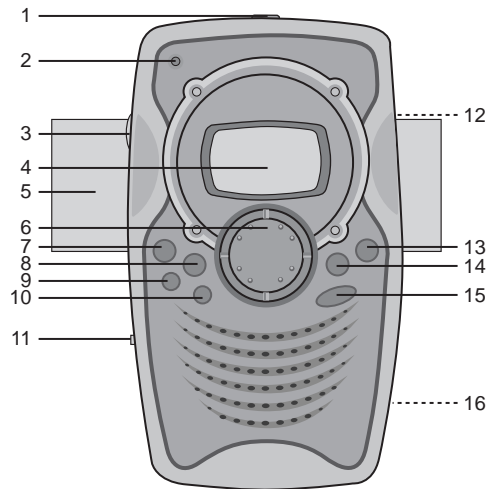


1. Earbud Jack
2. Power Indicator
3. VOLUME/Power Control
4. Display
5. Armband Strap
6. TUNING Control
7. ALARM ON/OFF Button
8. ALARM Button
9. HR (Hour) Button
10. MIN (Minute) Button
11. FM/AM Switch
12. Armband Strap Holder (Rear of Unit)
13. LIGHT Button
14. TIME Button
15. MENU Button
16. Battery Compartment (Rear of Unit)

INSTALLATION

BATTERY INSTALLATION:

 Open the battery compartment and insert two (2) "AAA" size batteries (not included) following the polarity diagram. Put the battery compartment cover back into place.

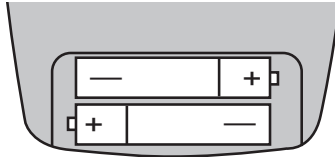

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

EARBUDS:

Included with this unit are earbuds. Make sure the VOLUME/Power control is at minimum and insert the earbud plug into the earbud jack on the top of the unit. Place the earbuds into your left and right ears, corresponding to the "L" and "R" mark on each earbud.

LIGHT:


Press and hold the LIGHT button to illuminate the display.

ARMBAND STRAP:


You can strap this unit onto your arm using the armband strap. Simply unfasten the velcro and put around arm and then refasten velcro.

OPERATION


TO LISTEN TO THE RADIO

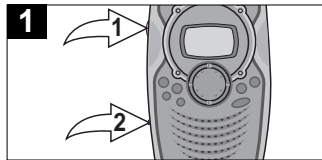


1 Insert the earbuds into the Earbud jack and rotate the VOLUME/Power control 1 clockwise until a click is heard to turn the unit on; the Power indicator will light. Slide the FM/AM switch 2 to the AM or FM position.

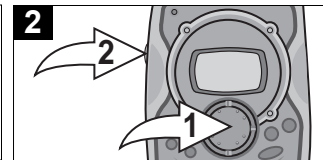

2 Tune a station by turning the TUNING control 1. Adjust the VOLUME/Power control 2 as desired.

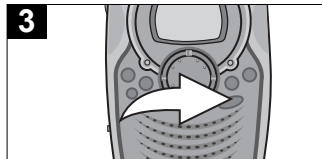

3 When listening to the radio, press and hold the MENU button to view the time.

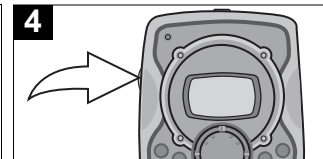

4 When done listening, rotate the VOLUME/Power control counterclockwise until a click is heard to turn the unit off; the Power indicator will go out.

EARBUD NOTE:


The sound from the radio will only go through the earbuds. You cannot hear it through the speaker on the front of the unit, as this speaker is for the Alarm sound only.

Antennas


FM: Extend the earbud wire for best reception.
AM: Turn the unit for better AM reception.

OPERATION (CONTINUED)

TO SET OR RESET THE ACTUAL TIME

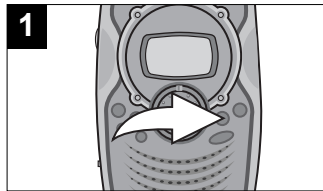


While the power is off, press and hold the TIME button.

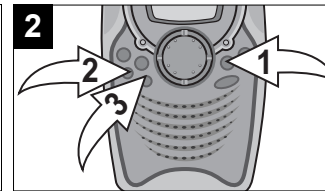


While holding the TIME button ❶, press and hold the Hour button ❷ to set the present hour and then press and hold the Minute button ❸ to set the present minute. Make sure the PM indicator is lit if you are setting to PM, and make sure it is not lit if setting to AM.

TO SET OR RESET THE ALARM TIME

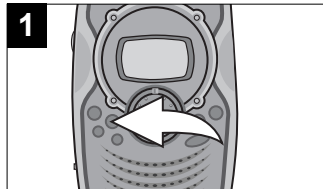


Press and hold the ALARM button.

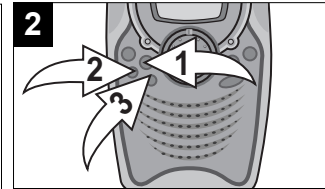

While holding the ALARM button ❶, press and hold the Hour button ❷ to set the alarm hour and then press and hold the Minute button ❸ to set the alarm minute. Make sure the PM indicator is lit if you are setting to PM, and make sure it is not lit if setting to AM.

OPERATION (CONTINUED)

TO TURN THE ALARM ON

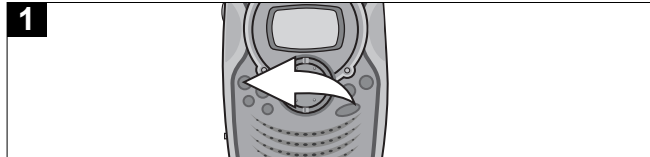


Set the alarm time as previously instructed. Press and hold the ALARM ON/OFF button until the Alarm logo appears at the top right of the display. When the actual time matches the selected preset alarm time, the alarm (beep sound) automatically turns on. To shut off the alarm, see TO SHUT THE ALARM OFF section below.

NOTES:

- The alarm will sound from the speaker, not the earbuds.
- The alarm will be a beeping sound; you cannot set the unit to wake to the radio sound.

TO SHUT THE ALARM OFF

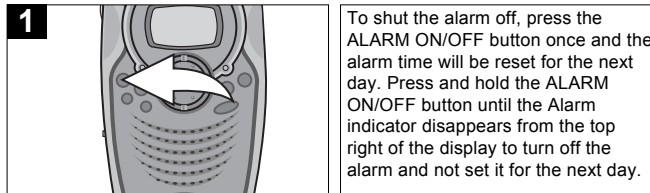

To shut the alarm off, press the ALARM ON/OFF button once and the alarm time will be reset for the next day. Press and hold the ALARM ON/OFF button until the Alarm indicator disappears from the top right of the display to turn off the alarm and not set it for the next day.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
RADIO		
No sound.	The earbuds are not connected.	Plug in the earbuds.
	VOLUME control at minimum or OFF position.	Increase the VOLUME/Power control.
Noise or sound distorted on AM or FM.	AM - Interference from traffic.	Turn the radio for better AM reception.
	FM - Earbud wire is not extended.	Extend Earbud wire.
CLOCK		
Time not set.	Battery connected improperly, not connected or dead.	Check the battery and/or replace battery.
	Clock not set.	Set the clock.
Alarm does not sound.	Clock is not set.	Set the clock.
	Alarm time not set.	Set alarm time.

 
 
FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT:

WWW.MEMCORPINC.COM

OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.

FOR PARTS AND ACCESSORIES, CONTACT FOX INT'L AT 1-800-321-6993.



Memcorp, Inc.
Weston, FL
Printed in Hong Kong

Visit our website at www.memcorpinc.com

