

# Memorex®

Is it live or is it Memorex?™

## MB228

### **User's Guide**

---

*Armband AM/FM Radio*



**Before operating this product,  
please read these instructions completely.**

Thank you for purchasing this Memorex audio system.

The serial number of your unit can be found on a label on the rear of the cabinet. We suggest that you record the serial number in the space provided below in case this information is ever needed at a future date.

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.**


Model Number: MB228

Serial Number: \_\_\_\_\_

## INSTALLATION

### BATTERY INSTALLATION:

Open the battery compartment by sliding it downward and lifting it up. Insert two (2) "AAA" size batteries (not included) following the polarity diagram. Slide the battery compartment back in place.

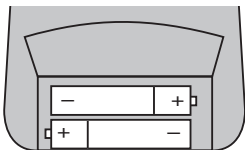

### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:


1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

### IMPORTANT NOTE WHEN CHANGING BATTERIES:

Make sure to change the batteries within 30 seconds, otherwise the time and memory may be lost.


# LOCATION OF CONTROLS

## FRONT/TOP

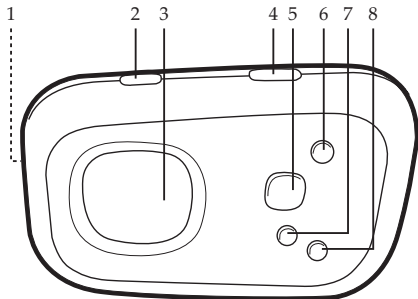

1. Earbud Jack  
(Side of Unit)
2. POWER Button
3. Display
4. VOLUME  
Up/Down  
Buttons
5. PRESET  
Button
6. BAND Button
7. MEMORY/  
Clock Set  
Button
8. BBS (Bass  
Boost) Button
9. Battery  
Compartment
10. TUNE  
Up/Down  
Buttons
11. Arm Strap  
Holder
12. HOLD  
(ON/OFF)  
Switch


## REAR/BOTTOM

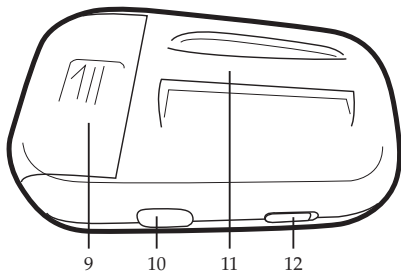

## INSTALLATION (CONTINUED)


### TO USE THE ARM STRAP

1

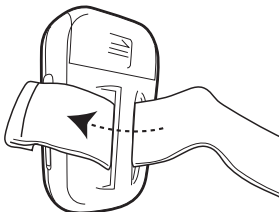


Insert the arm strap into the slot on the rear of the unit and pull through.

2

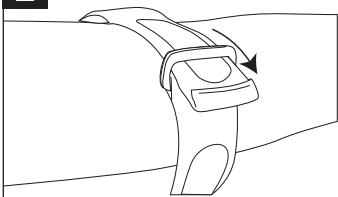

Pull the arm strap and insert it into the buckle.

3

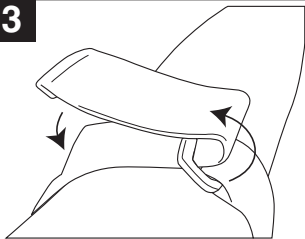

Insert the arm strap into the slot on the rear of the unit and pull through.


# OPERATION

## EARBUDS:

Included with this unit are earbuds. Make sure the volume is set to minimum and insert the earbud plug into the earbud jack on the side of the unit. Place the earbuds into your left and right ears, corresponding to the “L” and “R” mark on each earbud.

## TO TURN THE UNIT ON


1

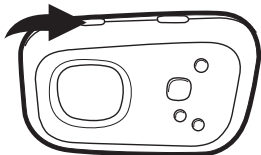

To turn the unit on, press the **POWER** button on the top of the unit.

## HOLD


1

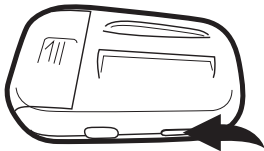

To lock the unit so no buttons can be pressed, slide the **HOLD** switch to the **ON** position; “**HOLD**” will appear in the display. This is useful if listening while the unit is in your pocket, etc. Slide the **HOLD** switch to the **OFF** position to activate all buttons again.

## BASS BOOST


1

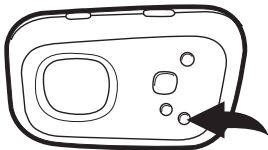


To emphasize the bass, press the **BBS** button; “**BBS**” will appear in the display. Press again to turn the bass boost off.

## OPERATION (CONTINUED)


### TO LISTEN TO THE RADIO

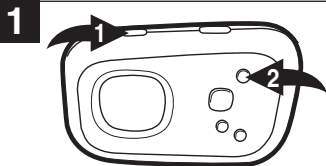


Insert the earbuds into the Earbud jack and press the POWER button ❶ to turn the unit on; the radio frequency will appear in the display. Press the BAND button ❷ to select AM or FM.

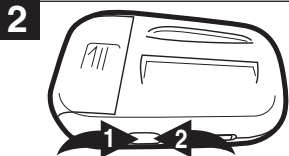

Tune a station using the TUNE Up ❶ or Down ❷ button. Press and hold the TUNE Up ❶ or Down ❷ button for one second, then release, the unit will automatically scan to the next broadcasting station.

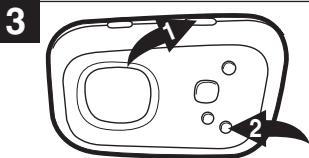

Adjust the VOLUME ❶ and BASS BOOST ❷ buttons as desired.

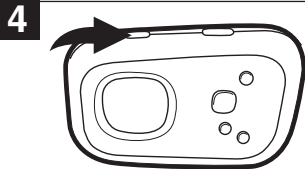

When done listening, press the POWER button to turn the unit off. When the unit is off, the time will appear in the display.

#### Antennas


FM: Extend the earbud wire for best reception.

AM: Turn the unit for better AM reception.

## OPERATION (CONTINUED)


### SETTING THE PRESETS (10 FM AND 10 AM)

1

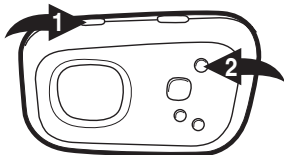


Insert the earbuds into the Earbud jack and press the POWER button ❶ to turn the unit on; the radio frequency will appear in the display. Press the BAND button ❷ to select AM or FM.

2

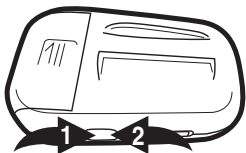


Tune a station using the TUNE Up ❶ or Down ❷ button.

3

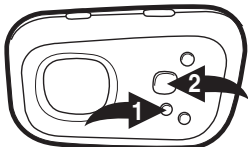

Press the MEMORY button ❶; “PRESET” will blink in the display. Within 15 seconds, press the PRESET button ❷ repeatedly until the desired memory number appears on the display.

4

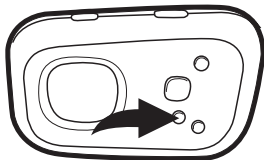


Press the MEMORY button again to set the station in the selected memory. Repeat steps 2 and 3 to program up to 10 stations in each band.

## OPERATION (CONTINUED)

### RECALLING THE PRESETS


1

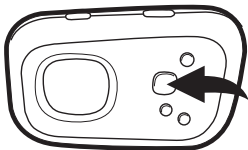

Repeat step 1 on the previous page. Press the PRESET button repeatedly until the desired memory number appears on the display.


### TO SET OR RESET THE ACTUAL TIME

1

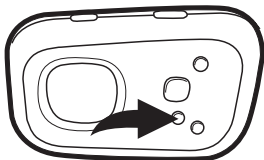

While the power is off, press the MEMORY/Clock Set button; the time will blink.

2

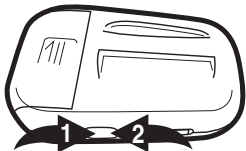

Press and hold the TUNE Down button ❶ to set the present hour and then press and hold the TUNE Up button ❷ to set the present minute. Make sure the correct AM/PM indicator is lit. Press the MEMORY/ Clock Set button ❸ to confirm the setting.



# TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>POSSIBLE SOLUTION</b>
<b>RADIO</b>		
No sound.	The earbuds are not connected.	Plug in the earbuds.
	VOLUME control at minimum position.	Increase the VOLUME.
Noise or sound distorted on AM or FM.	AM—Interference from traffic.	Turn the radio for better AM reception.
	FM—Earbud wire is not extended.	Extend Earbud wire.
<b>CLOCK</b>		
Time not set.	Battery connected improperly, not connected or dead.	Check the battery and/or replace battery.
	Clock not set.	Set the clock.

**FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT:  
WWW.MEMOREXELECTRONICS.COM  
OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.**

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.**

**FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT  
1-800-321-6993.**

## SPECIFICATIONS

Power Requirement . . . . .	2 x "AAA" alkaline battery
Frequency Range (FM) . . . . .	87.5 - 108 MHz
Frequency Range (AM). . . . .	520 - 1710KHz
Output Level . . . . .	Headphone: 20mW (32 ohms)

Memcorp, Inc.  
Weston, FL  
Printed in Hong Kong

Visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com)