

Memorex®

**COMPACT DISC
AM/FM CLOCK RADIO**

MODEL: MC2850



Memorex, Inc.
3200 Meridian Parkway,
Weston, FL 33331, USA

©2000 Memorex is a registered trademark of Memorex Telex N.V.
Printed in Hong Kong

Visit our website at www.memorex.com

P/N:842P220001#02

**BEFORE OPERATING THIS PRODUCT,
PLEASE READ THESE INSTRUCTIONS COMPLETELY**

MEMOREX

COMPACT DISC
AM/FM CLOCK RADIO

MODEL: MC8850



BEFORE OPERATING THIS PRODUCT
PLEASE READ THESE INSTRUCTIONS CAREFULLY

SAFETY PRECAUTIONS



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

 
Uninsulated Dangerous Voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.



ATTENTION

The Owner's Manual contains important operating and maintenance instructions.

For your safety, it is necessary to refer to the manual.

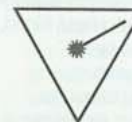

DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

All warnings on the product and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

All operating and use instructions should be

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Do not use attachments not recommended by the product's manufacturer as they may cause

7. WATER AND MOISTURE

Do not use this product near water-for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCES

This product should be operated only from the

IMPORTANT SAFETY INSTRUCTIONS

type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

11. GROUNDING OR POLARIZATION

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. LIGHTNING

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. OVERLOADING

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

17. SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

19. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

20. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

21. DAMAGE REQUIRING SERVICE

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance - this indicates a need for service.

22. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

23. NOTE TO CATV SYSTEM INSTALLER

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

24. NONUSE PERIODS

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.


LOCATION OF CONTROLS

FRONT 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

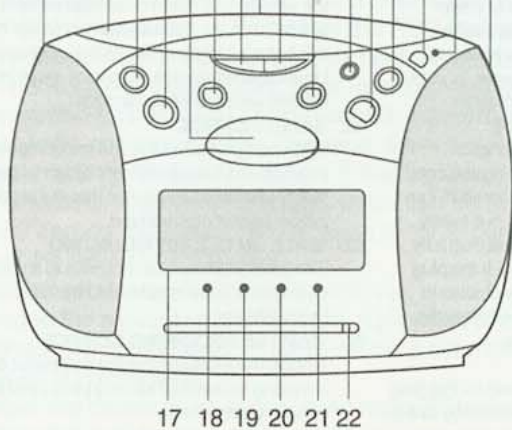


17 18 19 20 21 22

 RIGHT SIDE

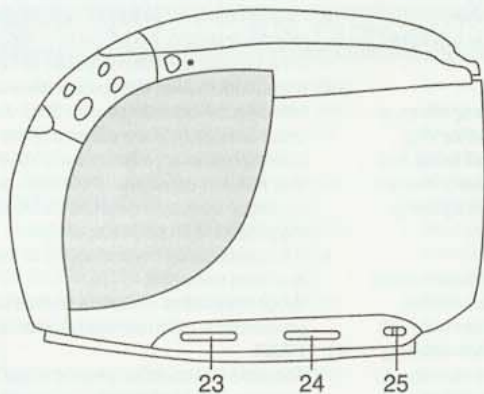

23 24 25

 LEFT SIDE

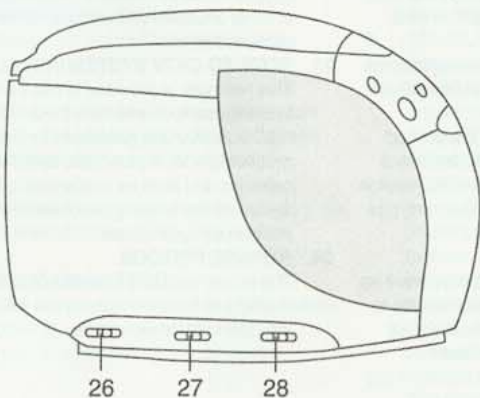

26 27 28

1. Left Speaker
2. CD Compartment Door
3. CD TRACK Button
4. SLEEP Button
5. SNOOZE Button
6. TIME Button
7. SKIP/Search (◀◀) /Minute Button
8. Battery (Clock Back-up) Compartment (Rear of Unit)
9. SKIP/Search (▶▶) /Hour Button
10. PROGRAM Button
11. REPEAT Button
12. PLAY/PAUSE (▶||) Button
13. STOP (■) Button
14. STANDBY/ON Button
15. STANDBY/ON ALARM OFF Indicator
16. RIGHT SPEAKER
17. Display
18. SLEEP Indicator
19. REPEAT Indicator
20. PROGRAM Indicator
21. FM ST (Stereo) Indicator
22. Dial Scale & Pointer
23. TUNING Control
24. VOLUME Control
25. AM/FM/CD Switch
26. MUSIC/BUZZER Switch
27. ALARM 1 Switch
28. ALARM 2 Switch

4

LOCATION OF CONTROLS

DISPLAY A B C D E



 
 
- A. PM Indicator
- B. ALM1 Indicator
- C. Clock Display
- D. CD Track Display
- E. ALM 2 Indicator

INSTALLATION

Unravel the AC cord and connect it to a conveniently located AC outlet having 120V and 60Hz only. The Clock Display will show 12:00 and needs to be set.

NOTE: If the AC plug does not fit into a nonpolarized outlet, do not file or cut the wide blade.

If the AC cord is disconnected or if there is a power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with a 9 volt battery (not included). To install the battery, slide down the compartment cover to open. Then, connect the battery to the terminals of the battery snap inside the compartment (use of an alkaline battery is recommended) and slide the battery compartment cover back into place.

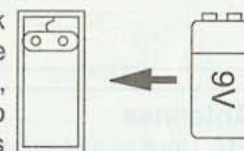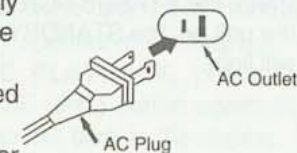

Be sure to check the condition of the battery periodically by disconnecting the AC cord and connecting it again 2 or 3 minutes later. The preset times should continue operating. If the clock resets to "12:00" on the Clock Display, it indicates the battery is dead or not connected properly.

BATTERY PRECAUTIONS

 
Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)


5

OPERATION

TO PLAY THE RADIO

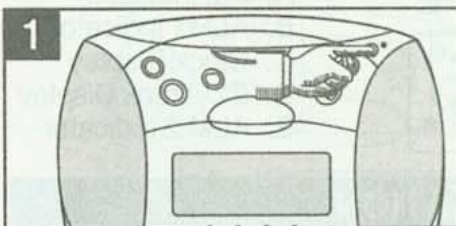

 Press the STANDBY/ON button to turn the unit on; the STANDBY/ON indicator will light.

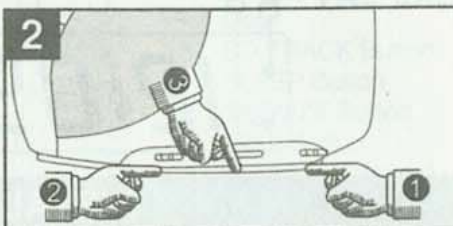


Slide the AM/FM/CD switch ① to the desired band (AM or FM) and tune a station by turning the TUNING control ②. When a strong FM stereo signal is received while listening to FM, the FM ST indicator will light and the sound will be heard in stereo. Adjust the VOLUME control ③ as desired.

Antennas

FM: Unravel and extend the AC line cord for better FM reception.


AM: Turn the unit for better AM reception.

 TO INSERT A CD

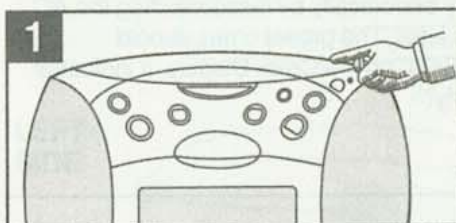

Open the CD compartment door by pressing the right side of the CD door, labelled "PUSH OPEN/CLOSE". Gently press a disc, label side up, onto the spindle until it locks in place and close the CD compartment door. The total number of tracks will appear briefly if the power is on and the AM/FM/CD switch is set to CD.

 
TO REMOVE A CD

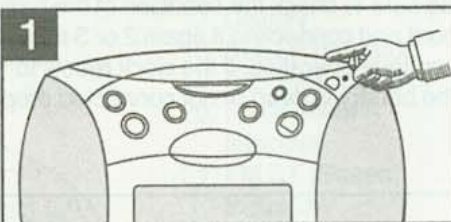


Make sure the CD has stopped and open the CD compartment door, pressing the right side of the CD Door, labelled "PUSH OPEN/CLOSE". Hold the edge of the CD and gently press the center pivot and lift out the CD.

OPERATION

 
TO PLAY A CD

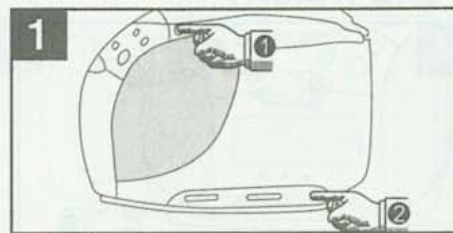

 Insert a CD as described on the previous page. Press the STANDBY/ON button ① to turn the unit on and slide the AM/FM/CD switch ② to the CD position.

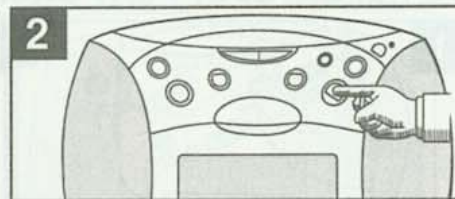

Press the PLAY/PAUSE (▶||) button to start playback; the track number momentarily appears in the display. **TO PAUSE PLAYBACK**, press the PLAY/PAUSE (▶||) button again; the track number will blink in the display.

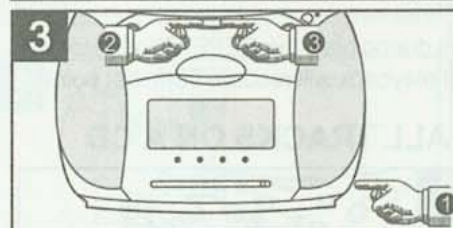 

Adjust the VOLUME control ① as desired. To **skip** forward or backward through the tracks on the disc, press the SKIP/Search ◀◀ ② or ▶▶ ③ button. To **search** forward or backward through the tracks on the disc, press and hold the SKIP/Search ◀◀ ② or ▶▶ ③ button.



 
When the disc is through playing, it will stop. Press the Stop (■) button to stop the disc before it is finished.

NOTES:


- This unit is capable of playing standard CDs or 3" singles; no adapter is required.
- If a disc is inserted incorrectly, dirty, damaged or not present at all, the disc will not play and "no" appears in the display.
- To remove the disc, open the CD compartment door, hold the edge of the CD and gently press the center pivot and lift out the CD.
- The maximum time of a CD is 74 minutes in this unit.
- Press the CD TRACK button during playback and the display will show the current track playing. Press in the Stop mode and the display will show the total tracks on the CD.

OPERATION

TO REPEATEDLY PLAY BACK ONE TRACK

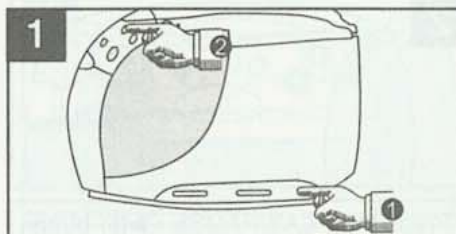

 
1 With a CD inserted, slide the AM/FM/CD switch ① to the CD position. Press the REPEAT button ② once; the REPEAT indicator will blink.

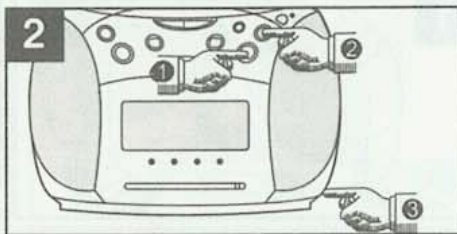


2 Press the PLAY/PAUSE (▶||) button ① and the unit will then play the same track over and over until the STOP (■) button ③ is pressed. Adjust the VOLUME control ④ as desired.

If the REPEAT button is pressed 2 more times during play, the REPEAT indicator will go off, Repeat Play mode will end and normal playback will resume from that point.

 TO REPEATEDLY PLAY BACK ALL TRACKS ON A CD

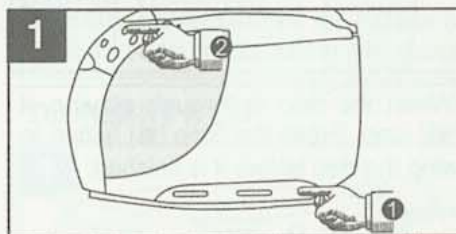

 1 With a CD inserted, slide the AM/FM/CD switch ① to the CD position. Press the REPEAT button ② twice; the REPEAT indicator will light.

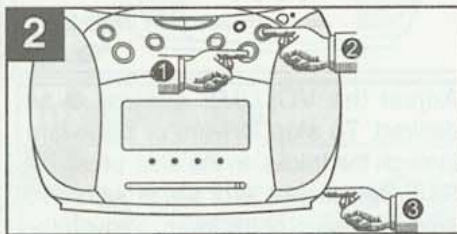

2 Press the PLAY/PAUSE (▶||) button ① and the unit will then play all the tracks on the CD over and over until the STOP (■) button ③ is pressed. Adjust the VOLUME control ④ as desired.

 
If the REPEAT button is pressed 1 more times during play, the REPEAT indicator will go off, Repeat Play mode will end and normal playback will resume from that point.

NOTE:


- If the unit is in the Repeat mode and either SKIP button is pressed, the unit WILL go to the next track.

OPERATION


TO PROGRAM THE MEMORY (UP TO 20 TRACKS)

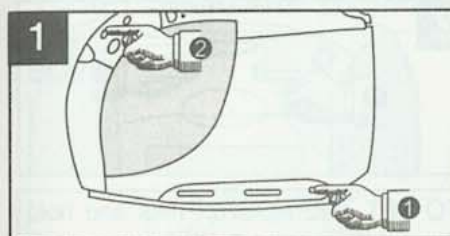

 
1 Insert a CD as described on the Previous page. Press the STANDBY/ON button ① to turn the unit on and slide the AM/FM/CD switch ② to the CD position.

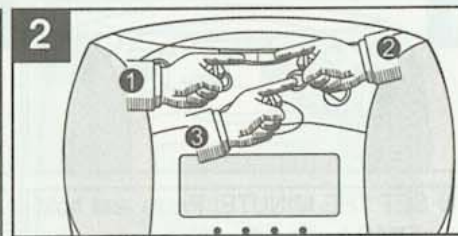

 2 Within a few seconds, select the first track to be played back using the SKIP/Search ◀◀ ① or ▶▶ ② buttons, then press the PROGRAM button ③ again. Repeat this step to program additional tracks up to a maximum of 20 tracks.

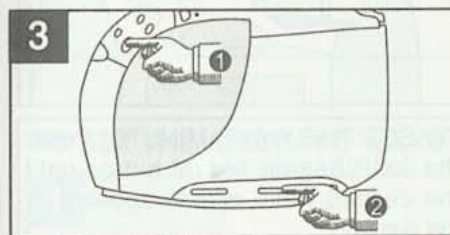

3 Press the PLAY/PAUSE (▶||) button ① to begin Program playback and adjust the VOLUME control ② as desired.

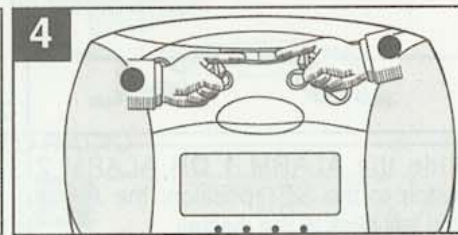 


4 To skip forward or backward through the programs, press the SKIP/Search ◀◀ ① or ▶▶ ② button. When the disc is through playing, it will stop.

NOTES:


- Press the STOP (■) button to stop the program before it is finished.
- To clear the memorized tracks, press the PROGRAM button to enter the Program mode (PROGRAM indicator will blink) and then press the STOP (■) button or open the CD door as explained on page E-6.
- Programming is the ability to preselect the order in which a series of tracks will be played.
- Each track may be stored in the program memory as many times as desired (up to 20 tracks).
- To repeatedly play the memorized tracks, press the REPEAT button twice; the REPEAT indicator will light.

OPERATION

 TO SET OR RESET THE ACTUAL TIME

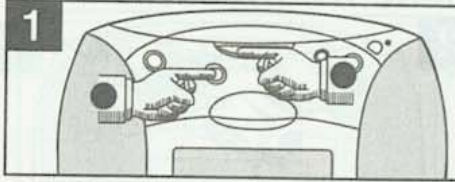


 1 TO SET THE MINUTE: Press and hold the TIME button ①, then press the SKIP/Search ◀◀ /M button ② until the present minute appears in the display.

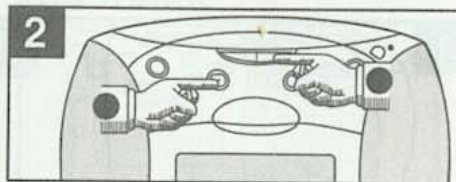


2 TO SET THE HOUR: Press and hold the TIME button ①, then press the SKIP/Search ▶▶ /H button ② until the present hour appears in the display.

 
TO SET OR RESET THE ALARM TIME(S)

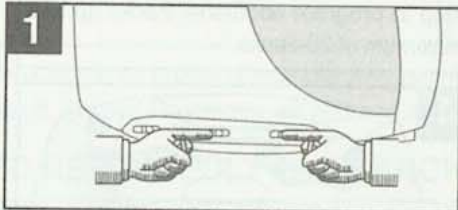

 
1 Slide the ALARM 1 OR ALARM 2 switch to the SET position; the Alarm time will blink in the display.

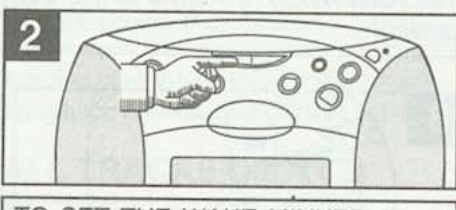

 2 TO SET THE WAKE MINUTE: Press the SKIP/Search ◀◀ /M button until the desired wake minute appears in the display.

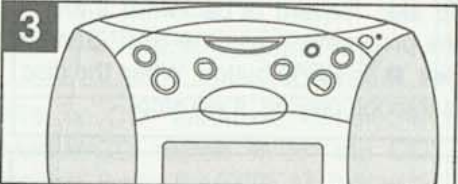

 3 TO SET THE WAKE HOUR: Press the SKIP/Search ▶▶ /H button until the desired wake hour appears in the display.

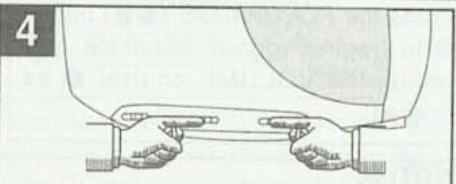


4 Slide the desired alarm switch (1 or 2) to the ON (Set) or OFF (Not Set) position.

NOTES:


- When the ALARM1 or ALARM2 switch is in the SET position, all CD and function buttons will not operation, so make sure to return the switch to the NO or OFF positon after setting the alarm time(s)
- This unit has 2 alarms, each can be set for a different wake time.

OPERATION

 TO SET THE ALARM TO WAKE TO BUZZER

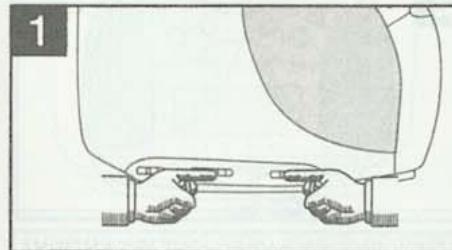


 1 Set the alarm time as previously instructed.

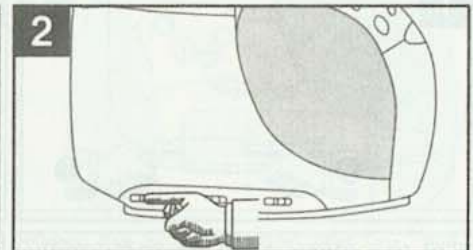


2 Slide the BUZZER/MUSIC switch to the BUZZER position. When the actual time matches one of the selected preset alarm times, the buzzer will sound for 60 minutes and then shuts off.

 TO SET THE ALARM TO WAKE TO RADIO

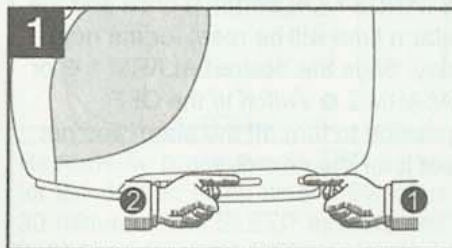

 
1 Set the alarm time as previously instructed. Slide the AM/FM/CD switch ① to the AM or FM position, select a radio station and make sure the VOLUME ② is set as desired.

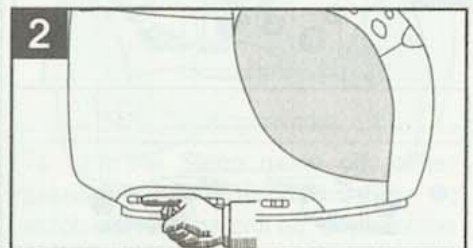


2 Make sure the power is off (STANDBY/ ON indicator is NOT lit). Slide the BUZZER/MUSIC switch to the MUSIC position. When the actual time matches one of the selected preset alarm times, the unit automatically turns on for 60 minutes and then shuts off.

OPERATION

 TO SET THE ALARM TO WAKE TO CD

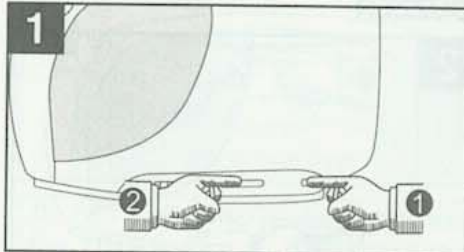


 Set the alarm time as previously instructed. Slide the AM/FM/CD switch ① to the CD position, insert a CD and make sure the VOLUME ② is set as desired.

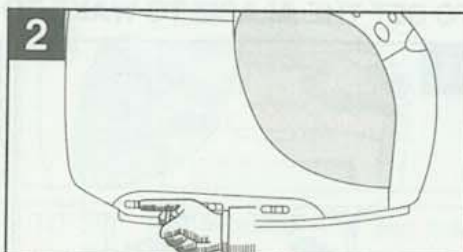


Make sure the power is off (STANDBY/ON indicator is NOT lit). Slide the BUZZER/MUSIC switch to the MUSIC position. When the actual time matches one of the selected preset alarm times, the unit automatically turns on for 60 minutes and then shuts off. Note: when the disc is through playing it will stop.

 TO SHUT THE ALARM OFF

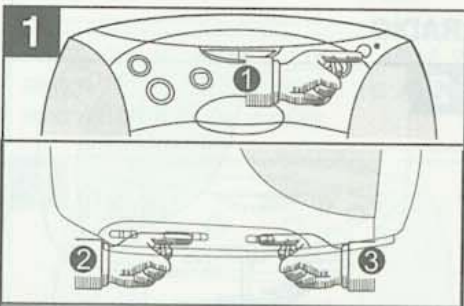

To shut the alarm off, press the STANDBY/ON button ① once and the alarm time will be reset for the next day. Slide the desired ALARM 1 ② or ALARM 2 ③ switch to the OFF position to turn off the alarm and not set it for the next day.

 SNOOZE

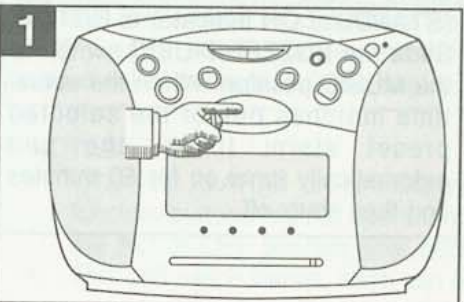


The alarm can be temporarily turned off manually by pressing the SNOOZE button; the alarm will turn back on automatically 3 minutes later.

OPERATION


TO ACTIVATE THE SLEEP FUNCTION



 Tune the desired radio station or insert a CD as previously instructed.

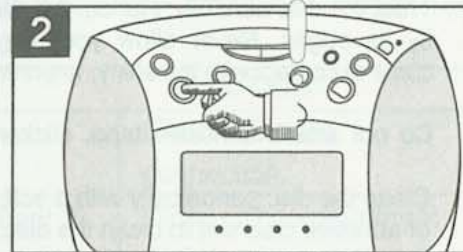


 Press the SLEEP button and "--" will appear on the clock display and the SLEEP indicator will blink.

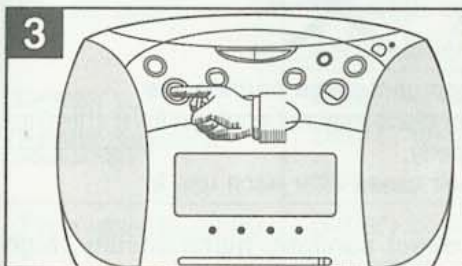

Repeatedly press the SLEEP button for the desired sleep time of 90, 60 or 30 minutes. The SLEEP indicator will light to indicate the Sleep mode is activated.

 The sleep time will internally count down and then turn off when the desired amount of time has passed.

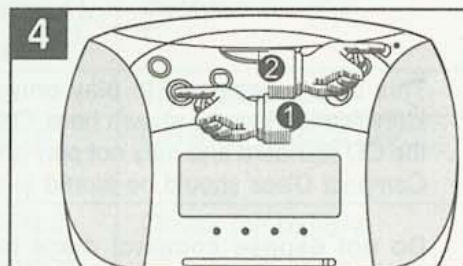


To turn the Sleep mode off, either press the STANDBY/ON button ①, which will turn the unit off, or press the SLEEP button ② until "--" appears on the display to keep the radio/CD on, but cancel the Sleep mode; the SLEEP indicator will turn off.

CARE AND MAINTENANCE

Caring for Compact Discs

 Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side

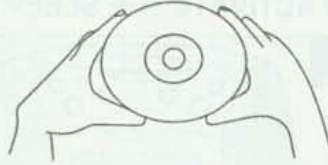

Do not attach adhesive tape, stickers, etc.

Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit. If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).

When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.



This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.

Compact Discs should be stored in their cases after each use to



Do not expose compact discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can

Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink may damage the surface.

To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.

The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
Unit will not turn on.	AC cord not connected.	Check AC cord connection.
Disc will not play.	CD compartment not closed.	Close CD compartment door.
	Disc inserted incorrectly.	Reinsert disc correctly.
	Dirty or defective CD.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
CD, no sound.	VOLUME control set to minimum.	Increase volume.
	Defective disc.	Try another disc.
Erratic playback.	Dirty or defective disc.	Clean or replace disc.
Time reset to 12:00	Battery connected improperly, not connected or dead.	Check the battery.
	Clock not set.	Set the clock.
Alarm does not turn on.	Desired ALARM switch not set to ON position.	Set desired ALARM switch (1 or 2) to the ON position.
	Clock is not set.	Set the clock.
	Alarm time not set.	Set alarm time.
AM or FM, no sound.	VOLUME control set to minimum.	Increase volume.
	Power is not turned on.	Press the STANDBY/ON button.

SPECIFICATIONS

AUDIO

Frequency Range (AM)	520-1710KHz
Frequency Range (FM)	87.5-108MHz
CD Player	3-Beam, Semiconductor Laser
CD D/A Conversion	1 Bit Linear 8 Times Oversampling

GENERAL

Power Supply	AC 120V, 60Hz (9V for back-up)
Dimensions (approx.)	8 (W) x 7.4 (D) x 5.5 (H) Inches

Memorex®

LIMITED WARRANTY AUDIO

We at Memorex believe you will be pleased with your new product. Please read this Warranty Carefully. Memorex warrants this product to be free from manufacturing defects including original parts and workmanship for a period of ninety (90) days from the date of original purchase in, and if used in, the United States.

Should you find your unit is not operating properly during the terms of full coverage of this warranty, ninety (90) days, you should contact your original place of purchase for an exchange with a valid receipt. If necessary, Memorex will provide one of the following options (at Memorex's discretion), providing the manufacturing defect is verified along with the date of PURCHASE.

Repair service for ninety (90) days from date of original purchase at no charge for labor and parts at their authorized warranty service facility, providing the manufacturing defect is verified along with the date of purchase.

Replacement of defective unit with either a new, refurbished, or equivalent model at no charge for ninety (90) days from date of original purchase.

This warranty is void if the product is:

- A) Damaged through negligence, abuse, misuse, accident, or acts of God.
- B) Used in commercial applications or retails.
- C) Modified or repaired by anyone other than Memorex or their expressly authorized representative.
- D) Damage resulting from the improper connection to equipment of other manufactures.

This warranty does not cover:

- A) Cost incurred in the shipping of the product to and from the Memorex authorized repair facility listed.
- B) Damage or improper operation caused by the failure to follow the operating instructions provided with the product.
- C) Routine adjustments to the product, which can be performed by the customer as outlined in the owner's manual.
- D) Signal reception problems caused by external factors.
- E) Products not purchased in the United States.
- F) Damage to the products used outside the United States.
- G) Damage to audiocassette tapes.
- H) Damage to compact disc.

In the event that service is required under this warranty, please contact CUSTOMER SERVICE at 1-800-919-3647 or contact our website at www.memorex.com.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES SOLELY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF THE ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED SHALL APPLY TO THE PRODUCT THEREAFTER. MEMOREX MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF MEMOREX'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AT THE SOLE DISCRETION OF MEMOREX. IN NO EVENT SHALL MEMOREX'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE DIRECT, INDIRECT, INCIDENTAL, FORESEEN, UNFORESEEN, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY IS VALID ONLY IN THE UNITED STATES. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

© 2000. Memorex is a registered trademark of Memorex telex N.V.

SET THE ALARM TO WAKE TO CD TRACK

1. TURN THE UNIT ON AND SLIDE THE FUNCTION SWITCH TO THE CD POSITION.
2. PRESS THE PROG BUTTON "P01" WILL APPEAR IN THE DISPLAY AND THE PROG INDICATOR WILL BLINK. WITHIN 8 SECONDS, PRESS THE SKIP/SEARCH/TIMESET **⏮** OR **⏭** BUTTON TO SELECT THE FIRST DESIRED TRACK TO PROGRAM.
3. PRESS THE PROG BUTTON TO MEMORIZE THE TRACK.
REPEAT STEP 2 AND STEP 3 TO PROGRAM ADDITIONAL TRACKS.
PRESS PLAY/PAUSE (**⏩**) BUTTON TO BEGIN PROGRAM PLAYBACK AND ADJUST THE VOLUME CONTROL AS DESIRED.
PRESS THE STOP BUTTON (**■**) TO STOP THE DISC AND THE PROG INDICATOR WILL TURN ON.
4. SLIDE THE DESIRED ALARM SWITCH TO THE SET POSITION, THE ALARM TIME DISPLAY WILL BLINK. PRESS THE SKIP/SEARCH/TIMESET **⏮** BUTTON TO ADVANCE THE MINUTE AND THE **⏭** BUTTON TO ADVANCE THE HOUR UNTIL THE DESIRED ALARM TIME IS SHOWN ON THE DISPLAY.
5. SLIDE THE ALARM SWITCH TO THE ON POSITION, THEN PRESS THE STANDBY/ON BUTTON TO TURN OFF THE UNIT. WHEN THE ACTUAL TIME MATCHES THE SLECTED PRESET ALARM TIME, THE UNIT WILL AUTOMATICALLY TURN ON AND PLAY BACK THE PROGRAMED TRACK.

NOTE:

WAKE TO CD TRACK WILL PLAY THE TRACKS WHICH YOU PROGRAM, AFTER THE PROGRAM TRACK IS PLAYED, THE CD WILL STOP.