 


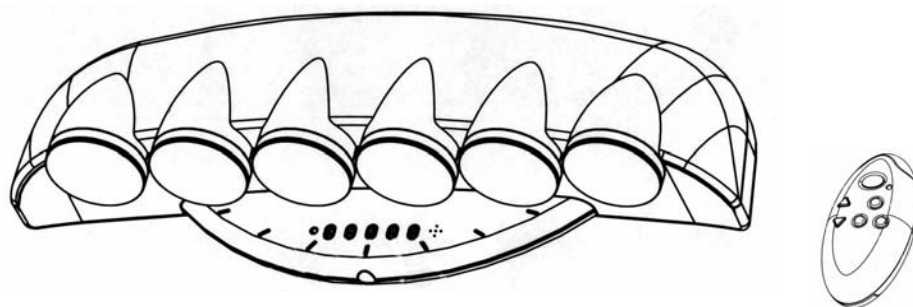


**6-Color PARTY LIGHT with remote control  
MODEL: MKA320**

Before operating this product, please read these instructions completely.




**OPERATING INSTRUCTIONS**

 
In order to maximize your enjoyment of this product, please read these instructions thoroughly.

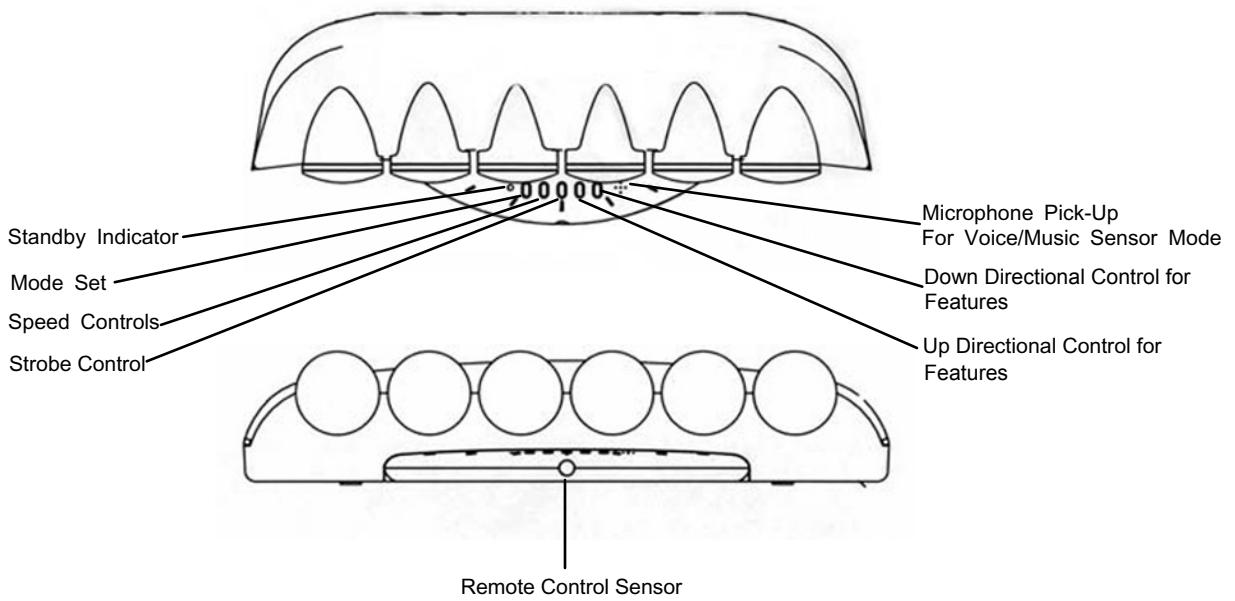


1. Put two AAA alkaline batteries inside the remote control unit to operate the Party Light.

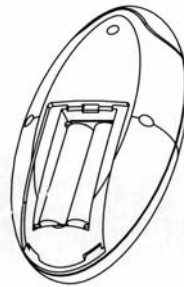


2. You may control the unit by remote control.

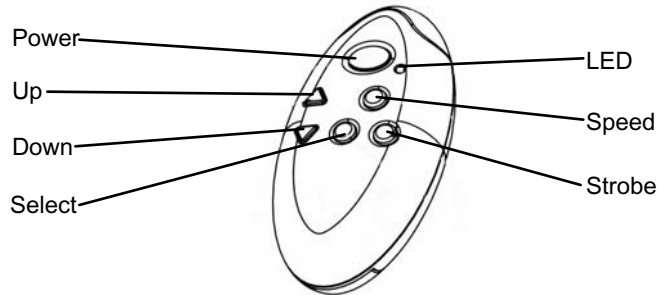

3. You may position of the Party Light on a table, or you may mount it on a wall.

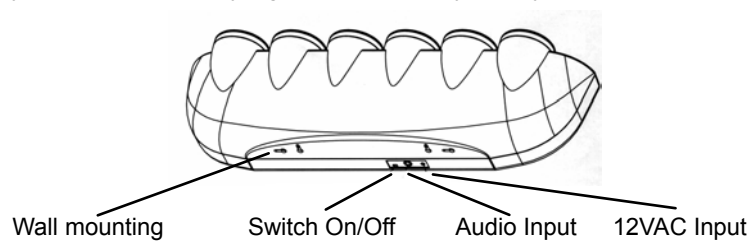

4. Insert the A/C adaptor end into the adapter jack of the unit. Plug the adapter into an electrical outlet to supply power to the unit.

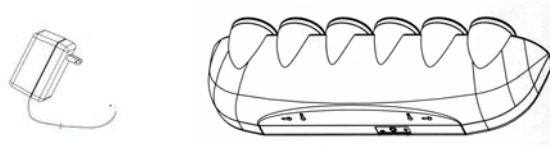

5. Turn the ON/OFF switch to the ON position. The standby indicator will light up. To turn the unit totally off, slide the ON/OFF switch to the OFF position.

6. You can put the Party Light in its Standby mode by pressing the power button on the remote control unit.

7. Press the MODE Select button, then press Up/Down button to select a particular function as follows:

- Function 1: Activates flashing from right to left
- Function 2: Activates Strobe action
- Function 3: Activates two Lights flashing from left to right
- Function 4: Activates two Lights flashing from right to left
- Function 5: Activates flashing from outside to inside
- Function 6: Activates one Light ON.
- Function 7: Activates Voice/Music Sensor mode.

8. The Speed Button controls the speed of the light moving from one point to another. Press the Speed Button, and use the UP/DOWN buttons to change the light speed; UP for faster and DOWN for slower.

9. The Strobe Button controls the Strobe effect of the light. By pressing the Strobe Button, the light will advance to the next sequence point immediately.

10. The Voice/Music sensor mode allows the lights to pulsate in response to the sound level the unit is picking up. Thus, the light can pulsate in time with music or sounds. The mode

works either via the built in microphone, or by plugging the audio-out jack of a source component (CD, DVD, VCR, Tuner, etc.) directly into the audio-in jack on the back of the unit via an optional cord.

When using the Voice/Music sensor mode with the built in microphone, there may be instances when all the lights come on and stay on most of the time. This is happening because the voice/music sensor is being overloaded due to its sensitivity. To have a more varied lighting effect, you can either lower the volume of the music/sound source, or alternatively place some tape over the sensor holes on the front of the unit to decrease the incoming sound level.

**Notes:**

To turn the unit OFF when you are in Functions #1 through #6, simply press the Power switch button once on the remote control.


To turn the unit OFF when you are in Function #7, simply press the Power switch button on the remote control two times to return to function one, then press the power button again to turn off the unit.

**REPLACING BULBS**


The Party Light takes a 3 watt, 12 volt push-in type bulb that can be bought at most hardware stores, home superstores, and Fox International (1-800-321-6993).

**REPLACEMENT OF LIGHT BULBS (12V 3W)**

1. Turn the color cover lens counterclockwise to remove it and expose the burnt out bulb.
2. Then press down on the bulb and turn it counterclockwise to remove.
3. Insert the new bulb, press down and turn it clockwise until it locks in place.
4. Replace the colored cover lens by turning it clockwise on the unit.

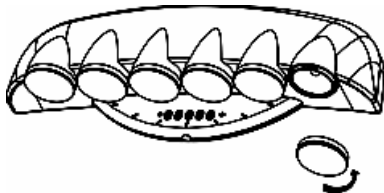

COUNTER-CLOCKWISE TO REMOVE

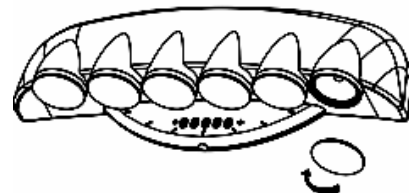

CLOCKWISE TO SCREW IN

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT  
[WWW.MEMCORPINC.COM](http://WWW.MEMCORPINC.COM)

OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.

PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO  
RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.

PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993.