

MEMOREX MKA352 Oscillating Party Light

Pertaining to a Risk of Fire, Electric Shock, or Injury to Persons

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the MKA352 Oscillating Party Light.

DANGER – To reduce the risk of electric shock: Always unplug this furnishing from the electrical outlet before cleaning and the replacement of lamp bulb.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. For household use, do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls and switch to the off position, then remove plug from outlet.

SAVE THESE INSTRUCTIONS

MEMOREX MKA352 OSCILLATING PARTY LIGHT

TO OPERATE

Plug the unit into an electric outlet and turn the on/off button to the on position.

 
SAFETY NOTE: To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

REPLACING THE BULB


1. Turn off the power by setting the on/off button to the off position.
2. Carefully remove the screws on the sides of the unit and remove the cover (fig. 1).
3. Make sure the burnt bulb has cooled. Hold the bulb between the thumb and the forefinger and turn counterclockwise to remove (fig. 2).
4. Replace with a new bulb adhering to the specifications listed below. Turn the bulb clockwise into the lamp holder (fig. 3). Turn the unit on to make sure the new bulb is working. Dispose of the burnt bulb properly.
5. Put the cover back on the unit and line up the screw holes. Secure the cover on with the screws, being carefully not to over tighten them (fig.4).

SAFETY NOTES:


1. Bulb specifications: 110v~60Hz AC; Maximum 25W E12
2. For indoor use only.
3. Keep out of reach of children and pets.
4. Not for professional use.
5. Power the unit off before replacing the bulb or when not in use.
6. Any servicing is to be performed by an authorized service representative.
7. Avoid any undue strain or stress on the product's conductors, connections and wires while in use.
8. When not in use, store the whole product with cord into the original packing in a cool, dry location protected from sunlight

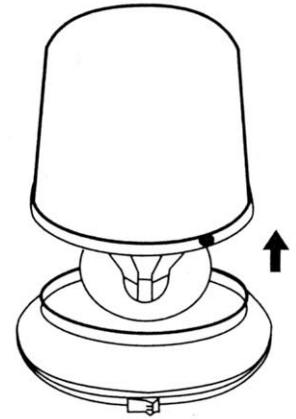


(Fig.1)

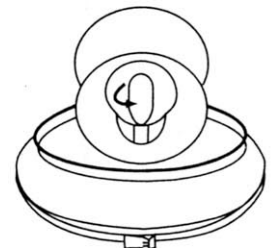 

(Fig.2)

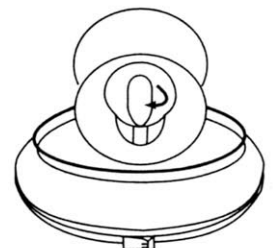 

(Fig.3)

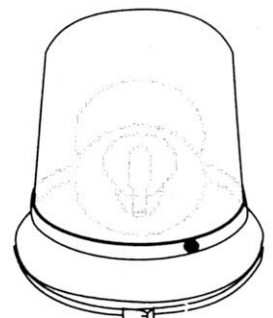 

(Fig.4)



MKA352

MEMOREX MKA352 OSCILLATING PARTY LIGHT

WARNING:

To reduce the risk of the fire or electric shock, do not expose this appliance to rain or moisture.

IF YOU HAVE ANY ADDITIONAL QUESTIONS REGARDING THIS PRODUCT, PLEASE CONTACT MEMOREX CONSUMER SERVICES AT 1-800-919-3647 OR VISIT OUR WEBSITE AT www.memorexelectronics.com .

FOR PARTS AND ACCESSORIES, PLEASE CONTACT FOX INTERNATIONAL AT 1-800-321-6993.

Please keep all packaging material for at least 90 days in case you need them to return this product to your place of purchase or to Memcorp.

Memcorp, Inc.
Weston, FL
Printed in China