

 
# **Memorex<sup>®</sup>**

Is it live or is it Memorex?<sup>™</sup>

## **MKS8002**

# **User's Guide**

Portable CD/CD+G  
Karaoke System  
with Video Camera

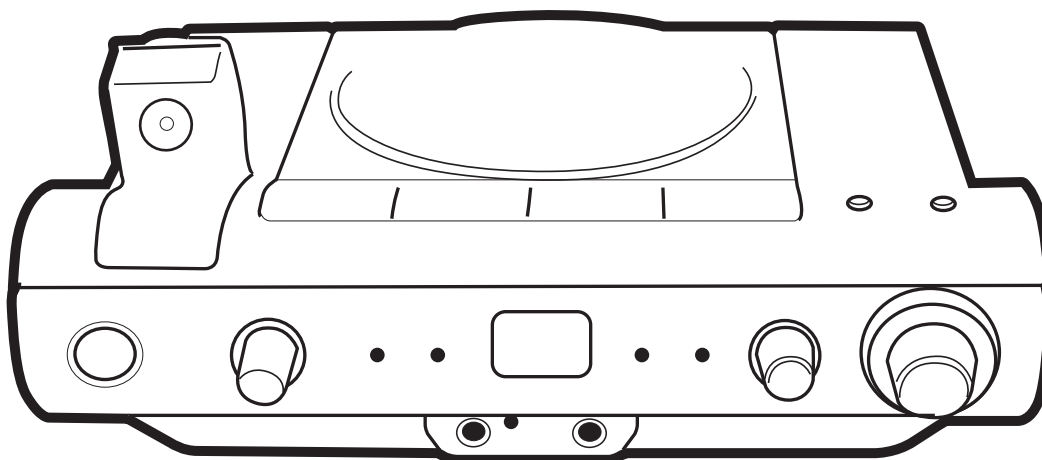

**Before operating this product,  
please read these instructions completely.**

**Dear Customer,**

 
Please read this manual thoroughly before operating the unit to become more familiar with it and obtain the performance that will bring you continued enjoyment for many years. Keep these instructions handy for future reference.

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR TO MEMOREX.**

For future reference, record the serial number of the unit printed on the rear of the cabinet.

Serial Number \_\_\_\_\_


	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>		



**DANGEROUS VOLTAGE:**  
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 **ATTENTION:**  
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**DANGER:**  
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

**FCC WARNING:**  
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.


**LASER SAFETY:** This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.  
**CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURES HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**INFORMATION:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

 **SURGE PROTECTORS:**  
It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.



**Dear Customer:**

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

**To establish a safe level:**

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

**Once you have established a comfortable sound level:**

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

**We Want You Listening For A Lifetime**

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

 
**Decibel**

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet

**THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:**

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



# SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

## 1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

## 2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

## 3. HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

## 4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

## 5. CLEANING

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

## 6. ATTACHMENTS

Do not use attachments not recommended by the product's manufacturer as they may cause hazards.

## 7. WATER AND MOISTURE

Do not use this product near water- for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

## 8. ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING  
(symbol provided by RETAC)



## 9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

## 10. POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

## 11. GROUNDING OR POLARIZATION

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

## 12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

## 13. LIGHTNING

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

## 14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 15. OVERLOADING

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 16. OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

## 17. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes, and requirements for grounding electrode.

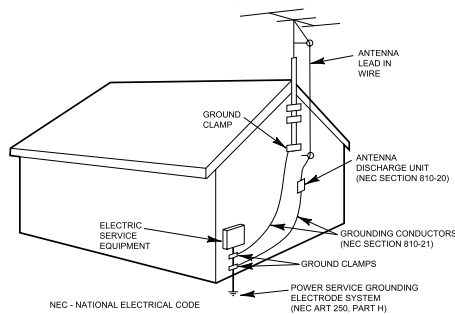

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

## 18. SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 19. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## 20. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 21. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

## 22. DAMAGE REQUIRING SERVICE

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance - this indicates a need for service.

## 23. HEAT

 
The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## 24. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## LOCATION OF CONTROLS

### FRONT

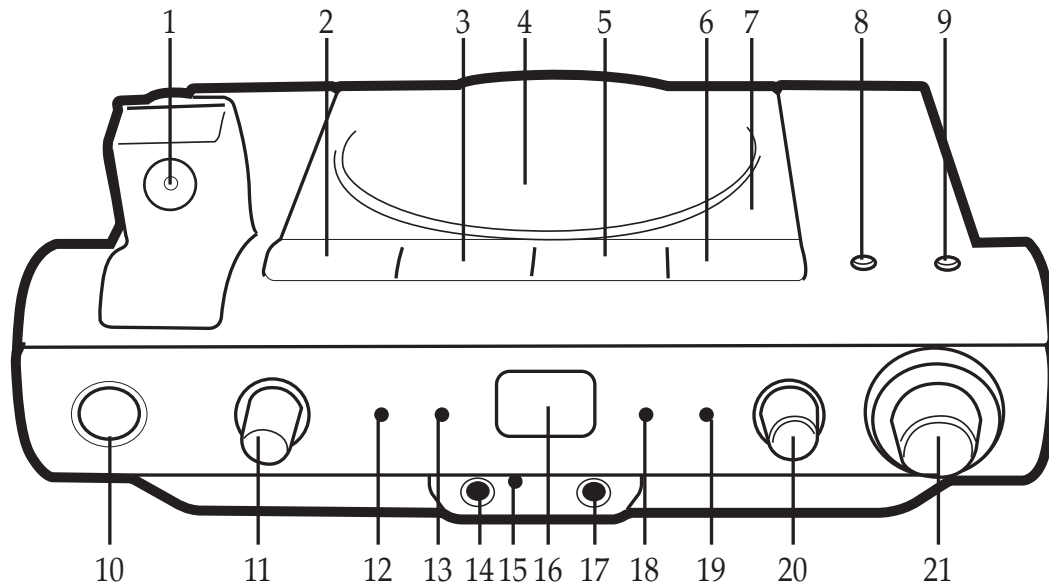


1. Video Camera with Camera Focus Adjusting Ring
2. Skip/Search ◀◀ Button
3. Play/Pause (▶||) Button
4. CD Compartment
5. Stop (■) Button
6. Skip/Search ▶▶ Button
7. CD Door OPEN/CLOSE Area
8. REPEAT Button
9. PROGRAM Button
10. VIDEO OUT (CAMERA/CDG) Button
11. POWER/VOCAL ON/OFF Control
12. POWER Indicator
13. PLAY/PAUSE Indicator
14. MIC 1 Jack
15. Wireless Mic ON Indicator
16. CD Display
17. MIC 2 Jack
18. REPEAT Indicator
19. PROGRAM Indicator
20. ECHO Control
21. MIC VOLUME Control



## LOCATION OF CONTROLS (CONTINUED)
 
### REAR

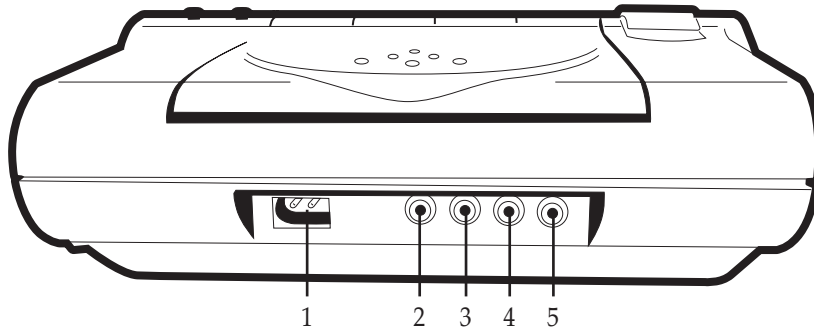


1. AC Socket
2. AUDIO OUT (Right) Jack
3. AUDIO OUT (Left) Jack
4. VIDEO OUT 1 (CDG/CAMERA) Jack
5. VIDEO OUT 2 (CDG) Jack


## POWER SOURCES
 
### AC:

Use the AC polarized line cord included with the unit for operation on AC power. Insert the small end of the AC cord into the AC jack on the rear of the unit. Insert the other end of the AC cord into any convenient 120V 60Hz household outlet.

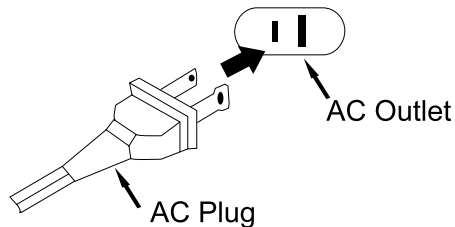


 **NOTE:** The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.



## CONNECTIONS
 
### CONNECTING THE UNIT TO A TELEVISION AND A RECEIVER/HOME STEREO

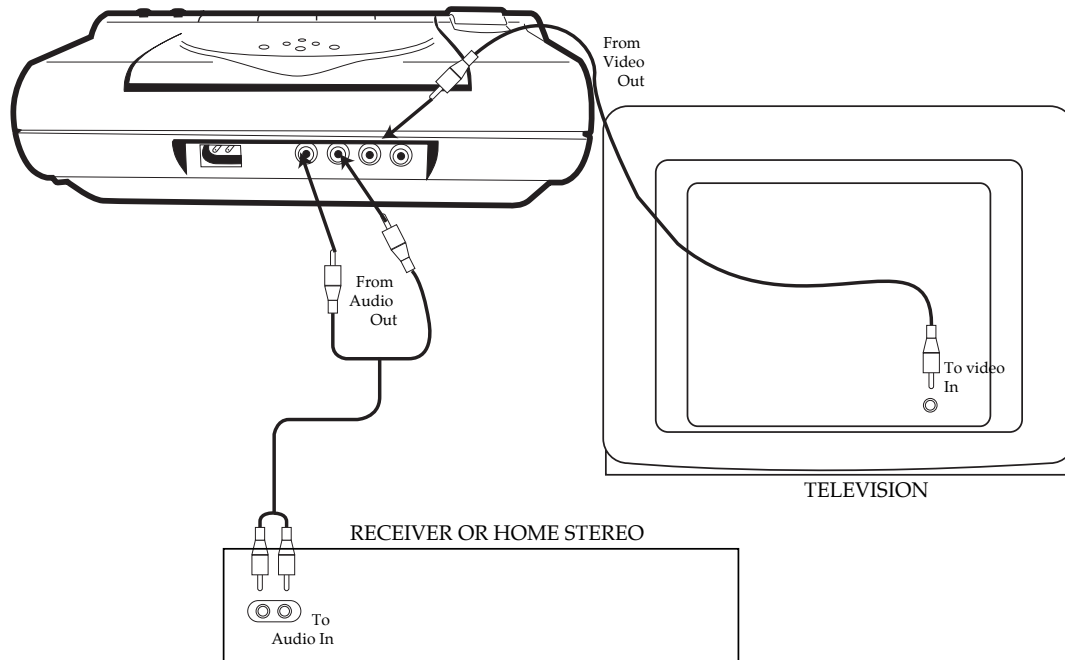


**IMPORTANT NOTE:** This unit does not have speakers, so you must connect it to a TV and/or stereo.

#### NOTES FOR CONNECTING TO A TV AND A RECEIVER/HOME STEREO:

 - Connecting the unit to a receiver/home stereo and TV will allow you to broadcast the unit's sound through the receiver/home stereo's speakers. If playing a CD+G disc, you will also see lyrics on the external TV .
- You must change your TV's INPUT selection to VIDEO IN or AUX IN. If the TV has a remote control, press the INPUT or AUX button on the remote to change the input selection.
- When connecting the unit, refer to the owner's manual of the TV and receiver/home stereo, as well as this manual.
- When connecting the unit, make sure the power is off and both units are unplugged before making any connections.

## CONNECTIONS (CONTINUED)

### CONNECTING THE UNIT TO A TELEVISION

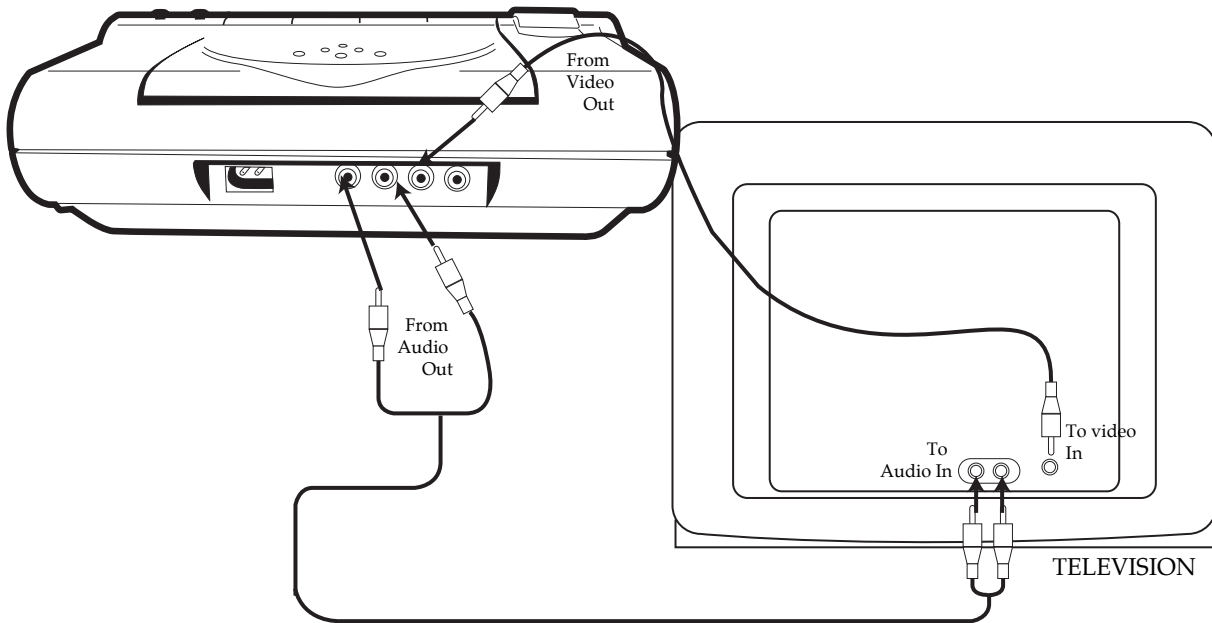

**IMPORTANT NOTE:** This unit does not have speakers, so you must connect it to a TV and/or stereo.


#### NOTES FOR CONNECTING TO A TV:

 - Connecting the unit to a TV will allow you to broadcast the unit's sound through an external TV. If playing a CD+G disc, you will also see lyrics on the external TV.
- You must change your TV's INPUT selection to VIDEO IN or AUX IN. If the TV has a remote control, press the INPUT or AUX button on the remote to change the input selection.
- When connecting the unit, refer to the owner's manual of the TV, as well as this manual.
- When connecting the unit to the TV, make sure the power is off and both units are unplugged before making any connections.
- If your TV only has one audio input, the use of a "Y" connector may be necessary. Visit your local electronics supply store.
- After connecting, set the Audio mode on the TV to the desired audio setting.



## CONNECTIONS (CONTINUED)

### CONNECTING THE UNIT TO TWO TELEVISIONS

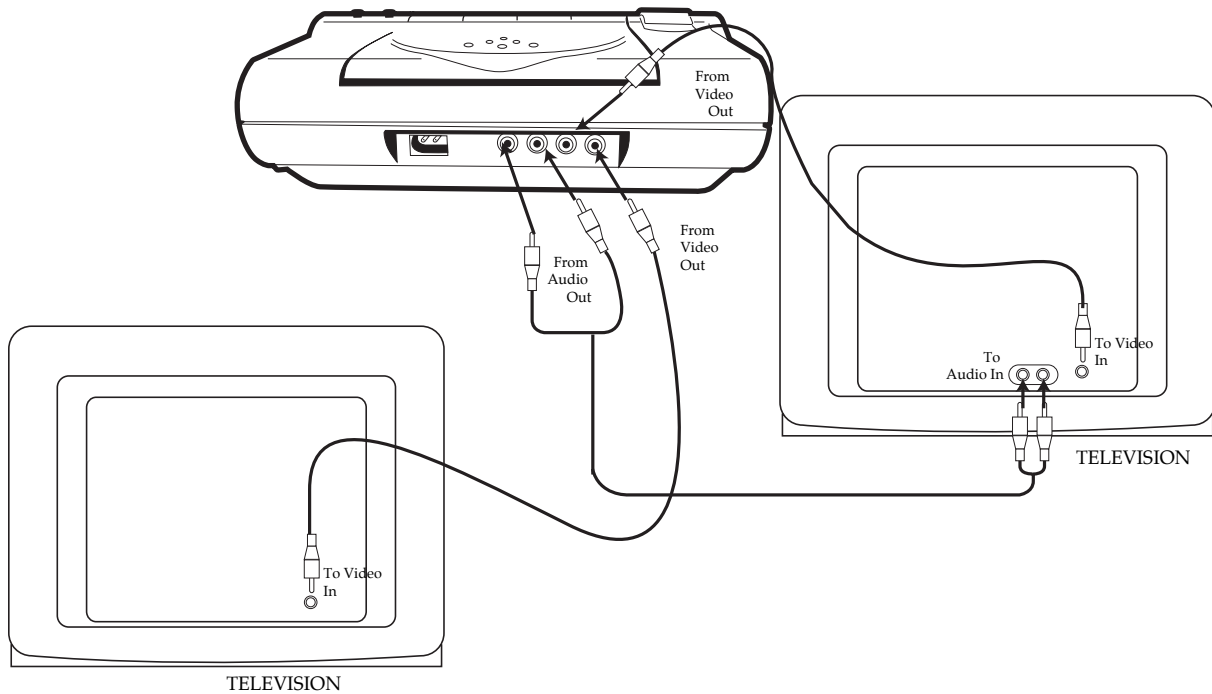

**IMPORTANT NOTE:** This unit does not have speakers, so you must connect it to a TV and/or stereo.

#### NOTES FOR CONNECTING TO TWO TVs:

 
- Connecting the unit to two TVs will allow you to hear the sound and see the lyrics on one TV (if playing a CDG) and hear the CDG sound and see the camera's image on the other.
- You must change your TV's INPUT selection to VIDEO IN or AUX IN. If the TV has a remote control, press the INPUT or AUX button on the remote to change the input selection.
- When connecting the unit, refer to the owner's manual of the TV, as well as this manual.
- When connecting the unit to the TV, make sure the power is off and both units are unplugged before making any connections.
- If your TV only has one audio input, the use of a "Y" connector may be necessary. Visit your local electronics supply store.
- After connecting, set the Audio mode on the TV to the desired audio setting.

# OPERATION

## CONNECTING THE MICROPHONE(S)

Before using the wireless microphone, rotate the battery cover counterclockwise to release the battery cover. Insert one 9V battery inside the compartment. Then, replace the battery cover by rotating it clockwise back to the end of the wireless mic. See below for operation of wireless and wired microphones.

### WIRED MICROPHONE

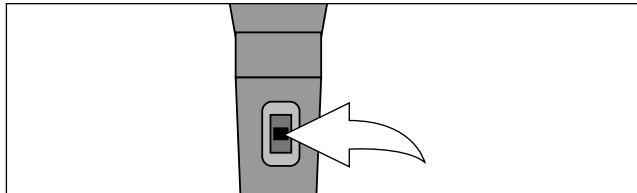


Plug the wired microphone into the MIC2 jack. Before connecting, make sure the MIC VOLUME control is set to minimum.

To turn the microphone on, slide the ON/OFF switch, located on the side of the microphone, to the ON position. To turn the microphone off, slide the ON/OFF switch to the OFF position.


If you insert a wired microphone into the MIC1jack, the Wireless mic indicator will go out and the wireless mic will not operate.

### WIRELESS MICROPHONE

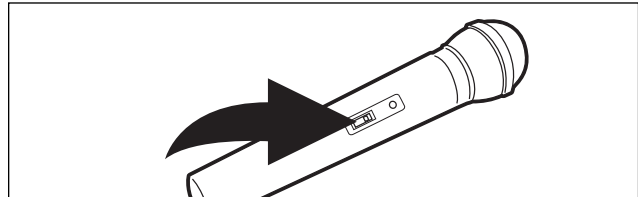 

The slide switch on the mic has three positions (ON/STANDBY/OFF). Turn the main unit on and slide the switch on the mic to the STANDBY position; the indicator on the wireless mic and the wireless mic ON indicator on the main unit will light. To use the wireless microphone, slide the switch to the ON position on the mic. At this time, both indicators on the main unit and the mic will still be lit. However, while the switch on the wireless mic is in the STANDBY or ON position, if you insert a wired mic into the MIC JACK 1, the wired mic will be connected and the wireless mic will be disconnected. The wireless mic ON indicator on the main unit will turn off, but the indicator on the wireless mic will still be lit until you slide the switch to the OFF position.


### ECHO CONTROL

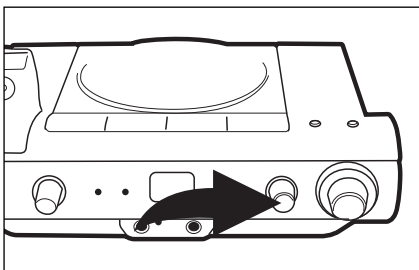 

Rotate the ECHO control clockwise to increase the echo or counterclockwise to decrease the echo.


### VIDEO OUT BUTTON

 For Video Out 1 (CDG/CAMERA) Jack Only

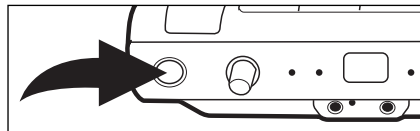

Press the VIDEO OUT button to the CDG ("■") position when using CDG Discs to watch the lyrics on an external TV connected to the VIDEO OUT 1 (CDG/CAMERA) jack. Press the VIDEO OUT button to the CAMERA ("□") position to watch the camera's image on an external TV connected to the VIDEO OUT 1 (CDG/CAMERA) jack.

### VOCAL CONTROL

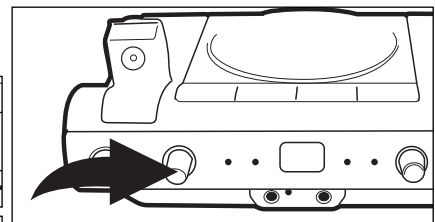 


Rotate the POWER/VOCAL control to the VOCAL OFF position to hear the instruments and vocals. Rotate the POWER/VOCAL control to the VOCAL ON position to mute the vocals as soon as you start singing into the mic. When you stop singing, the vocals are automatically unmuted. **IMPORTANT:** This feature only works with multiplex CDs.

## OPERATION (CONTINUED)

 
### PLAYING COMPACT DISCS

#### NORMAL PLAYBACK


(For karaoke playback, please refer to page 14)

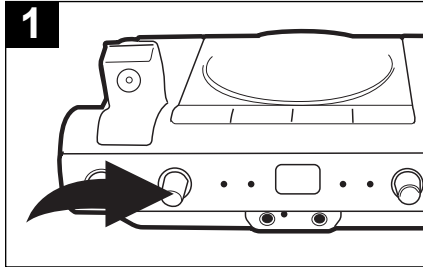

 
1 Rotate the POWER/VOCAL control to the VOCAL OFF or VOCAL ON position to turn the unit on; the POWER indicator will light.

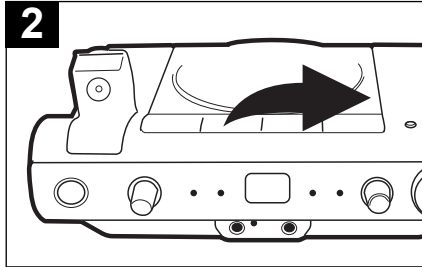

 
2 Press the CD Door OPEN/CLOSE area to open the CD Compartment door. Place a CD on the center spindle, with the printed label side facing up. Close the CD compartment door.

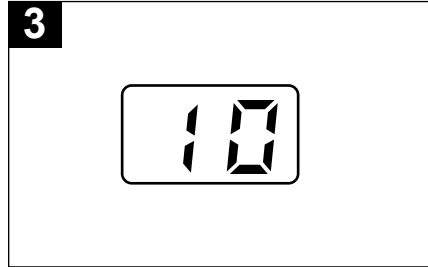

 
3 The CD player will read the table of contents on the disc and the total number of tracks will appear in the display.

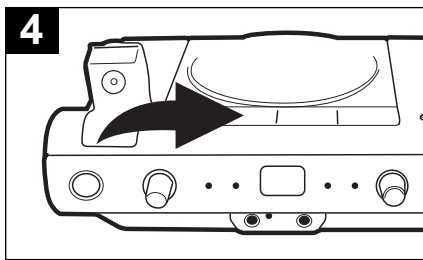


4 Press the Play/Pause (▶||) button to begin playback on Track 1; the PLAY/PAUSE indicator will light. Adjust the volume on the TV as desired.

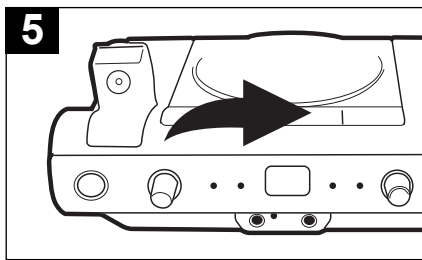 

 5 To stop playback before the disc ends, press the Stop (■) button. The disc will stop and the display will show the total number of tracks on the disc.

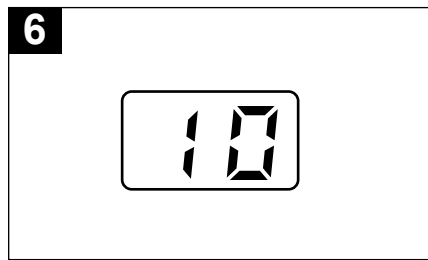

 
6 After the last track has been played, the disc stops automatically and the display shows the total number of tracks on the disc.

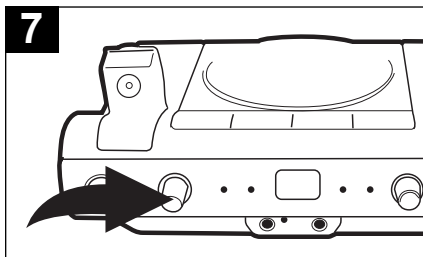


7 Remove your disc, close the CD Compartment door and rotate the POWER/VOCAL control to the POWER OFF position to turn the unit off; the POWER indicator will turn off.

## OPERATION (CONTINUED)
 
### CD PAUSE CONTROL

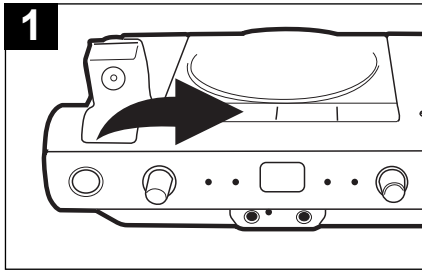


During CD playback, if you wish to pause the disc momentarily, press the Play/Pause (▶||) button. Playback stops but the disc continues to spin and the PLAY/PAUSE indicator will blink.

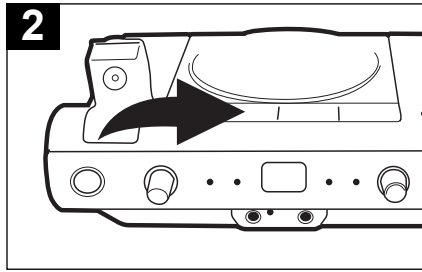 


Press the Play/Pause (▶||) button again to release pause and resume normal CD playback; the PLAY/ PAUSE indicator will remain on.

### TO BEGIN PLAYBACK FROM A SPECIFIC TRACK

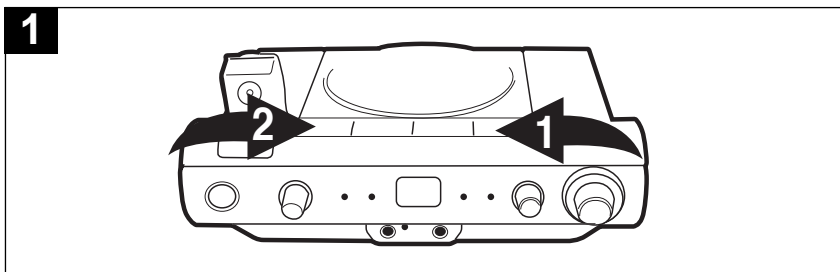 


After you insert the disc into the CD player and the total number of tracks appear on the display, you may press either the Skip/Search (▶▶) ① or (◀◀) ② button to select a specific track for playback; the track will automatically start playing.

### FORWARD/REVERSE SKIP TRACK AND HIGH-SPEED MUSIC SEARCH (◀◀/▶▶)

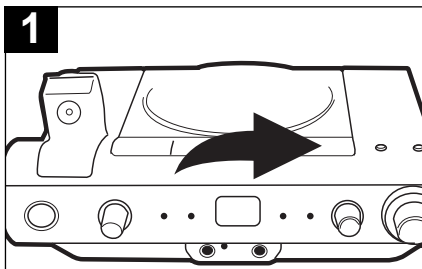 

 During playback, press the Skip/Search (▶▶) button once to advance the player to the beginning of the next track. Press the Skip/Search (▶▶) button repeatedly to advance the player to higher numbered tracks.

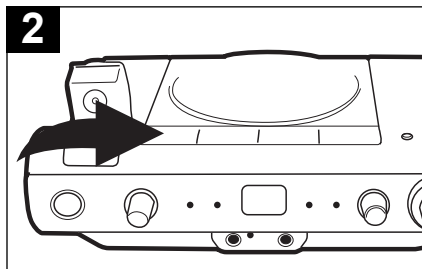


During playback, press the Skip/Search (◀◀) button once to move the player back to the beginning of the current track. Press the Skip/Search (◀◀) button repeatedly to move the player back to lower numbered tracks.


**3**  
**CD ONLY**  
During playback, depress and hold either the Skip/Search (▶▶) or (◀◀) button to move the player forward or backward within a track to locate a specific musical passage. The player will move forward or backward at high speed as long as the button is depressed. When you release the Skip/Search (▶▶) or (◀◀) button, normal playback will resume.

## OPERATION (CONTINUED)

 
### REPEAT PLAYBACK

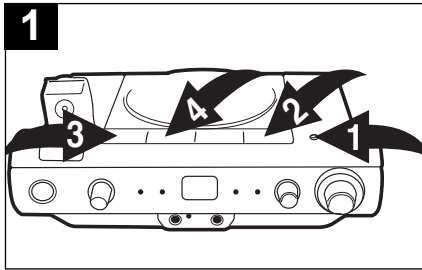

 To repeat a single track, while in the Stop mode, press the REPEAT button ❶ once; the REPEAT indicator will blink. Press the Skip/Search (▶▶) ❷ or (◀◀) ❸ button to select the specific track that you wish to repeat. The specific track you selected will start to playback automatically and it will be repeated continuously.

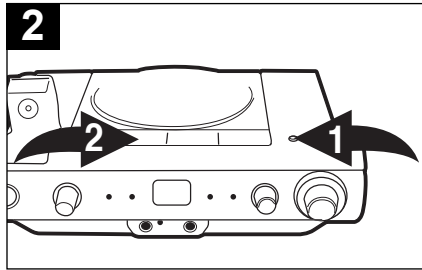

To repeat all of the tracks on a disc continuously, while in the stop mode, press the REPEAT button ❶ twice; the REPEAT indicator will light solid. Press the Play/Pause (▶||) button ❷ to repeat all tracks.

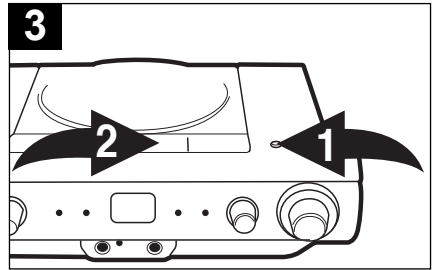 


To cancel Repeat Playback, press the REPEAT button ❶ until the REPEAT indicator goes out. You can also cancel Repeat Playback by pressing the Stop (■) button ❷.


### PROGRAMMED PLAYBACK

 The CD player in this unit has a 30 track programmable memory that allows you to program up to 30 tracks on any disc for playback in any desired order. You may program 30 different tracks or you may also program certain tracks to play more than once.


To perform programmed playback, proceed as follows:

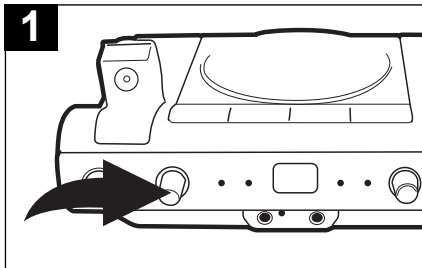

 Rotate the POWER/VOCAL control to the VOCAL OFF or VOCAL ON position to turn the unit on; the POWER indicator will light.

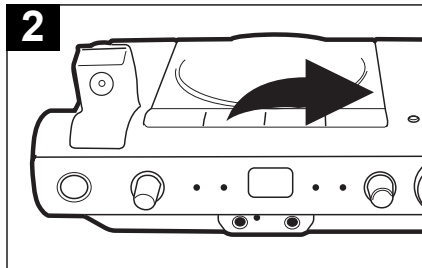

 
Press the CD Door OPEN/CLOSE area to open the CD Compartment door. Place a CD on the center spindle, with the printed label side facing up. Close the CD Compartment door.

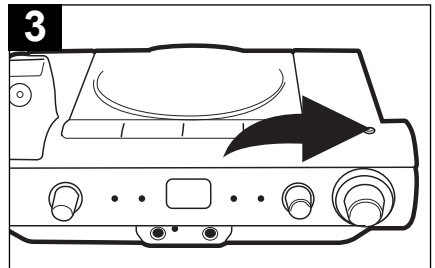


Press the PROGRAM button; "01" will appear in the display and the PROGRAM indicator will blink.

**PROGRAMMED PLAYBACK CONTINUED ON THE NEXT PAGE**

 
## OPERATION (CONTINUED)

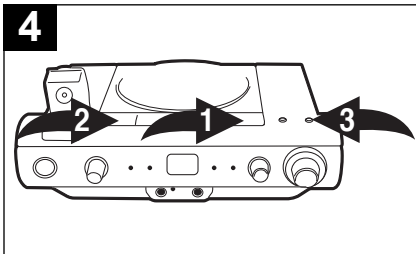

 
Press the Skip/Search (▶▶) ❶ or (◀◀) button ❷ to select the first track that you wish to program. When the desired track number appears in the display, press the PROGRAM button ❸ again.

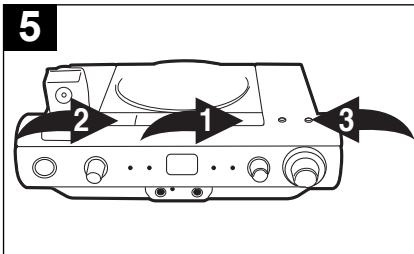

 Press either the Skip/Search (▶▶) ❶ or (◀◀) button ❷ to select the next track you wish to program. When the desired track number appears in the display, press the PROGRAM button ❸ again.

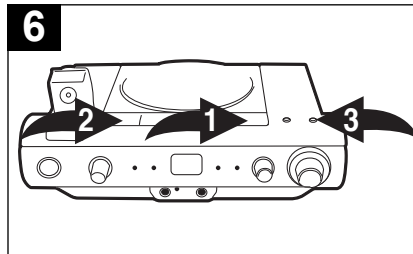

 Repeat step 5 until you have programmed up to 30 track numbers into the CD Program Memory. When the memory is full, "Fu" will appear in the display.

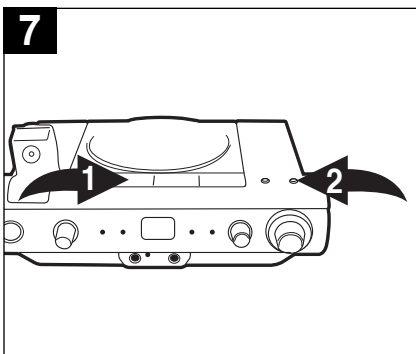


After programming up to 30 tracks in the CD Program Memory, press the Play/Pause (▶||) button ❶ to begin programmed playback. The PROGRAM indicator will light and playback will begin on the first track that you programmed. The player will continue to play all of the tracks that you programmed in the order in which you programmed them. When the last programmed track has been played, the player will stop and the display will again show the total number of tracks on the disc. If you press the PROGRAM button ❷ and then press the Play/Pause (▶||) button ❶ again, playback will start on the first track you programmed and will continue until all the programmed tracks have been played.


**To cancel programmed playback,** press the STOP (■) button while in the Stop mode.

**To check the program,** press the PROGRAM button once; "01" (MEMORY 1), then the first selected track will appear in the display. Press the PROGRAM button again; "02" (MEMORY 2), then the second selected track will appear in the display. Press the PROGRAM button repeatedly to check the other programmed tracks.


### PROGRAMMED REPEAT

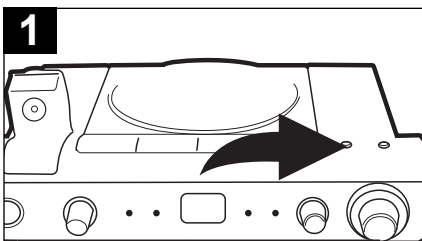 

 It is also possible to use the Program and Repeat functions together to repeat a specific program indefinitely. First, program the tracks you wish to hear in the order you wish to hear them, as described above. Then, press the REPEAT button twice. Both the PROGRAM and REPEAT indicators will light.

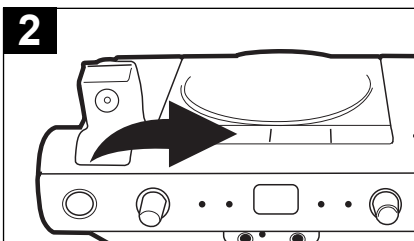

Press the Play/Pause (▶||) button to begin programmed repeat playback. The player will play the tracks you selected in the order in which you programmed them. When the last track in the program has been played, the entire program will begin again.

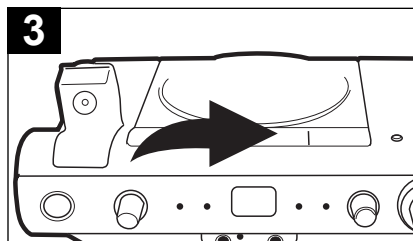 


Programmed Repeat operation will continue indefinitely until you press the Stop (■) button or open the CD door.


## OPERATION (CONTINUED)
 
### PLAYING A CD+G (COMPACT DISC + GRAPHICS) DISC KARAOKE


You can listen to a CD+G karaoke disc. CD+G discs combine the recorded music with an additional video track that displays the song lyrics on a television screen. As the song plays, the words to be sung are highlighted in a different color on most CD+Gs.

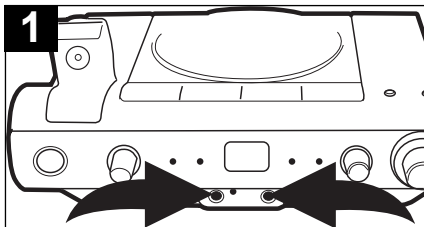

 **1** Insert a CD+G disc. Insert the microphone into the MIC jack(s), or use the supplied wireless microphone. Make sure the unit is connected to a TV or TV and stereo as shown on pages 6 through 8.

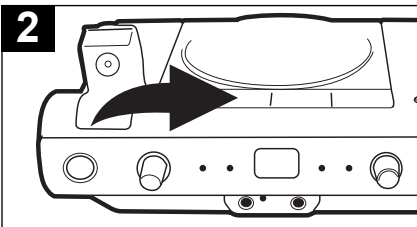


**2** Press the Play/Pause (▶||) button to start CD/CD+G playback. If connected to a TV and using a CD+G disc, the image and lyrics will appear on the TV.

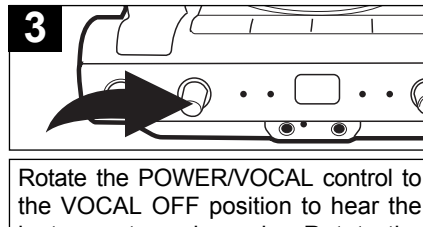 


**3** Rotate the POWER/VOCAL control to the VOCAL OFF position to hear the instruments and vocals. Rotate the POWER/VOCAL control to the VOCAL ON position to mute the vocals as soon as you start singing into the mic. When you stop singing, the vocals are automatically unmuted.

 **IMPORTANT:** This feature only works with multiplex CDs

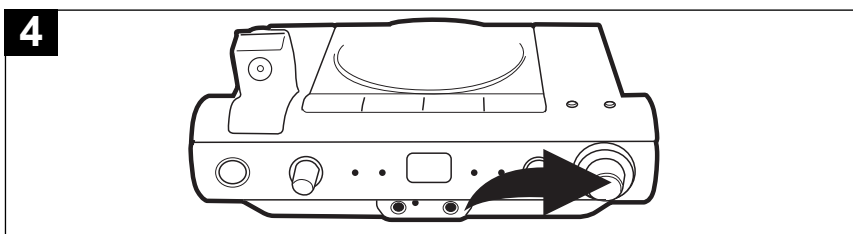

 **4** Adjust the MIC VOLUME control as desired. Increasing this control will increase the volume of the microphone. Sing or talk into the microphone and you will hear both the CD+G and the microphone.

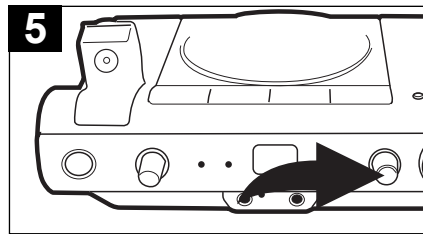

**5** Adjust the ECHO control to add an echo effect to your voice. The ECHO control is variable so add as much or as little reverb as desired.

**NOTE:** The Program and Repeat features on a CD+G CD operate the same as with standard CD.

#### INFORMATION ABOUT CD+G KARAOKE DISCS:

CD+G karaoke discs are designed specifically for playback in special CD players that include a CD+G decoder, such as this unit. These discs contain the lyrics to each song and the lyrics will appear on your TV screen, line by line, as the disc is playing. Usually the words on the screen will change color in time with the music to help you sing along at the proper tempo, even if you do not know the song.

Most CD+G karaoke discs have all of the songs recorded twice, first with music only, and then with music and vocal together. For example, if you purchase a CD+G disc containing four songs, tracks one through four will have the music only without vocals, and tracks five through eight will have the same four songs recorded with music on the left channel and the vocal tracks on the right channel.

 
If you wish to sing along "solo" without any other vocals, you should select tracks one through four (for example). If you wish to sing a "duet" or be part of a group, select tracks five through eight (for example) that contain both the music and vocals.

#### MICROPHONE FEEDBACK:


"Feedback" is a howling or screeching sound that occurs when the microphone comes too close to the speaker(s). To avoid microphone feedback, keep the microphone as far away from the speakers as the microphone cable will allow. If you must bring the microphone close to the speakers, such as when you are changing a disc or adjusting one of the other controls on the front of the unit, set the microphone ON/OFF switch to the OFF position.

## OPERATION (CONTINUED)

### USING THE BUILT-IN CAMERA

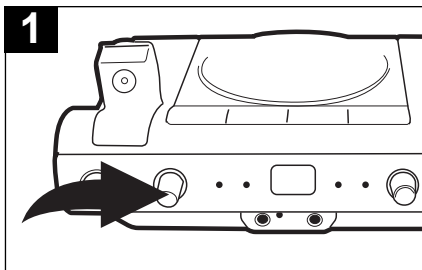

 **1** Connect to a television as described on pages 6-8. Rotate the POWER/VOCAL control to the VOCAL OFF or VOCAL ON position to turn the unit on; the POWER indicator will light.

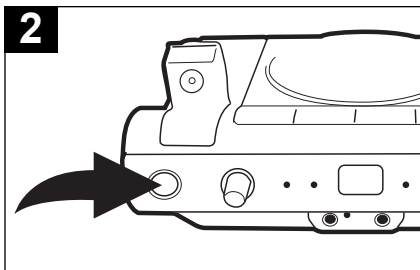

**2** Press the VIDEO OUT button to the CAMERA ("CAM") position. Open the camera compartment and remove the protective cover on the camera lens. The camera will then show the image on the external TV screen.

**ADJUSTING FOCUS:** Rotate the ring located on the outside of the camera lens to adjust the camera's focus.



**NOTE:** The image of the built-in camera will only appear on the TV when the unit is connected to the VIDEO OUT 1 (CDG/CAMERA) jack.



## CARE AND MAINTENANCE
  
### Caring for Compact Discs

- Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.

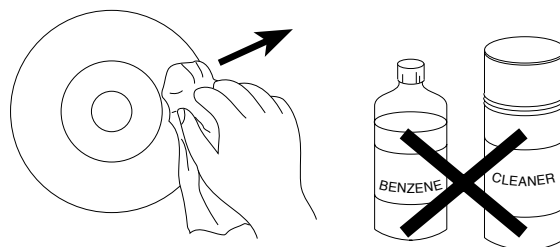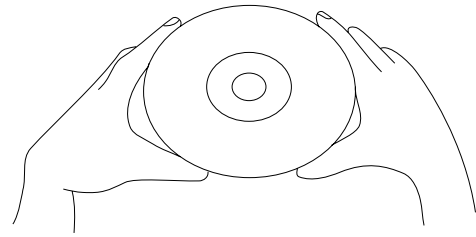

- This unit is designed to play only compact discs bearing the identification logo as shown here.
- Other discs may not conform to the CD standard and may not play properly.
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the ink may damage the surface.



### Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

## TROUBLESHOOTING GUIDE

 
Should this unit exhibit a problem, check the following before seeking service:

Symptom	POSSIBLE SOLUTION
<b>CD PLAYER</b>	
CD Player will not play	CD is not installed or inserted upside-down; install correctly.
CD skips while playing.	Disc is dirty or scratched; replace disc.
<b>GENERAL</b>	
No sound.	Connect the AUDIO OUT jacks to an external audio unit.
Feedback is heard when singing.	Microphone too close to unit or volume is too high.
<b>MONITOR</b>	
Words do not appear on the TV screen.	Using non CD+G disc. Insert a CD+G disc to get this feature.
	Make sure the VIDEO OUT button is set to the CDG setting.
<b>CAMERA</b>	
Camera not working.	Make sure the VIDEO OUT button is set to the CAMERA position. Only connect it to the VIDEO OUT 1 (CDG/CAMERA) jack, otherwise the camera's image will not appear.

**FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT [WWW.MEMOREXELECTRONICS.COM](http://WWW.MEMOREXELECTRONICS.COM) OR CONTACT CUSTOMER SERVICE AT 1-800-919-3647.**

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR TO MEMOREX.**

**FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993.**



# SPECIFICATIONS

 
 
 
**GENERAL:**

 
 
Power Source .....120V, 60Hz AC  
Line Out .....350 ~ 450mW

**CD SECTION:**

Disc Diameter .....4.72" (120mm)  
.....3.15" (80mm) Single CD  
Optical Source.....Semiconductor Laser  
D/A conversion.....1-bit DAC eight times oversampling

Specifications are subject to change without notice.





Memcorp, Inc.  
Weston, FL  
Printed in Hong Kong

Visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com)

