

# **Memorex®**

 
Is it live or is it Memorex?™

## **MPD8861**

### **User's Guide**

---

*Personal Compact Disc  
MP3 Player*

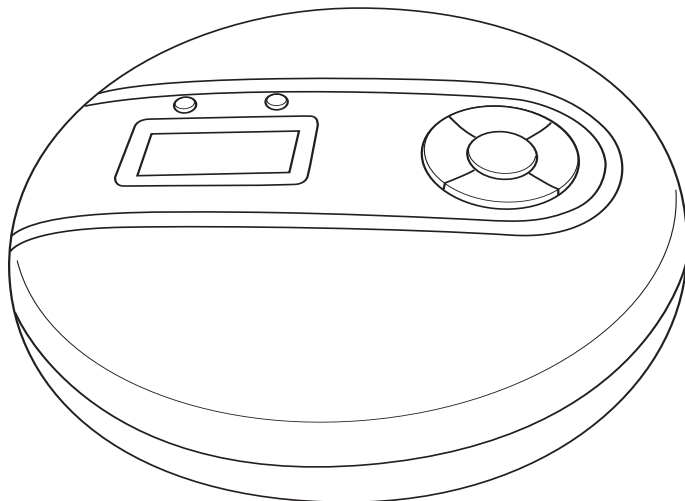

**Before operating this product,  
please read these instructions completely.**

## SAFETY PRECAUTIONS



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
### DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



### ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



### DANGER:

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. Please do not attempt to defeat or bypass the safety switches.

### FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

## SAFETY PRECAUTIONS (CONTINUED)

### INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- Do not open the CD compartment while the CD is rotating.
- Always keep the CD compartment closed when not in use.
- Keep all foreign objects out of the CD compartment.
- Place the unit on a stable surface.
- Avoid installing the unit in locations described below:
  - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
  - On top of other stereo equipment that radiates too much heat.
  - Placed lacking ventilation or dusty places.
  - Places subject to constant vibration.
  - Humid or moist places.

## Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

#### Decibel

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet

 
#### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:


90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad



Information courtesy of the Deafness Research Foundation.

## LOCATION OF CONTROLS

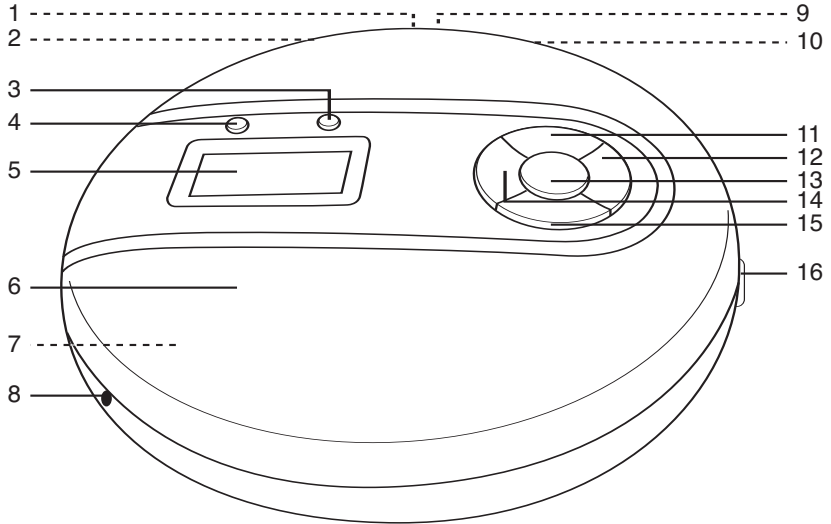

- |   |  |
|---|--|
| <p>1. LINE OUT Jack (Rear of Unit)</p> <p>2. HOLD (ON/OFF) Switch</p> <p>3. PROG./EQ/ENTER Button</p> <p>4. ESP/MENU Button</p> <p>5. Display</p> <p>6. CD Compartment</p> <p>7. Battery Compartment (Under CD Compartment)</p> <p>8. DC 4.5V Jack (Rear of Unit)</p> | <p>10. VOLUME Buttons (Rear of Unit)</p> <p>11. MODE/CLEAR Button</p> <p>12. Skip (▶▶)/▶ Button</p> <p>13. PLAY/PAUSE (▶▶)/POWER ON/▲ Button</p> <p>14. Skip (◀◀)/◀ Button</p> <p>15. STOP (■)/POWER OFF/▼ Button</p> <p>16. CD Door OPEN Switch</p> |
|---|--|
- 
9. PHONES (Headphones) Jack (Rear of Unit)


## POWER SOURCES

 This CD player requires either two (2) “AA” cell batteries (not included) or an AC adapter (not included).

### BATTERY INSTALLATION

“Low Battery” will appear in the CD display when the batteries need replacing.

1. Open the CD compartment, then open the battery compartment door by pressing in on the tab and then lifting it. **To prevent the possibility of losing the cover, it cannot be removed.**
2. Insert two (2) “AA” cell batteries (not included) according to the polarity diagram inside the battery compartment. Alkaline batteries are recommended for the longest playing time.

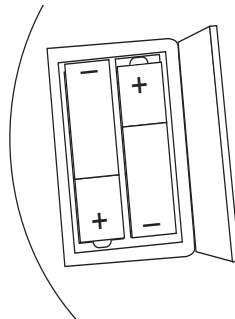

### BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer’s directions.)

### AC OPERATION


To operate the unit using AC power, connect an AC adapter (not included) to an AC outlet having 120V, 60Hz AC only. Plug the small end into the DC 4.5V jack on the rear of the unit and connect the other end into the AC outlet. The batteries are automatically disconnected when the AC adapter is used.

**CAUTION:** When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands. Fully insert the plug without exposing any part of the blade.


DC4.5V 

## CD OPERATION
 
### TURNING POWER ON/OFF    ADJUSTING THE VOLUME

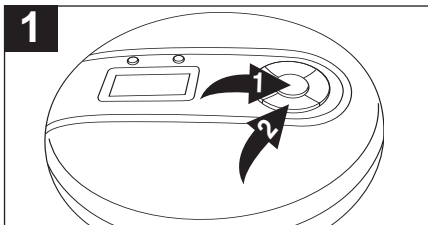


Press the PLAY/PAUSE (▶||)/POWER ON/▲ button ❶ to turn the unit on. To turn the unit off, press the STOP (■)/POWER OFF/▼ button ❷ while in the Stop mode. The unit will automatically shut off if stopped (CD Standby) for one minute.

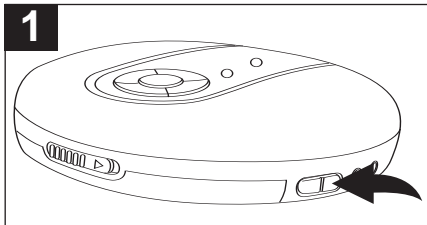 

You can adjust the digital volume level from Minimum "MIN" to Maximum "MAX" by pressing the VOLUME UP/DOWN buttons.

**NOTE:** If there is no disc in the CD compartment or the CD door is open, you cannot adjust the volume.

### PRESET EQUALIZER

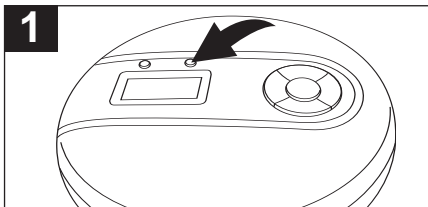 

While in Play mode, repeatedly press the PROG./EQ/ ENTER button to cycle through the preset EQ settings: NORMAL, CLASSIC, POP, JAZZ and ROCK.

### HOLD



Slide to the ON position to disable the buttons; "Hold" will briefly appear in the display. When pressing the buttons on the CD compartment lid, "Hold" will briefly appear in the display. Slide to the OFF position to enable the buttons. For the HOLD function, only the buttons on the CD compartment lid and the VOLUME UP/DOWN buttons will be disabled, not the other controls/switches.

### Radio Sound Through a Home Audio System

By using a home audio connection cable (not included), superb radio sound can be heard through your home audio system. Before making any connections, turn off the power to all equipment.

 
Plug a connection cable (not included) between the LINE OUT jack on the rear of the CD player and the amplifier's AUX or CD input jack. (Do not connect it to the amplifier's PHONO jack.)

**NOTE:** If the radio interferes with TV reception, move the unit away from the TV or turn off the power to this unit.


## CD OPERATION (CONTINUED)

### TO INSERT AND PLAY A CD


This CD player is designed to play all kinds of audio discs and MP3 CD Roms, such as CD recordables and rewritables. Do not try to play CDI, CDV, DVD or computer CDs in this unit.

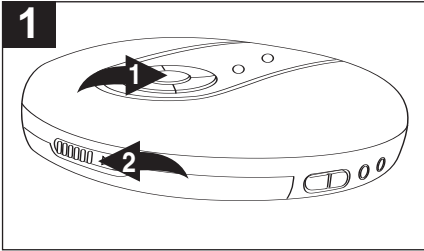


Press the PLAY/PAUSE (▶||)/POWER ON/▲ button ❶ to turn the unit on. Open the CD door by sliding the CD Door OPEN switch ❷. Gently press a disc, label side up, onto the spindle until it locks in place. Close the CD door lid. Insert headphones into the PHONES jack.

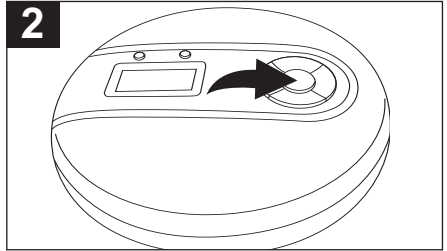 

Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin playback; the current track and elapsed playing time (CD information and folder name, if using MP3) will appear in the display.

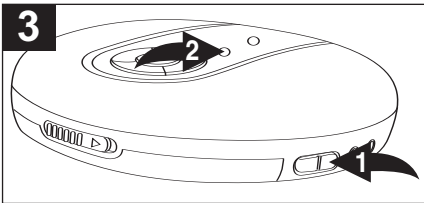 

 Adjust the VOLUME UP/DOWN buttons ❶ and PROG./EQ/ENTER button ❷ as desired. Repeatedly press the PROG./EQ/ENTER button ❷ to cycle through the preset EQ settings: NORMAL, CLASSIC, POP, JAZZ and ROCK. (The CD must be playing to change the EQ setting.)

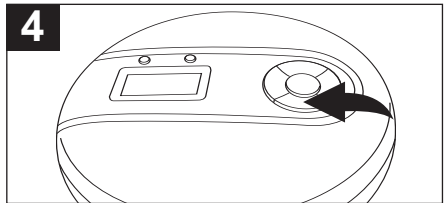

When the disc is through playing, it will stop. Press the STOP (■)/POWER OFF/▼ button to stop the disc before it is finished. Press the STOP (■)/POWER OFF/▼ button again to turn the unit off.




## CD OPERATION (CONTINUED)

 
### CD PLAYBACK NOTES:

- See page 15 for more information on MP3's.
- When recording ("burning") CDs, make sure the session is "finalized", or simply record ("burn") only one session. You can find more information in your recorder's manual.
- This unit is capable of playing standard CDs or 3" singles; no adapter is required.
- If a disc is inserted incorrectly, dirty, damaged or not present at all, "no disc" will appear in the display.
- If a disc is not recorded properly, a disc error will occur and "Invalid Disc" or "Disc Error" will appear in the display.
- Playback will stop when you open the CD compartment, but it is not recommended to open the compartment before the STOP (■)/POWER OFF/▼ button is pressed.
- If there is no activity for 60 seconds, the unit will turn itself off to save the batteries.
- It may take 10 to 30 seconds for the player to read an MP3 CD and begin playback, depending on the number of tracks burned on the CD.

### TO PAUSE A CD

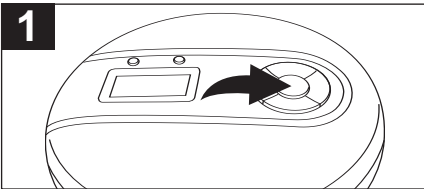


During CD playback, if you wish to pause the disc momentarily, press the PLAY/PAUSE (▶||)/POWER ON/▲ button. Playback stops but the disc continues to spin and the elapsed time will blink in the display.

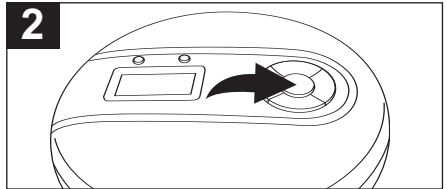 


Press the PLAY/PAUSE (▶||)/POWER ON/▲ button again to release pause and resume playback. The sound returns and the elapsed time in the display stops blinking.

## CD OPERATION (CONTINUED)
 
### TO BEGIN PLAYBACK FROM A SPECIFIC TRACK

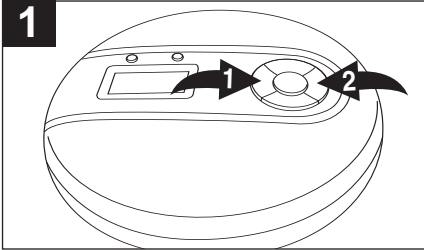


 1 After you insert the disc into the CD player and the total number of tracks appear on the display, you may press either the Skip (⏮)/◀ Ⓚ or (⏭)/▶ Ⓚ button to select a specific track for playback.

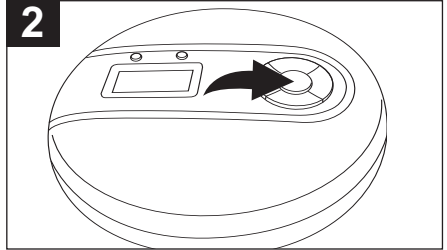


2 When the desired track number (and folder number if using MP3) appears in the display, press the PLAY/PAUSE (▶||)/POWER ON/▲ button. Playback will begin with the track (or file) you selected.

### FORWARD/REVERSE SKIP TRACK

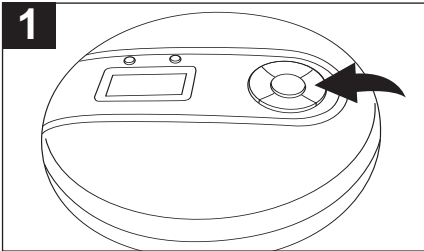 

 
1 During playback, press and release the Skip (⏭)/▶ button once to advance the player to the beginning of the next track. Press the Skip (⏭)/▶ button repeatedly to advance the player to higher-numbered tracks.

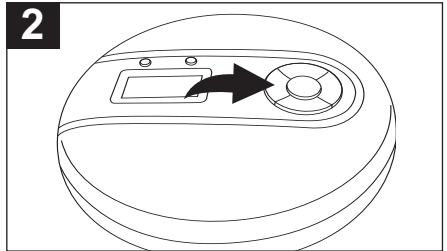

2 During playback, press and release the Skip (⏮)/◀ button once to move the player back to the beginning of the currently playing track. Press the Skip (⏮)/◀ button repeatedly to move the player back to lower-numbered tracks.


## CD OPERATION (CONTINUED)
 
### HIGH-SPEED MUSIC SEARCH

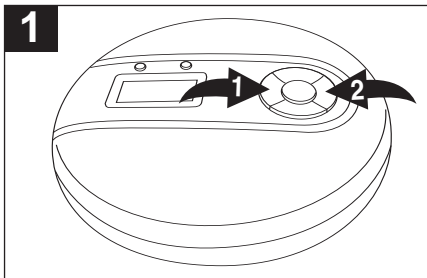


During playback, depress and hold either the Skip (⏮)/◀ ❶ or (⏭)/▶ ❷ button to move the player forward or backward within a track to locate a specific musical passage. The player will move forward or backward at high speed as long as the button is depressed. When you release the Skip (⏮)/◀ ❶ or (⏭)/▶ ❷ button, normal playback will resume.

### REPEAT PLAYBACK OF ONE TRACK

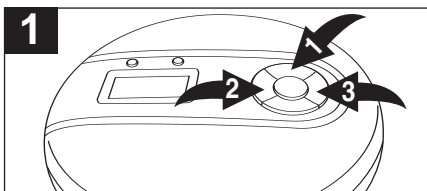 

 To repeat a single track, while in the Stop mode, press the MODE/CLEAR button ❶ once; "REP 1" will appear in the display. Press the Skip (⏮)/◀ ❷ or (⏭)/▶ ❸ button to select the specific track that you wish to repeat.

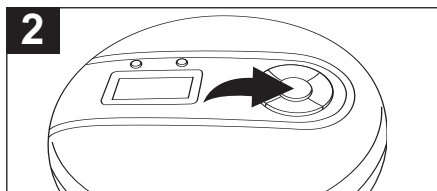


When the desired track number appears in the display, press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin playback. (For MP3 CDs, the "REP 1" indicator will disappear or disappear after a few seconds.) The specific track you selected will be repeated continuously.

### TO CANCEL REPEAT PLAYBACK OF ONE TRACK:

 
1. Press the STOP (■)/POWER OFF/▼ button to stop playback, the "REP 1" indicator will appear again, press the MODE/CLEAR button repeatedly until the MODE indicators disappear from the display.
2. Press the MODE/CLEAR button once, the "REP A" indicator will appear in the display. Press the MODE/CLEAR button repeatedly until the Mode indicators disappear from the display to return to normal playback.

## CD OPERATION (CONTINUED)

### REPEAT PLAYBACK OF ALL TRACKS

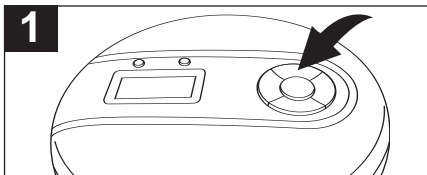


 To repeat all the tracks on the CD, while in the Stop mode, press the MODE/CLEAR button twice; "REP A" will appear in the display.

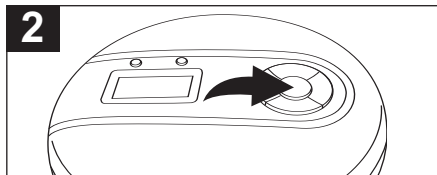


Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin playback. (For MP3 CDs, the "REP A" indicator will disappear or disappear after a few seconds.) All tracks on the disc will be repeated continuously.

### REPEAT PLAYBACK OF A FOLDER (MP3 w/folders only)

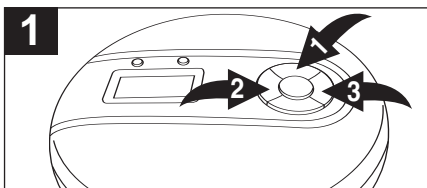 

 To repeat all files in a directory (MP3 CD only), while in the Stop mode, press the MODE/CLEAR button ❶ three times; "REP D" will appear in the display. Press the Skip (◀) ❷ or (▶) ❸ button to select the specific directory that you wish to repeat.

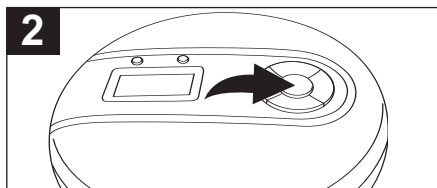


Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin playback. (For MP3 CDs, the "REP D" indicator will disappear or disappear after a few seconds.) All files in the selected directory will be repeated continuously. See page 15 for more info on MP3 format.

#### TO CANCEL REPEAT PLAYBACK:

 
1. Press the STOP (■)/POWER OFF/▼ button to stop playback, the "REP A" or "REP D" indicator will appear again, press the MODE/CLEAR button repeatedly until the MODE indicators disappear from the display.
2. Press the MODE/CLEAR button once, the "REP D" or "INTRO" indicator will appear in the display. Press the MODE/CLEAR button repeatedly until the Mode indicators disappear from the display to return to normal playback.

## CD OPERATION (CONTINUED)

### INTRO PLAYBACK (Will play the first 10 seconds of each track)

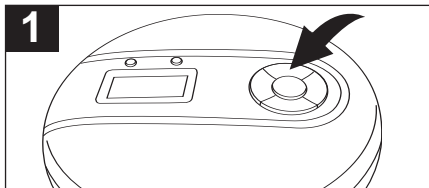


 **1** While in the Stop mode, press the MODE/CLEAR button 3 times (4 times if an MP3 CD with multiple directories is inserted); "INT" will appear in the display.

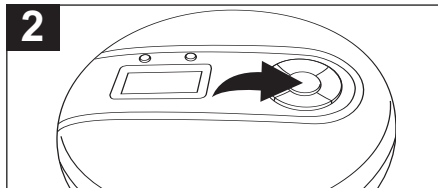


**2** Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin Intro playback. (For MP3 CDs, the "INT" indicator will disappear or disappear after a few seconds.) The first 10 seconds of all tracks on the disc will be played in sequence.

### TO RANDOMLY PLAY BACK A CD

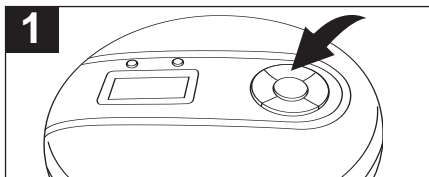 

 **1** While in the Stop mode, press the MODE/CLEAR button 4 times (5 times if an MP3 CD with multiple directories is inserted); "RND" will appear in the display.

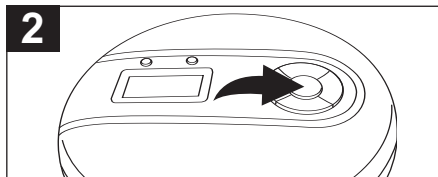

**2** Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin playback. (For MP3 CDs, the "RND" indicator will disappear or disappear after a few seconds.) The unit will play all the tracks in random order. When all the tracks have been played, the unit will stop.


### TO CANCEL INTRO OR RANDOM PLAYBACK:

 1. Press the STOP (■)/POWER OFF/▼ button to stop playback, the selected indicator will appear again, press the MODE/CLEAR button repeatedly until the MODE indicators disappear from the display.
2. If in INTRO mode, press the MODE/CLEAR button once, the "RANDOM" indicator will appear in the display. Press the MODE/CLEAR button until the Mode indicators disappear from the display to return to normal playback. In Random mode, press the MODE/CLEAR button once to return to normal playback.


## CD OPERATION (CONTINUED)

### TO PROGRAM THE MEMORY (UP TO 24 TRACKS)


Programming is the ability to preselect the order in which a series of tracks will be played.

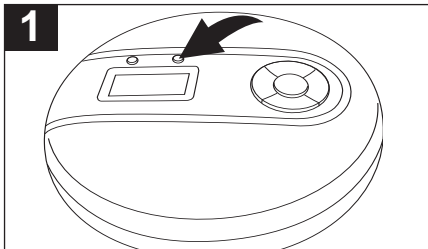

 
While in the Stop mode, press the PROG./EQ/ENTER button. The track number will blink and "P-01" will appear in the display.

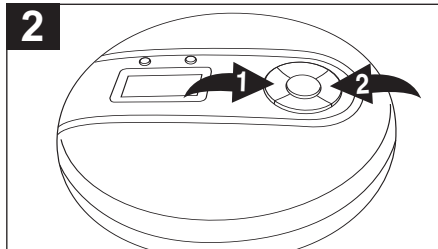

 Select a track to be programmed using the Skip (⏮)/◀ 1 or (▶)/⏭ 2 button. If using a MP3 disc, see note below.

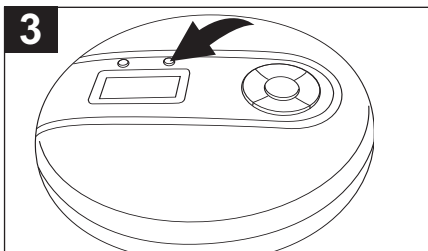

 Press the PROG./EQ/ENTER button to memorize the track. Repeat steps 2 and 3 to program additional tracks up to a maximum of 24 tracks.

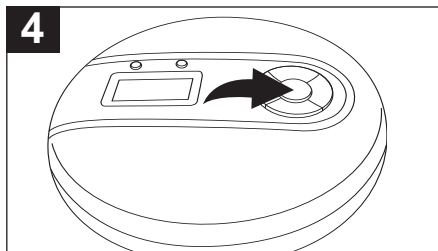

Press the PLAY/PAUSE (▶||)/POWER ON/▲ button to begin program playback.

#### NOTES:

- To clear the memory, while in the Stop mode, press and hold the MODE/CLEAR button until "P" disappears from the display.
- MP3: If an MP3 CD is inserted, you will first select the directory number in step 2 followed by the PROG./EQ/ENTER button, and then the file/track number.

**SEE TOP OF NEXT PAGE FOR MORE NOTES ON PROGRAMMING THE MEMORY.**

## CD OPERATION (CONTINUED)

### NOTES ON PROGRAM PLAYBACK

- You can review the program by pressing the PROG./EQ/ENTER button repeatedly while in the Stop mode.
- To add a track to the program memory, simply press the PROG./EQ/ENTER button repeatedly until the track (directory for MP3) appears and "00" blinks in the display. Then follow steps 2 and 3 on the previous page.
- Press the STOP (■)/POWER OFF/▼ button to stop the program before it is finished (the program memory will be kept).
- Each file may be stored in the program memory as many times as desired (up to 24 files).
- You can scroll through the program while it is playing using the Skip (⏮)/◀ or (⏭)/▶ button.

### ESP (ELECTRONIC SKIP PROTECTION)

This feature protects against loss of sound caused by vibrations and shocks. Continuous playback is ensured once some of the music has been stored into memory.

ESP will automatically be activated when listening to standard or MP3 CDs. You cannot deactivate ESP while listening to an MP3 CD. However, you can deactivate it when playing a standard CD by simply pressing the ESP/MENU button; "ESP OFF" will appear in the display for a few seconds, then the ESP indicator will disappear from the display. Deactivating the ESP will conserve battery life.

### RESUME

This unit has Auto resume, which will resume playback of the previous track when the unit is turned on (and the same CD is still in the CD compartment). Press the Skip (⏮)/◀ or (⏭)/▶ button repeatedly to select other tracks on the disc.

## CD OPERATION (CONTINUED)

### MP3 FAQs—Frequently Asked Questions

#### Please read before playing an MP3 CD.

*Does the unit support packet write CD-RW?*

Yes, it can. You can add or delete MP3 files without reformatting. It appears like a PC hard drive.

*Can the unit read regular music CDs?*

Yes, it can. However, you can not mix MP3s and WAV files on the same CD. If you do this your Portable MP3 CD Player will play only the MP3 files.

*Does the unit have Electronic Skip Protection built-in?*

Yes, it has an anti-shock buffer (45 seconds for standard CD and 120 seconds for MP3 CD). What it means for the everyday user is that it can withstand road bumps, shaking, etc. There will be no skipping when you jog or run on a treadmill or drive on a bumpy road.

*Can I use the MP3 extension for non-audio data files?*

No, this may result in serious malfunction and harmful noise interference.

*Can I mix MP3 files with other file types on the CDR?*

Yes, but your Portable MP3 CD Player will ignore those files and read only the MP3 files on the CDR.

*Does the unit support multi-session CDRs?*

If the MP3 CD is not finalized, you can burn a new group of MP3 files until the CD is full.

*Does the unit support subdirectories (subfolders)?*

Yes, the unit can read MP3 files from subfolders.

*What appears on the display when playing back MP3 CDs?*

 
The album, title and artist (if set when MP3 was recorded).




## CD OPERATION (CONTINUED)

### SELECTING SONGS BY MP3 TITLE


You can search for a song by title as follows:

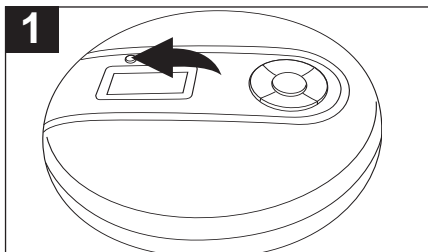

 
With an MP3 disc inserted, press the ESP/MENU button; the alphabet will appear in the display.

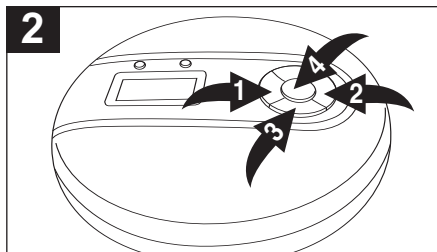

Select the first letter of a file you would like to listen to using the Skip  $\ll/\leftarrow$  ❶ and/or  $\gg/\rightarrow$  ❷ buttons. Press the STOP (■)/POWER OFF/ $\nabla$  button ❸ to access the lower letters or the PLAY/PAUSE ( $\blacktriangleright$ ||)/POWER ON/ $\blacktriangle$  button ❹ to access the higher letters.

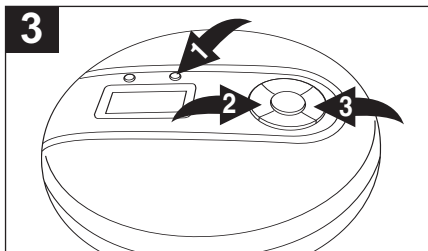 

 Press the PROG./EQ/ENTER button ❶ and a list of files starting with the selected letter will appear. Press the Skip  $\ll/\leftarrow$  ❷ and/or  $\gg/\rightarrow$  ❸ buttons to scroll through the list.

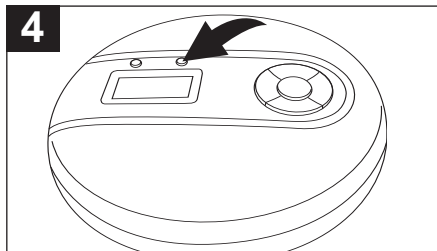

When the desired file appears, press the PROG./EQ/ENTER button and the file will automatically start playing.


#### NOTE:

 If you select a letter that does not contain any files, "No File" will appear in the display.


## CD OPERATION (CONTINUED)

### SEARCHING THROUGH MP3 DIRECTORIES


You can search the contents of the directories (if burned on CD) as follows:

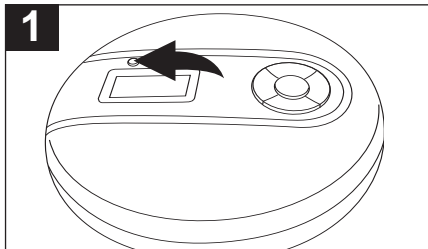

 
Press the ESP/MENU button twice; the first directory will appear in the display, as well as its contents.

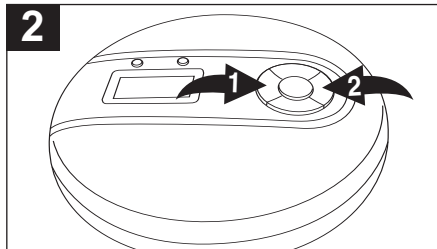

 To select a file from the directory, use the Skip  $\ll/\leftarrow$  ① and/or  $\gg/\rightarrow$  ② buttons.

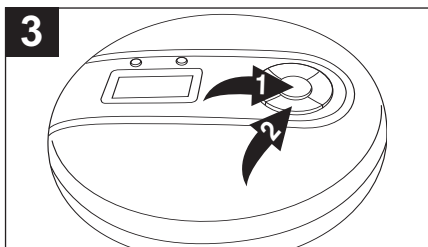

 If you would like to change directories, use the PLAY/PAUSE ( $\blacktriangleright/\parallel$ )/POWER ON/ $\blacktriangle$  ① and/or STOP ( $\blacksquare$ )/POWER OFF/ $\blacktriangledown$  ② buttons.

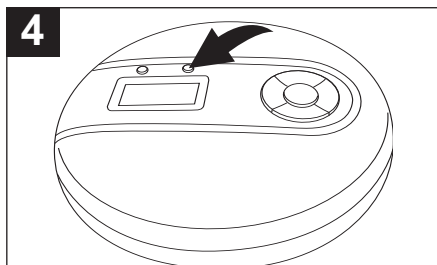

When the desired file appears, press the PROG./EQ/ENTER button and the file will automatically start playing.


# CD OPERATION (CONTINUED)

## SINGLE SESSION

The chart below is an example of a **Windows Explorer** display that will appear on your computer monitor for a single session MP3 CD Rom with directories/albums. Check the added notes to help you understand the MP3 CD unit display and the playback sequence of directories/albums and tracks on a single session MP3 CD.

## MULTI SESSION

 The computer user does not need to finalize the CDR disc as music is burned on the CD. Because of this, the music can be downloaded at different times until the whole CD is full.

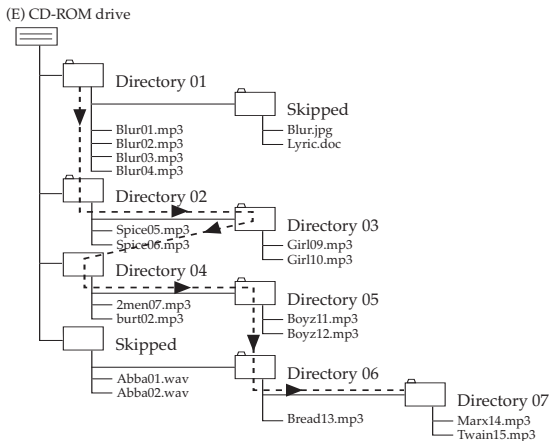


## NOTES:

- The arrow pathway shows the sequence of MP3 directory and file playback.
- This example has a total of seven MP3 directories.
- Based on this layout, the first file will be “Blur01.mp3” and the last file will be “Twain15.mp3”.
- “Skipped” denotes a directory which contains non-audio files only, e.g. jpg, wav, etc. These cannot be detected nor played on this player. When an album contains mixed format files, the non-MP3 files will be skipped.

## CARE AND MAINTENANCE

### Caring for Compact Discs

 - Treat the compact disc carefully. Handle the compact disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).

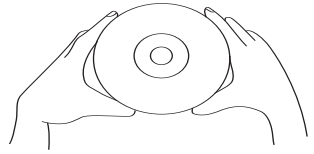

- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the compact disc. Never wipe in circular motions.
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc. Sharp writing instruments, or the ink, may damage the surface.

### Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

## TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

<b>SYMPTOM</b>	<b>CAUSE</b>	<b>SOLUTION</b>
Unit will not turn on.	Dead batteries, or not installed properly.	Replace batteries, and install properly.
	Weak or dead Re-chargeable batteries.	Recharge or replace batteries.
	AC adapter not connected.	Check AC adapter connection.
Disc will not play.	CD compartment not closed.	Close CD compartment.
	Disc inserted incorrectly.	Reinsert disc correctly.
	Dirty or defective disc.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
Erratic CD playback.	Dirty or defective disc.	Clean or replace disc.
No sound from headphones.	Headphone plug not inserted correctly.	Reinsert headphone plug correctly.
	VOLUME control set to minimum.	Increase volume.
	Defective disc.	Try another disc.
ESP not working.	ESP is not activated.	Press the ESP/MENU button.

## SPECIFICATIONS

Power Requirement DC .....	2 x AA (LR6) Alkaline batteries
Power Requirement AC .....	DC IN 4.5 V adapter (Center positive)
Output level (Line out) .....	0.6VMS (47K Ohms)
Output level (Headphone) .....	16mW (32 Ohms)
MPEG Rate .....	32-384Kbps
Sampling Frequency .....	8/11.025/12KHz for MPEG2.5 16/22.05/24KHz for MPEG2 32/44.1/48KHz for MPEG1
MP3 Playback .....	ISO9660 format compatible

Check the CD burner/recorder's documentation to see if it complies with these specifications.

**FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE, PLEASE VISIT OUR WEBSITE AT**

**[WWW.MEMOREXELECTRONICS.COM](http://WWW.MEMOREXELECTRONICS.COM)**

**OR CONTACT CUSTOMER SERVICE AT (954) 660-7100.**

**PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.**

**FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993.**

Memcorp, Inc.  
Weston, FL  
Printed in Hong Kong

Visit our website at [www.memorexelectronics.com](http://www.memorexelectronics.com)