 


Memorex®

**STRIP-CUT SHREDDER
WITH PENCIL SHARPENER**

MODEL: MPS1445

**BEFORE OPERATING THIS PRODUCT,
PLEASE READ THESE INSTRUCTIONS COMPLETELY.**

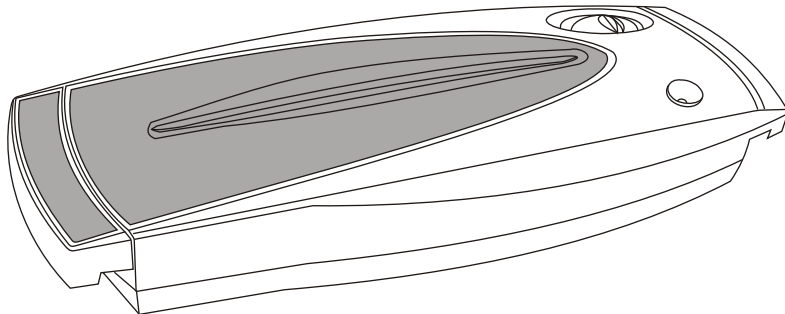


OPERATING INSTRUCTIONS

POWER SOURCE


AC USAGE

Use the AC polarized line cord included with the unit for operation on AC power. Insert the plug into a conveniently located AC outlet having 120V, 60 Hz.

NOTE: The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

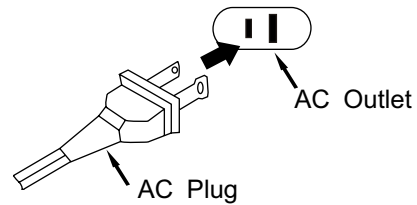

LOCATION OF CONTROLS

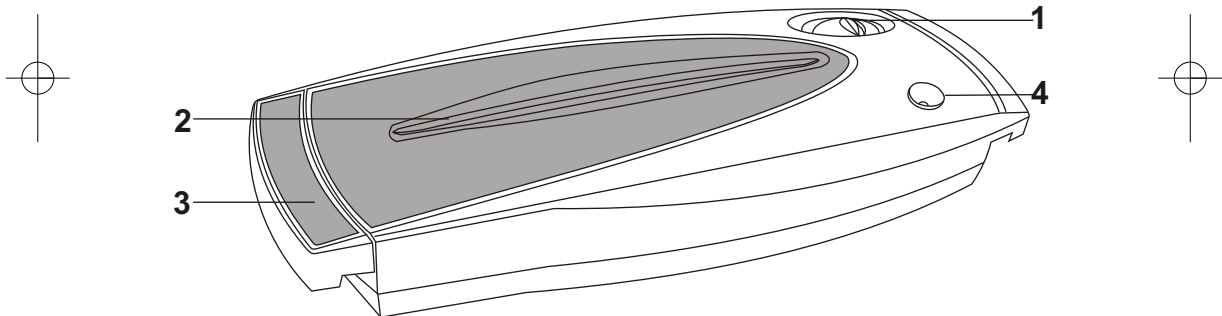


1. Function (ON/AUTO,FWD,REV) Switch
2. Shredder
3. Adjustable Arm
4. Pencil Sharpener

OPERATION

INSTALLATION:

To install the shredder, make sure the unit is unplugged and simply slide the Adjustable Arm out to fit the wastebasket.

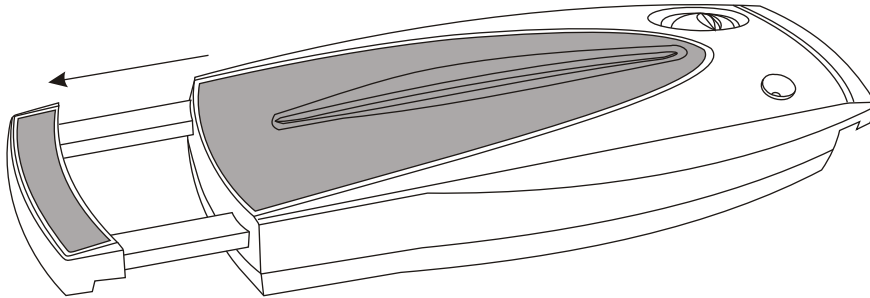

Follow the instructions below to operate your new shredder. After unpacking the shredder, place it securely on the supplied wastebasket. Then, plug the unit into an AC outlet as described on page 1.

1

A line drawing of the shredder unit with a black arrow pointing to a switch on the top surface.

Slide the Function switch to the ON/AUTO or the FWD position.

2

A line drawing of the shredder unit with a stack of paper being inserted into the top opening. A downward arrow indicates the direction of insertion.

Insert up to 5 pages of 20lb paper into the shredder, and the unit will automatically shred them.

NOTES:


If inserting small documents, insert them in the center of the shredder as the sensor is located there.

Do not attempt to insert more than 5 pages at a time, as it will shorten the life of the shredder.

The shredder will stop automatically if it is overheated by long and continuous intermittent operation. Allow the shredder to rest for approximately 20 minutes to cool down.


OPERATION

REMOVING PAPER JAMS:

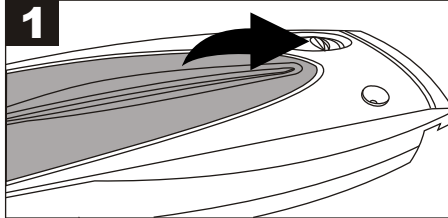


1
If a paper jam occurs, slide the Function switch to the REV (Reverse) position to withdraw the non-shredded paper.

PAPER TIP SOLUTION

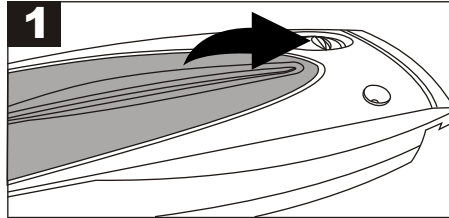

1
On occasion, paper strips get stuck in the shredder. In this case, slide the Function switch to the REV position for 2 to 3 seconds. Then, slide the Function switch back to the ON/AUTO or the FWD position. Repeat this procedure one to two times to fully clear the paper tips.

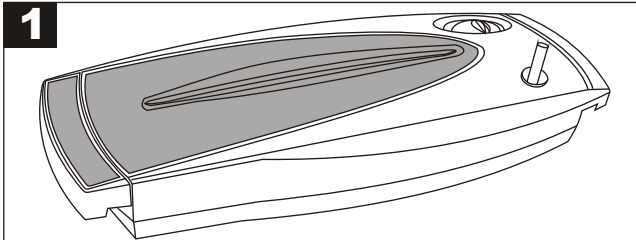

1
To sharpen a pencil, simply insert the pencil into sharpener and press down slightly to activate.

SPECIFICATIONS

Power Source.....120V AC, 60Hz
Shred capacity.....5 single sheets of 20lb paper
Shred Size.....7mm
Paper Cut.....Strip-Cut