

"is it live ...or is it ..."  
**Memorex®**

 
# MULTI-FUNCTIONAL ELECTRONIC ORGAN

USER'S MANUAL


PARENT, PLEASE TAKE A MOMENT NOW  
TO READ THIS INSTRUCTION MANUAL  
AND EXPLAIN TO YOUR CHILD HOW TO  
USE THIS PIANO



# MULTI-FUNCTIONAL ELECTRONIC ORGAN

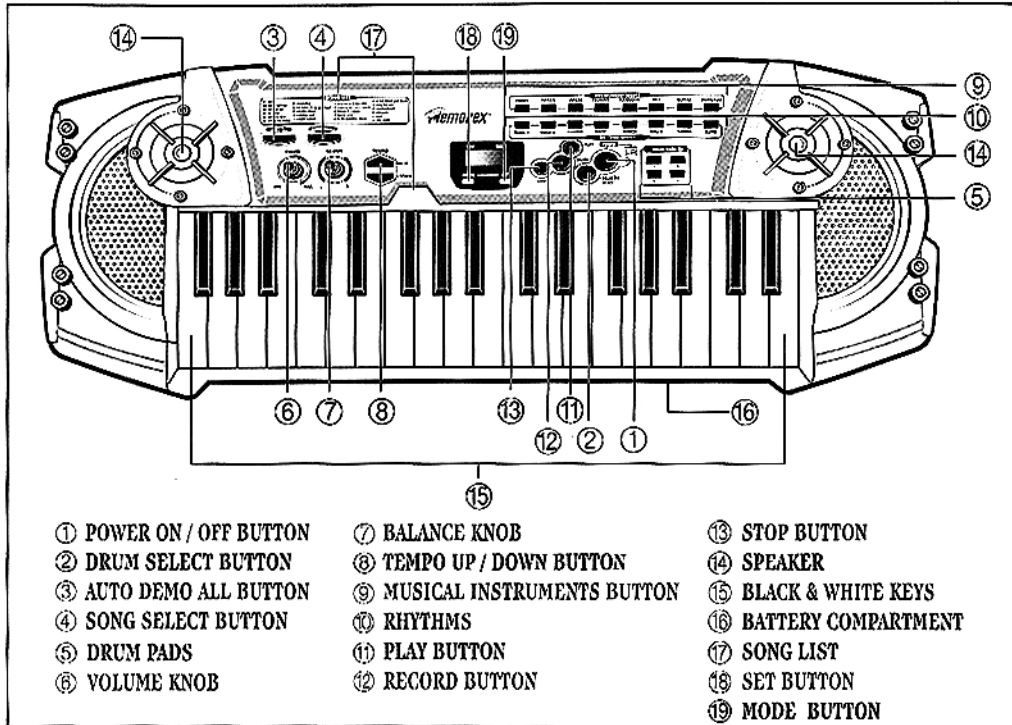


## INSTALLING BATTERIES

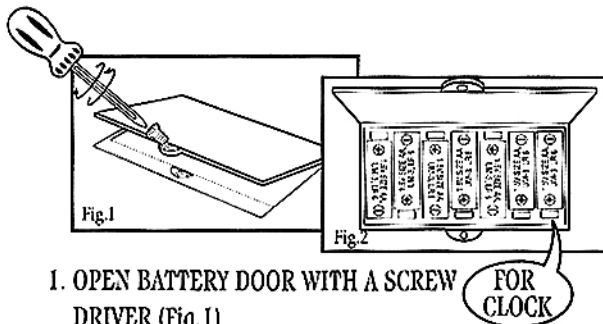 

1. OPEN BATTERY DOOR WITH A SCREW DRIVER (Fig.1)
  2. INSTALL 7 "AA" BATTERIES AT CORRECT POLARITY AS ILLUSTRATED (Fig.2)
  3. REPLACE THE BATTERY DOOR SECURELY
- \* RECOMMENDED USE ALKALINE BATTERIES FOR MAXIMUM PERFORMANCE
- \* CHANGE THE BATTERY FOR CLOCK WHEN THE CLOCK NO DISPLAY OR UNSTABLE

## ADAPTOR REQUIREMENTS

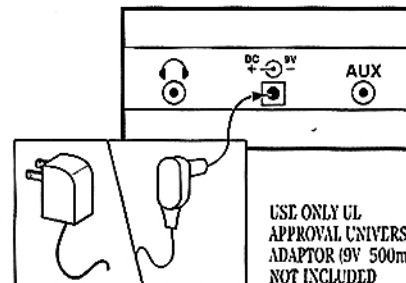 

- The toy must only be used with the recommend transformer
- The transformer is not a toy
- Toys liable to be cleaned with liquid are to be disconnected from the transformer before cleaning
- Transformer used with the toy are to be regularly examined for damage to the cord, enclosure and other parts, and that in such damage, the toy must not be used with this transformer until the damage has been repaired
- The toy is not to be connected to more than the recommended number of power supplies

## **Power On/Off Button**

- Press down to start play & the "Power indicator" light on.
- Press one more time to end-play & "Power indicator" light off.
- \* Do not leave the piano "On" when not use
- \* Take out all batteries if you are not going use the piano for a while

## **Volume Knob**

- Turn clockwise to increase volume.
- Turn anti-clockwise to decrease volume.

## **Balance Knob**

- Adjust the sound of Left & Right Speaker by turning clockwise or anti-clockwise.

## **Tempo Up/Down**

- Press "Up" to increase the tempo
- Press "Down" to decrease the tempo.

## **Auto Demo All**

- Play all 22 songs one by one continuous

## **Song Select**

- Press the "Song Select" button and choose a song from "songs list" by pressing the corresponding numbered 1 to 22 "White Keys"

## **Musical Instruments**

- You can change the tone of "Black & White Key" to "Piano" "Organ" "Mandolin" "Trumpet" "Guitar" "Violin" "Bell" "Music Box" by pressing the corresponding button.

## **Rhythms**

- You can choose one of eight kinds background rhythms.

## **Record & Playback**

- Press "Record" button to start. You can record your manual play. Press the "Play" button to playback what you have recorded. You can record up to 38 notes.

## **Drum Pads**

- There are 4 different drum sounds you can play.

## **Drum Select**

- Press the "Drum select button" then press any "Drum Pads" will play a short note of drum sound. Press one more time "Drum Select button" will resume to normal drum pad sounds.

## **Black & white Key**

- There are total 37 black & white keys

## **PRECAUTION**

- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
- DO NOT USE RECHARGEABLE BATTERIES.
- DO NOT BURY OR BURN BATTERIES
- DO NOT USE DIFFERENT TYPE OF BATTERIES OTHER THAN RECOMMENDED
- RECOMMENDED USE ALKALINE BATTERIES

## **WARNING**

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED

## **CARE AND MAINTANCE**

1. AVOID PLACING THE PIANO NEAR WINDOW, HEATER OR AREAS SUBJECT TO EXCESSIVE HEAT OR IN A CAR EXPOSED TO DIRECT SUNLIGHT
2. AVOID LOCATION WHERE IS LIKELY TO BE EXPOSED TO EXCESSIVE DUST AND MOISTURE
3. DO NOT SUBJECT TO STRONG PHYSICAL SHOCKS AND AVOID PLACING HEAVY OBJECTS ON IT.
4. USE ONLY A SOFT, DRY OR SLIGHTLY DAMP CLOTH TO CLEAN THE PIANO. NEVER USE SOLVENTS OR THINNERS TO CLEAN THE INSTRUMENT.
5. REMOVE THE BATTERIES WHEN THE PIANO WILL NOT BE IN USE FOR AND EXTENDED OF PERIODS TIME.

 


## **WARNING:**

CHOKING HAZARD - Small parts.  
Not for children under 3 years.


## PLAY WITH HEADSET

- You can play the piano silently with the stereo headset

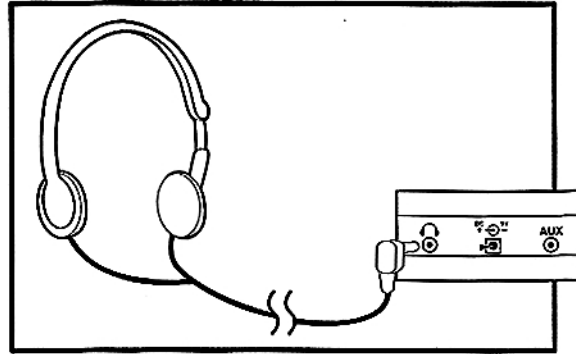

## CLOCK OPERATION

 
1. Always shows the HOUR & MINUTE.

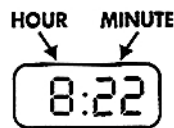

2. Press at the "Mode" button the MONTH/DATE is shown. It will return back to HOUR/MINUTE if no button is pressed.



 3. Press twice "Mode" to show second to 10 to 60.

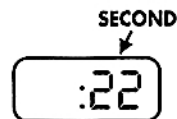

4. Then press "Mode" again to go back to normal time.



- \* after install batteries.  
Press "Mode" button to activate the clock.

## SETTING THE CLOCK

1. First press "Mode" Button
2. Then press twice the "Set" button the MONTH is shown. Adjust the month by pressing "Mode" button.
3. Then press once the "Set" button DATE is shown. Adjust the date by pressing "Mode" button.
4. Then press once the "Set" button HOUR is shown. Adjust the hour by pressing "Mode" button.
5. Then press once the "Set" button MINUTE is shown. Adjust the minute by pressing the "Mode" button.
6. Press once the "Set" button then "Mode" button will resume normal time.