




MODEL: VX0070

INSTRUCTION MANUAL

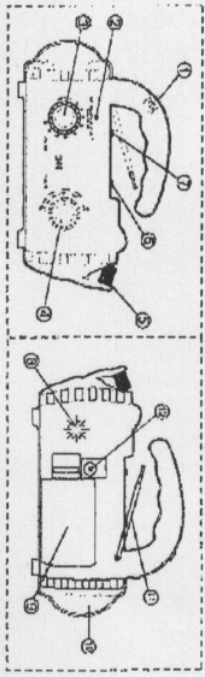

LOCATION OF CONTROLS

- 1. Torch/OFF/Siren-Blinking Switch
- 2. Dynamo/DC Chargeable Indicator
- 3. Radio ON/OFF/Volume Knob
- 4. Tuning Knob
- 5. Dynamo Crank
- 6. AM/FM Band switch
- 7. Battery/Dynamo switch
- 8. Speaker
- 9. Battery Door
- 10. Lamp Cover
- 11. Telescopic Antenna
- 12. DC Jack
- 13. Screws
- 14. Battery Plate

POWER OPERATION

When using batteries, slide the Battery/Dynamo Switch (7) to "battery" position. Your radio and lantern flashlight will operate on either the two AA rechargeable ni-cad batteries, furnished, or two regular AA batteries.

The ni-cad batteries are included and installed in your radio beneath a protective cover plate held with two screws at the bottom of the battery compartment.

To generate electric power to be stored in the ni-cad batteries turn the folding crank for a few minutes. The red dynamo rechargeable LED indicates crank generated power is being stored.

The ni-cad batteries can be recharged over and over. If you need to replace them in time, just unscrew the two screws holding the plastic protective cover plate in the battery compartment. Be sure to replace them with rechargeable ni-cad batteries.

If you prefer to use regular non-rechargeable batteries, you can put them in the battery compartment. However, their use is optional and the radio and flashlight will operate off the crank generated electricity.

When using regular batteries, slide the Battery/Dynamo Switch (7) to the "Battery" position. Slide open the battery door (9) and insert two regular "AA" (or equivalent) sized batteries. Observe the polarity (+ or -) as indicated in the battery compartment.


When using the radio on the built in rechargeable NI-CAD batteries slide the Battery Dynamo Switch (7) to the "Dynamo" position. A dynamo has been built into this radio. Unfold the crank (5) and turn clockwise to operate the dynamo LED indicator will light and change the NI-CAD batteries. By turning the dynamo for one minute, you can operate the radio for around 8-10 minutes at normal volume level.

You may choose to power your unit with an AC adaptor. Be sure to use a 3-volt AC adaptor with a positive (+) center. Plug your adaptor into the DC input jack (12).

NOTE:

- 1) To operate the unit with AC adaptor. There are 2 possibilities.
- a) Slide the Battery/Dynamo switch (7) to DYNAMO position. The NI-CAD batteries will recharge at the same time.

- b) Slide the Battery/Dynamo switch (7) to BATTERY position. The NI-CAD batteries will NOT recharge.
- 2) To recharge the NI-CAD batteries with AC Adaptor.
- a) Slide the Function switches (1)(3) to OFF position & (7) to Dynamo position, it is best for charging.
- b) Do NOT charge for more than 6-8 hours. Over charging will DAMAGE the unit and batteries.
- c) To avoid "memory-effect" of the NI-CAD batteries, we suggest that you only charge the batteries when they are exhausted. This is indicated when the sensitivity or quality of sound deteriorates.

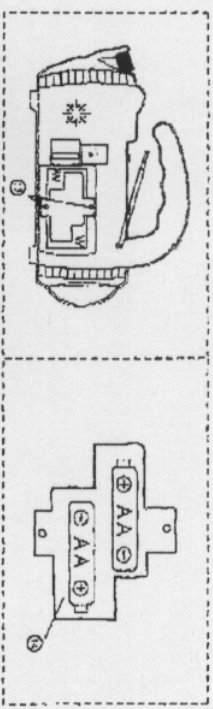

RECHARGEABLE BATTERY REPLACEMENT

- Open the battery cover, remove the dry batteries.
- Remove the mounting screws (13) on battery plate with a screw driver.
- Remove battery plate (14), replace 2 pcs "AA" size rechargeable NI-CAD batteries, and then mount back the battery plate inside battery compartment.
- The battery life of charging will be about one year.

RADIO OPERATION

- 1. Slide the Battery/Dynamo switch (7) to select the power source.
- 2. Turn the Radio on by rotating the Volume Control Knob (3) clockwise. A click indicates that the unit has turned ON.
- 3. Slide the Band switch (6) to either AM or FM as desired.
- 4. Turn the Tuning knob (4) to select your favorite station.
- 5. For better FM reception, pull out the Telescopic antenna (11).

FLASH LIGHT/EMERGENCY SIRE/BLINKING LIGHT

- 1. Slide the switch (1) to TORCH position to turn on the Flashlight.
- 2. Slide the switch (1) to FLASH SIREN to activate the siren as well as the blinker.
- 3. Slide switch (1) to OFF position when not in use.

REPLACEMENT OF FLASHLIGHT BULB [2.2V 0.25A]

- 1. Twist the lamp cover (10) and pull away from the main body.
- 2. Remove the old bulb, and replace with a new bulb.
- 3. Replace the top cover and twist to snap shut.

NOTE:

- 1. Always turn your unit off when not in use. Leaving it on will only shorten the life of the batteries.
- 2. Remove the batteries if your unit is not going to be used for long periods. Old batteries can leak causing corrosion and damaging your unit.
- 3. This unit is not water proof so do not immerse in water.
- 4. Do not mix old batteries with new batteries.
- 5. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.

FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 950-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-8993