




PERSONAL AM/FM RADIO

MODEL: VX2093

1. ON/OFF VOLUME CONTROL
2. TELESCOPIC FM ANTENNA
3. EARPHONE JACK
4. TUNING CONTROL
5. BAND SELECTOR SWITCH
6. SPEAKER

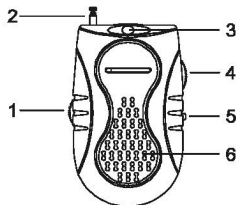

INSTALLING BATTERIES

- * Remove the battery compartment door.
- * Insert two UM-3 ("AA") batteries into the battery compartment. Be sure to follow the battery polarity as marked inside the compartment.
- * Close the battery compartment door.

IMPORTANT

Weak batteries can leak and severely damage your radio. Always remove batteries when the unit will not be used for a long time, and replace batteries immediately when they become weak.

RADIO OPERATION

- * Select either AM or FM band with the band selector switch (5).
- * Switch radio on by turning ON/OFF Volume Control (1) clockwise. Always turn radio off after use to conserve battery power.
- * Tune into a desired station by using the Tuning Control (4).
- * Extend telescopic rod antenna for maximum FM reception.

SPECIFICATIONS

POWER SOURCE	: DC 3V (UM -3 X 2)
RADIO FREQUENCY	: AM 530 -1700 KHz FM 88-108 MHz
UNIT DIMENSIONS	: 67 X 35 X 119 mm

FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OF PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.