

HEAD CLEANING

For better performance, this should be done every 60 days.

1. Open the cassette compartment lid.
2. Press the PLAY button so that the playback head and pinch roller project outward, marking it easier to clean them.
3. Wipe the playback head, the pinch roller and capstan gently with a cotton swab moistened with rubbing alcohol.

SPECIFICATION

1. POWER REQUIREMENT
DC 3V 2-"AA" BATTERIES (NOT INCLUDED)
2. FREQUENCY RANGE:
AM 530 – 1700KHz FM 88 – 108 MHz
3. TAPE FUNCTIONS
PLAYBACK/FAST FORWARD/STOP
4. OUTPUT IMPEDANCE 8 – 50 OHM

WARNING:

 
Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



AM/FM RADIO CASSETTE PLAYER

MODEL: VX3125

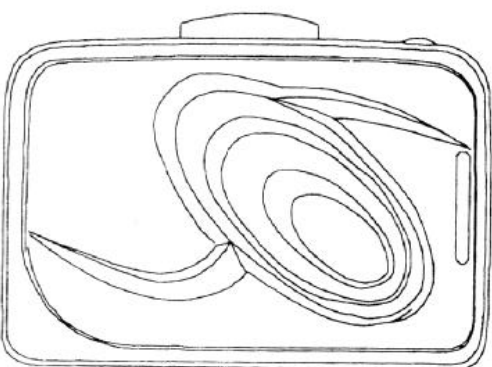




OWNER'S MANUAL

SAFETY

KEEP YOUR EYES OPEN WHILE PLAY THE PRODUCT WHEN CYCLING OR WALKING NEAR TRAFFIC

DO NOT OPERATE AT CONTINUOUS HIGH VOLUME LEVELS AS THIS COULD DAMAGE YOUR HEARING

DO NOT USE WHILE DRIVING A CAR OR RIDING A MOTORCYCLE

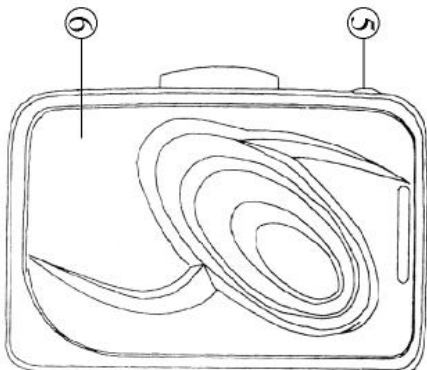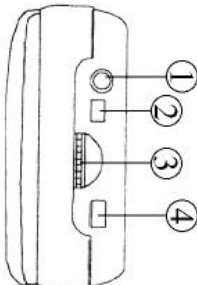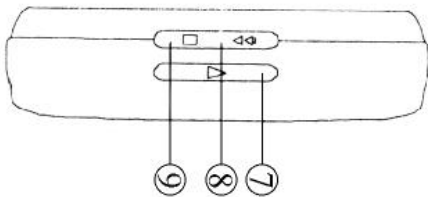

FEATURES

1. HEADPHONE JACK
2. BAND SELECTOR
3. TUNING CONTROL
4. FUNCTION SWITCH
5. VOLUME CONTROL
6. CASSETTE DOOR
7. PLAY BUTTON
8. FAST FORWARD BUTTON
9. STOP BUTTON

BATTERY OPERATION

1. Open the battery compartment lid by pushing on the notched area of the lid and slide in direction of arrow.
2. Insert 2 "AA" Size batteries into the compartment, matching the polarities as indicated on the back of the unit. Then close the lid.

NOTE: Always remove dead batteries or batteries if the unit is not going to be used for a month or more. Batteries left in the unit may leak and cause damage.

RADIO RECEPTION



1. Plug the stereo headphones into the HEADPHONE JACK.
2. Slide RADIO/TAPE switch to RADIO position.
3. Set the BAND select to AM or FM as desired.
4. Slide the TUNING CONTROL, to select the desired radio station.
5. Adjust the VOLUME control to desired listening level.
6. To turn off the radio, set the RADIO/TAPE switch to TAPE position with no keys engaged.

ANTENNA FOR AM AND FM



The unit is equipped with a built in direction antenna for the AM waveband. Rotate the unit for the best reception. The headphone wire is utilised as an FM antenna, therefore to obtain optimum reception on the FM waveband the wire should be fully uncoiled.

TAPE PLAYBACK

1. Open the cassette compartment lid by pulling on cassette door edge tabs.
2. To reduce the possibility of tapes jamming: Check that there are no loose layers of tape visible through the cassette center window. "Take-up" these loose layers using a pencil or ballpoint pen before inserting a cassette into the machine.

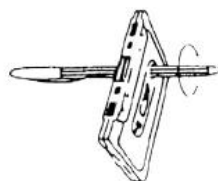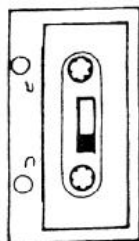

3. If the cassette feels "tight" while performing this operation, this tape may be jamming due to "ridges" in the winding of the tape (visible through the center window). These may be removed in most cases by fast winding of the cassette from one end to the other and back again.
4. Insert a cassette with the full reel on the left and side to be played up. Then close the lid (See the following sketch for insertion).

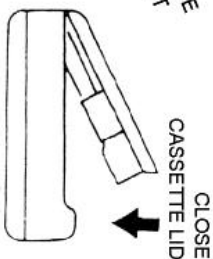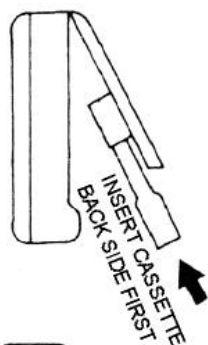

5. Plug the stereo headphones into the HEADPHONE JACK.
6. Set the FUNCTION switch TO TAPE position.
7. Press the PLAY button to play tape.
8. Adjust the VOLUME control.
9. Press the F.FWD button to Fast Forward the tape and press the STOP to stop Fast Forward.
10. To stop playback completely, press the STOP button. This also shuts off power.

"FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993"