 




# AM/FM ALARM CLOCK RADIO WITH HALOGEN LAMP

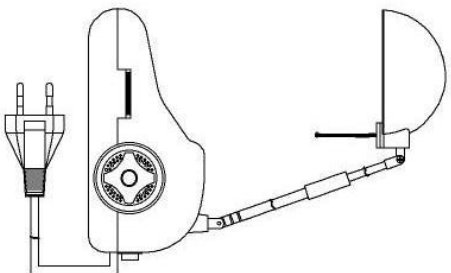

	<b>CAUTION</b> DO NOT OPEN	
The lighting bulb and/or head should be replaced with the same wattage warning sign indicating you of 'dangerous voltage' inside the product.	<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The operation point when the power supply is turned on is important. You of sign alerting you of important instructions accompanying the product.

**CAUTION :** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE.

## SAFETY INSTRUCTIONS

THESE IMPORTANT SAFETY INSTRUCTIONS ARE INCLUDED AS APPLICABLE TO THE APPLIANCE, CONVEYING TO THE USER THE INFORMATION ITEMIZED BELOW

 
1. Read instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions-The safety and operating instructions should be retained for future reference.
3. Heed Warnings-All warnings and cautions on the appliance and in the operating instructions should be adhered to.
4. Follow instructions-All operating and use instructions should be followed.
5. Water and Moisture-The appliance should not be used near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool or lake.
6. Wall or Ceiling Mounting-The appliance should not be mounted to a wall or ceiling.
7. Ventilation-The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
8. Heat-The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. Power Sources-The product should be operated only with the type of power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operation instructions.

## Model VX4328

## OWNER'S MANUAL

10. Grounding Polarization-This product may be equipped with a polarized alternating current line plug. ( a plug having one blade wider than the other ) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
11. Power-Cord Protection-Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
12. Cleaning-The appliance should be cleaned only as recommended by the manufacturer.
13. Nonsue periods-The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
14. Object and Liquid Entry-Care should be taken so that objects do not fall and liquids are not spilled into the product case through product openings.
15. Damage Requiring Service-Unplug this product from the wall outlet and take it to qualified service personnel under the following conditions.
  - a) When the power-supply cord or plug is damaged.
  - b) If liquid has been spilled into, or objects have fallen into the product.
  - c) If the product has been exposed to rain or water.
  - d) If the product does not operate when used according to the operating instructions.
 Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may interfere with the product's normal operation.
  - e) If the product has been dropped or damaged in any way.
  - f) When the product exhibits a distinct change in performance- this indicates a need for service.
16. Servicing - The user should not attempt to service the product beyond that described in the operating instruction. All servicing should be referred to qualified service personnel.
17. Power Lines-An outside antenna system should not be located in the vicinity of overhead power lines, or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching power lines or circuits as contact with them might be fatal.
18. If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static. Section 810 of the National Electrical Code ANS/NIEFA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding conductors, location of antenna-discharge unit, size of grounding electrodes, and requirements for the grounding electrode ( see figure )



### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

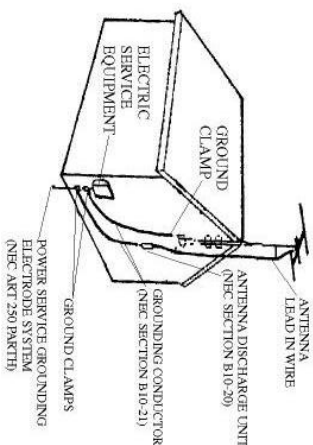

**NEC NATIONAL ELECTRICAL CODE**  
Do not apply oil or petroleum products to this product.

**CAUTION**  
Invisible laser radiation will be emitted when the product is open and interlocks are defeated. Do not defeat the safety interlocks.

**GRAPHIC SYMBOLS WITH SUPPLEMENTARY MARKING ARE LOCATED ON THE BOTTOM OF THE UNIT.**

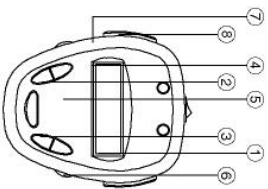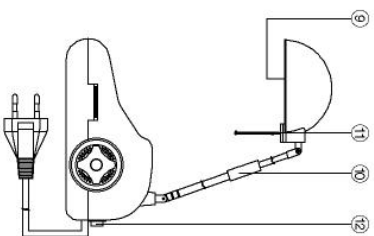  

1. SLEEP BUTTON
2. HOUR BUTTON
3. MINUTE BUTTON
4. ALARM SET BUTTON
5. SNOOZE BUTTON
6. TUNING BUTTON
7. AUTO/OFF/ON SWITCH
8. VOLUME/BUZZER CONTROL
9. HALOGEN LIGHT
10. ELONGATED SUPPORT
11. HALOGEN LAMP HANDLE
12. LAMP ON/OFF SWITCH

**LOCATION OF CONTROLS**

**TO SET THE TIME**  
Press the HOUR button for Hour setting and MINUTE button to set the correct time.

**TO SET THE ALARM**  
1. Press the ALARM SET button to clock the alarm time.  
2. Press the ALARM SET button together with HOUR or MINUTE button to adjust the alarm time.

**TO PLAY THE RADIO**  
1. Slide the AUTO/OFF/ON switch to "ON" position.  
2. Select the desired radio station by turning the TUNING knob.  
3. Adjust the VOLUME to the desired level.

**TO WAKE UP WITH RADIO**  
1. Set the alarm as previously indicated.  
2. Turn the radio on select the desired radio station and volume setting as previously instructed.  
3. Slide the AUTO/OFF/ON switch to "AUTO" position. Your unit is now set to turn on automatically at the pre-selected alarm time.

**TO WAKE UP WITH BUZZER**  
1. Set the desired alarm time as previously indicated at "TO SET ALARM TIME" chapter.  
2. Rotate the VOLUME/BUZZER switch to "BUZZER" position. You will be awakened at the pre-selected alarm time by the buzzer tone. To turn the buzzer off, slide the AUTO/OFF/ON switch to the "OFF" position or press ALARM SET/OFF Button.

**BULB REPLACEMENT:**  
Turn off, unplug and allow to cool down before replacing bulb. After screwing in, remove the lens and pull out the old bulb and renew 10W 12volt bulb.

**CAUTION**  
To prevent current short,  
Do not use any metal object to contact across the lamp arms.

**ALARM OFF**  
Slide the AUTO/OFF/ON switch to "OFF" position if you wish to turn off the radio or buzzer after the radio or buzzer has sounded in the Wake to Radio or Wake up to buzzer operation. The alarm will not sound again until the next day, unless you switch back to "AUTO" position or use alarm button to shut off alarm, then the radio or buzzer automatically sound again in 24 hours at the same alarm setting.

**LAMP CONTROL**  
Press the light ON/OFF switch to turn on the light at off position for light off.

**Caution:** Please don't touch the Glass and the Light Bulb because of "HEAT".

**SLEEP CONTROL**

1. Turn AUTO/OFF/ON switch to the "AUTO" or "OFF" position.  
2. Press the SLEEP button to display the sleep time. The display will indicate 59 minutes. If you wish the radio to play for a shorter period, simply press SLEEP button together with MINUTE button to set the desired time period. If you wish to play longer, press the SLEEP button along with the HOUR button to play for 1 hour and 59 minutes (MAX).  
3. Press SLEEP button. The radio will turn on automatically and will turn itself off when the present time passed.  
Note: The maximum sleep time is 1 hour 59 minutes. The radio will be switched off automatically when the sleep time expires. To turn off before expiration of sleeping time, simply press the "SNOOZE BUTTON".

**BATTERY BACK-UP**

Your clock has a battery back up feature in case of power failure. A 9 Volt battery (not included) is required. You must put in a battery to ensure the battery back up feature is ready. Increase of power. If power fails, the back up battery will automatically continue operation of the clock and maintain actual time. However, The display will not be lighted. When electrical power is restored, the display will light up again. The battery will maintain time keeping for approximately 8 hours during power failure or interruption.

Disconnect from the mains socket when not in use and before removing the back cover. To prevent fire or shock hazard do not expose to rain or moisture.

NOTE: Remove the battery if the clock is to be unplugged for a long time to avoid unnecessary battery drain.

**SPECIFICATIONS**

- Power Source : AC - 120V/60Hz
- Output Power : 500mW
- Power Consumption : 6W
- Frequency Range : FM 88 - 108 MHz
- AM 530 - 1700 KHz

Elongated Antenna  
Hold the Halogen lamp handle for adjust the direction and position of the Light.

\* FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100. PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OR PURCHASE. FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-321-6993\*