 




# MICROCASSETTE RECORDER VX631

BEFORE OPERATING THIS PRODUCT  
PLEASE READ THESE INSTRUCTIONS COMPLETELY.

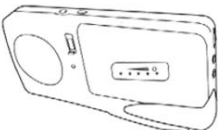

## OPERATING INSTRUCTIONS

**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
DO NOT OPEN

**CAUTION** TO REMOVE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE OR REPLACE SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**DANGEROUS VOLTAGE**  
The lightning flash with arrowhead symbol, which is enclosed in a triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**ATTENTION**  
The exclamation point with an arrowhead triangle is intended to alert the user to the presence of important operating instructions in the literature accompanying the appliance.

**SURGE PROTECTORS:**  
It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

**IMPORTANT:**  
PLEASE READ ALL PACKAGING MATERIAL FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO YOUR PLACE OF PURCHASE OR MEMOREX.

Before using, fill out and mail the registration card. This will make sure a permanent record is made with the date of purchase in case service is needed.

 
## SAFETY PRECAUTIONS



**FRONT**

**REAR**

1. EAR (Telephone) Jack
2. Sensibility Control
3. MIC (Microphone) Jack
4. Microcassette Compartment
5. REC/BATT Indicator
6. VAC (Voice Activation) ON/OFF Switch
7. DC 3V Jack
8. DC 3V Jack
9. Counter Reset Button
10. Speaker
11. Stop/Eject Button
12. Rewind Button
13. Play Button
14. Stop/Eject Button
15. PAUSE ON/OFF Switch
16. REV (REV/F) Switch
17. TAPE SPEED (2-41/2) Button
18. Battery Compartment

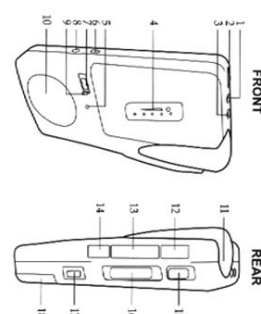

## LOCATION OF CONTROLS

**FRONT**

 
**REAR**

1. EAR (Telephone) Jack
2. Sensibility Control
3. MIC (Microphone) Jack
4. Microcassette Compartment
5. REC/BATT Indicator
6. VAC (Voice Activation) ON/OFF Switch
7. DC 3V Jack
8. DC 3V Jack
9. Counter Reset Button
10. Speaker
11. Stop/Eject Button
12. Rewind Button
13. Play Button
14. Stop/Eject Button
15. PAUSE ON/OFF Switch
16. REV (REV/F) Switch
17. TAPE SPEED (2-41/2) Button
18. Battery Compartment

## POWER SOURCES

**BATTERY INSTALLATION**  
Open the battery compartment and insert two (2) "AA" size batteries (not included) following the polarity diagram. Put the batteries in the correct back into place.

**NOTE:** The REC/BATT indicator will brightly light during recording when batteries are fresh. When they are weak, it will light dim.



## BATTERY PRECAUTIONS

1. Use only the size and type of batteries specified.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-Zinc).
4. If the batteries are not used for long periods of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not touch the terminals of the batteries with your fingers.

**DC JACK** ( ) ( )  
To use this unit with an external AC adapter (not included) having 3V and a negative center pin, insert the AC adapter's plug into the DC 3V jack on the unit. The batteries will be disconnected when the AC adapter is connected.

## OPERATION

### TO PLAY A PRERECORDED MICROCASSETTE TAPE




3. Press the Stop/Eject button and the exposed tape facing you.

4. Press the Play button to start playback. Adjust the VOLUME/VAC Mic Sensibility control as desired to stop the tape before it reaches the end.

## OPERATION

### TO FAST REWIND/REVIEW A MICROCASSETTE TAPE

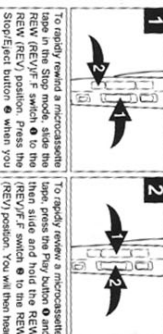


3. To rapidly forward a microcassette tape, press the Play button and the REV (REV/F) switch.

4. To rapidly forward a microcassette tape, press the Play button and the REV (REV/F) switch.

## OPERATION

### TO PAUSE A CASSETTE TAPE

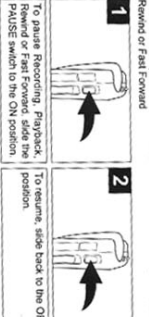

**TAPE COUNTER**  
The tape counter is helpful in locating particular portions of the tape.



## OPERATION

### NORMAL RECORDING

This unit is capable of recording only when sound is heard. To use this feature, see the next page. For normal recording, follow steps below:

1. Press the Stop/Eject button and the exposed tape facing you (right) and the Eject Prevention Tab (left) (see note below). Close the Cassette Compartment.
2. Slide the TAPE SPEED switch to the desired tape speed.
3. For constant recording, slide the VAC ON/OFF switch to the ON position and press the VOLUME/VAC Mic Sensibility control (see note below).
4. Speak into the built-in microphone and speak into it in a normal tone of voice.

**IMPORTANT NOTE:** If you cannot press the Record button, the REC/BATT indicator will light.

## OPERATION

### VOICE ACTIVATED (VAC) RECORDING

Voice activated recording will allow dictation only when you speak. When the unit detects a pause of a few seconds, it will temporarily stop recording until it detects sound again.

1. Press the Stop/Eject button and the exposed tape facing you (right). Close the Cassette Compartment.
2. Press the Stop/Eject button and the exposed tape facing you (right). Close the Cassette Compartment.
3. Speak into the built-in microphone and speak into it in a normal tone of voice.

**NOTES:**

1. The first few sounds activate the recorder and may not be recorded.
2. A variation in voice level during recording may cause the recorder to stop recording. If this occurs, press the Stop/Eject button and the exposed tape facing you (right). Close the Cassette Compartment.

**CASSETTE TAPE RECOMMENDATIONS**  
Use only high quality tapes. If there is any slack in the tape in the cassette, it should be removed before use. Do not use tapes that are one of the sides and rotate toward the cassette until all slack is taken up.

## CARE AND MAINTENANCE (CONTINUED)

### SAFEGUARD AGAINST ACCIDENTAL ERASURE

When a new recording is made, any program material automatically erased and only the new recording remains. To safeguard valuable recordings, the cassette and the deck are equipped with a special device.

When a cassette there is an eraser. To prevent accidental erasing, break out these tabs with a screwdriver. If only one side of the tabs is to be protected, break out the tab on the left side with the side desired facing you.

Record on a tape in which the tab has been broken, place a piece of adhesive tape over that area.

**NOTE:** When a tab is broken out, the record button cannot be depressed.

**CASSETTE TAPE RECOMMENDATIONS**  
Use only high quality tapes. If there is any slack in the tape in the cassette, it should be removed before use. Do not use tapes that are one of the sides and rotate toward the cassette until all slack is taken up.

**Traffic Safety**  
Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

Even if your earphone is an open air type designed to let you hear the sounds, do not turn the volume up so high that you cannot hear the sounds.

Use extreme caution or temporarily discontinue use in potentially hazardous situations.

## SPECIFICATIONS

Tape Speed	2.4cm/sec or 1.2cm/sec
Frequency Response	250-4500Hz
Power Source	4x1.5V (AA) (not included)
Dimensions	126 x 68 x 28mm
Weight	100g (without batteries)

Specifications are subject to change without notice.

FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE, PLEASE CONTACT CUSTOMER SERVICE. FOR AT LEAST 90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO PLACE OF PURCHASE.

FOR PARTS AND ACCESSORIES, CONTACT FOX INTERNATIONAL AT 1-800-521-6993