


DURABRAND

DBTV1301-05

SERVICE MANUAL

COLOR TELEVISION RECEIVER

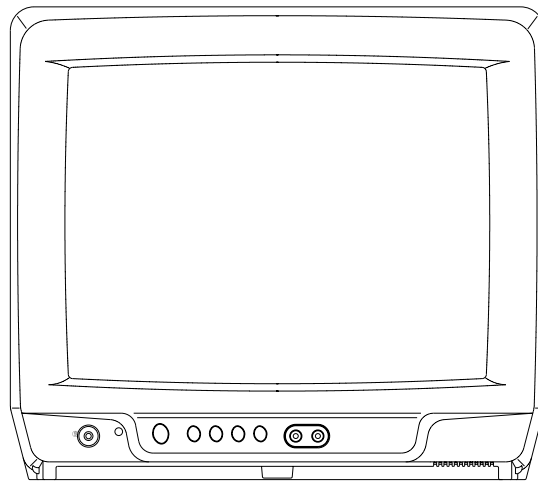

**SUPPLEMENT
MFR'S VERSION I**

This SUPPLEMENT must be used together SERVICE MANUAL for DBTV1301.
All other test and repair procedures are as shown in the ORIGINAL MANUAL.
Please file this SUPPLEMENT with the ORIGINAL VERSIONS.

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	DBTV1301		DBTV1301-05	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R622	R903N8121J	RC 120 OHM 1/8W	R903N8271J	RC 270 OHM 1/8W
C442	C0JLYR7H2K	CC 220 PF 2KV YR	C03L0R7H2K	CC 220 PF 2KV R
△ TU001	0145W00052	TUNER,VHF-UHF NJH3022U268	0145K00055	TUNER,VHF-UHF TECC1040PG32D
PCB010	A3J804A01A	MAIN PCB ASS'Y TMX494A	A3J830A010	PCB TMX494B
PCB110	A3J804A11A	CRT PCB ASS'Y TCX352A	A3J830A110	PCB TCX352B

MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	DBTV1301		DBTV1301-05	
	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
101	A3J804A720	CABINET, FRONT ASS'Y	A3J830A720	CABINET, FRONT ASS'Y
102	701WPJA917	CABINET,FRONT	701WPJB432	CABINET,FRONT
104	735WPA0381	BUTTON,FRAME	735WPAA389	BUTTON,FRAME
108	702WPAA134	CABINET,BACK	702WPBA064	CABINET,BACK
109	722552A008	SHEET,RATING	722552A014	SHEET,RATING
116	723000B319	FILM,DECORATION	723000B720	FILM,DECORATION
---	J3J80401	INSTRUCTION BOOK	J3J82701	INSTRUCTION BOOK
---	A3J804C975	INSTRUCTION BOOK KIT	A3J827A975	INSTRUCTION BOOK KIT
---	793WCDA973	GIFT BOX	793WCDB066	GIFT BOX

NOTE FOR THE REPLACING OF MEMORY IC

ADDRESS	DBTV1301	DBTV1301-05
	DATA	DATA
02	A0	A2

ELECTRICAL ADJUSTMENTS

(MFR'S VERSION I)

2-1: RF DELAY

1. Place the set with Aging Test for more than 15 minutes.
2. Receive an 64dB monoscope pattern.
3. Connect the digital voltmeter between the **R606**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**02**) on the remote control to select "RF DELAY".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is $2.7V \pm 0.05V$.

SPEC.NO.	M3J8-30A
O/R NO	K183022