


Memorex®

MVR2031

SERVICE MANUAL

VIDEO CASSETTE RECORDER

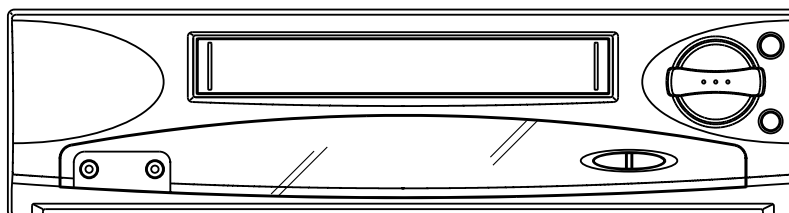

VHS

**ORIGINAL
MFR'S VERSION A**


SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-4
DISASSEMBLY INSTRUCTIONS	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS	B1-1
2. REMOVAL OF DECK PARTS	B2-1~B2-6
3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B3-1, B3-2
KEY TO ABBREVIATIONS	C1-1, C1-2
SERVICE MODE LIST	C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS	C3-1
SERVICING FIXTURES AND TOOLS	C4-1
PREPARATION FOR SERVICING	C4-1
MECHANICAL ADJUSTMENTS	D1-1~D1-4
ELECTRICAL ADJUSTMENTS	D2-1, D2-2
BLOCK DIAGRAMS	
Y/C/AUDIO/CCD/HEAD AMP	E-1, E-2
SYSTEM CONTROL/SERVO	E-3, E-4
TUNER	E-5, E-6
OPERATION/POWER	E-7, E-8
PRINTED CIRCUIT BOARDS	
SYSCON/OPERATION	F-1 ~ F-4
SCHEMATIC DIAGRAMS	
Y/C/AUDIO/CCD/HEAD AMP	G-1, G-2
SYSTEM CONTROL/SERVO	G-3, G-4
POWER	G-5, G-6
OPERATION	G-7, G-8
TUNER	G-9, G-10
INTERCONNECTION DIAGRAM	G-11, G-12
WAVEFORMS	H-1
MECHANICAL EXPLODED VIEW	I-1
CHASSIS EXPLODED VIEWS	I-2, I-3
MECHANICAL REPLACEMENT PARTS LIST	J1-1
CHASSIS REPLACEMENT PARTS LIST	J2-1
ELECTRICAL REPLACEMENT PARTS LIST	J3-1

GENERAL SPECIFICATIONS

G-1	VCR System	System	VHS Player / Recorder			
		Video System	NTSC			
		Hi-Fi STEREO	No			
		NTSC PB(PAL60Hz)	No			
		Deck	DECK Loading System Motor	OVD-7 Front 3		
		Heads	Video Head	4Head		
			FM Audio Head	No		
			Normal Audio /Control	Mono / Yes		
			Erase(Full Track Erase)	Yes		
		Tape Rec	PAL	-		
		Speed	NTSC	SP/SLP		
			Play	-		
			NTSC	SP/LP/SLP		
		Fast Forward / Rewind Time (Approx.)	with Cassette	FF:4'50"/REW:2'30" T-120		
		Forward/Reverse	NTSC or PAL-M	SP/LP/SLP=3x,5x/7x,9x/9x,15x		
		Picture Search	PAL or SECAM	-		
Frame Advance	Slow	1/10				
Slow Speed	Variable Slow	1/10				
G-2	Tuning System	Broadcasting System	US System M			
		Tuner and Receive CH	System Destination Tuning System Input Impedance CH Coverage	1Tuner USA(w/CATV) F-Synth VHF/UHF 75 OHM 2-69,4A,A-5~ A-1,A-1, J- W W+1~W+84		
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	45.75MHz 41.25MHz 4.50MHz		
		Preset CH		No		
		RF Converter Output		Yes		
		Channel		3 or 4 ch		
		Level/Impedance		66dBu /75ohm		
		Sound Selector		No		
		Stereo/Dual TV Sound		No		
		G-3	Power	Power Source	AC DC	120V,60Hz -
				Power Consumption	Power On(at AC) Stand by (at AC) Per Year	8W at 120V 60Hz 1.8W at 120V 60Hz - kWh/Year
				Protector	Power Fuse Dew Sensor	Yes No
G-4	Regulation			Safety	UL	
		Radiation	FCC			
G-5	Temperature	Operation	5oC - 40oC			
		Storage	-20oC - 60oC			
G-6	Operating Humidity		Less then 80% RH			
G-7	Signal	Video Signal	Input Level Output Level S/N Ratio (Weighted) Horizontal Resolution at SP Mode	1 V p-p/75 ohm 1 V p-p/75 ohm 50 230Line		
		Audio Signal (0dB=0.775Vrms)	Input Level Output Level S/N Ratio at SP (Weighted) Harmonic Distortion (1KHz) Frequency Response at SP at LP at SLP	-8dB/50Kohm -8dB/1Kohm 42dB 1.5% 100Hz - 10kHz 100Hz - 6kHz 100Hz - 4kHz		
		Hi-Fi Audio Signal	Dynamic Range : More than Frequency Response Wow And Flutter : Less than Channel Separation : More than Harmonic Distortion : Less than	- - - - -		
		G-8	On Screen Display	Menu	Yes	
				Menu Type	Character	
				ATS	No	
				Timer Rec Set	Yes	
				Auto Repeat On/Off	Yes	
				SAP On Off	No	
				CH Set-Up	Yes	
				TV/CATV	Yes	
		Auto CH Memory	Yes			
		Add/Delete	Yes			

GENERAL SPECIFICATIONS

		Pin Code Registration	No
		System Set-Up	No
		Clock Set	Yes (Calendar 12H)
		Language	Yes
		No Noise Back Ground	Yes
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry	No
		NICAM 1/2,NICAM Off,Audio Output	No
		Stereo,Audio Output,SAP	No
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In (Symbol Mark)	Yes
		CH/AV	Yes
		Clock	Yes
		Repeat	Yes
		Pin Code	No
		Tape Counter	Yes
		Index	No
		Hotel Lock	No
		Tape Speed	Yes
		Manual Tracking (Bar Setting)	No
		Hi-Fi	No
		S-Repeat/SR-R/SR-Play	No
		VPS	No
		PDC	No
G-9	OSD Language	OSD Language Setting	English French Spanish English
G-10	Clock,Timer and Timer Back-up	Calendar	1990/1/1 ~ 2081/12/31
		Timer Events	8 prog/1 month
		One Touch Recording Max Time	5 Hours
		OTPB Valid Time	No
		Timer Back-up (at Power Off Mode)	5 sec.
G-11	Display	Indicator	No
		Indicator Type	-
		Clock/Counter,CH,Timer Rec,OTR, Play Rec,FF(Cue),Rew(Rev),Stop,ATR	-
		Pause("Rec"Flash)	-
		Still("Play"Flush)	-
		Eject(Tape Mark Flash)	-
		Slow	-
		WKL,Y.M.D,Start,End	-
		AFT	-
		Repeat	-
		A-DUB	-
		VCR	-
		Memory	-
		Index	-
		VPS	-
		PDC	-
		SP	-
		LP	-
		SLP	-
		AM	-
		PM	-
		F1,F2	-
		RF Output CH	-
G-12	Remote Control	Unit	RC-EA
		Glow in Dark Remocon	No
		Power Source	Voltage(D.C) UM size x pcs
		Total Keys	32 Keys
		Keys	Power
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		CH Up	Yes
		CH Down	Yes
		Input Select	Yes
		Play	Yes
		F.Fwd	Yes
		Rew	Yes
		Pause/Still	Yes
		Stop	Yes

GENERAL SPECIFICATIONS

		Rec/OTR	Yes
		Eject	No
		Counter Reset	Yes
		Speed	Yes
		Timer Rec	Yes
		TV Monitor	No
		Quick View	No
		Program	No
		Slow	Yes
		Auto Tracking	Yes
		Set/Tracking+	Yes
		Set/ Tracking -	Yes
		Menu	Yes
		Enter	Yes
		Cancel	Yes
		Call	Yes
		TV/VCR	Yes
		Sleep Timer	No
		Muting	No
		Clock/Counter	No
		Zero Return	No
		CM Skip	No
		Audio Select	No
G-13	Features	Auto Head Cleaning	Yes
		Auto Tracking	Yes
		Index Search	No
		HQ (VHS Standard High Quality)	Yes
		Auto Power On, Auto Play, Auto Rewind, Auto Eject	Yes
		Auto Power Off	Yes
		Forward/Reverse Picture Search	Yes
		VIDEO PLUS+(SHOWVIEW,G-CODE)	No
		ATS	No
		PDC	No
		VPS	No
		One Touch Playback	No
		Picture Control	No
		Auto Preset	No
		Channel Lock	No
		Hotel Lock	No
		Anti Theft	No
		Audio Dubbing	No
		Remote Control Code 1/2	No
		SQPB	No
		CATV	Yes
		Energy Star	Yes
		MTS(SAP)	No
		CM Skip(30sec x 6 Times)	No
G-14	Accessories	Owner's Manual	Language w/Guarantee Card
			English/Spanish
		Remote Control Unit	Yes
		Dew Cation Sheet	No
		Video Cassette Tape	No
		Battery	No
			UM size x pcs
			-
		Safety Tip	No
		Toll Free Insert Sheet	No
		Quick Set-Up Sheet	No
		Information Sheet (Buyer Supply)	No
		75 Ohm Coaxial Cable	Yes(Single shield)
		Rod Antenna	No
			Poles Terminal
		Loop Antenna	No
			Terminal
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	Yes
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Facility List	No
		Important Safeguard	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		AC Cord	No

GENERAL SPECIFICATIONS


		AV Cord (2Pin-1Pin)		No	
		Registration Card		No	
		PTB Sheet		No	
		Tape Rewinder(Buyer Supply)		No	
		300 ohm to 75 ohm Antenna Adapter		No	
G-15	Interface	Switch	Front	Power	Yes
				Play	Yes
				Pause/Still	No
				System Select	No
				One Touch Playback	No
				Channel Up	Yes
				Channel Down	Yes
				F.FWD/Cue	Yes
				Eject/Stop	Yes
				Main Power SW	No
				Volume Up	No
				Volume Down	No
				Rew/Rev	Yes
				Rec/OTR	Yes
			Rear	RF Output SW	Yes
		Indicator		Power	Yes
				Stand by	No
				Rec/OTR	No
				Repeat	No
				TV/VCR	Yes
				Rec	Yes
				T-Rec	Yes
				Tape In	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 1
				Other Terminal	No
			Rear	Video Input	No
				Audio Input	No
				Video Output	RCA x 1
				Audio Output	RCA x 1
				Euro Scart	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Inlet	No
G-16	Set Size		Approx.	W x D x H (mm)	360 x 229 x 95
G-17	Weight			Net (Approx.)	3.2kg(7.1lbs)
				Gross (Approx.)	3.8kg(8.4lbs)
G-18	Carton		Master Carton		No
				Content	-
				Material	-
				Dimensions W x D x H(mm)	-
				Description of Origin	-
			Gift Box		Yes
				Material	Single/White
				Dimensions W x D x H(mm)	420x291x160
				Design	As Per BUYER 's
				Description of Origin	Yes
			Drop Test	Natural Dropping At	1Corner / 3Edges / 6Surfaces
				Height (cm)	80
				Container Stuffing(40' container)	3136Sets
G-19	Cabinet Material		Cabinet Front		PS 94V2 DECABROM

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS


1-1: TOP CABINET, FRONT CABINET AND OPERATION PCB (Refer to Fig. 1-1)

1. Remove the 4 screws ①.
2. Remove the Top Cabinet in the direction of arrow (A).
3. Disconnect the following connector: (CP651).
4. Unlock the 7 supports ②.
5. Remove the Front Cabinet in the direction of arrow (B).
6. Remove the 3 screws ③ and remove the Operation PCB.

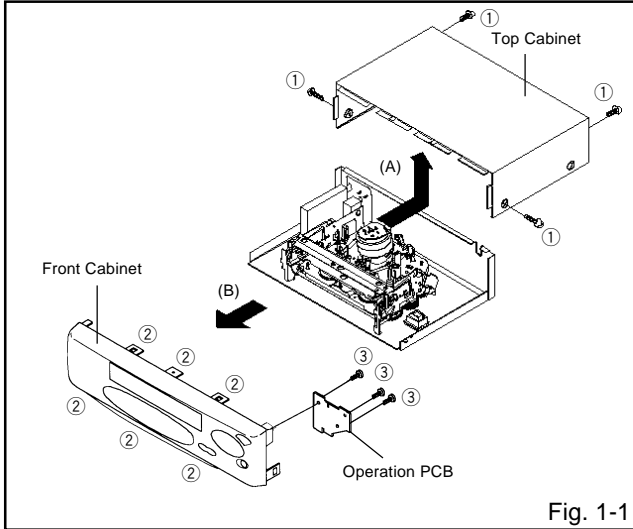


1-2: FLAP (Refer to Fig. 1-2)

1. Open Flap to 90° and flex in direction of arrow (A), at the same time slide in direction of arrow (B).
2. Then lift in direction of arrow (C).

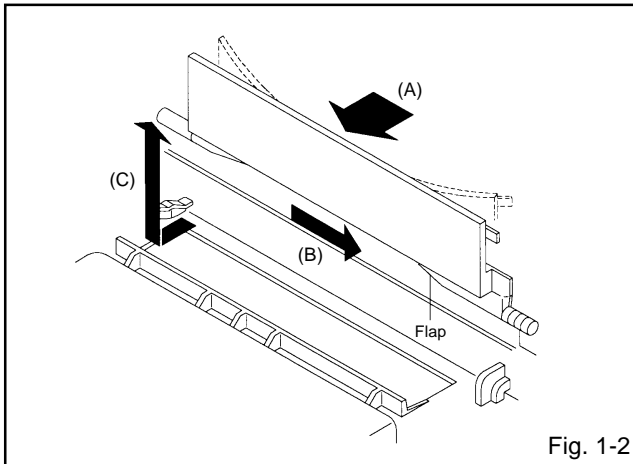


1-3: DECK CHASSIS (Refer to Fig. 1-3)

1. Remove the 3 screws ①.
2. Disconnect the following connectors: (CP1001, CP4001, CP4002 and CP4003).
3. Remove the Deck Chassis in the direction of arrow.

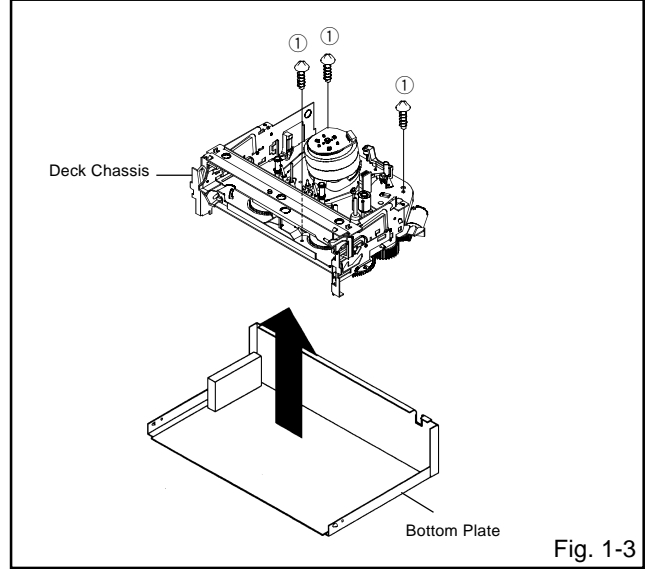

1-4: SYSCON PCB AND JACK PLATE (Refer to Fig. 1-4)

1. Remove the screw ①.
2. Remove the screw ②.
3. Remove the Syscon PCB in the direction of arrow.

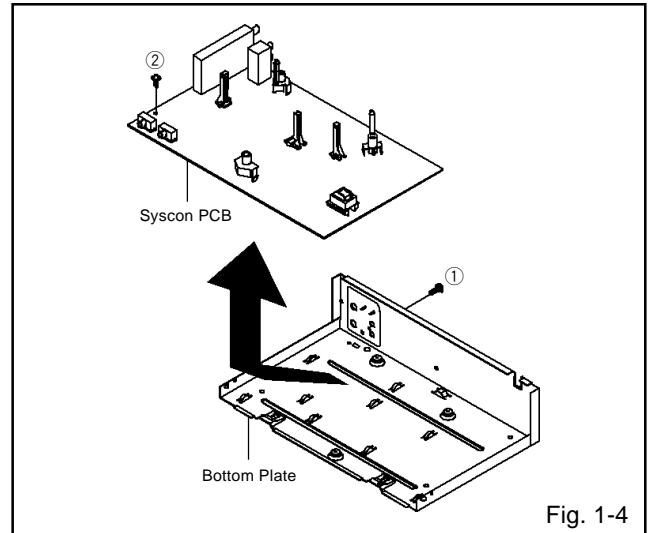

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

1. After the installation of the Top Bracket, bend the support ① so that the Top Bracket is fixed.

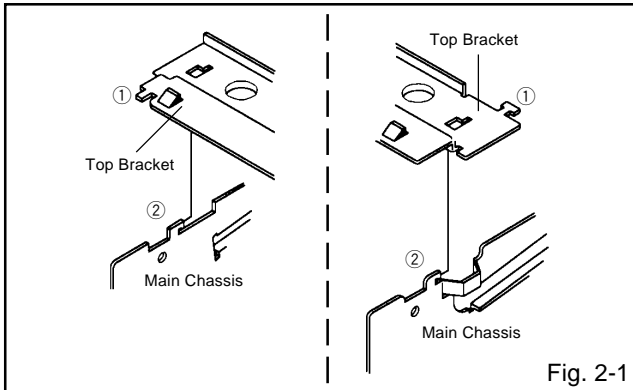


Fig. 2-1

2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

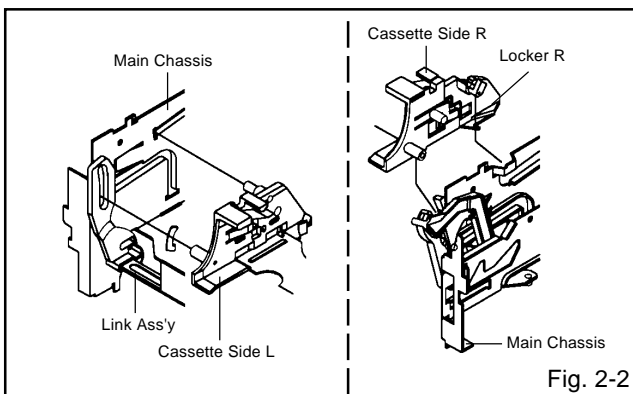


Fig. 2-2

2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.
3. Unlock the support ② and then remove the Locker R.

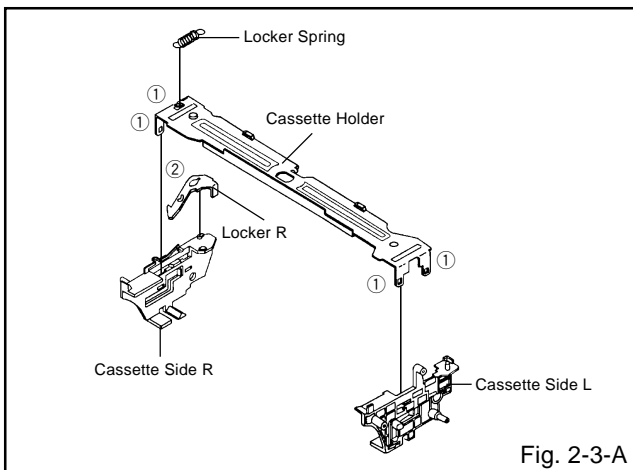


Fig. 2-3-A

NOTE

1. In case of the Locker R installation, check if the two positions of Fig.2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

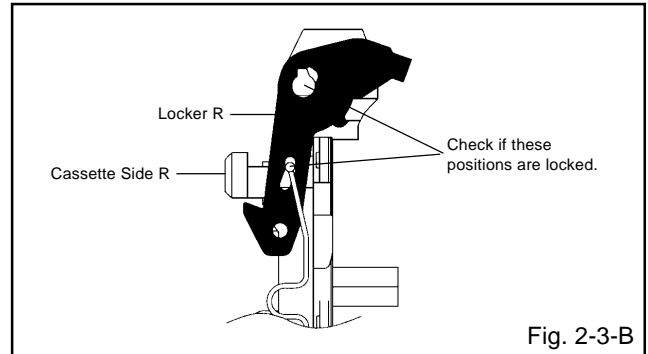


Fig. 2-3-B

2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support ①.
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

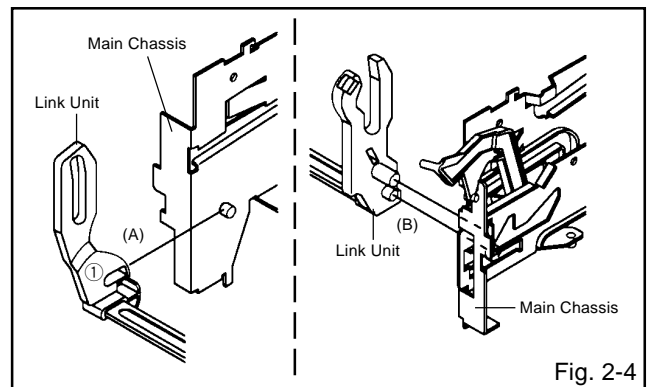


Fig. 2-4

2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Remove the Link Lever.
2. Remove the Flap Lever.


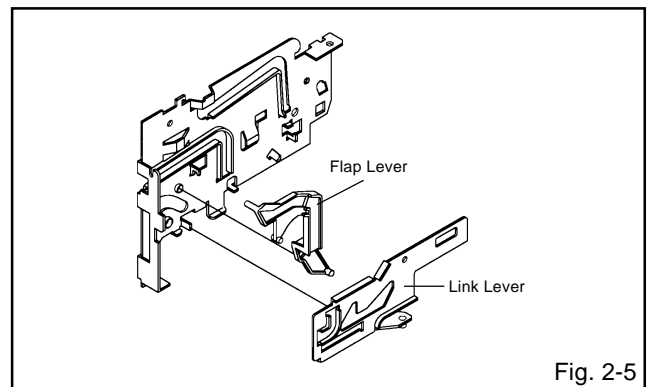


Fig. 2-5

DISASSEMBLY INSTRUCTIONS


2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Loading Motor.
3. Remove the Worm.

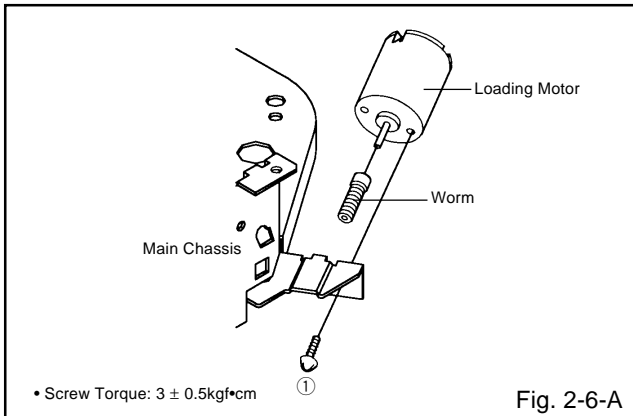



NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.

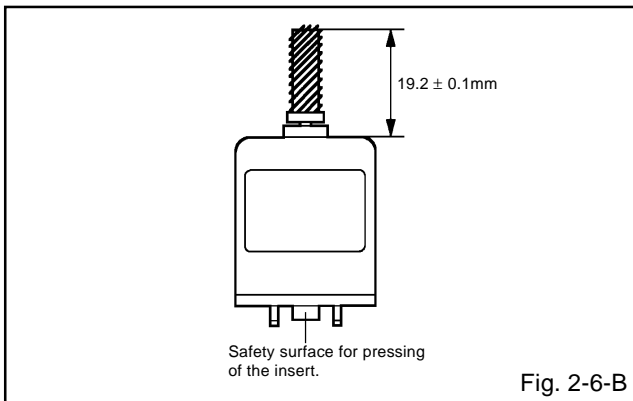




2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports ① and remove the Tension Band.
4. Unlock the support ② and remove the Tension Arm Ass'y.
5. Unlock the support ③ and remove the Tension Connect.
6. Float the hook ④ and turn it clockwise then remove the Tension Holder.

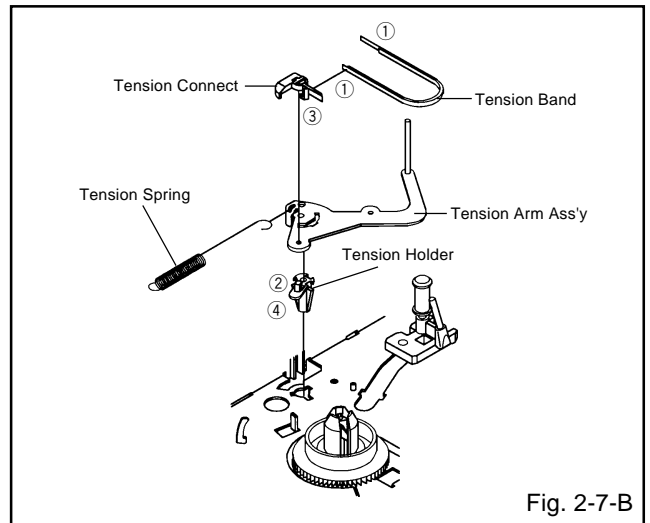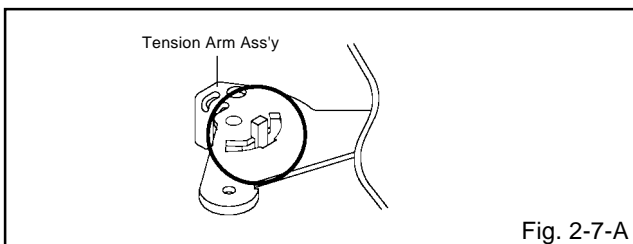

NOTE

1. In case of the Tension Band installation, note the direction of the installation. (Refer to Fig. 2-7-C)
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

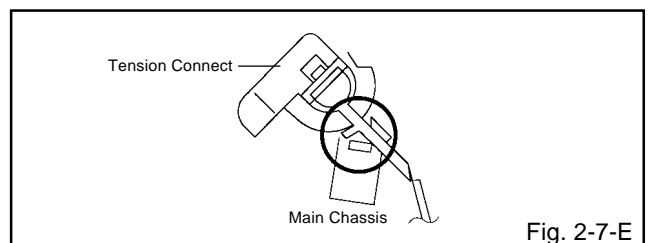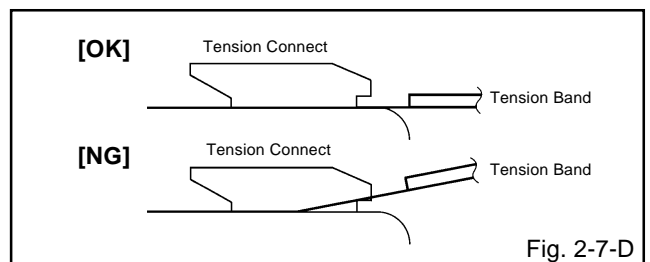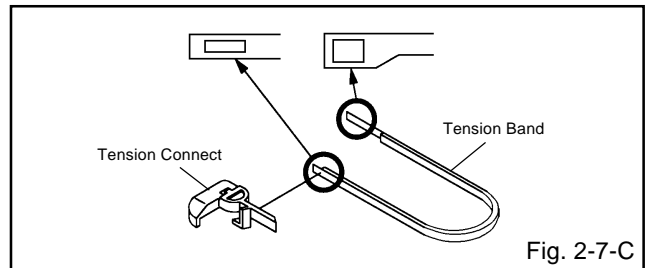

DISASSEMBLY INSTRUCTIONS

2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports ① and remove the T Brake Band.

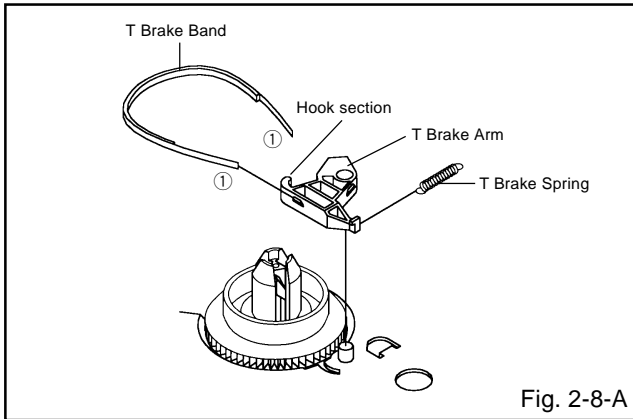


Fig. 2-8-A

NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

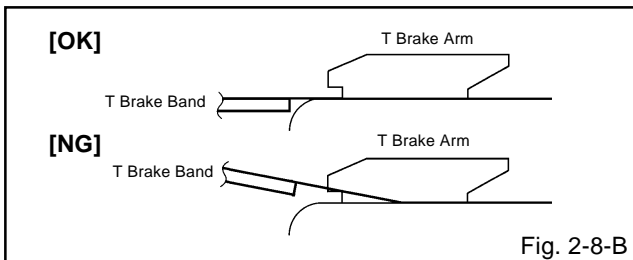


Fig. 2-8-B

2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.
3. Remove the Idler Arm Ass'y and Idler Gear.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-9-A) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it (MG-33). (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

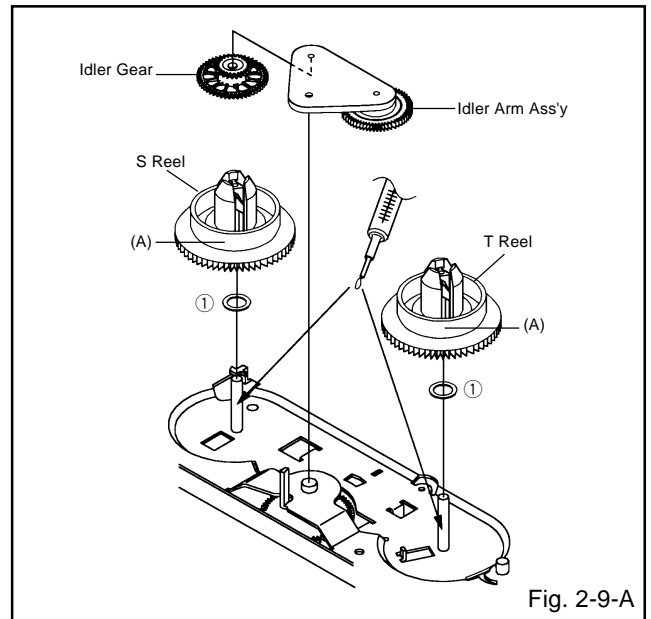


Fig. 2-9-A

NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. (Refer to Fig. 2-9-B)
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C.

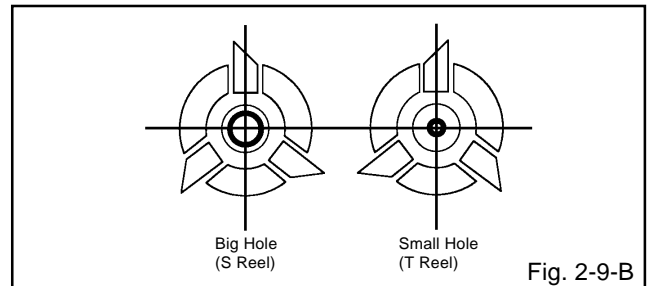


Fig. 2-9-B


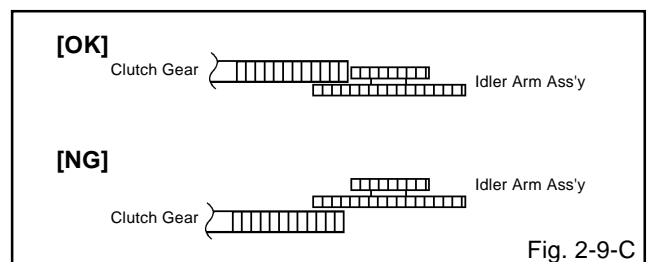


Fig. 2-9-C

DISASSEMBLY INSTRUCTIONS


2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support ① and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

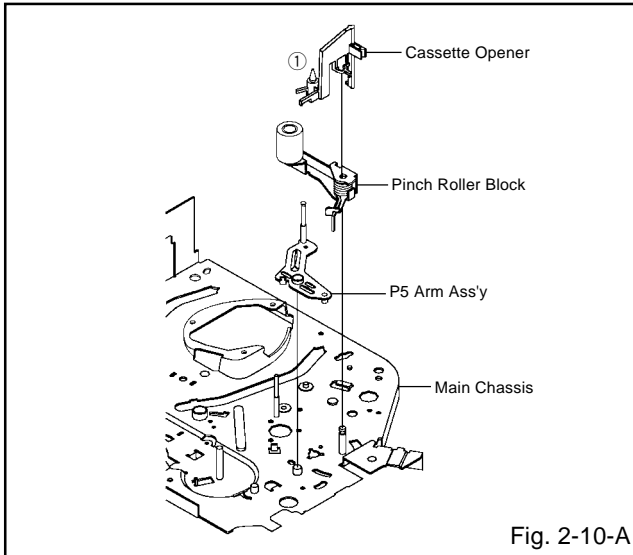

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.


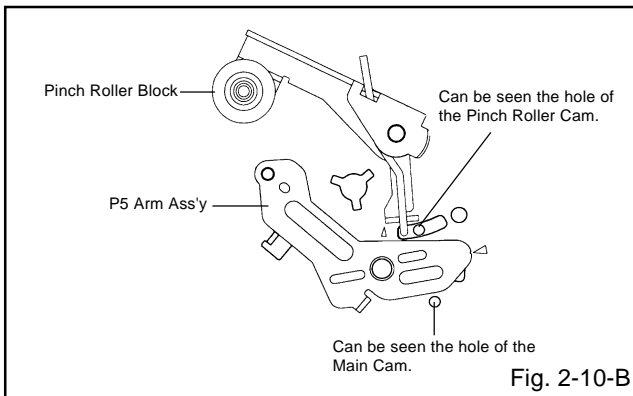


2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.


NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

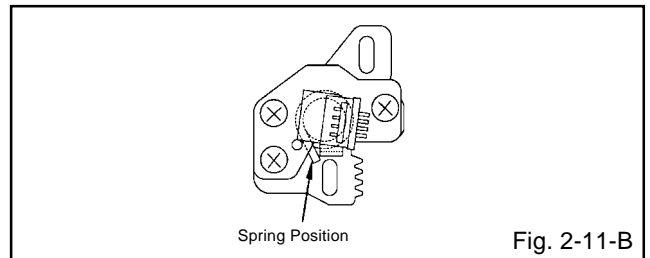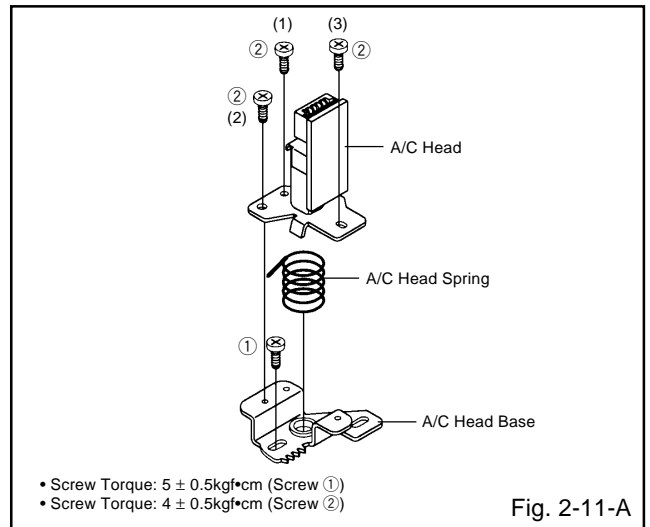

2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw ①.
2. Remove the FE Head.

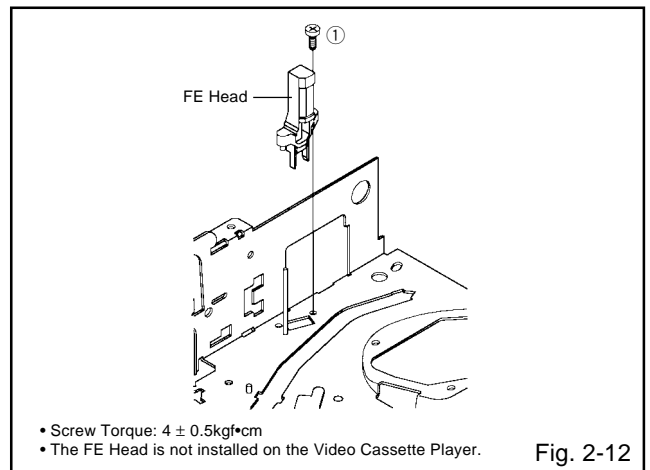


DISASSEMBLY INSTRUCTIONS

2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support ① and remove the AHC Ass'y.
2. Disconnect the following connector:
(CD2001)
3. Remove the 3 screws ②.
4. Remove the Cylinder Unit Ass'y.


NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

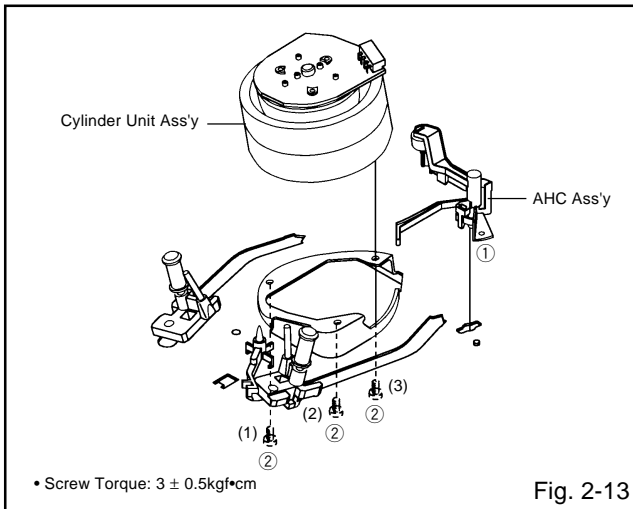


2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

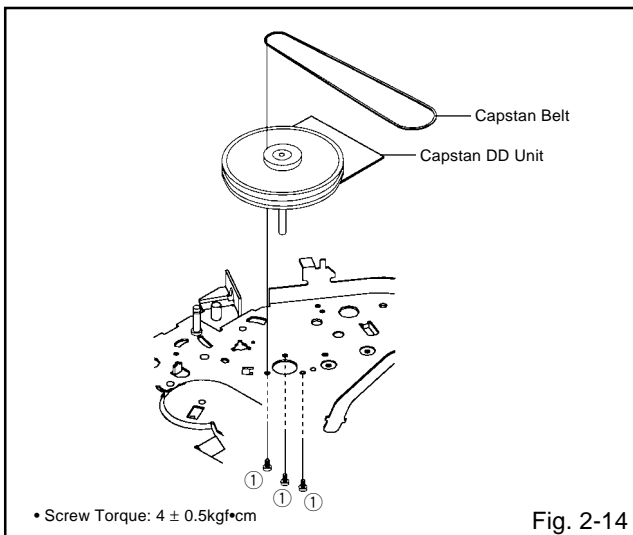


2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring ①, then remove the Main Cam.
2. Remove the E-Ring ②, then remove the Pinch Roller Cam and Joint Gear.

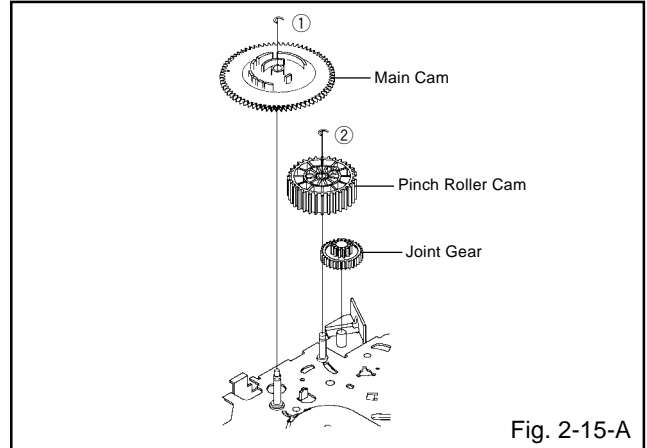


NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. (Refer to Fig. 2-15-B)

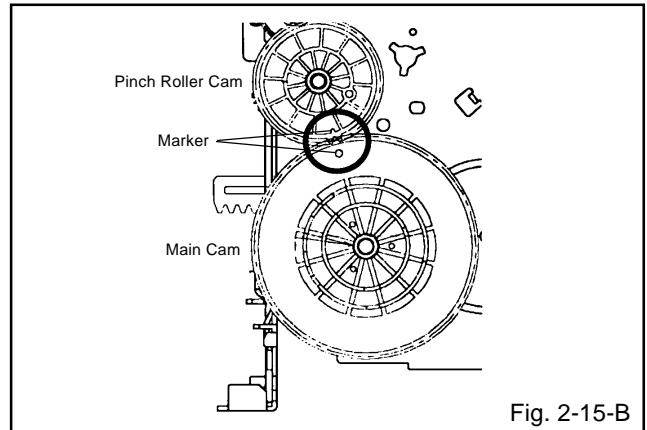

2-16: LOADING GEAR S/T ASS'Y (Refer to Fig. 2-16-A)


1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Ass'y and Loading Arm T Ass'y.

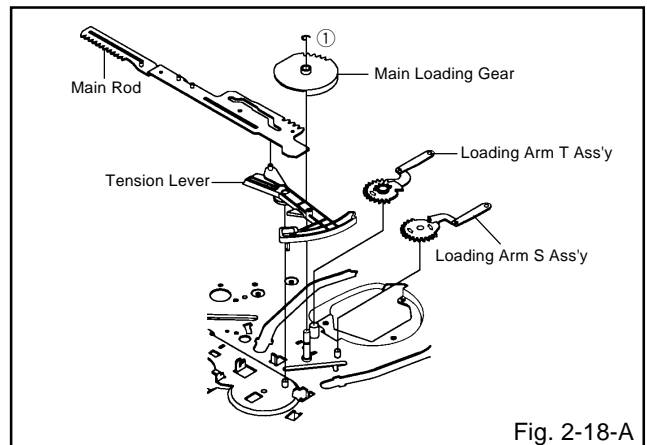

DISASSEMBLY INSTRUCTIONS


NOTE

1. When you install the Loading Arm S Ass'y, Loading Arm T Ass'y and Main Loading Gear, align each marker. (Refer to Fig. 2-16-B)

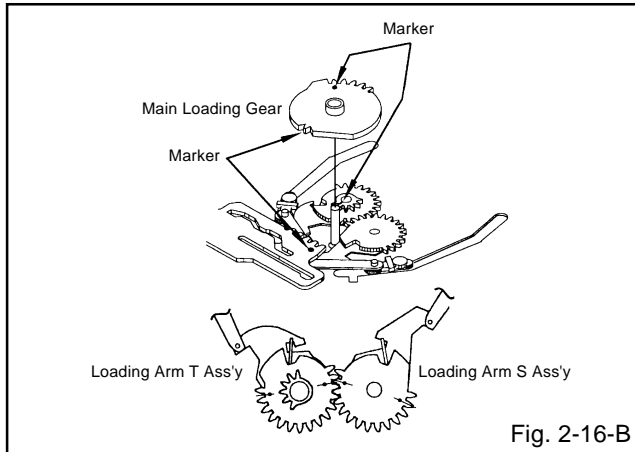


2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

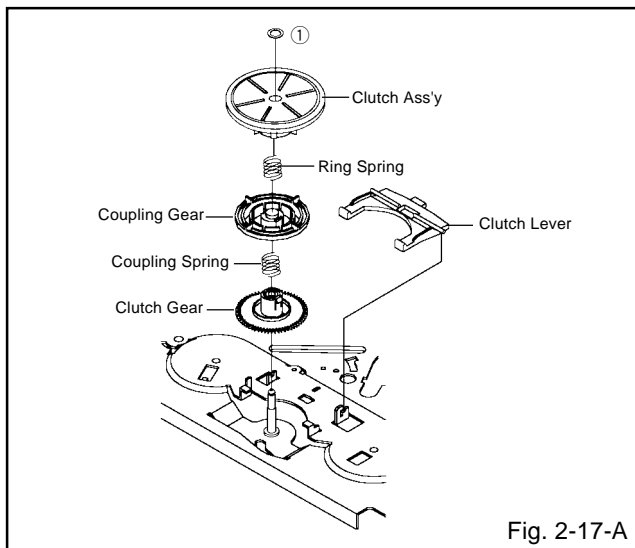


NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. (Refer to Fig. 2-17-B)

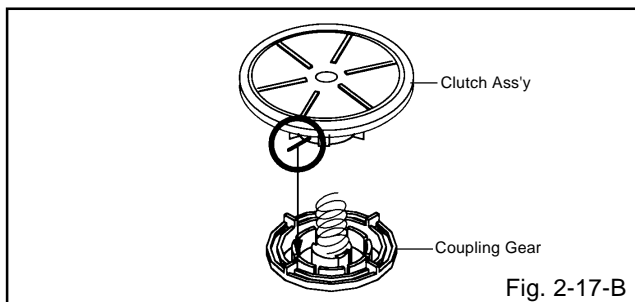



2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support ① and remove the Cassette Guide Post.
3. Remove the Inclined Base S Unit and Inclined Base T Unit.

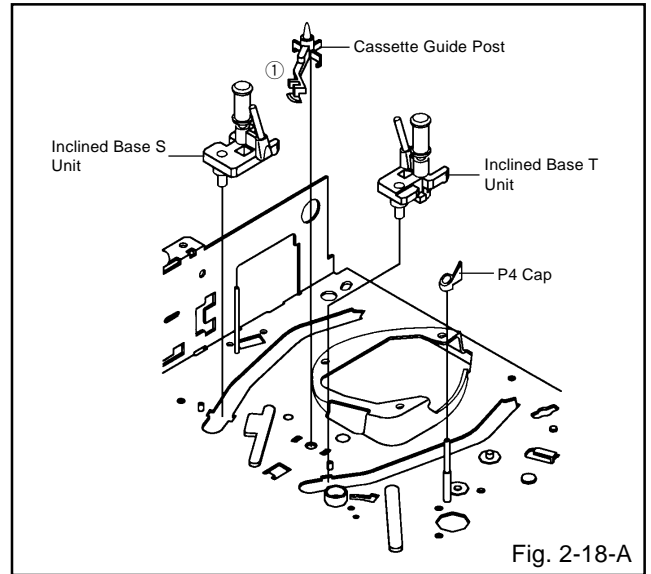

NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

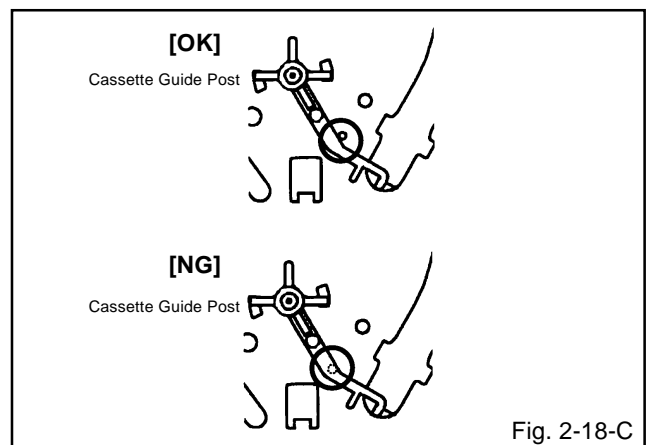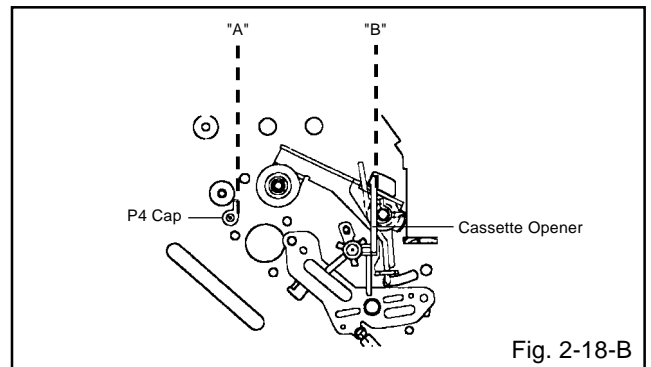

DISASSEMBLY INSTRUCTIONS


3. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 3-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

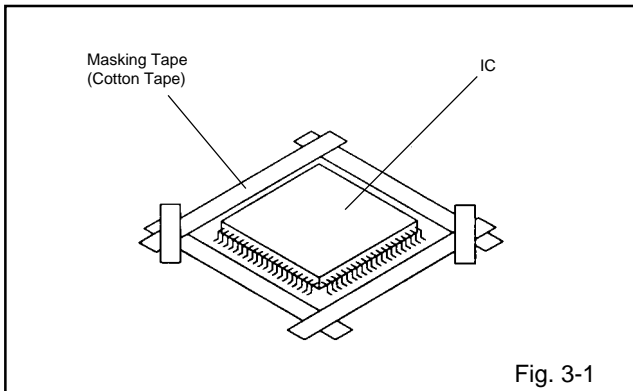

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 3-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

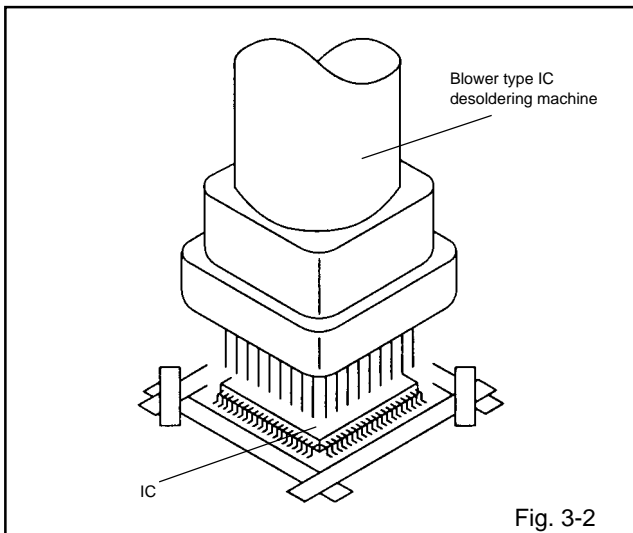

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 3-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

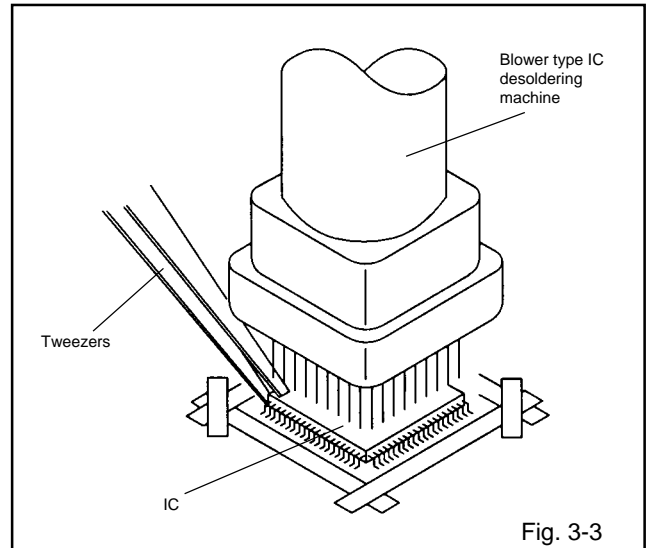

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 3-4.)

NOTE


Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

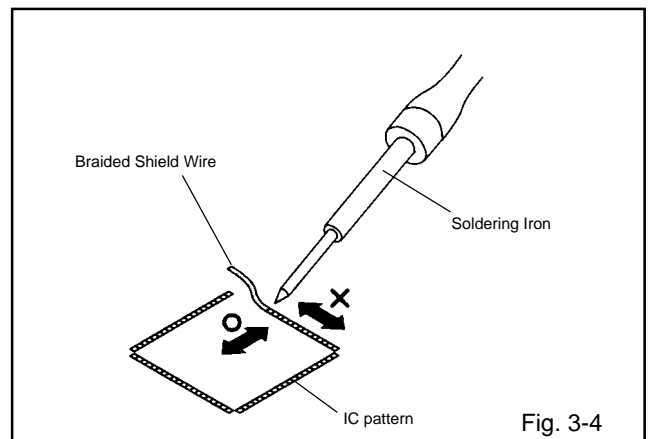


DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 3-5.)

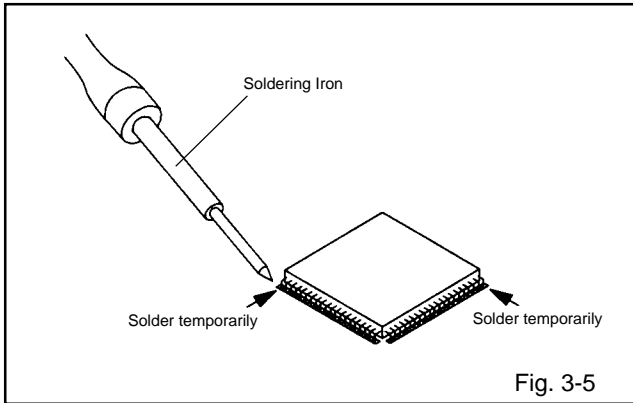


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 3-6.)

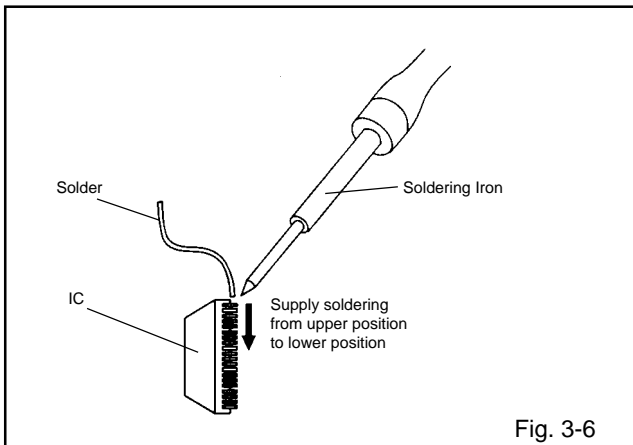


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 3-7.)

NOTE

Do not absorb the solder to excess.

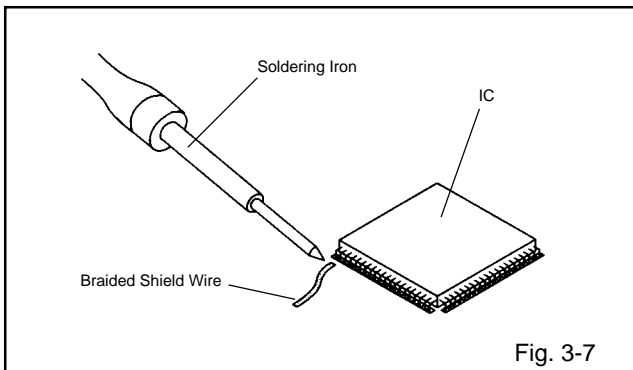

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 3-8.)

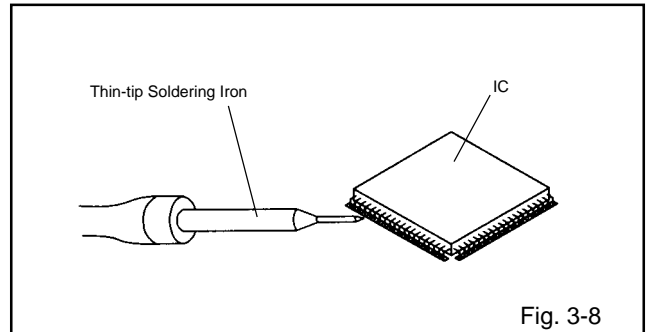

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

KEY TO ABBREVIATIONS

A	A/C	: Audio/Control	H.SW	: Head Switch	
	ACC	: Automatic Color Control	Hz	: Hertz	
	AE	: Audio Erase	I	IC	: Integrated Circuit
	AFC	: Automatic Frequency Control		IF	: Intermediate Frequency
	AFT	: Automatic Fine Tuning		IND	: Indicator
	AFT DET	: Automatic Fine Tuning Detect		INV	: Inverter
	AGC	: Automatic Gain Control	K	KIL	: Killer
	AMP	: Amplifier	L	L	: Left
	ANT	: Antenna		LED	: Light Emitting Diode
	A.PB	: Audio Playback		LIMIT AMP	: Limiter Amplifier
	APC	: Automatic Phase Control		LM, LDM	: Loading Motor
	ASS'Y	: Assembly		LP	: Long Play
	AT	: All Time		L.P.F	: Low Pass Filter
	AUTO	: Automatic		LUMI.	: Luminance
	A/V	: Audio/Video	M	M	: Motor
B	BGP	: Burst Gate Pulse		MAX	: Maximum
	BOT	: Beginning of Tape		MINI	: Minimum
	BPF	: Bandpass Filter		MIX	: Mixer, mixing
	BRAKE SOL	: Brake Solenoid		MM	: Monostable Multivibrator
	BUFF	: Buffer		MOD	: Modulator, Modulation
	B/W	: Black and White		MPX	: Multiplexer, Multiplex
C	C	: Capacitance, Collector		MS SW	: Mecha State Switch
	CASE	: Cassette	N	NC	: Non Connection
	CAP	: Capstan		NR	: Noise Reduction
	CARR	: Carrier	O	OSC	: Oscillator
	CH	: Channel		OPE	: Operation
	CLK	: Clock	P	PB	: Playback
	CLOCK (SY-SE)	: Clock (Syscon to Servo)		PB CTL	: Playback Control
	COMB	: Combination, Comb Filter		PB-C	: Playback-Chrominance
	CONV	: Converter		PB-Y	: Playback-Luminance
	CPM	: Capstan Motor		PCB	: Printed Circuit Board
	CTL	: Control		P. CON	: Power Control
	CYL	: Cylinder		PD	: Phase Detector
	CYL-M	: Cylinder-Motor		PG	: Pulse Generator
	CYL SENS	: Cylinder-Sensor		P-P	: Peak-to Peak
D	DATA (SY-CE)	: Data (Syscon to Servo)	R	R	: Right
	dB	: Decibel		REC	: Recording
	DC	: Direct Current		REC-C	: Recording-Chrominance
	DD Unit	: Direct Drive Motor Unit		REC-Y	: Recording-Luminance
	DEMODO	: Demodulator		REEL BRK	: Reel Brake
	DET	: Detector		REEL S	: Reel Sensor
	DEV	: Deviation		REF	: Reference
E	E	: Emitter		REG	: Regulated, Regulator
	EF	: Emitter Follower		REW	: Rewind
	EMPH	: Emphasis		REV, RVS	: Reverse
	ENC	: Encoder		RF	: Radio Frequency
	ENV	: Envelope		RMC	: Remote Control
	EOT	: End of Tape		RY	: Relay
	EQ	: Equalizer	S	S. CLK	: Serial Clock
	EXT	: External		S. COM	: Sensor Common
F	F	: Fuse		S. DATA	: Serial Data
	FBC	: Feed Back Clamp		SEG	: Segment
	FE	: Full Erase		SEL	: Select, Selector
	FF	: Fast Forward, Flipflop		SENS	: Sensor
	FG	: Frequency Generator		SER	: Search Mode
	FL SW	: Front Loading Switch		SI	: Serial Input
	FM	: Frequency Modulation		SIF	: Sound Intermediate Frequency
	FSC	: Frequency Sub Carrier		SO	: Serial Output
	FWD	: Forward		SOL	: Solenoid
G	GEN	: Generator		SP	: Standard Play
	GND	: Ground		STB	: Serial Strobe
H	H.P.F	: High Pass Filter		SW	: Switch

KEY TO ABBREVIATIONS

S	SYNC	:	Synchronization
	SYNC SEP	:	Sync Separator, Separation
T	TR	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	UNREG	:	Unregulated
V	V	:	Volt
	VCO	:	Voltage Controlled Oscillator
	VIF	:	Video Intermediate Frequency
	VP	:	Vertical Pulse, Voltage Display
	V.PB	:	Video Playback
	VR	:	Variable Resistor
	V.REC	:	Video Recording
	VSF	:	Visual Search Fast Forward
	VSR	:	Visual Search Rewind
	VSS	:	Voltage Super Source
	V-SYNC	:	Vertical-Synchronization
	VT	:	Voltage Tuning
X	X'TAL	:	Crystal
Y	Y/C	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

Method	Operations
Press the ATR button on the remote control for more than 2 seconds during PLAY.	Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Make the short circuit between the test point of SERVICE and the GND.	The EOT/BOT/Reel sensor do not work at this moment. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage. Unless maintenance is properly carried out, the following service intervals may be quite shortened as harmful effects may be had on other parts. Also, long term storage or misuse may cause transformation and aging of rubber parts.

Time Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	3,000 hours	Notes
Audio Control Head	■	■	■	■	■	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	■	■	
Capstan Belt			■	■	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	■	■	■	■ ●	
Capstan DD Unit					●	
Loading Motor					●	
Tension Band					●	
Capstan Shaft	■	■	■	■	■	Replace when rolling becomes abnormal.
Tape Running Guide Post	■	■	■	■	■	
Cylinder Unit	■	■	■	■	●	Clean the Head

■ : Clean
● : Replace


CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. (Refer to the figure below.)

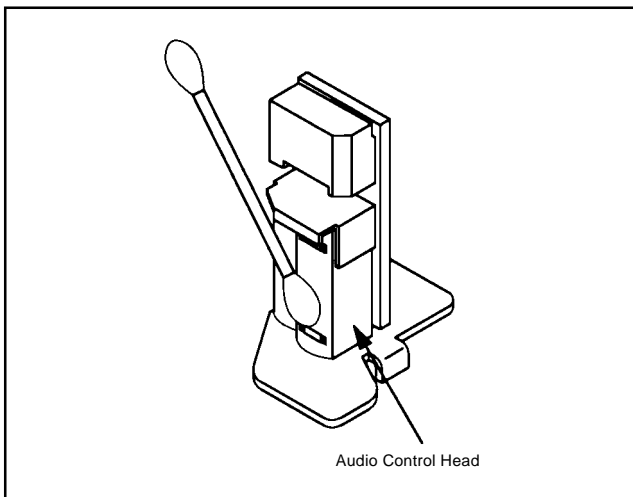

2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER











Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). (Refer to the figure below.)

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

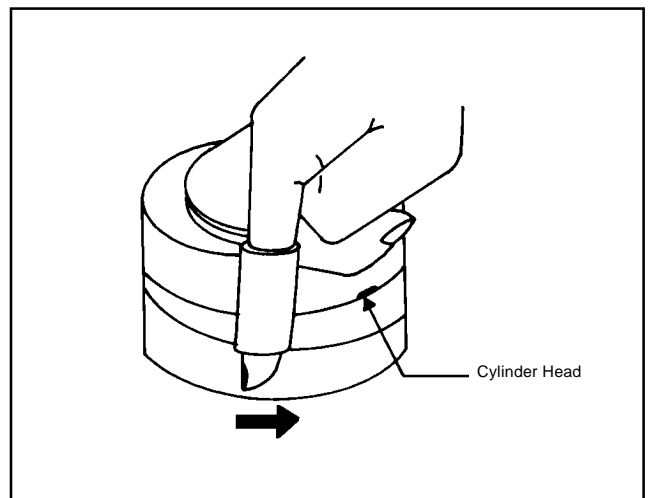

SERVICING FIXTURES AND TOOLS
      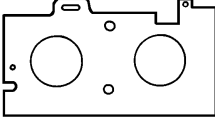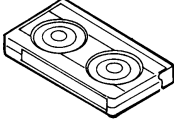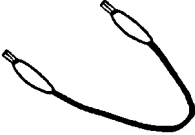 
<p>(For 2 heads model) VHS Alignment Tape JG001 (VN₂S-LI6³) JG001A (VN₂S-CO1³) JG001Q (VN₂S-LI6³H) JG001T (VN₂S-X6³)</p> 	<p>(For 4 heads model) VHS Alignment Tape JG001B (VN₁S-LI6³) JG001I (VN₁S-CO1³) JG001P (VN₁S-LI6³H) JG001S (VN₁S-X6³)</p> 	<p>JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm)</p> 	<p>JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 (small)</p> 
<p>JG153 X Value Adjustment Screwdriver</p> 	<p>JG022 Master Plane</p> 	<p>JG024A Reel Disk Height Adjustment Jig</p> 	<p>JG100A Torque Tape (VHT-063)</p> 
<p>JG154 Cable</p> 	<p>Tentelometer</p> 		

Ref. No.	Part No.	Parts Name	Remarks
JG001	APJG001000	VHS Alignment Tape (For 2 heads model)	Monoscope, 6KHz
JG001A	APJG001A00	VHS Alignment Tape (For 2 heads model)	Color Bar, 1KHz
JG001Q	APJG001Q00	VHS Alignment Tape (For 2 heads model)	Hi-Fi Audio
JG001T	APJG001T00	VHS Alignment Tape (For 2 heads model)	X Value Adjustment
JG001B	APJG001B00	VHS Alignment Tape (For 4 heads model)	Monoscope, 6KHz
JG001I	APJG001I00	VHS Alignment Tape (For 4 heads model)	Color Bar, 1KHz
JG001P	APJG001P00	VHS Alignment Tape (For 4 heads model)	Hi-Fi Audio
JG001S	APJG001S00	VHS Alignment Tape (For 4 heads model)	X Value Adjustment
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf•cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf•cm)	VSR Torque, Brake Torque (S Reel)
JG005	APJG005000	Post Adjustment Screwdriver	Guide Roller Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG100A	APJG100A00	Torque Tape (VHT-063)	Playback Torque, Back Tension Torque During Playback
JG154	APJG154000	Cable	Used to connect the test point of SERVICE and GROUND

PREPARATION FOR SERVICING

- Short circuit between **TP1001** and **Ground** with the cable JG154.
(Refer to MAJOR COMPONENTS LOCATION GUIDE)
The EOT, BOT and Reel Sensor do not work at this moment.
At that time, the STOP/EJECT button is available to insert and eject the Cassette Tape.

MECHANICAL ADJUSTMENTS



1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)
- When you activate the deck without the Cassette Holder, short circuit between **TP1001** and **GND**. (Refer to **ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE**) In this condition the BOT/EOT/Reel Sensor will not function.



1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig (**JG024A**) and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to 10(+2, -0)mm.
4. Adjust the other reel in the same way.

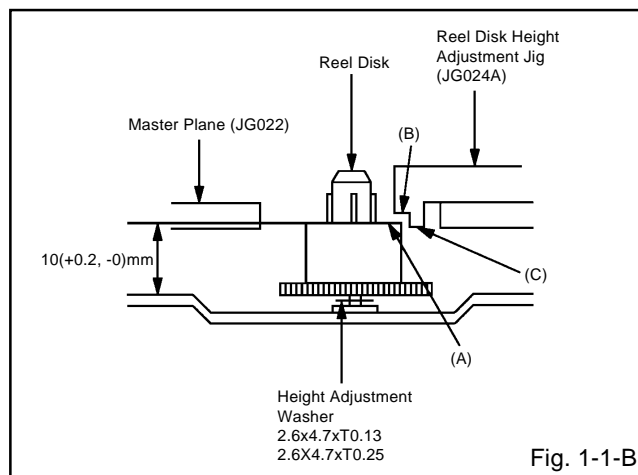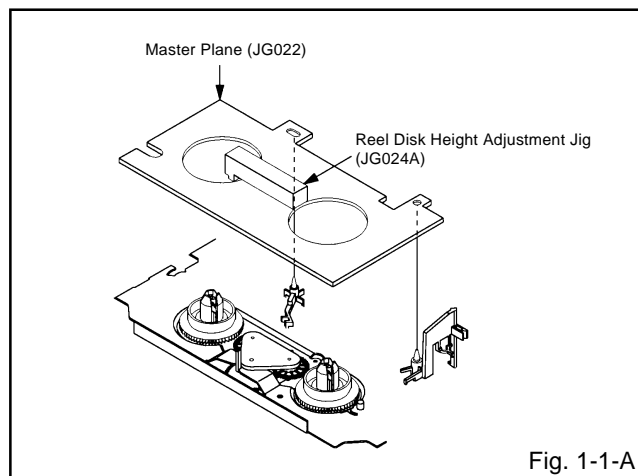

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the adjusting parts for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

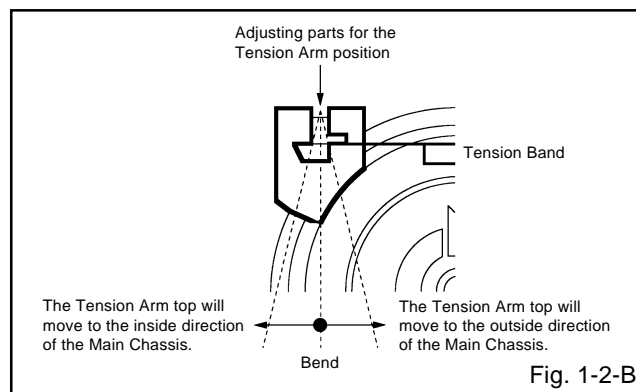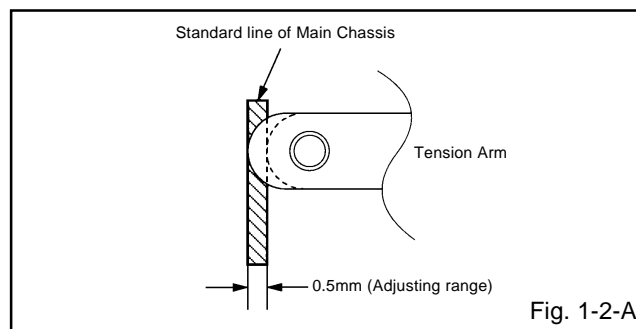


1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates $20 \pm 2\text{gf}$ in the beginning of playback.

• USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

1. After confirmation and adjustment of Tension Post position (Refer to item 1-2), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

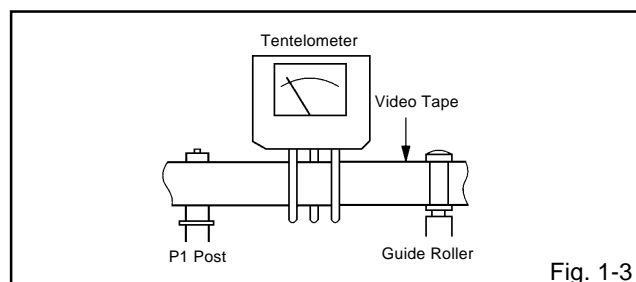

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Set to the Picture Search (Rewind) mode. (Refer to Fig.1-4-B)
2. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge (JG002F) and Adapter (JG002B) on the S Reel. Turn the Torque Gauge (JG002F) clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge (JG002E) and Adapter (JG002B) on the T reel. Turn the Torque Gauge (JG002E) counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

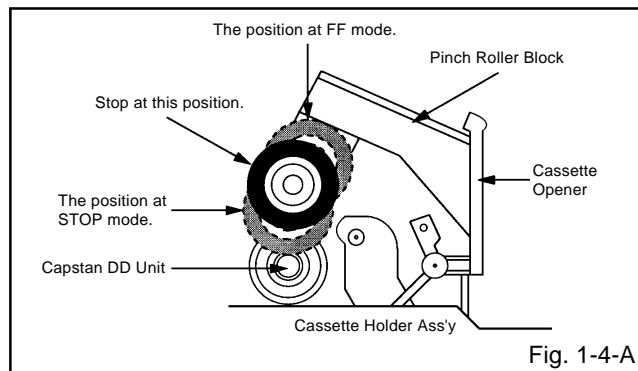


Fig. 1-4-A

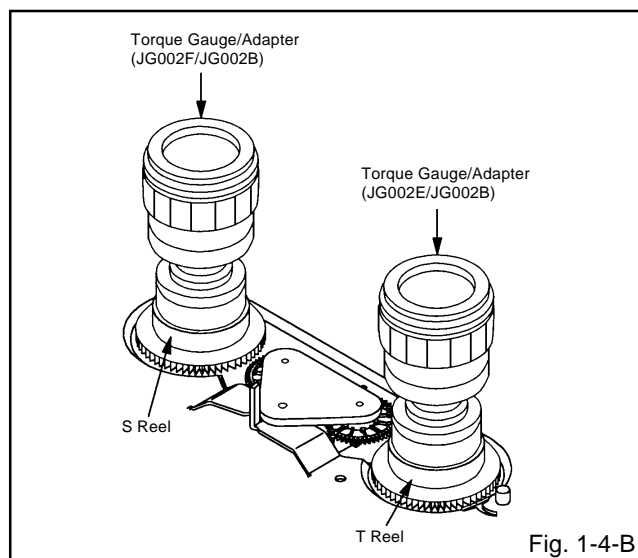


Fig. 1-4-B

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (JG001 or JG001B). (Refer to SERVICING FIXTURE AND TOOLS)
2. Connect CH-1 of the oscilloscope to TP4001 (Envelope) and CH-2 to TP1002 (SW Pulse).
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (JG005) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the ELECTRICAL ADJUSTMENTS)

NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)

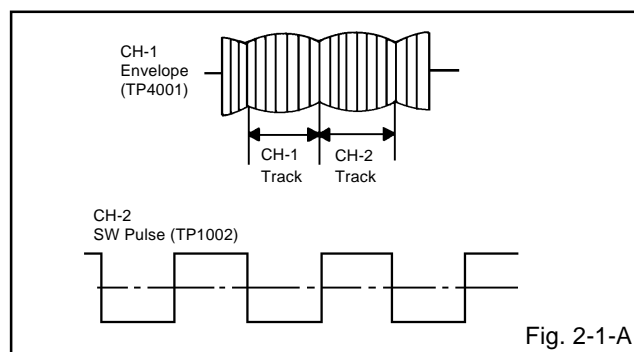


Fig. 2-1-A

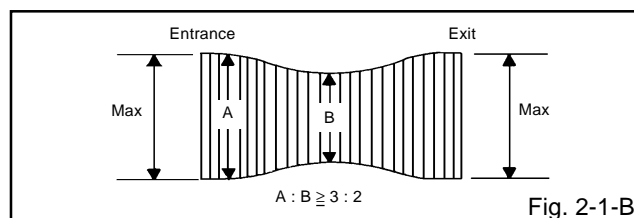





Fig. 2-1-B

MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD


When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001** or **JG001B**). (Refer to **SERVICING FIXTURE AND TOOLS**)
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
 - a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
 - b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
 - a) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

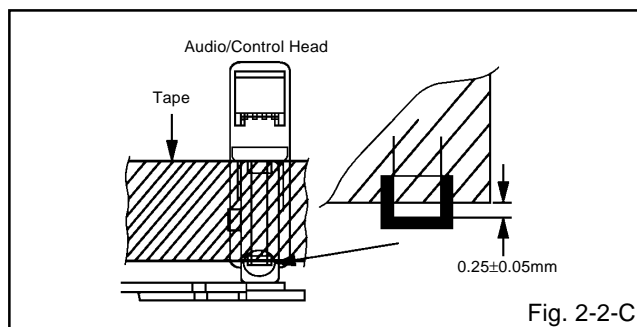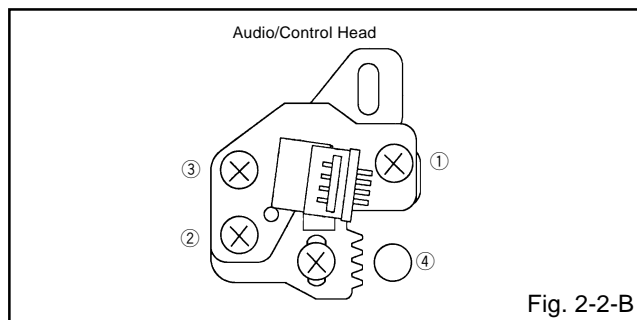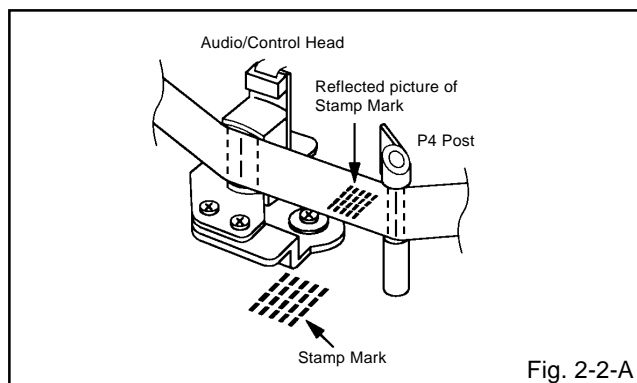

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. (Refer to item 1-1)
2. Confirm and adjust the position of the Tension Post. (Refer to item 1-2)
3. Adjust the Guide Roller. (Refer to item 2-1)
4. Confirm and adjust the Audio/Control Head. (Refer to item 2-2)
5. Connect CH-1 of the oscilloscope to **TP4001**, CH-2 to **TP1002** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S** or **JG001T**). (Refer to **SERVICING FIXTURE AND TOOLS**)
7. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

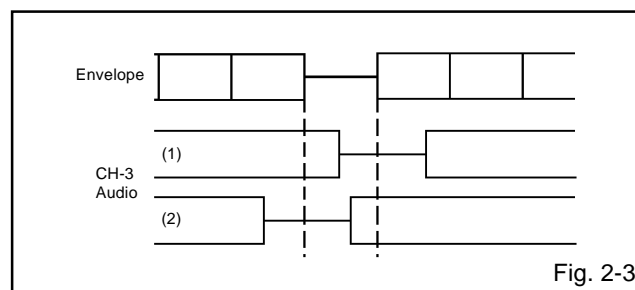


2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP1002** and CH-2 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P** or **JG001Q**). (Refer to **SERVICING FIXTURE AND TOOLS**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
6. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
7. If the difference are more than 3 steps, set the X Value adjustment driver (**JG153**) to ④ of **Fig. 2-2-B**. Change the X Value and adjust it so that the value becomes within 2 steps.

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

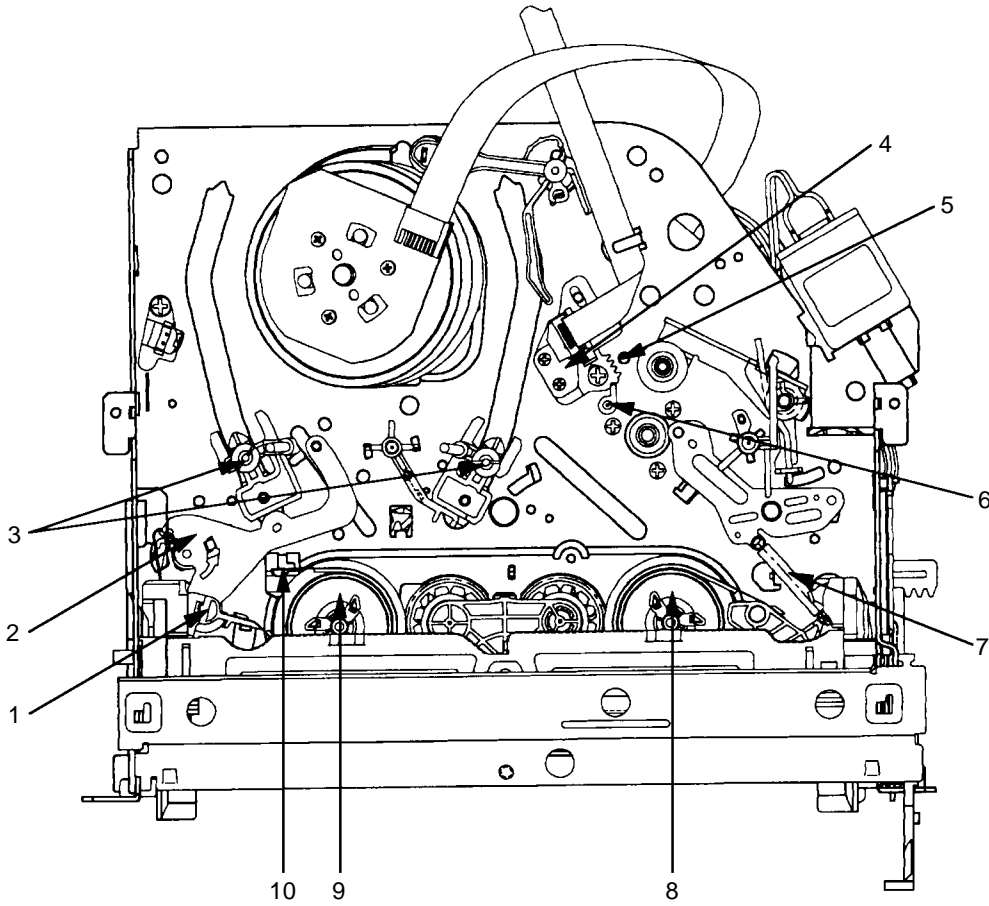

- | | |
|-----------------------------------|--|
| 1. Tension Connect | 6. P4 Post |
| 2. Tension Arm | 7. T Brake Spring |
| 3. Guide Roller | 8. T Reel |
| 4. Audio/Control Head | 9. S Reel |
| 5. X value adjustment driver hole | 10. Adjusting parts for the Tension Arm position |

ELECTRICAL ADJUSTMENTS

Read and perform this adjustment when repairing the circuits or replacing electrical parts or PCB assemblies.

1. BASIC ADJUSTMENT

CAUTION

When replacing IC's or transistors, use only specified silicon grease (**YG6260M**).
(To prevent the damage to IC's and transistors.)



1-1: PG SHIFTER

CONDITIONS

MODE-PLAYBACK
Input Signal-Alignment Tape (**JG001B**)


INSTRUCTIONS

1. Connect CH-1 on the oscilloscope to **TP1002** and CH-2 to **TP4201**.
2. Playback the alignment tape. (**JG001B**)
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Adjust the **VR1001** until the waveform of the oscilloscope measures $6.5 \pm 0.5(H)$ at both leading and trailing edges. (Refer to Fig. 1-1-A, B)

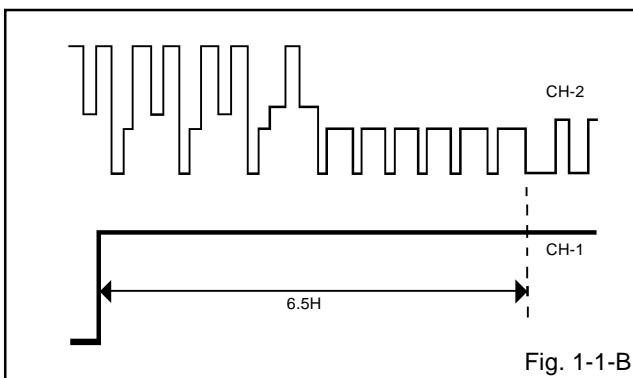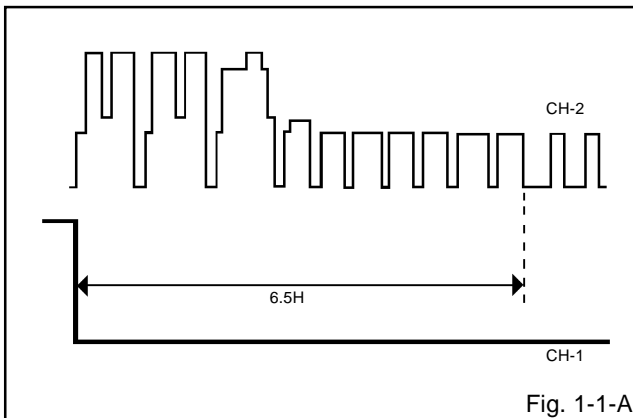


ELECTRICAL ADJUSTMENTS


2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE

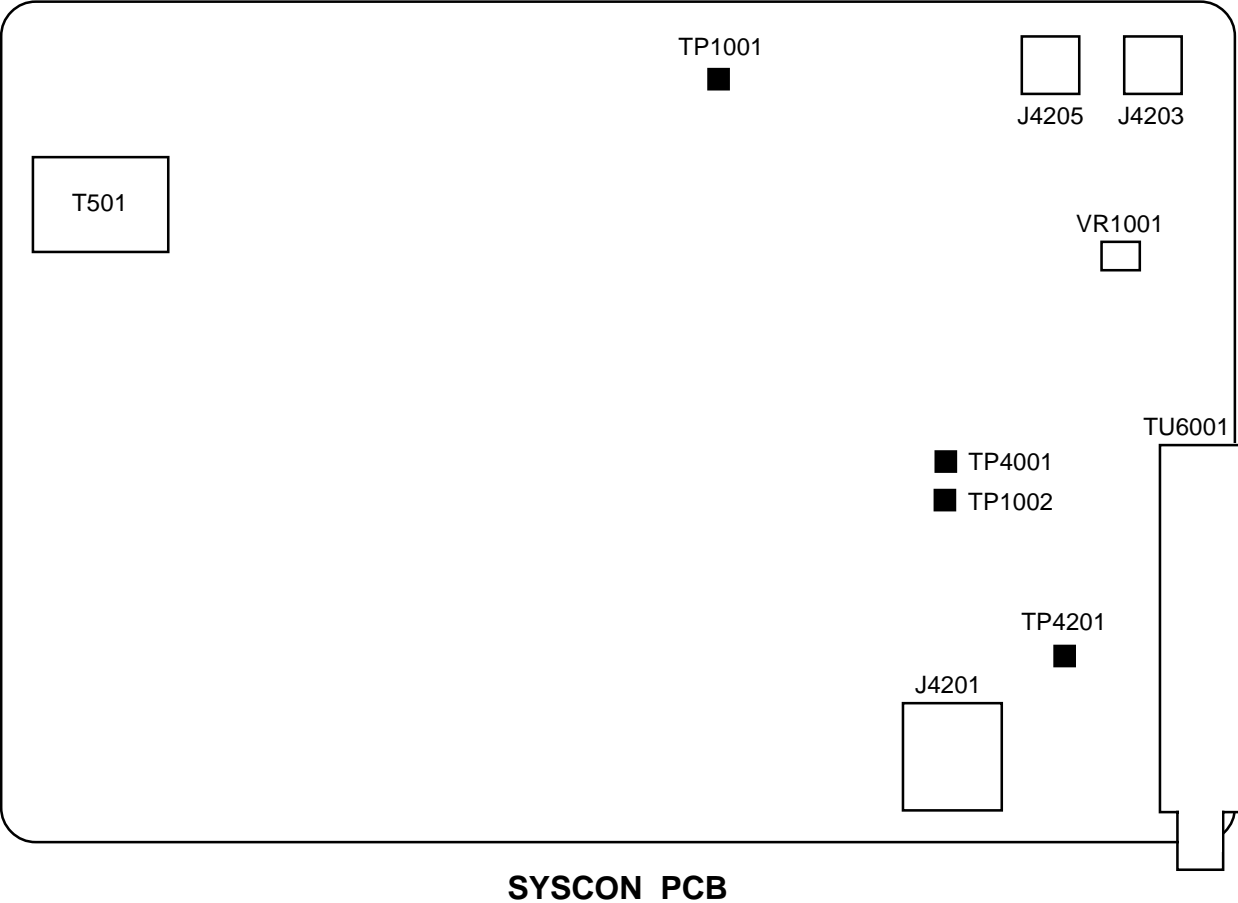


Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

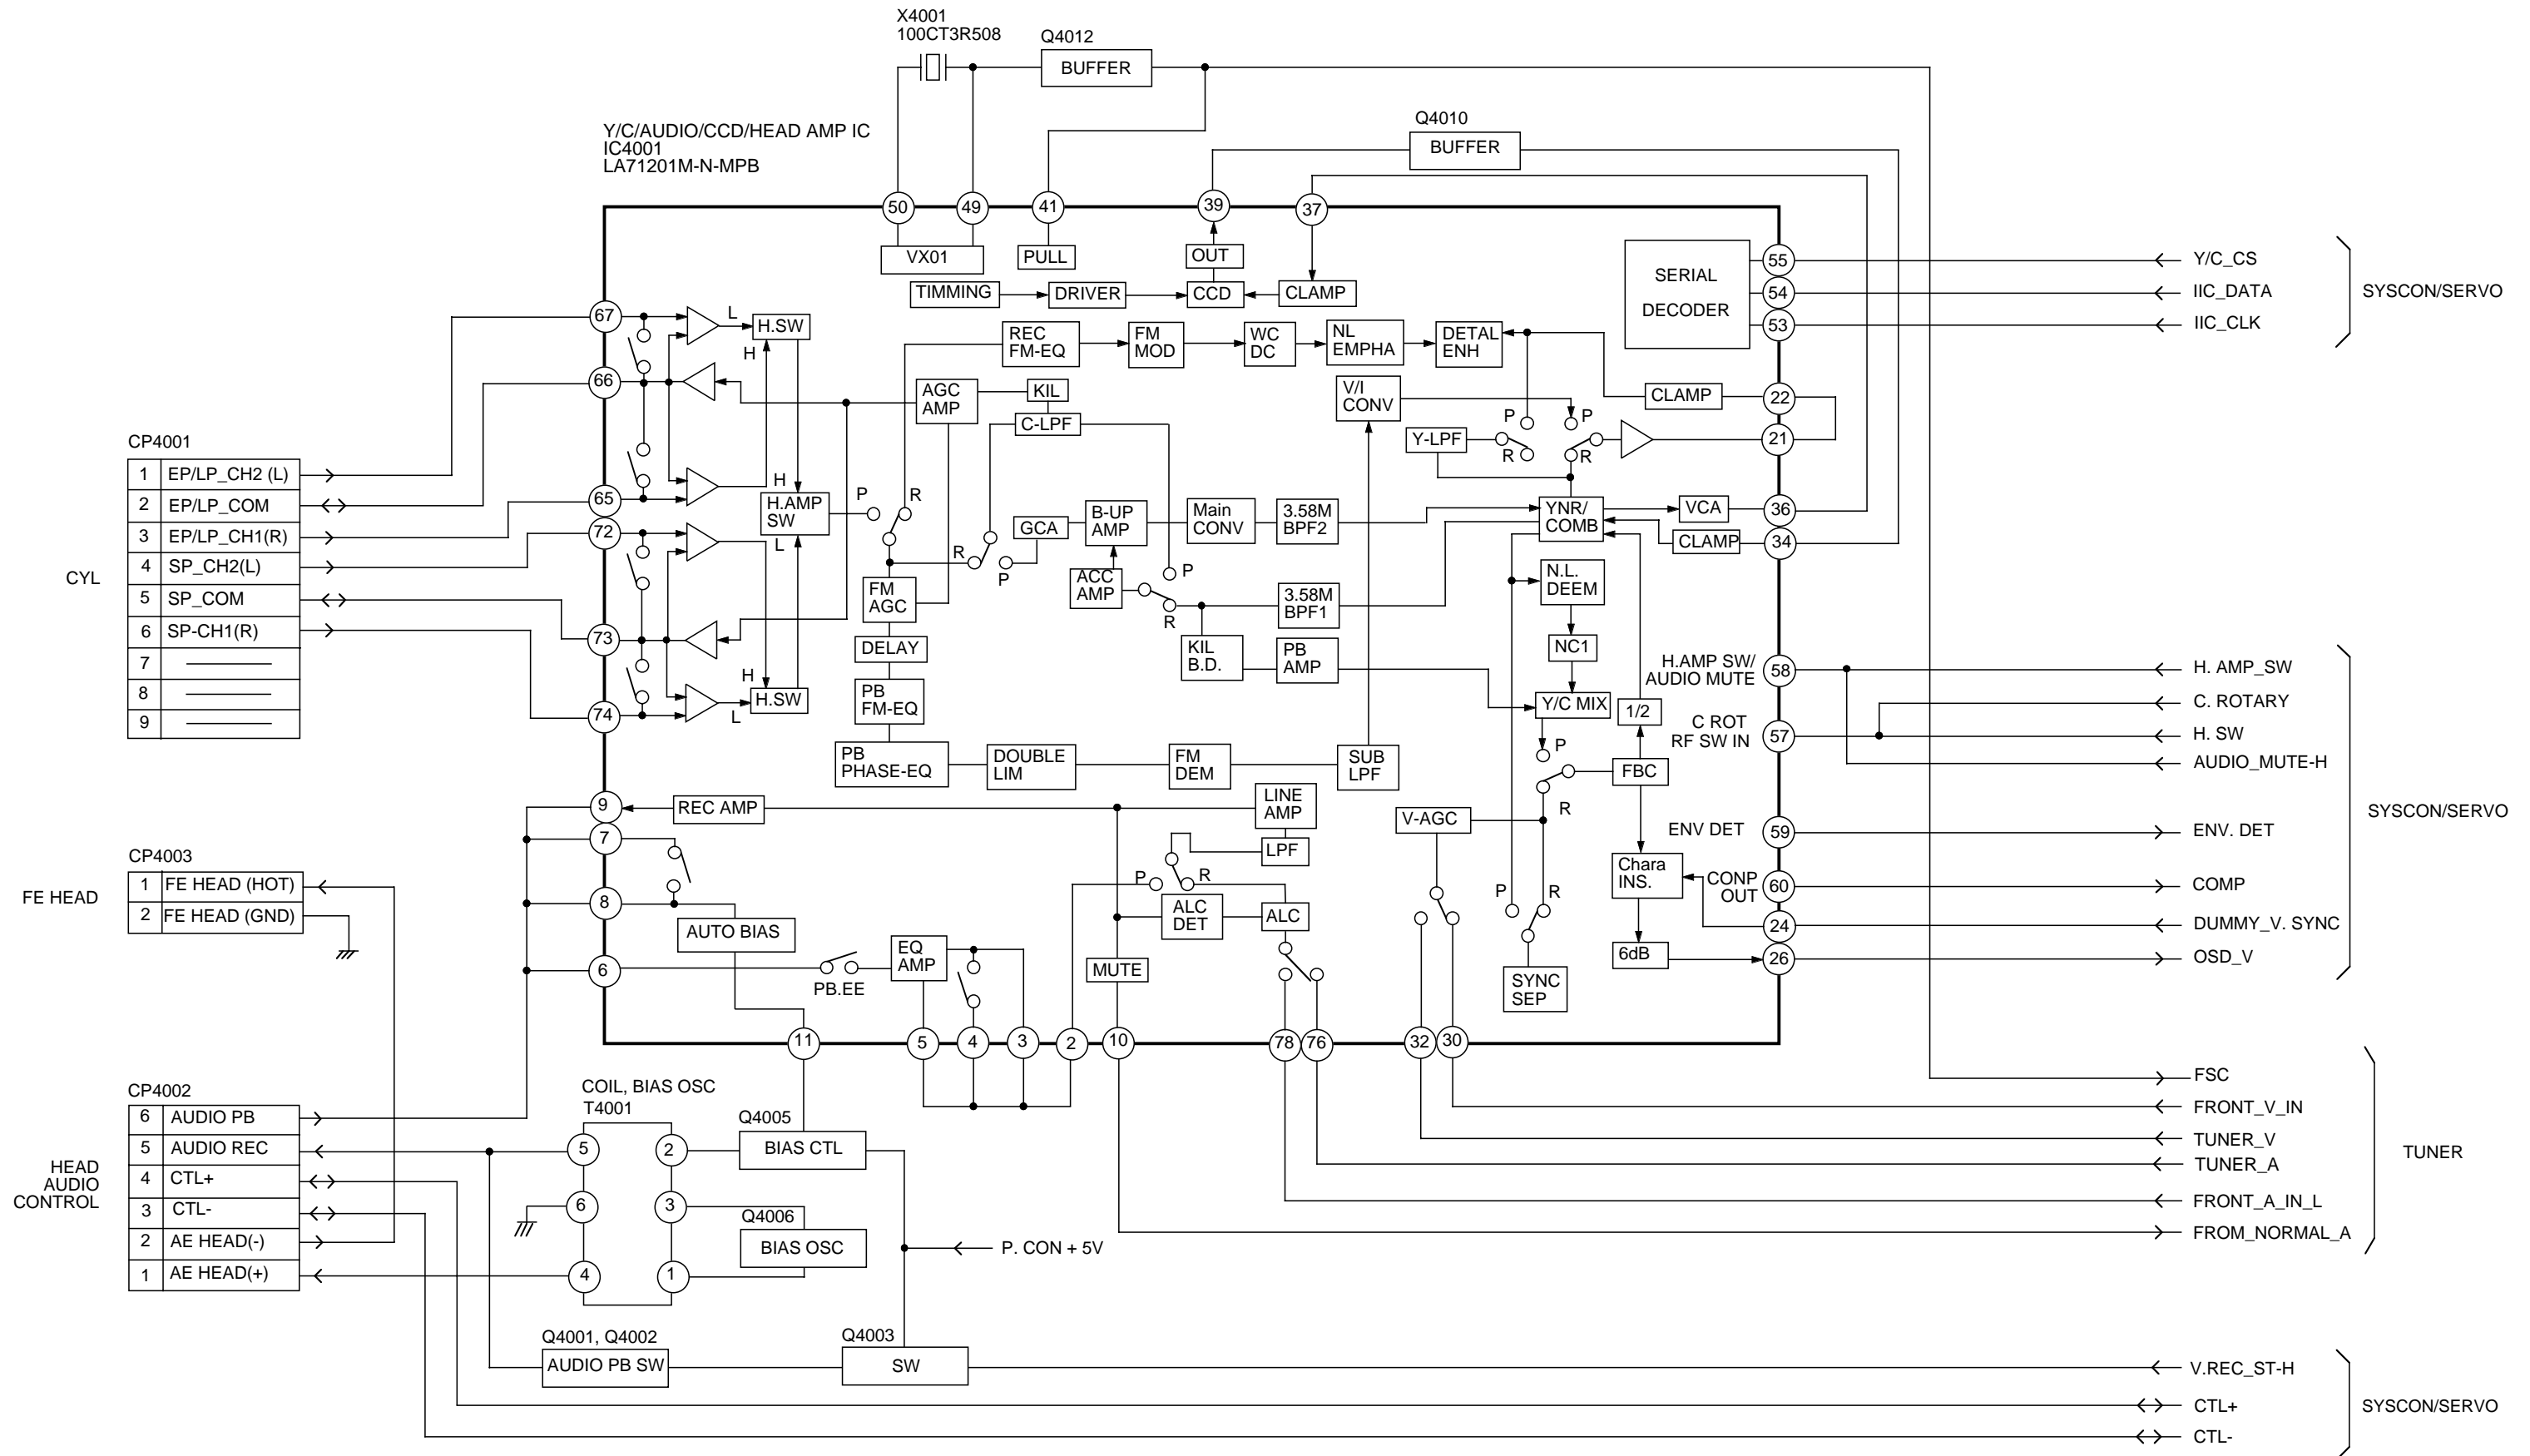


SYSTEM CONTROL/SERVO BLOCK DIAGRAM

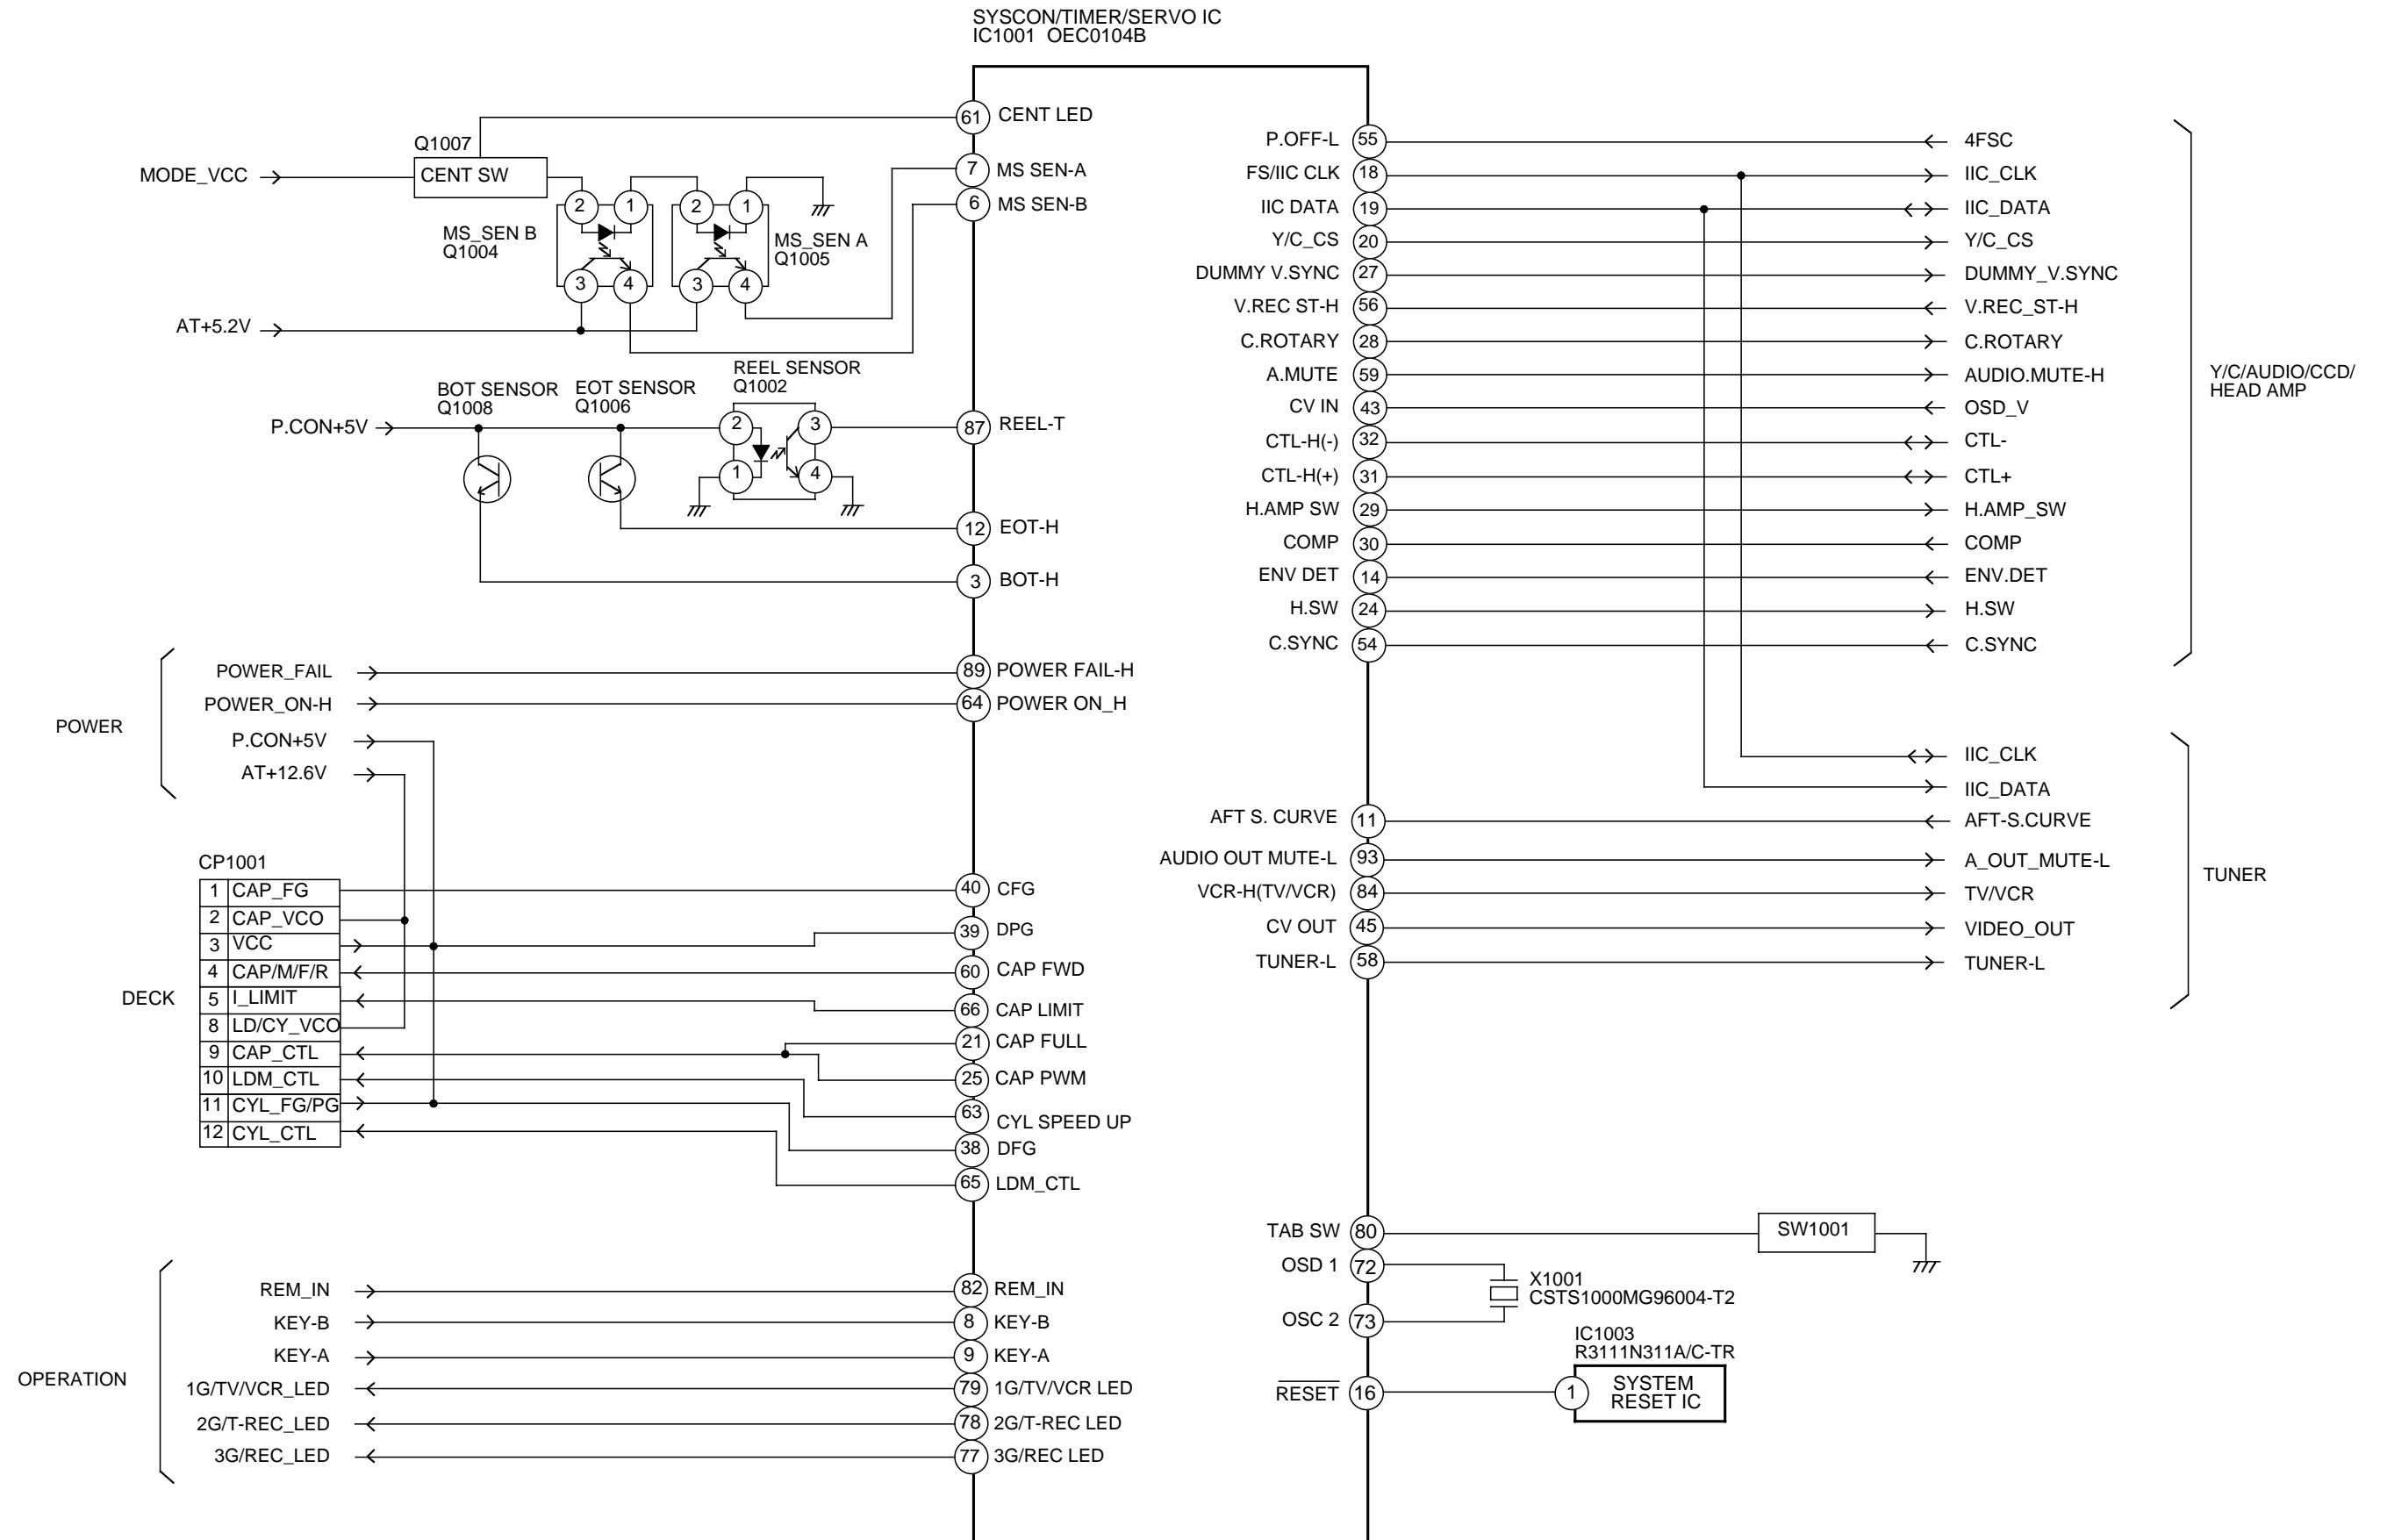


TUNER BLOCK DIAGRAM

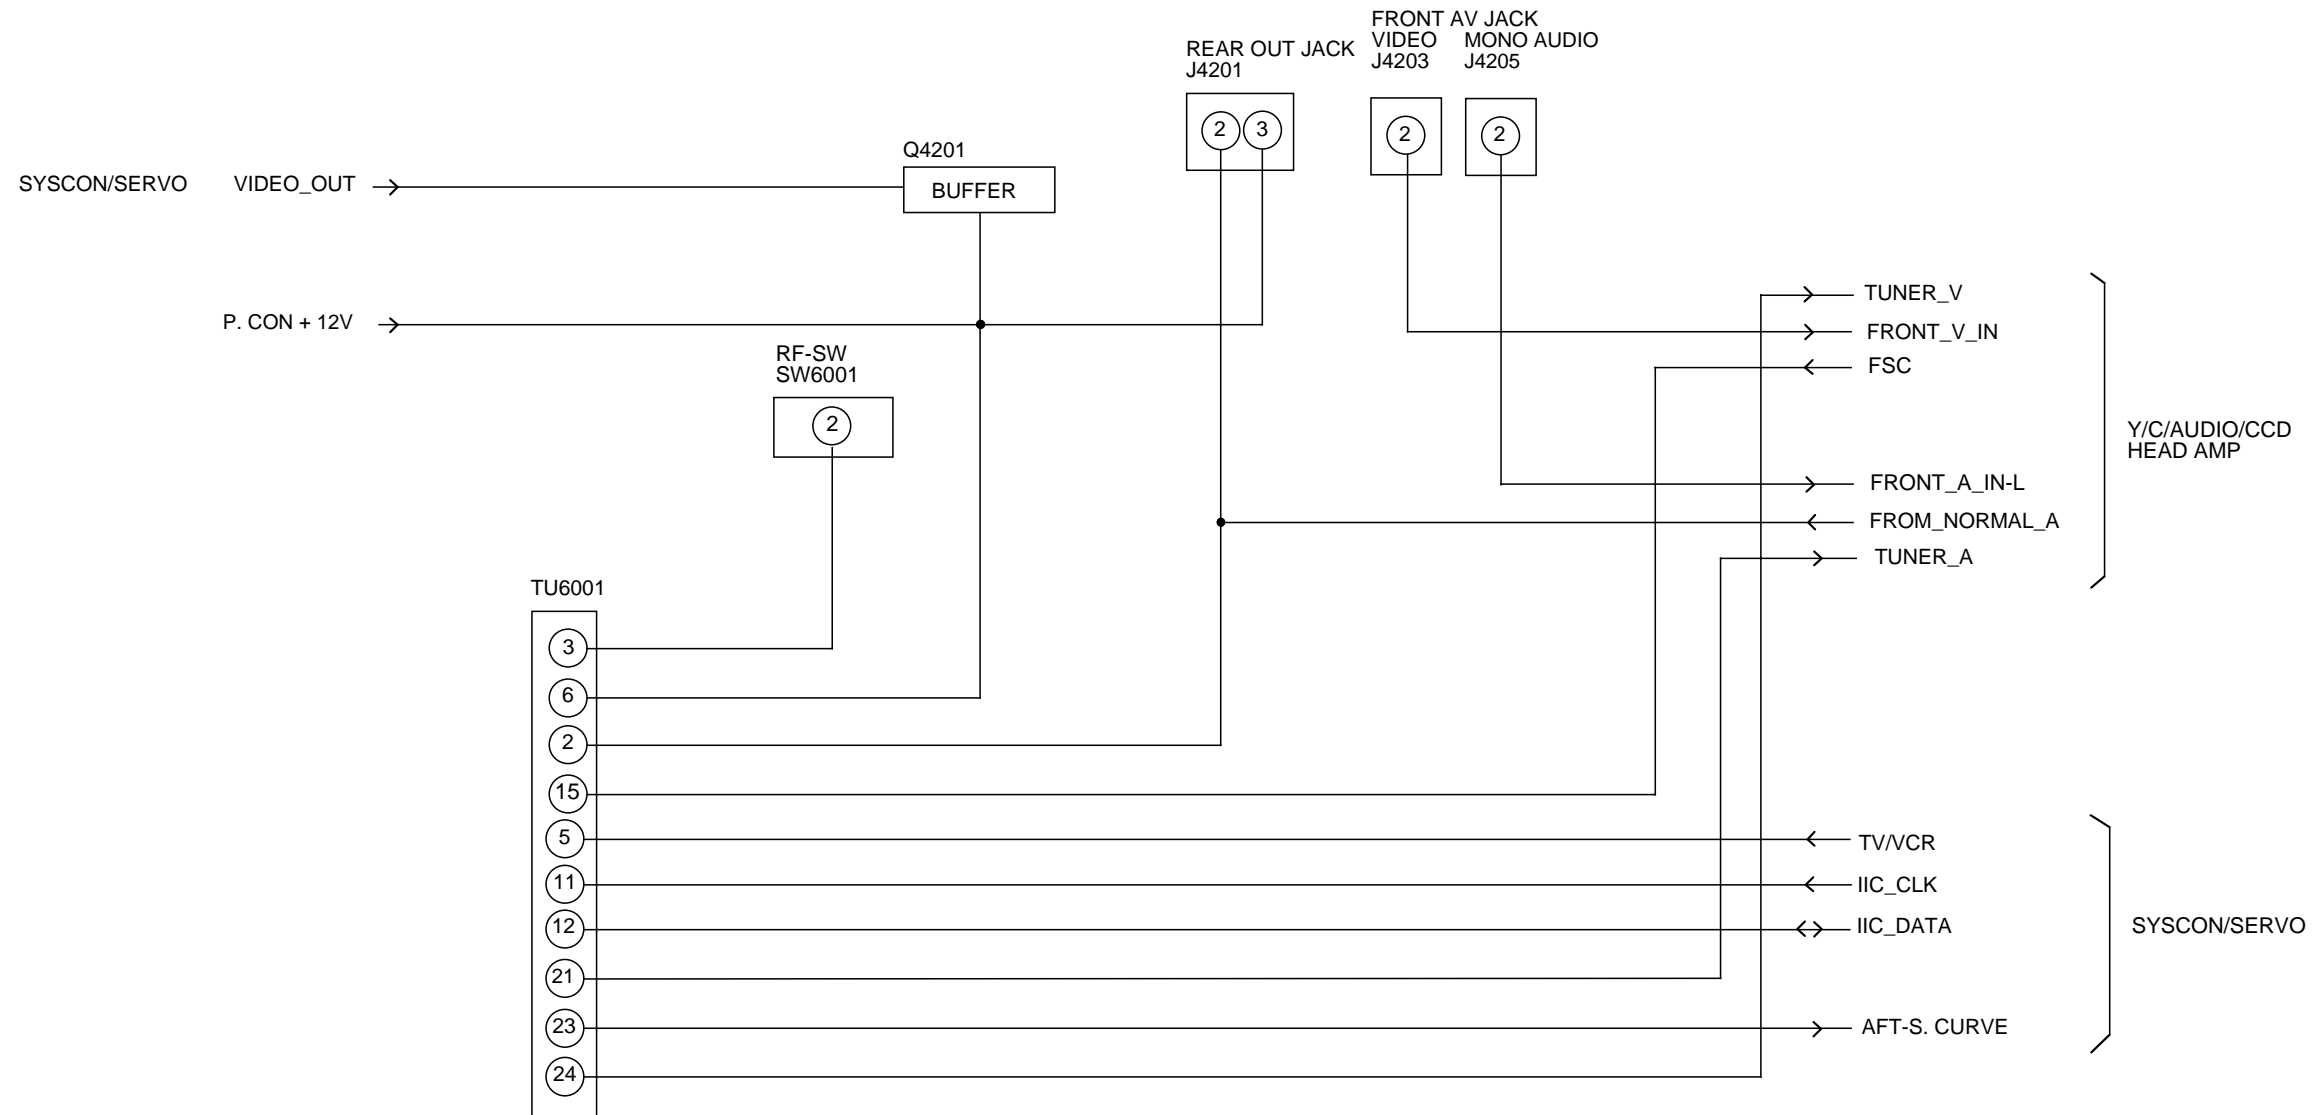


OPERATION BLOCK DIAGRAM

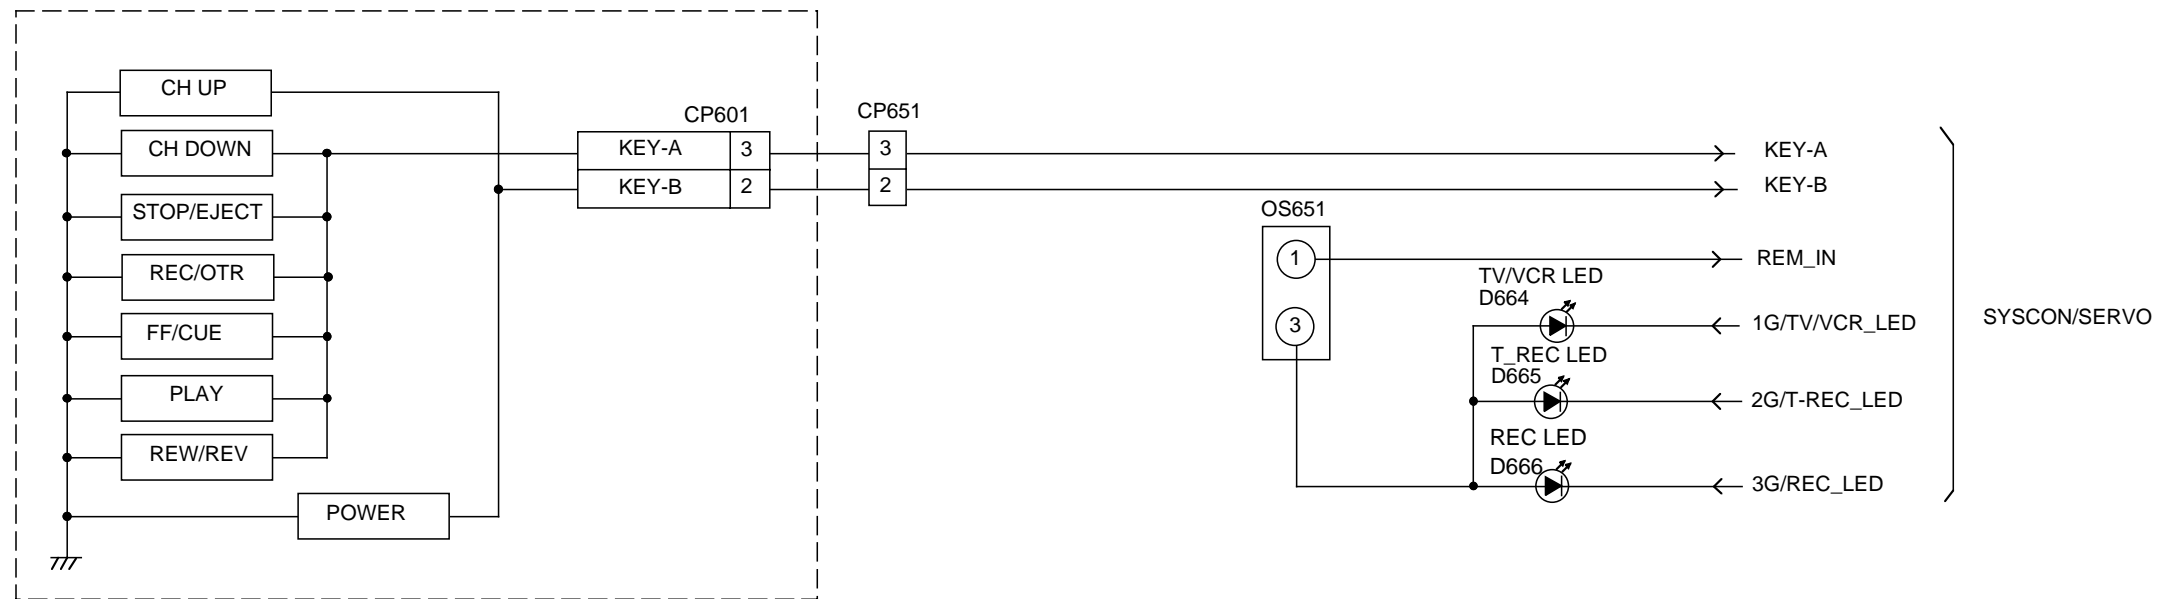


POWER BLOCK DIAGRAM

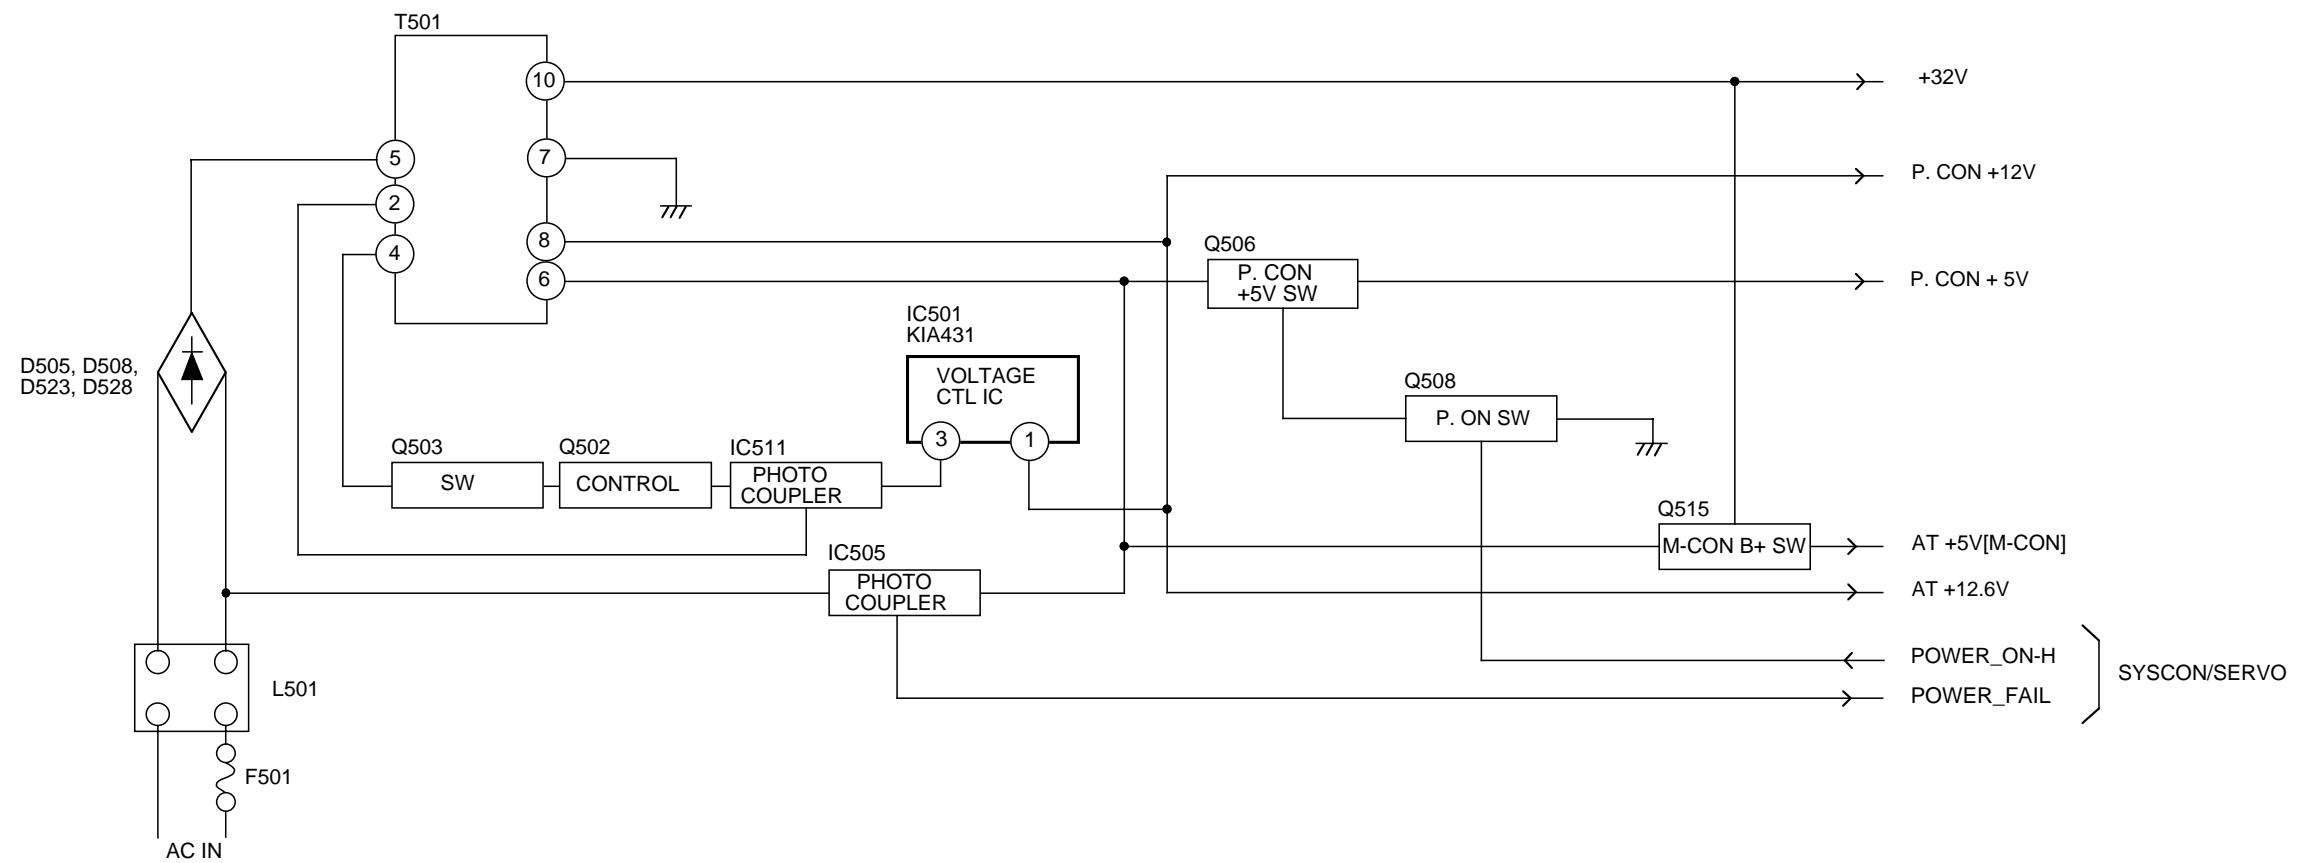


PRINTED CIRCUIT BOARDS SYS/CON/OPERATION (INSERTED PARTS) SOLDER SIDE

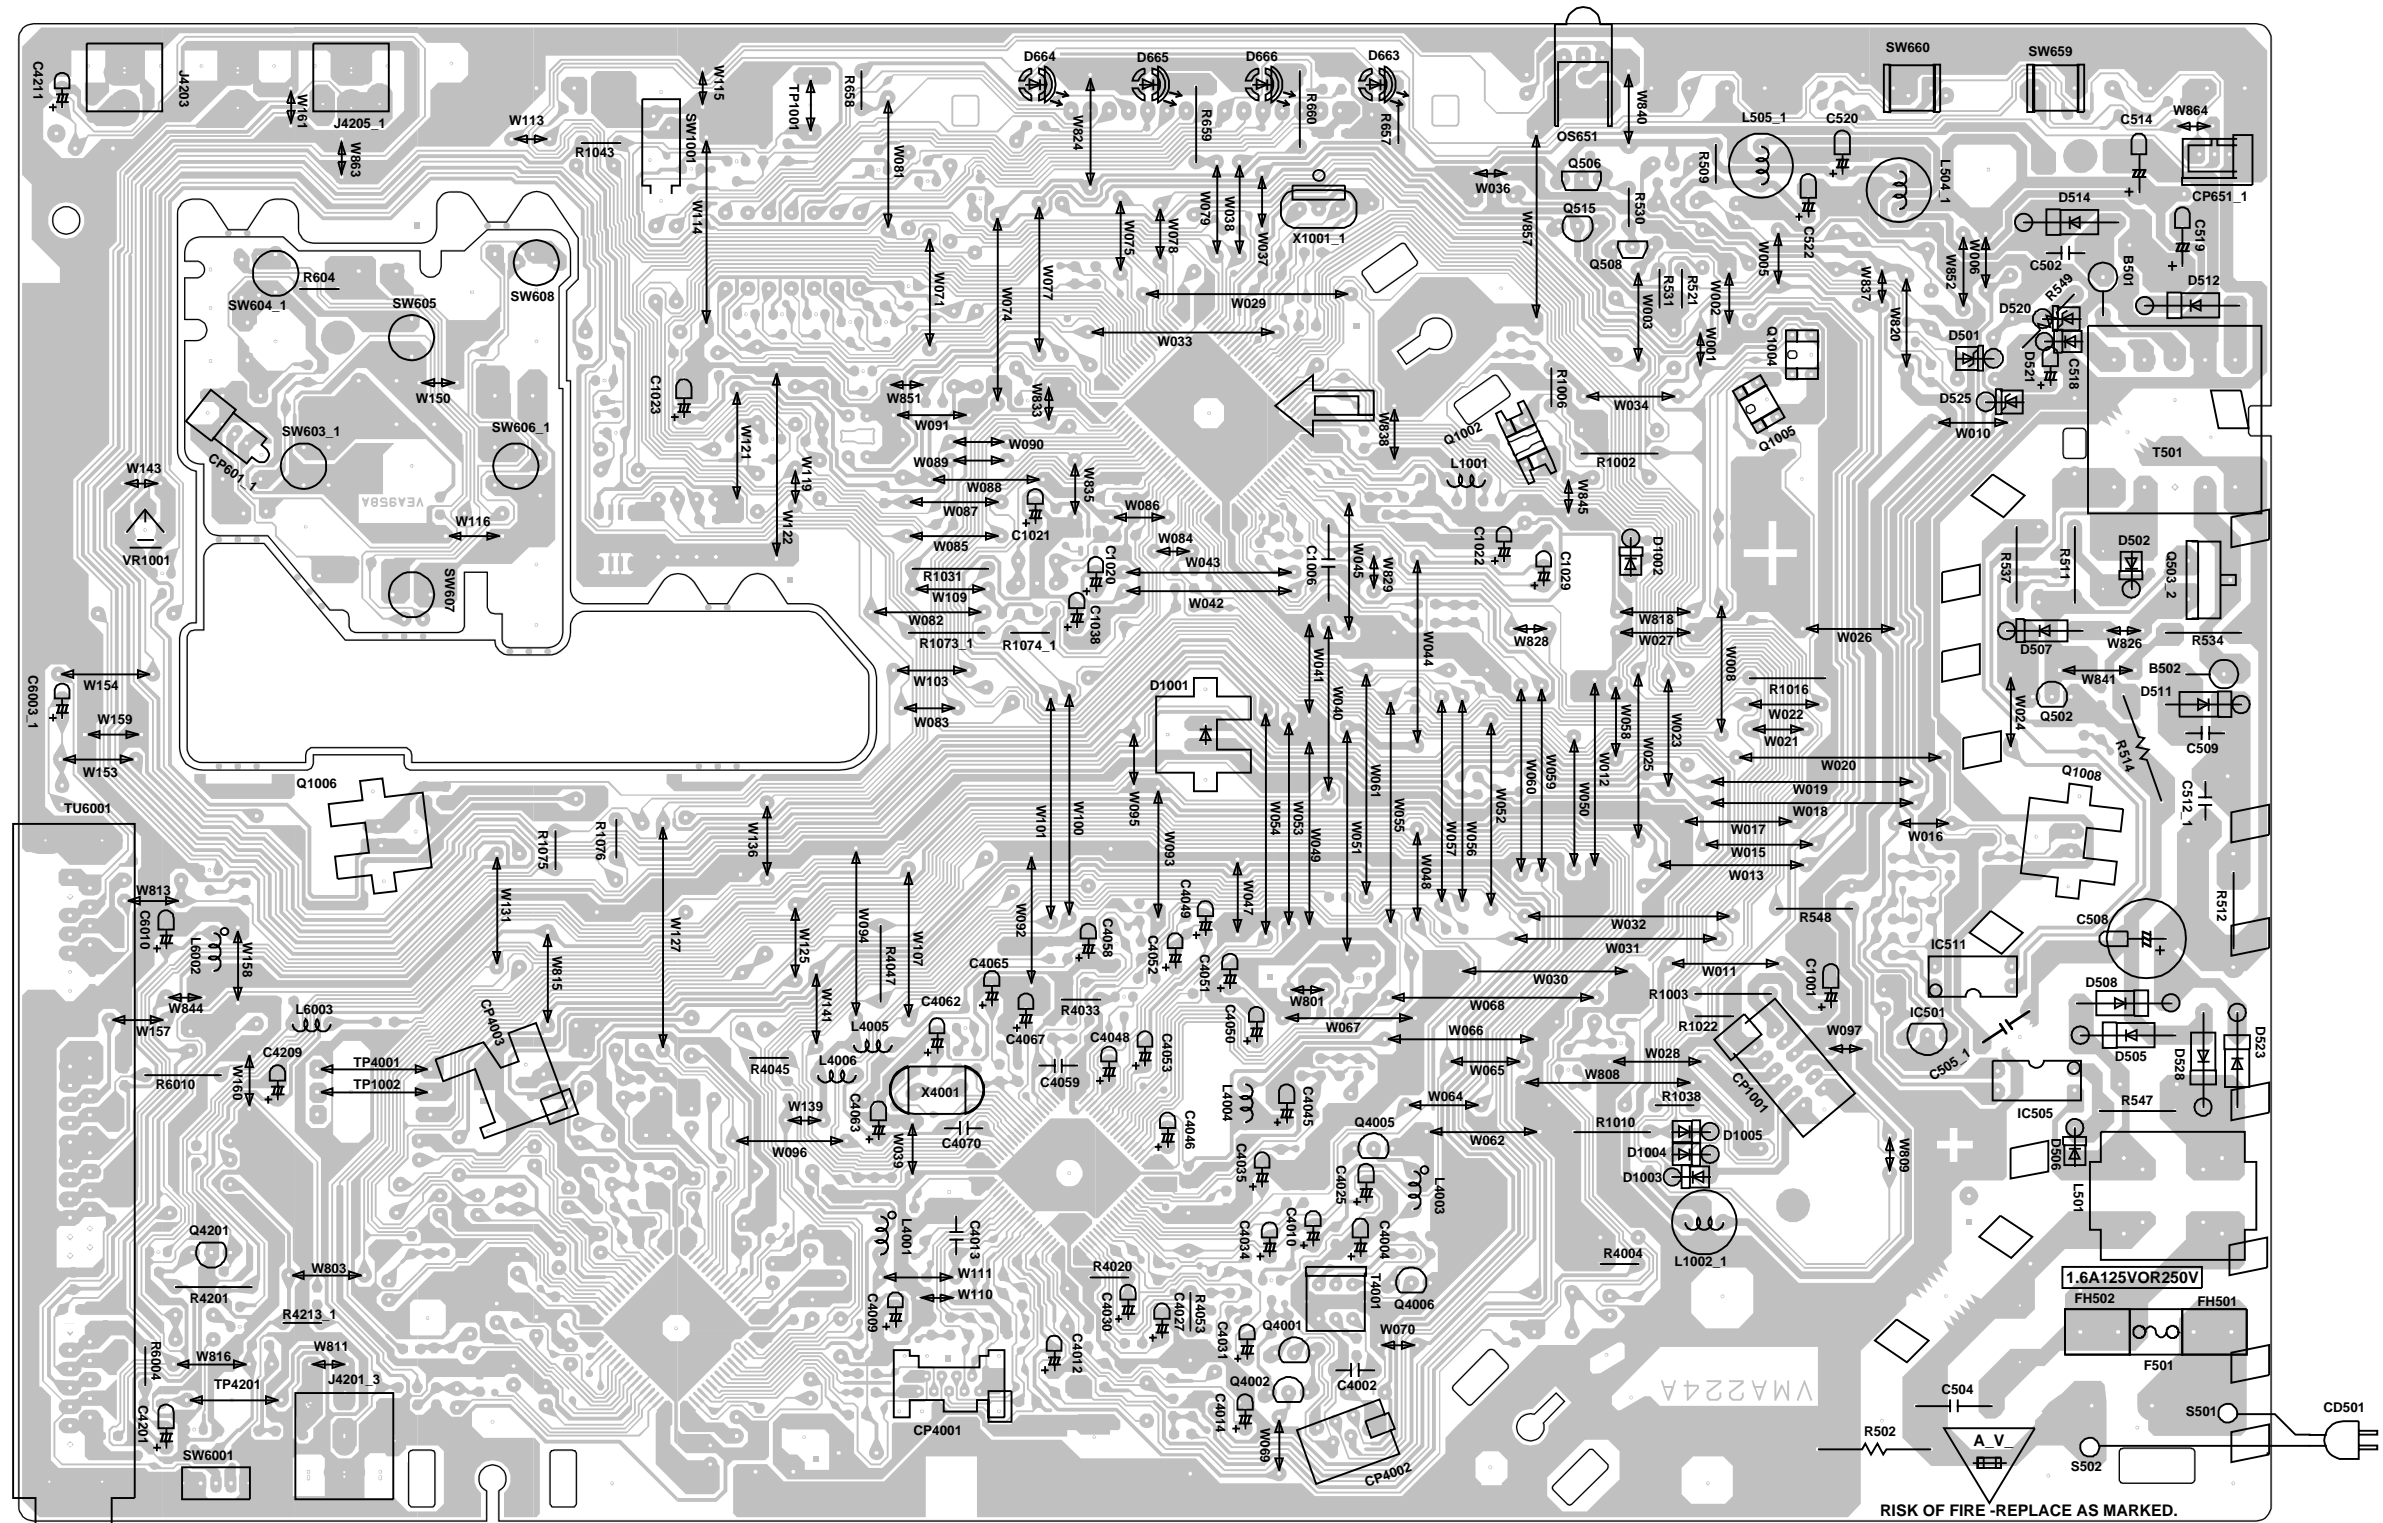

PRINTED CIRCUIT BOARDS
SYSCON/OPERATION (CHIP MOUNTED PARTS)
SOLDER SIDE

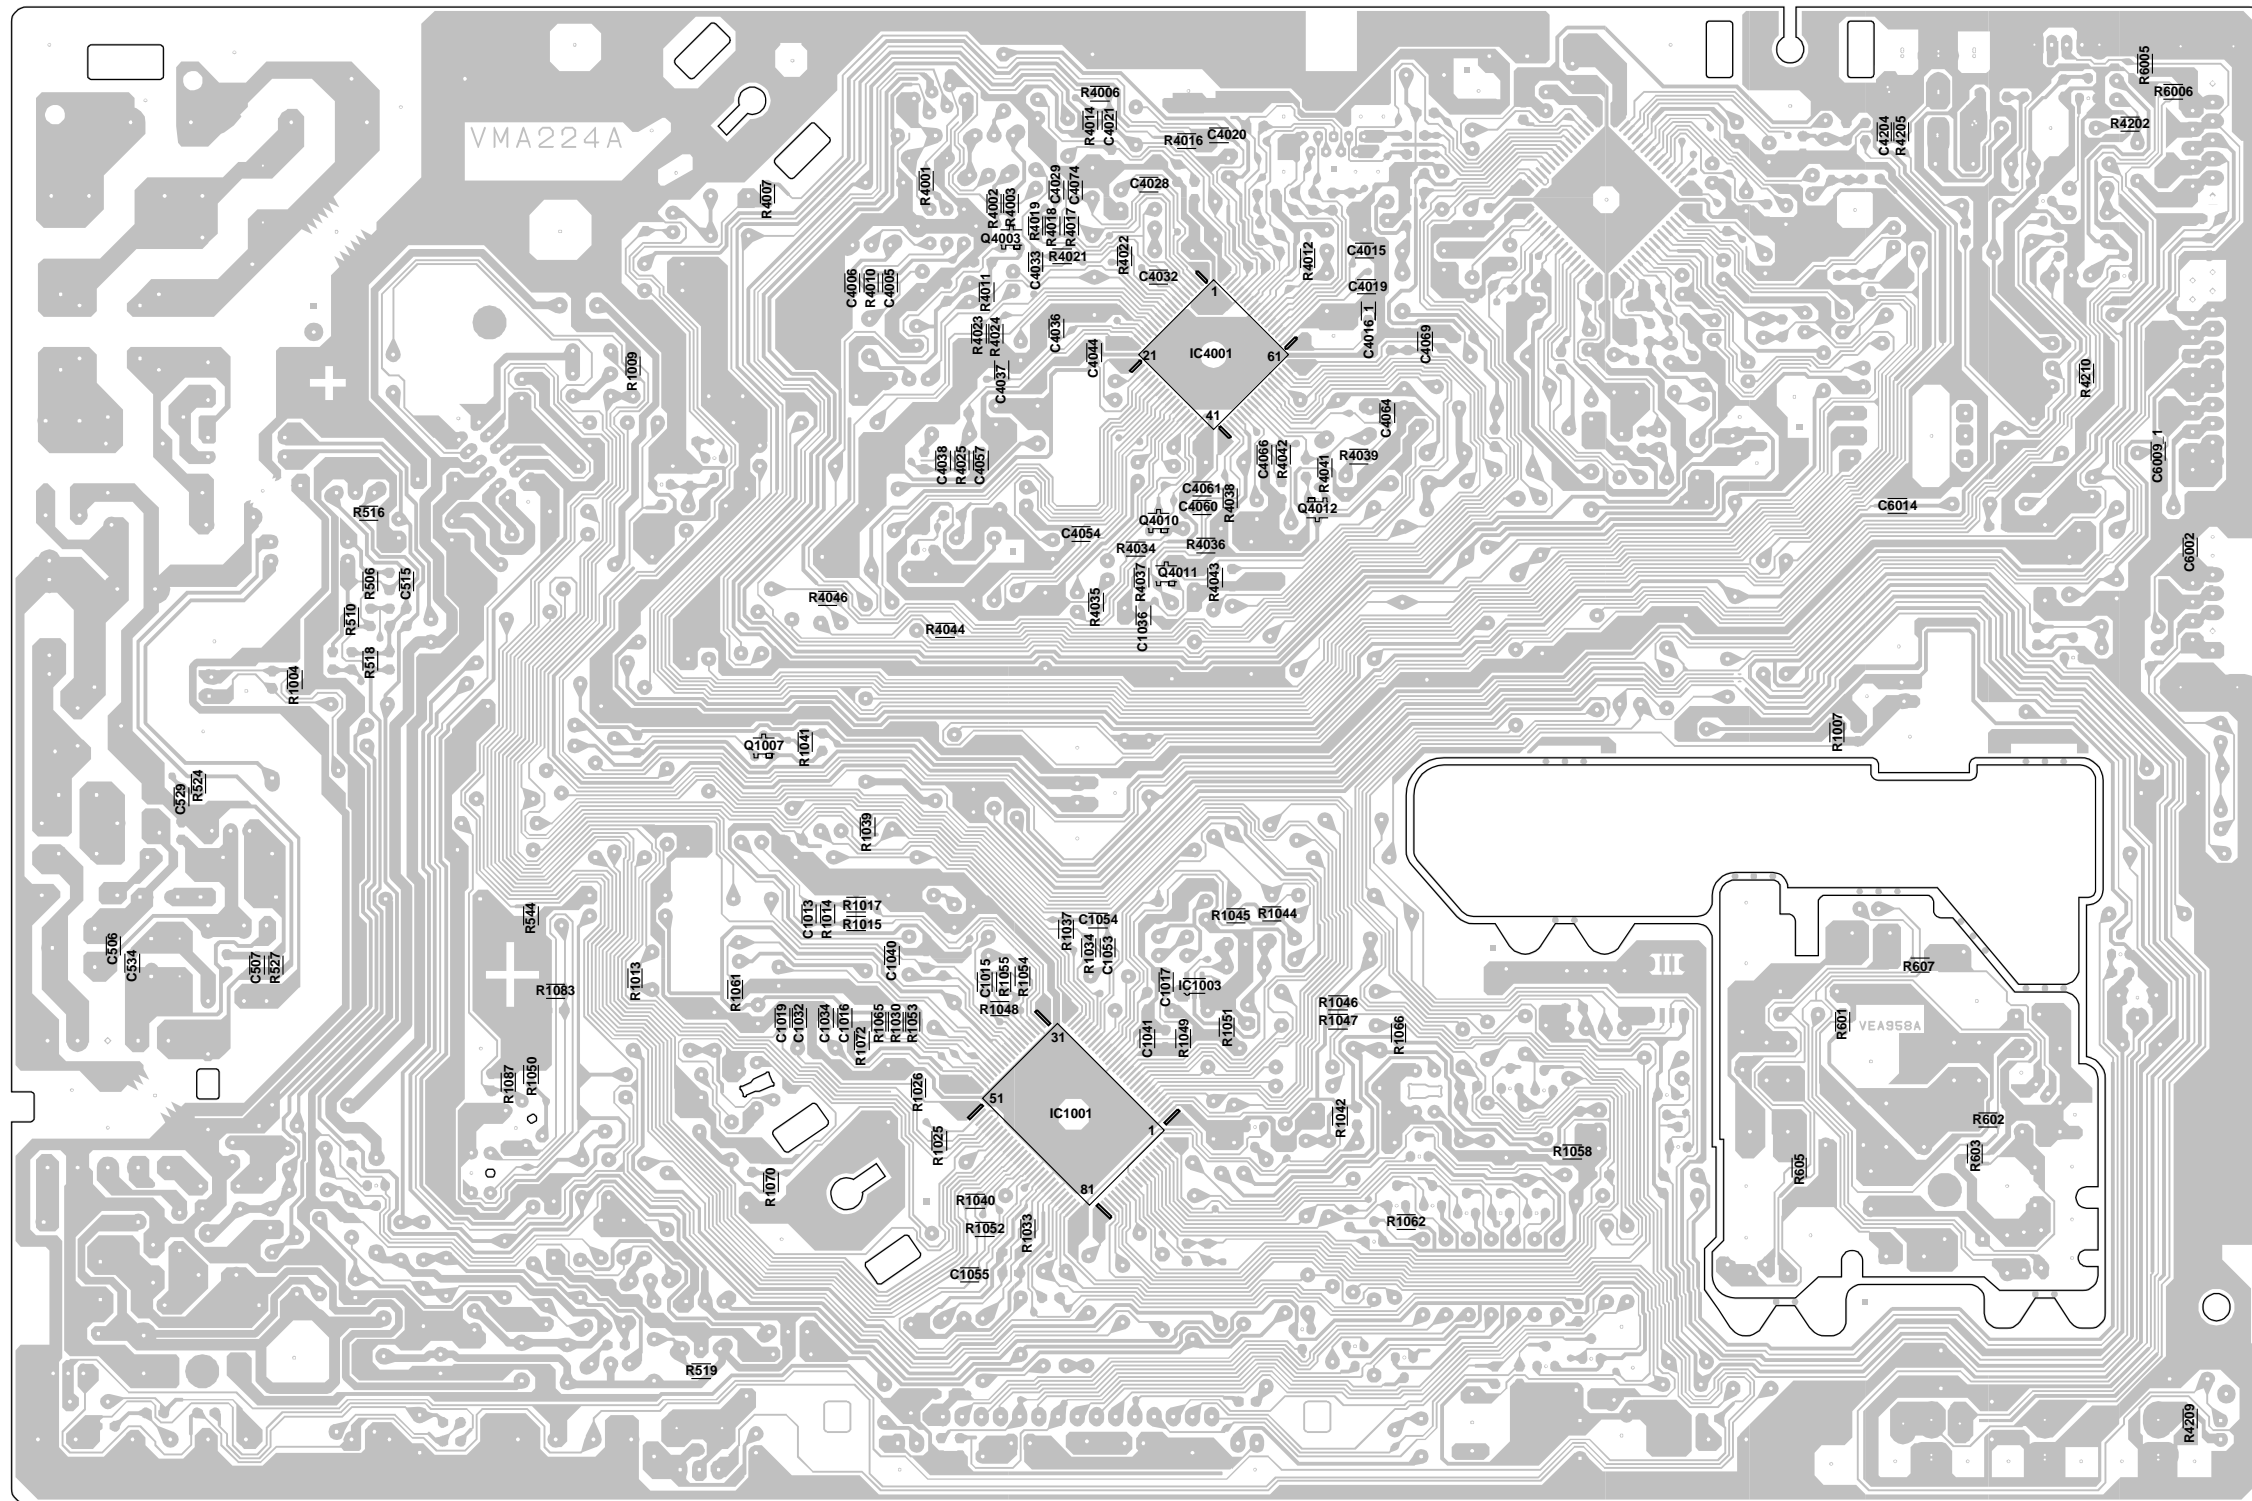

Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB)

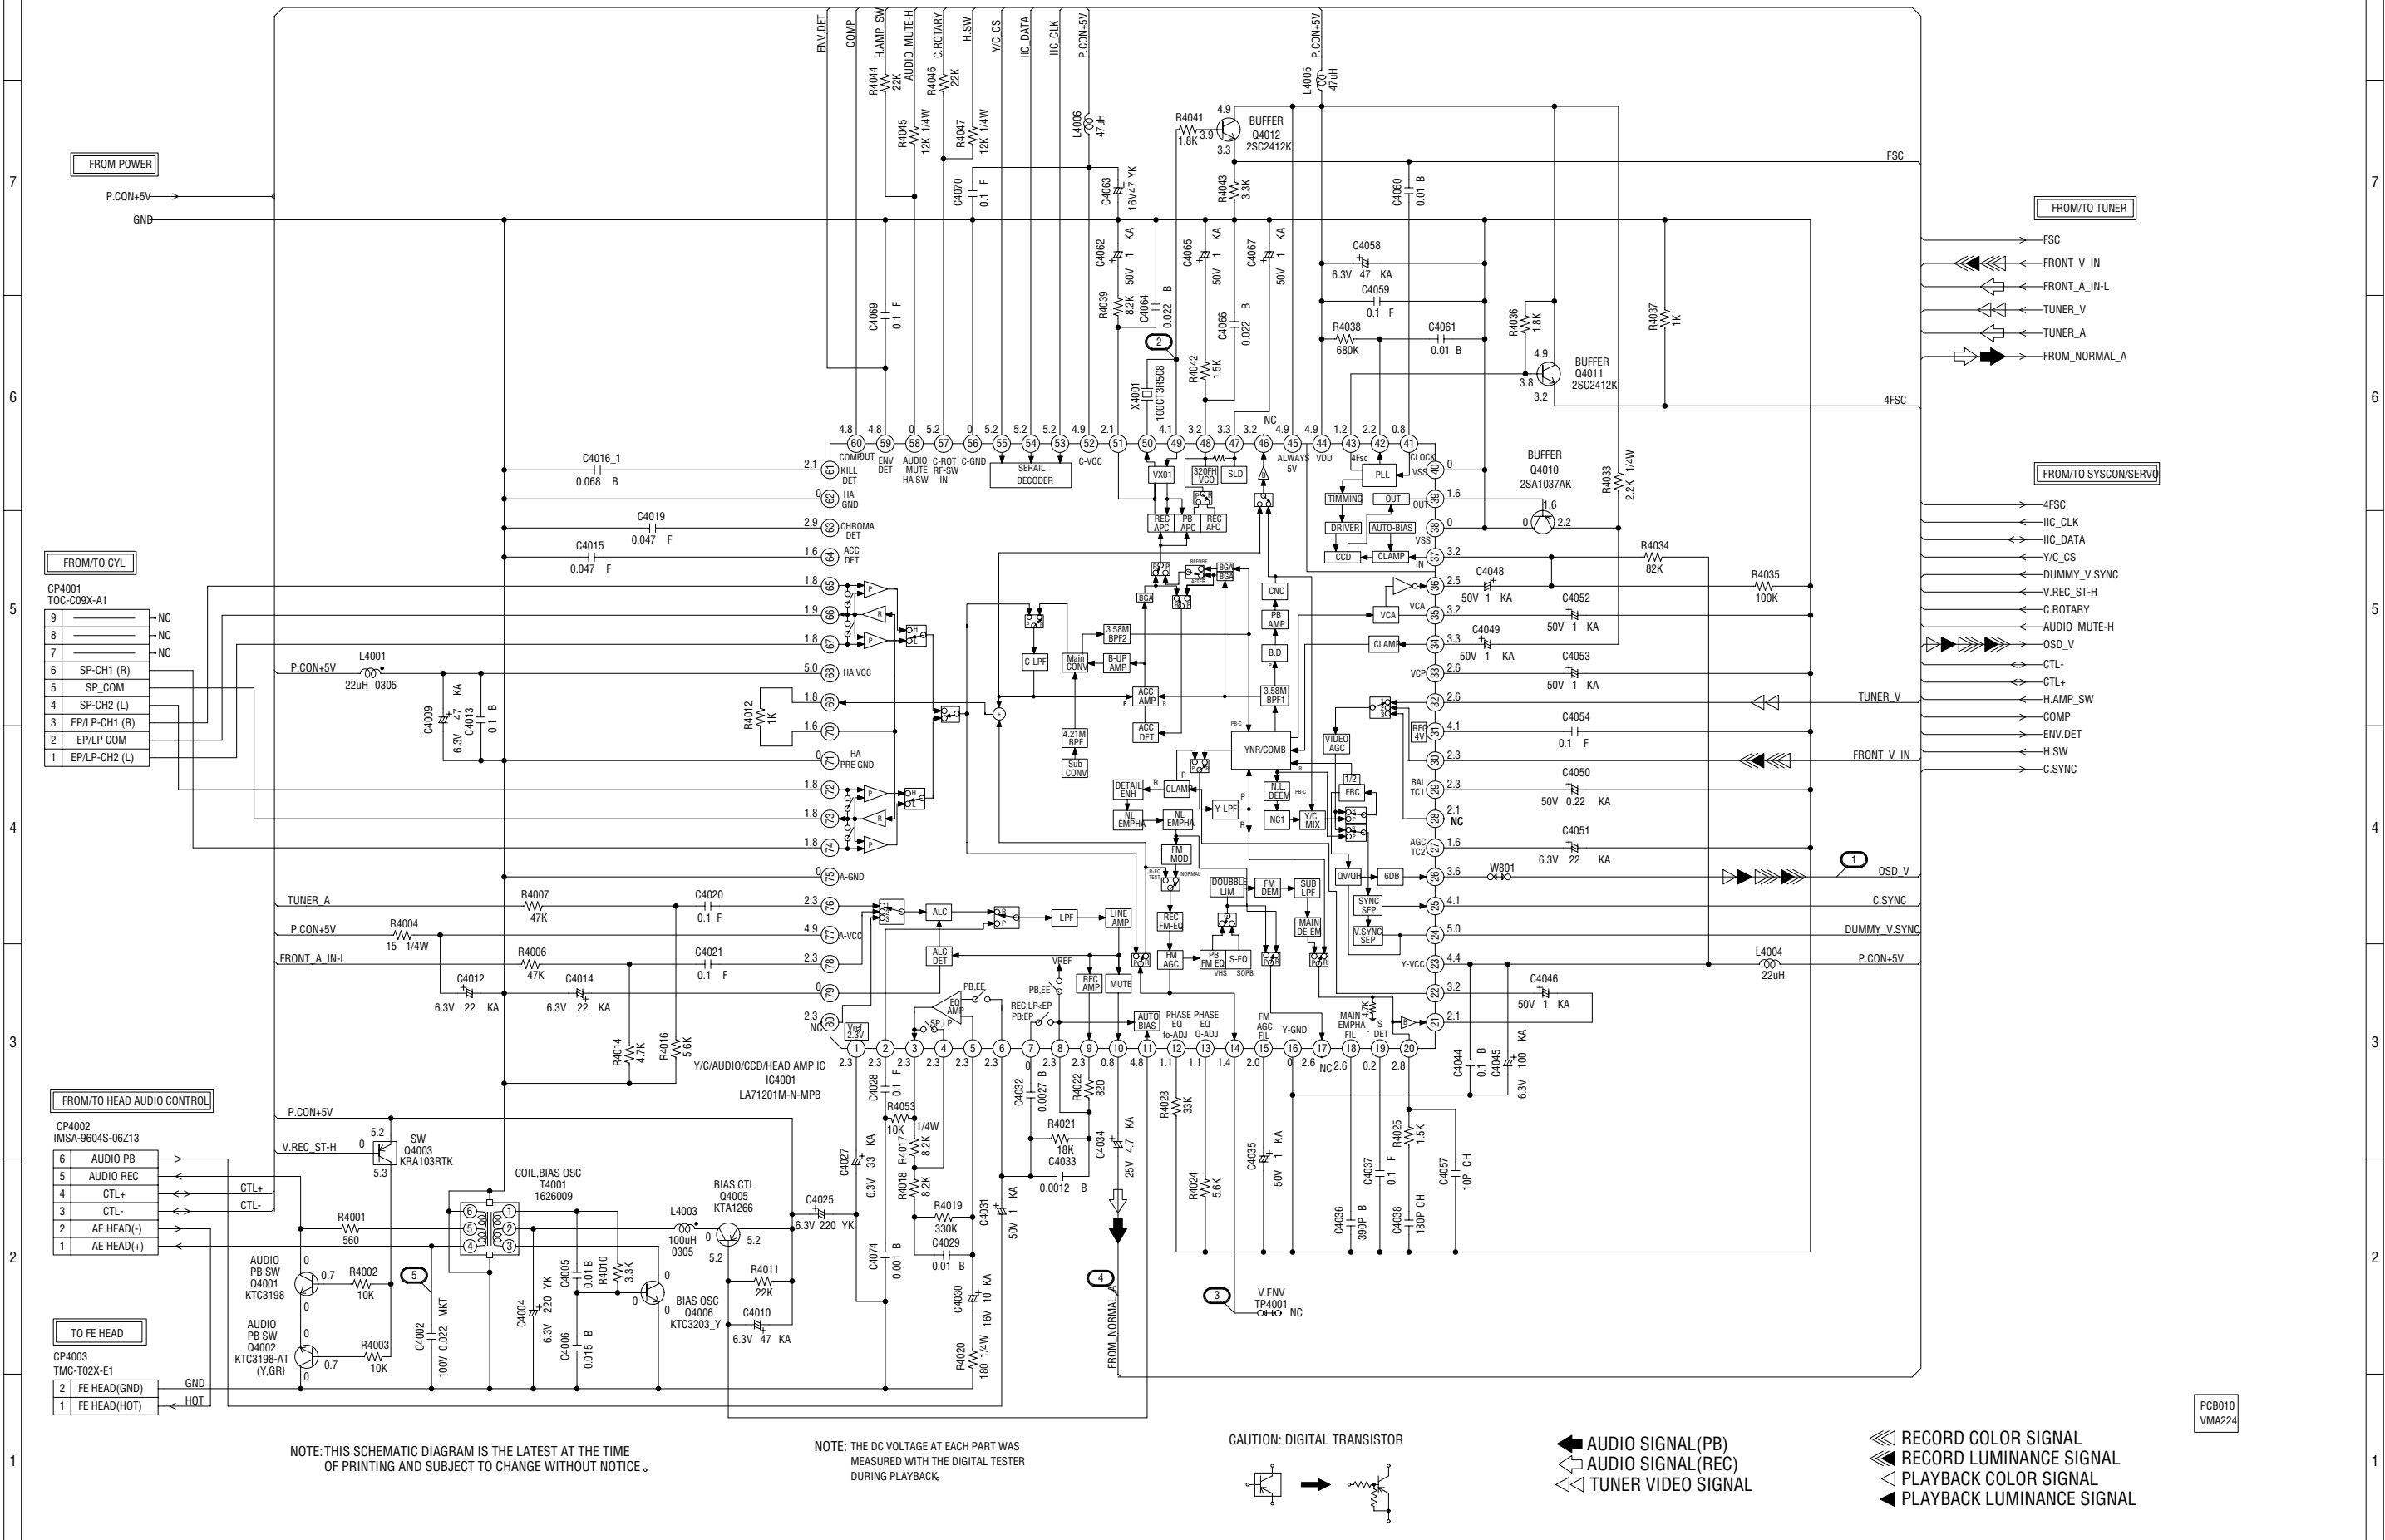

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR

- ▶ AUDIO SIGNAL (PB)
- ◀ AUDIO SIGNAL (REC)
- ◀ TUNER VIDEO SIGNAL
- ◀ RECORD COLOR SIGNAL
- ◀ RECORD LUMINANCE SIGNAL
- ◀ PLAYBACK COLOR SIGNAL
- ▶ PLAYBACK LUMINANCE SIGNAL

PCB010
VMA224

SYSTEM CONTROL/SERVO SCHEMATIC DIAGRAM (SYSCON PCB)

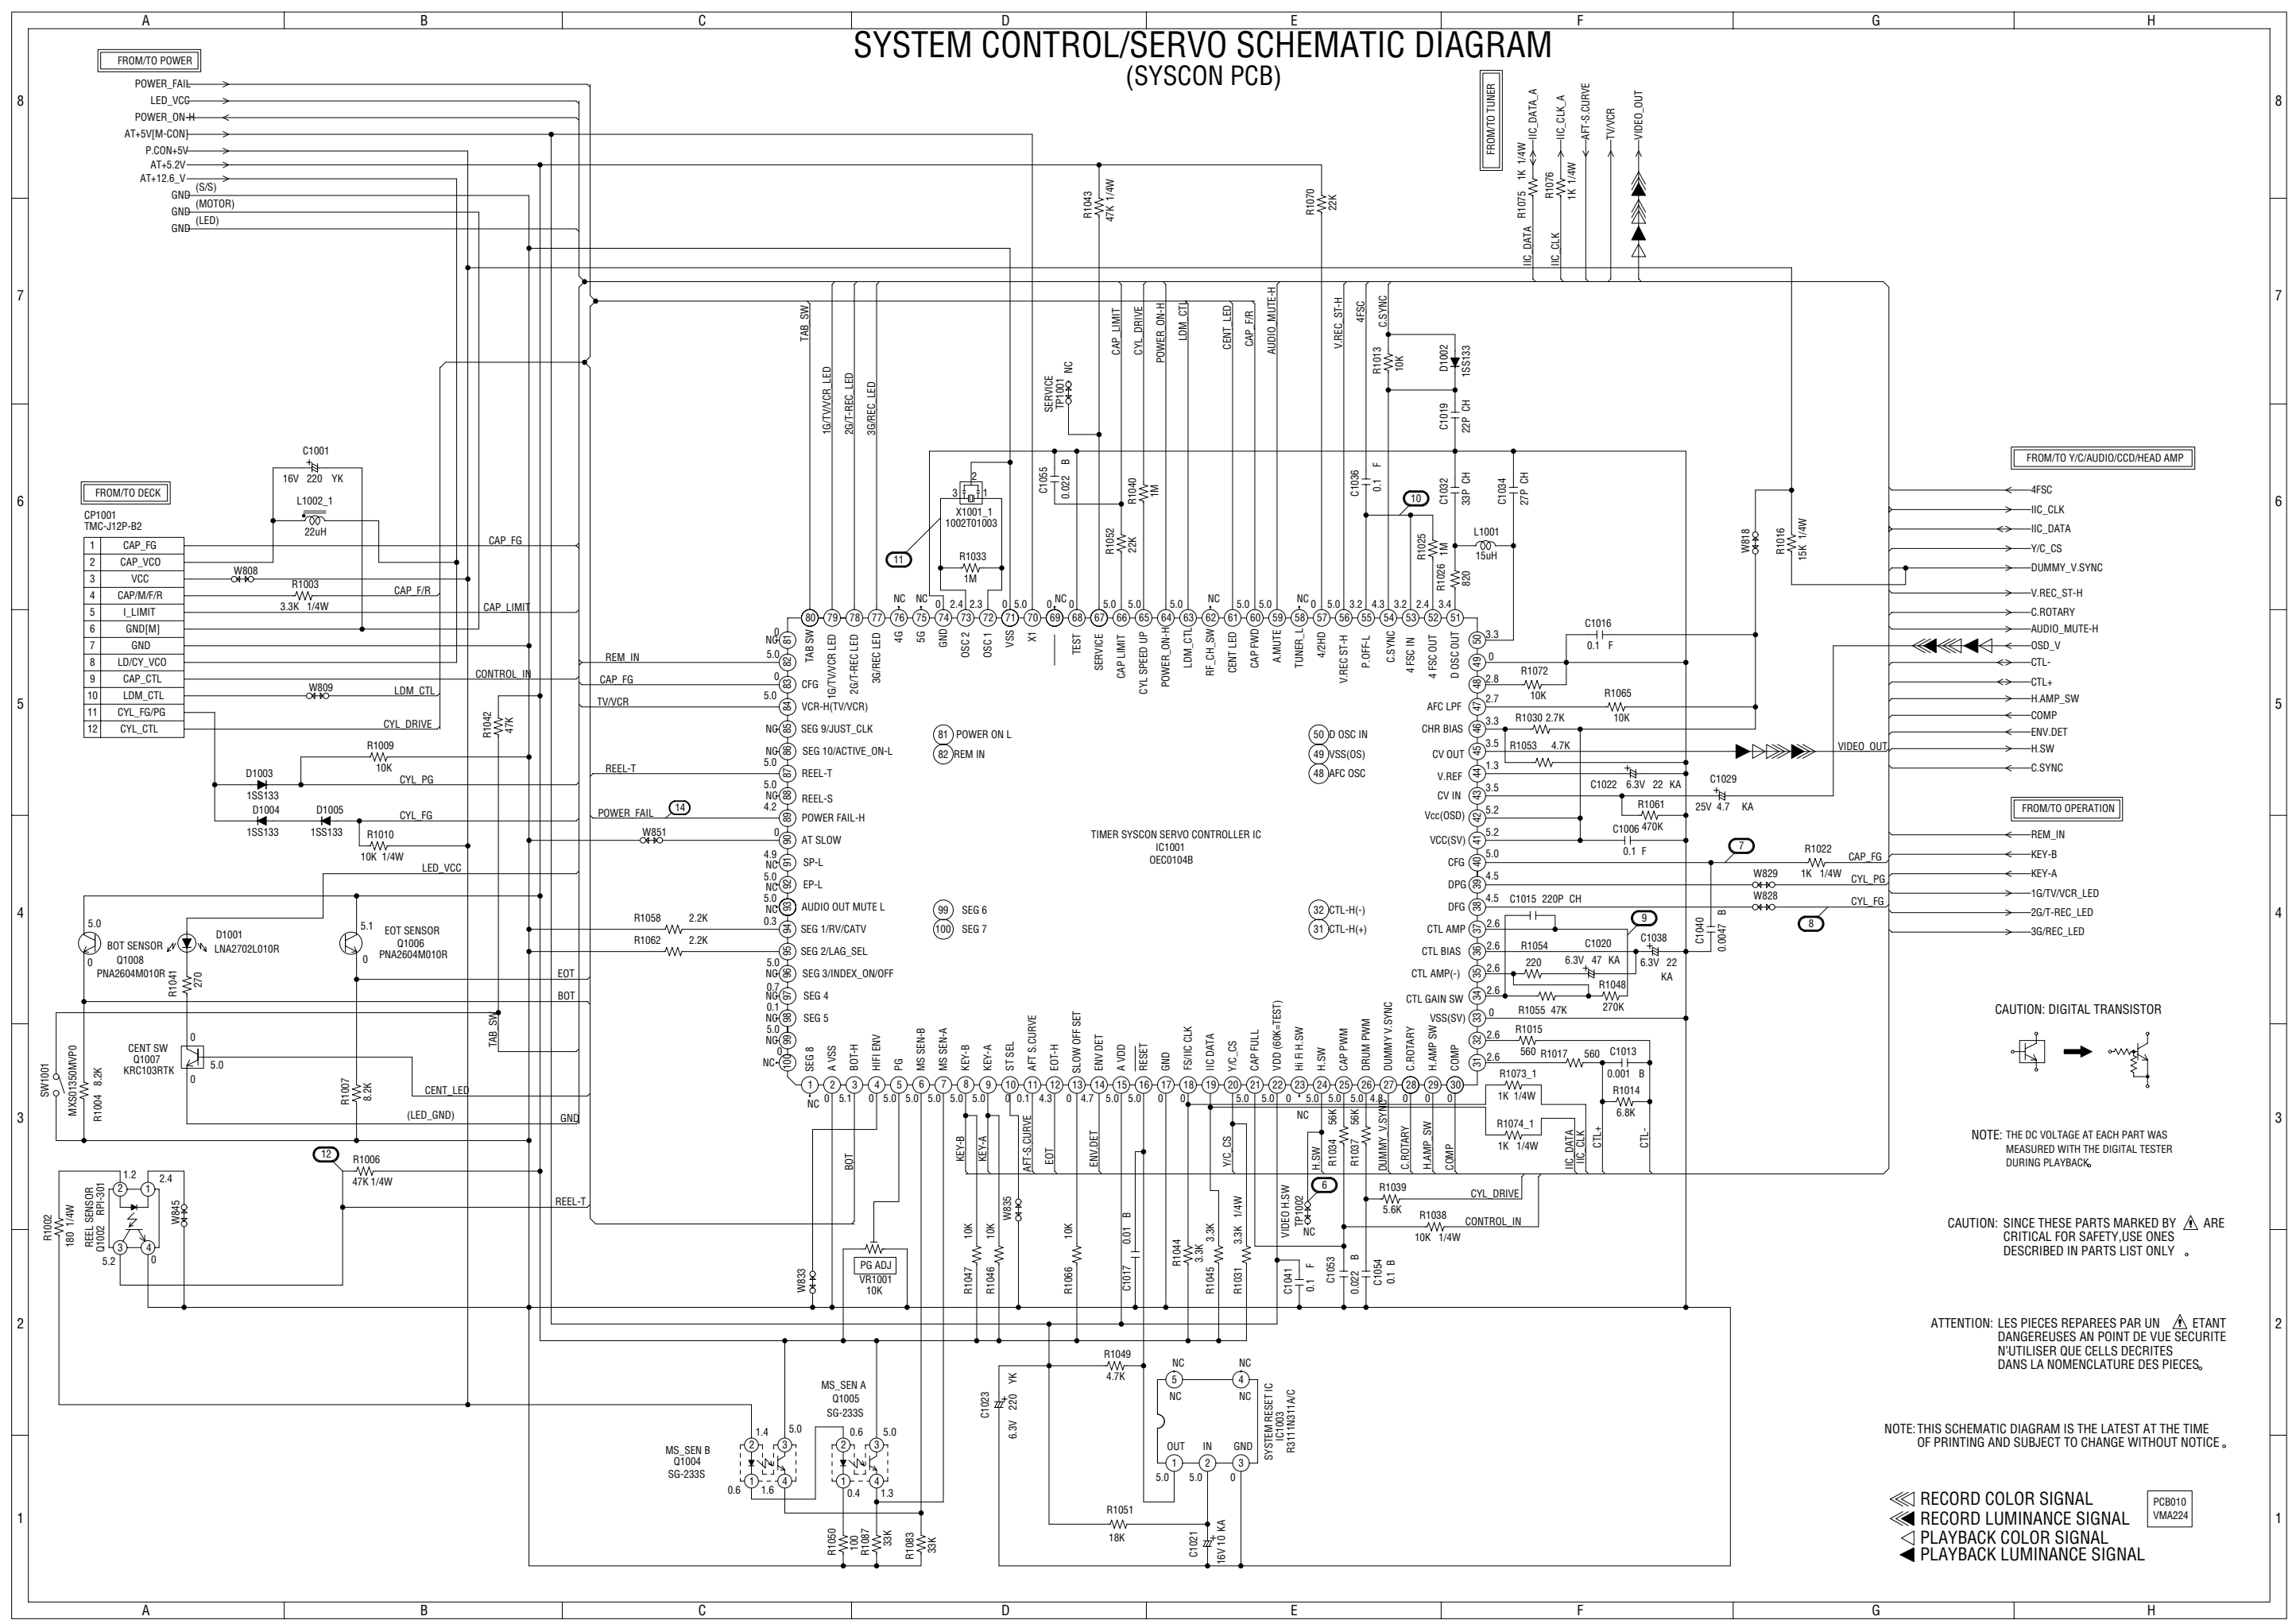

FROM/TO Y/C/AUDIO/CCD/HEAD AMP

FROM/TO OPERATION

CAUTION: DIGITAL TRANSISTOR

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

- RECORD COLOR SIGNAL
- RECORD LUMINANCE SIGNAL
- PLAYBACK COLOR SIGNAL
- PLAYBACK LUMINANCE SIGNAL

PC8010
VMA224

POWER SCHEMATIC DIAGRAM (SYSCON PCB)

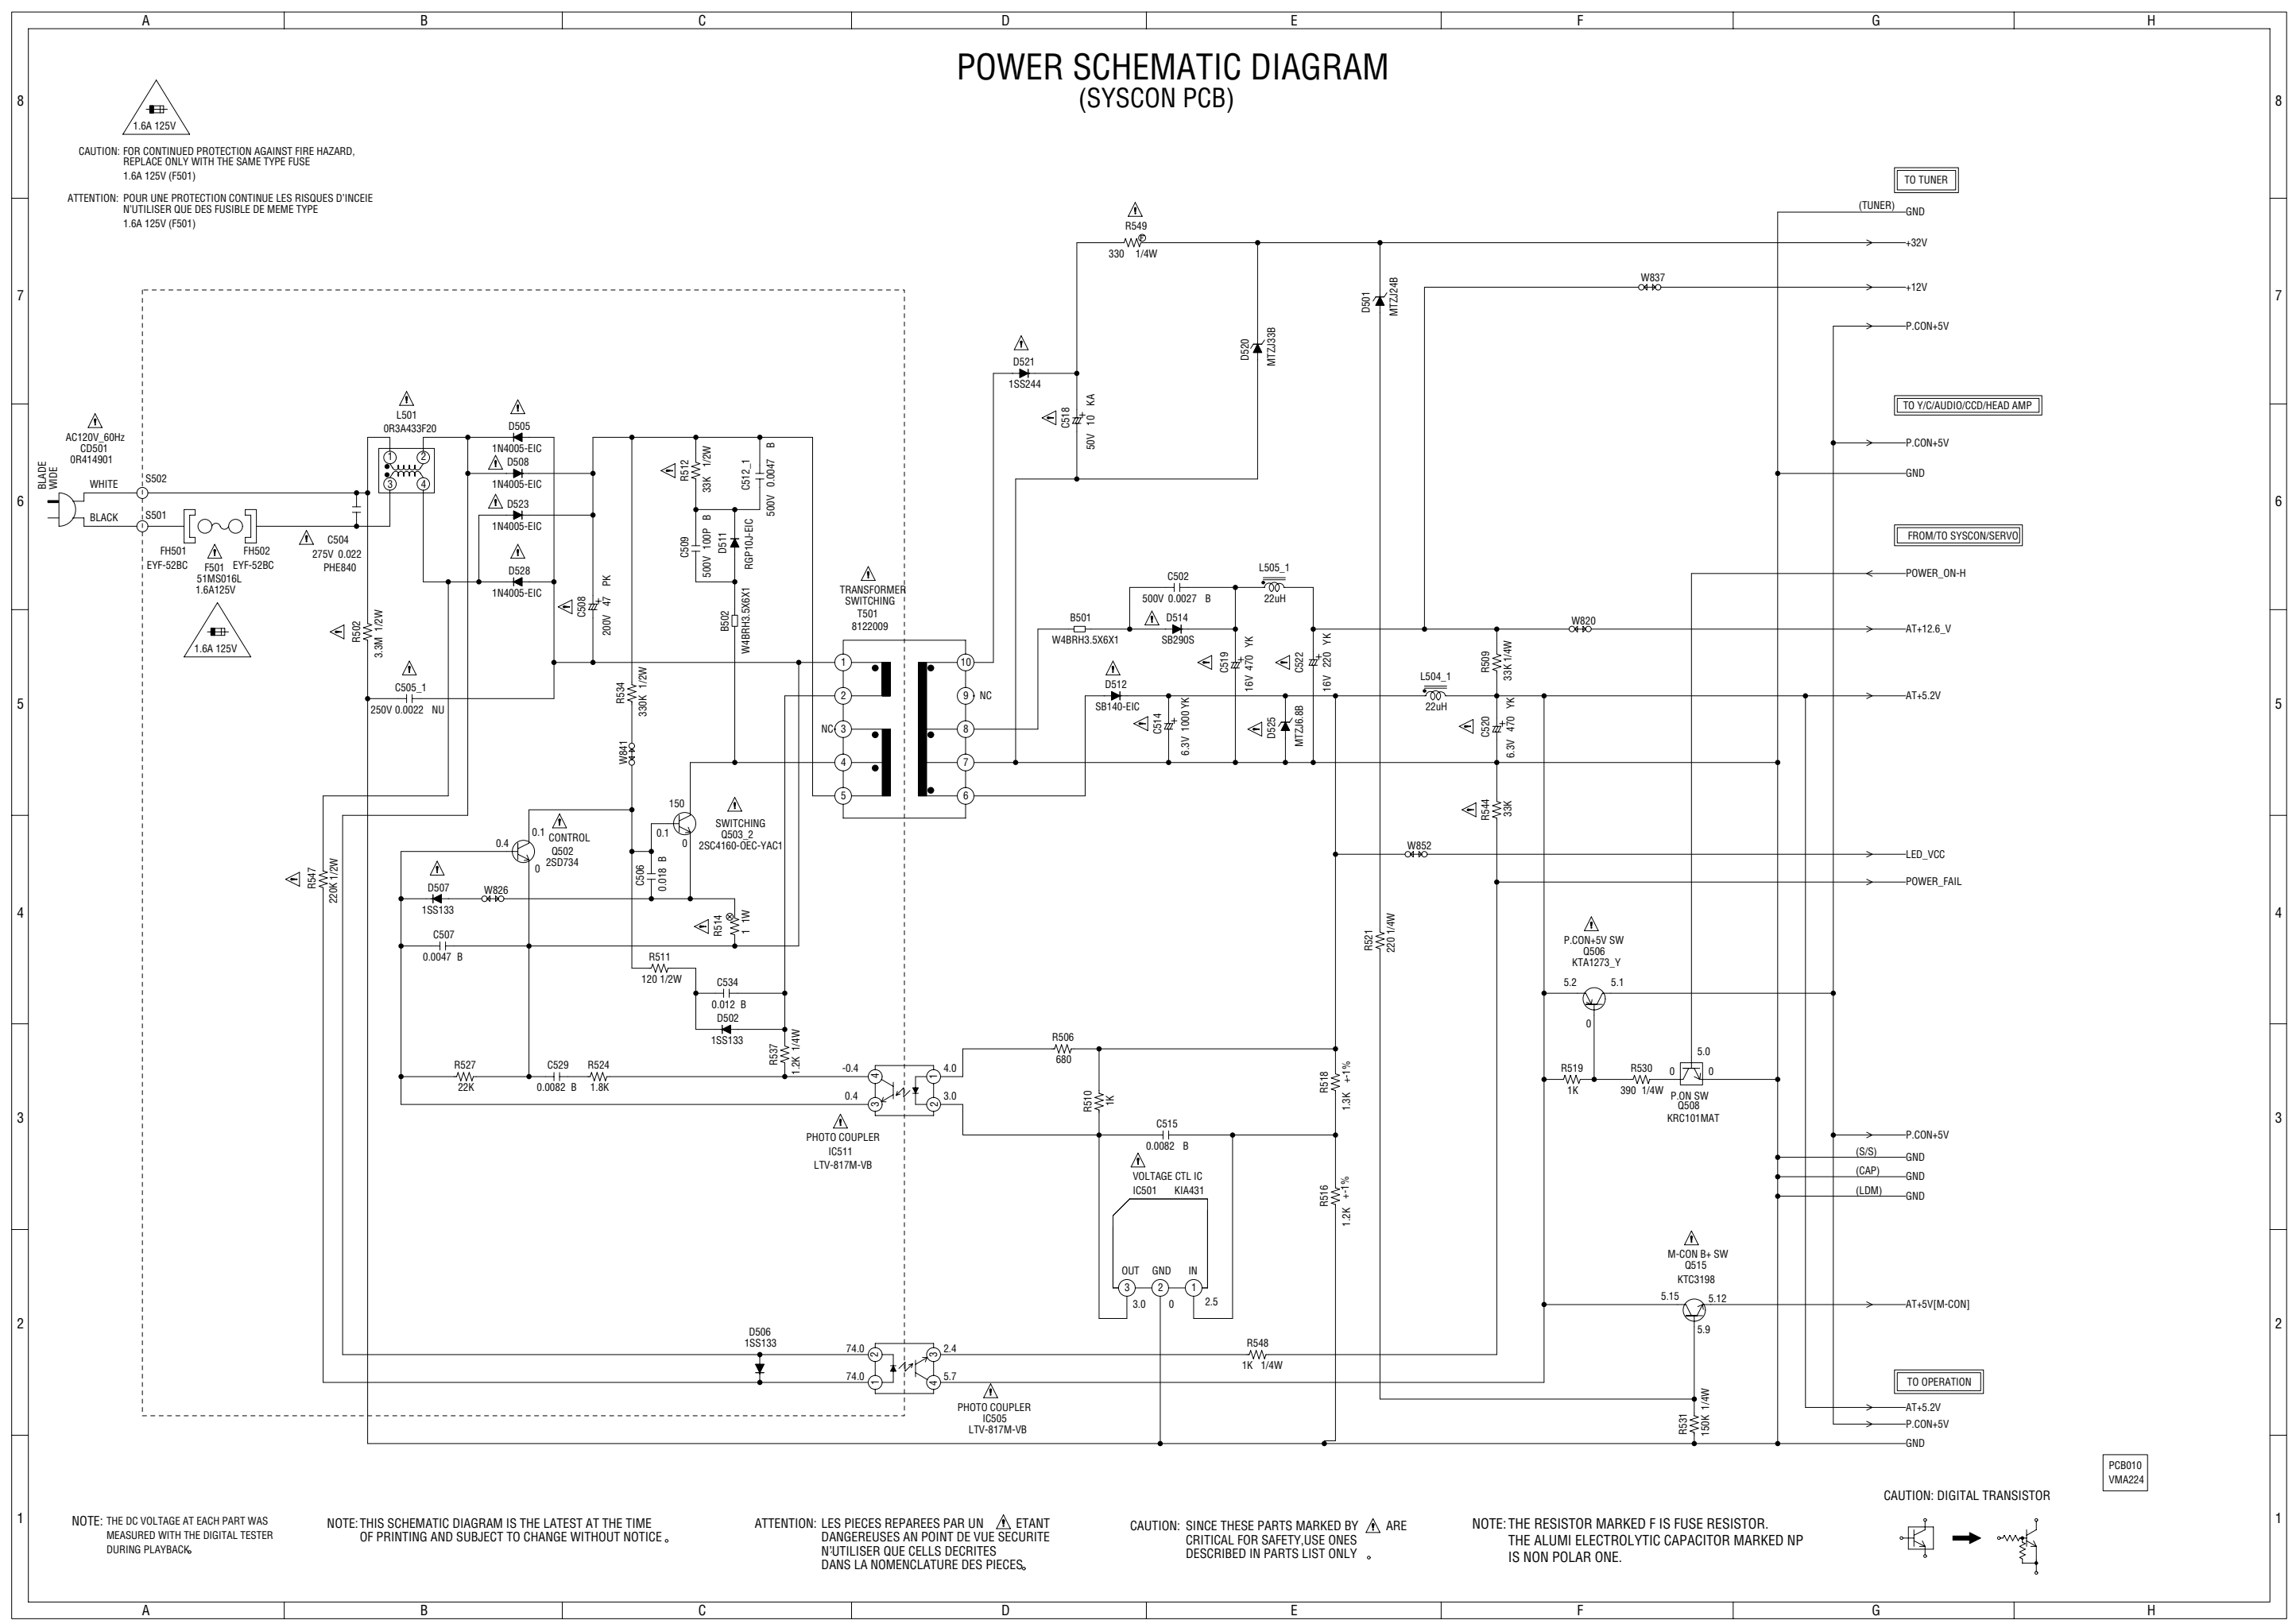

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

 
NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

ATTENTION: LES PIÈCES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

CAUTION: DIGITAL TRANSISTOR




PCB010
VMA224


OPERATION SCHEMATIC DIAGRAM (SYSCON PCB)

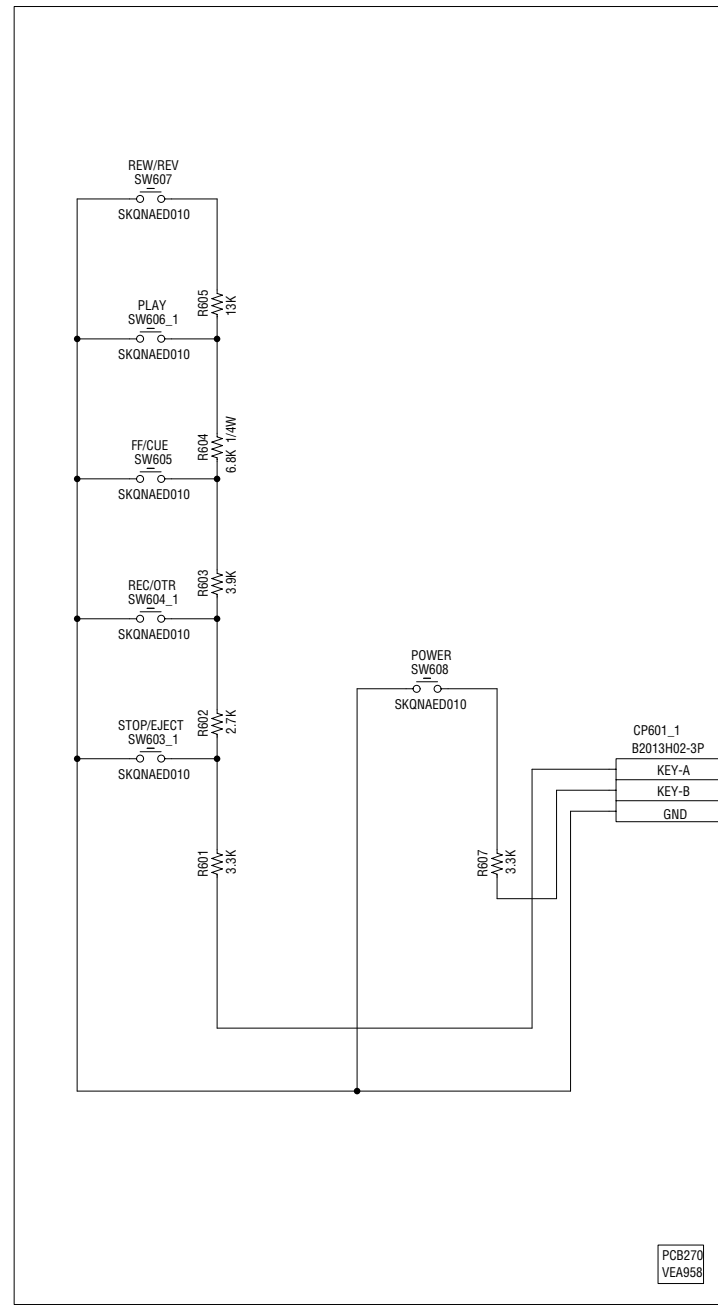

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

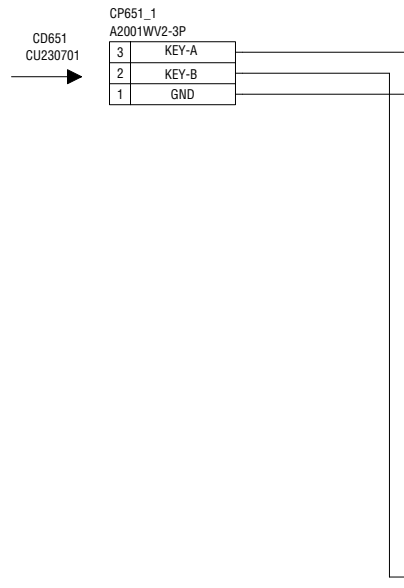


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

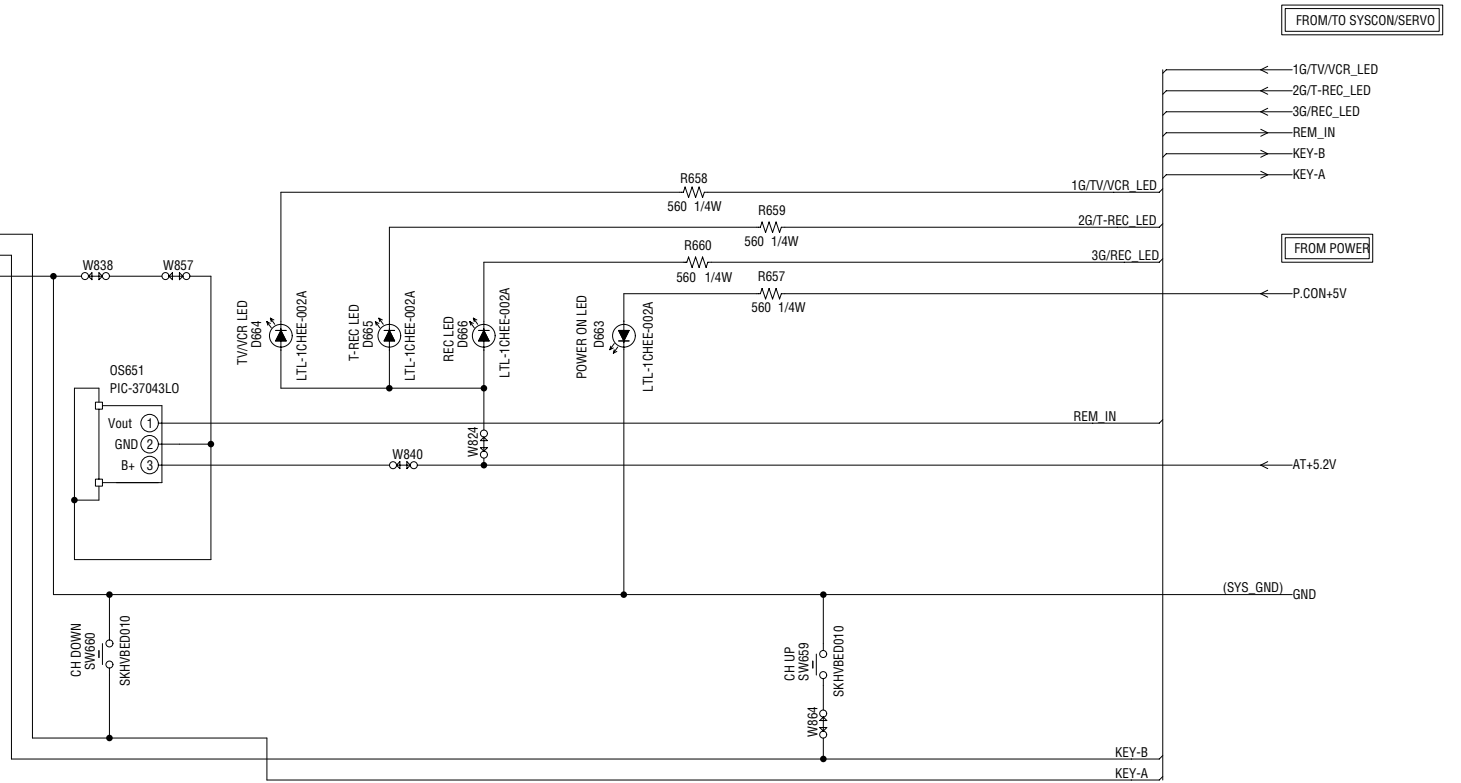

PCB010
VMA224

TUNER SCHEMATIC DIAGRAM (SYSCON PCB)

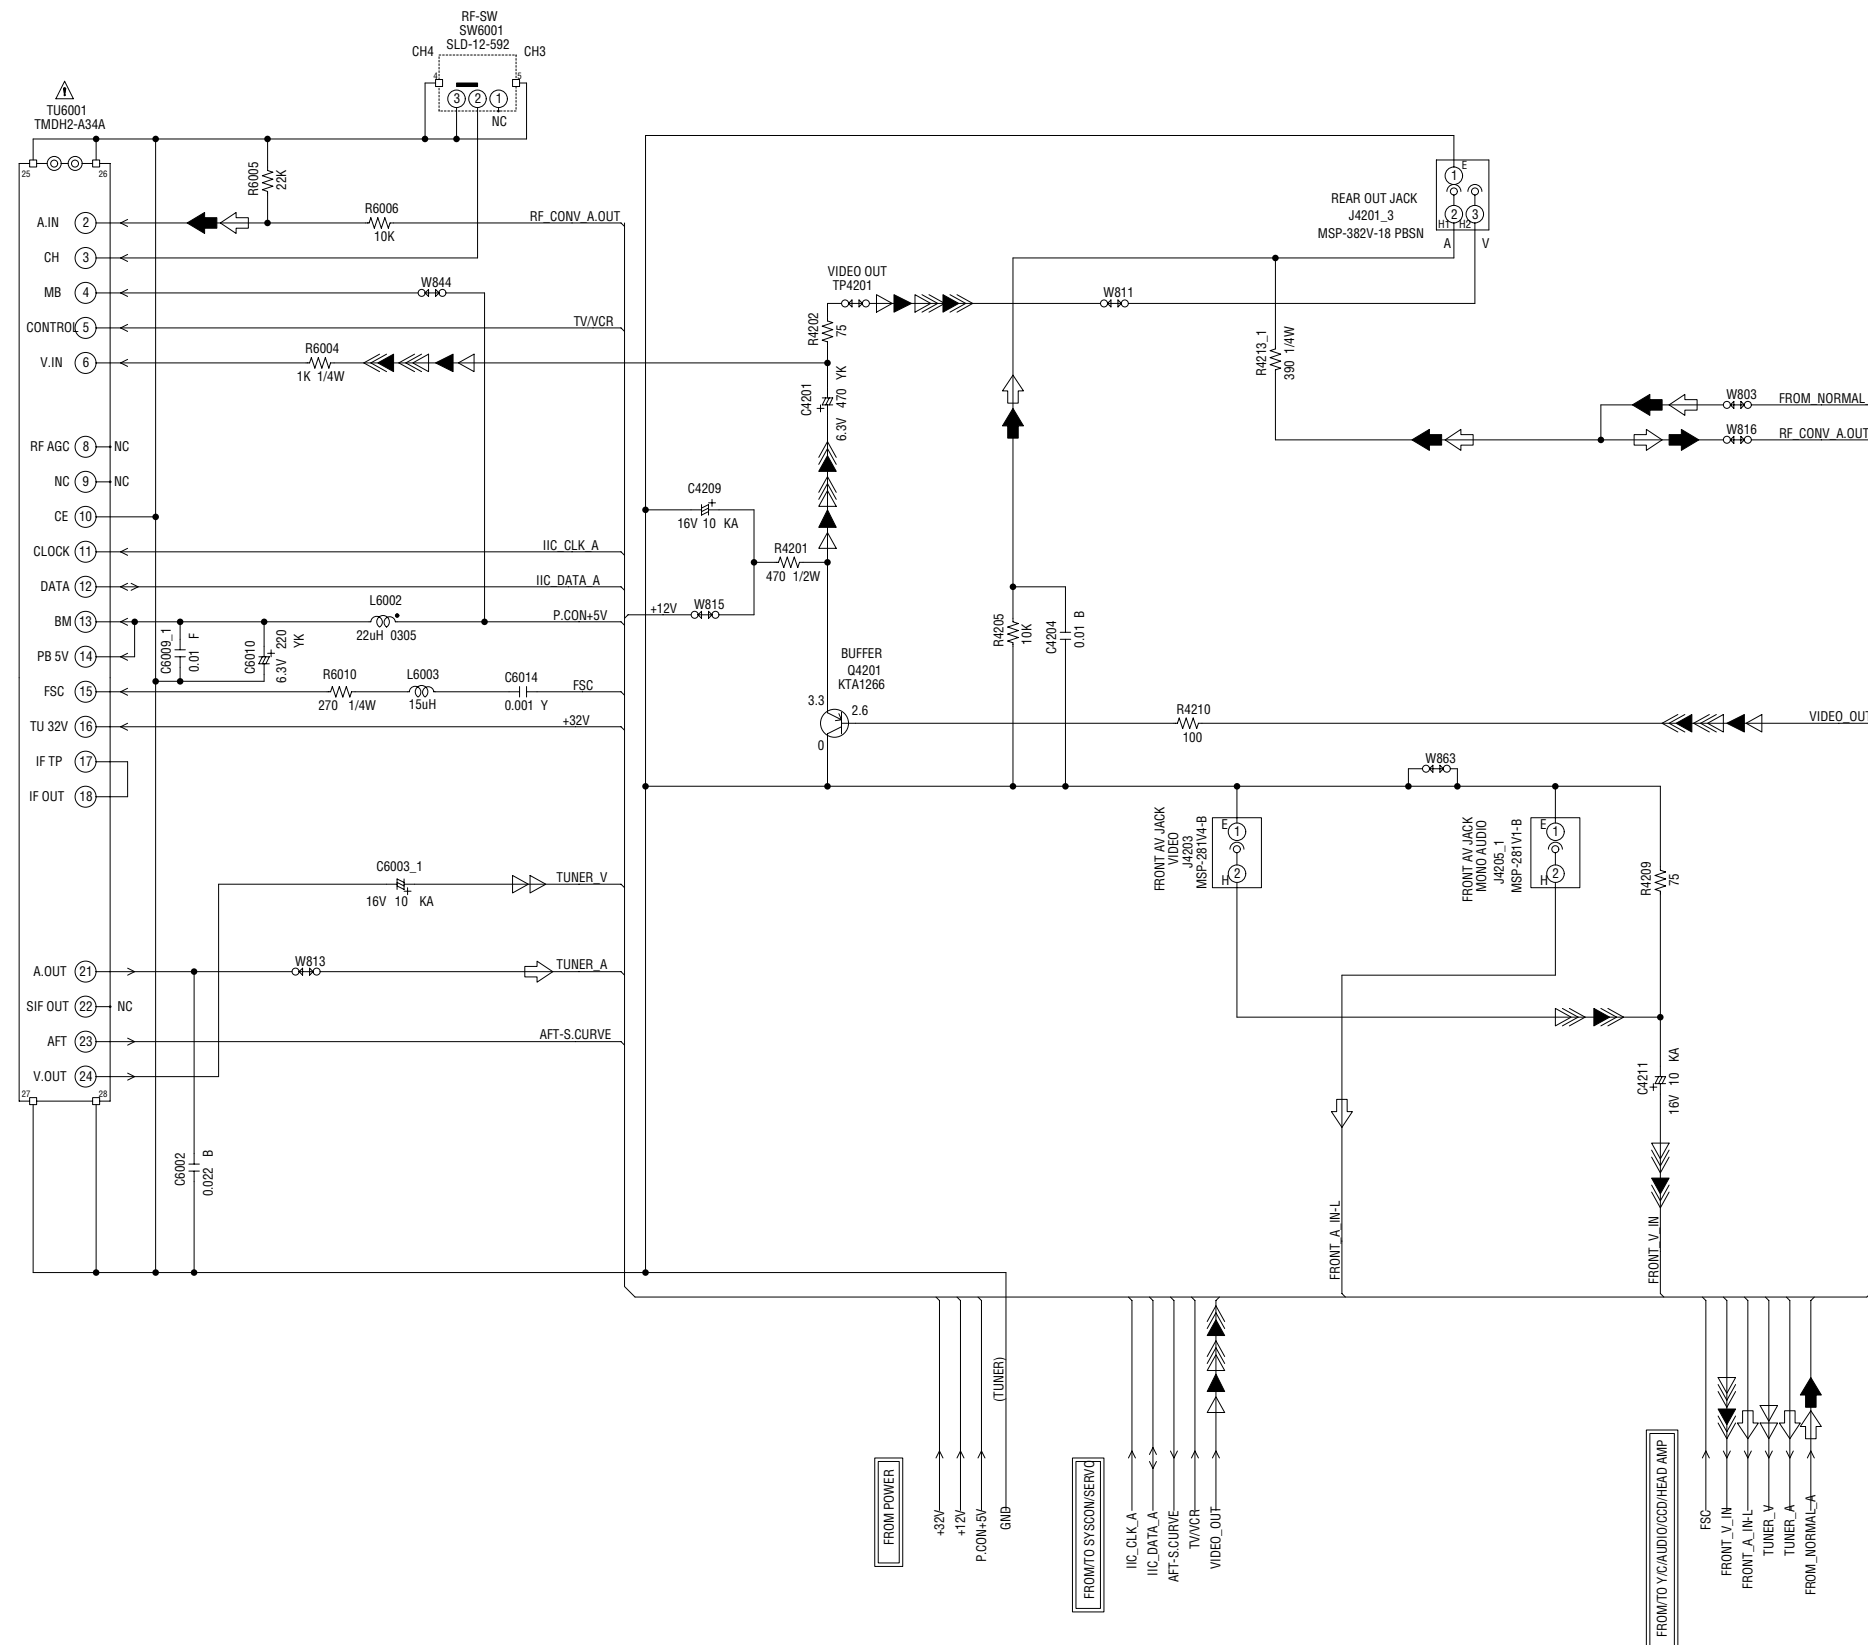

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

TUNER VIDEO SIGNAL
 PLAYBACK LUMINANCE SIGNAL
 PLAYBACK COLOR SIGNAL

RECORD LUMINANCE SIGNAL
 RECORD COLOR SIGNAL
 AUDIO SIGNAL(REC)
 AUDIO SIGNAL(PB)

PCB010
VMA224

INTERCONNECTION DIAGRAM

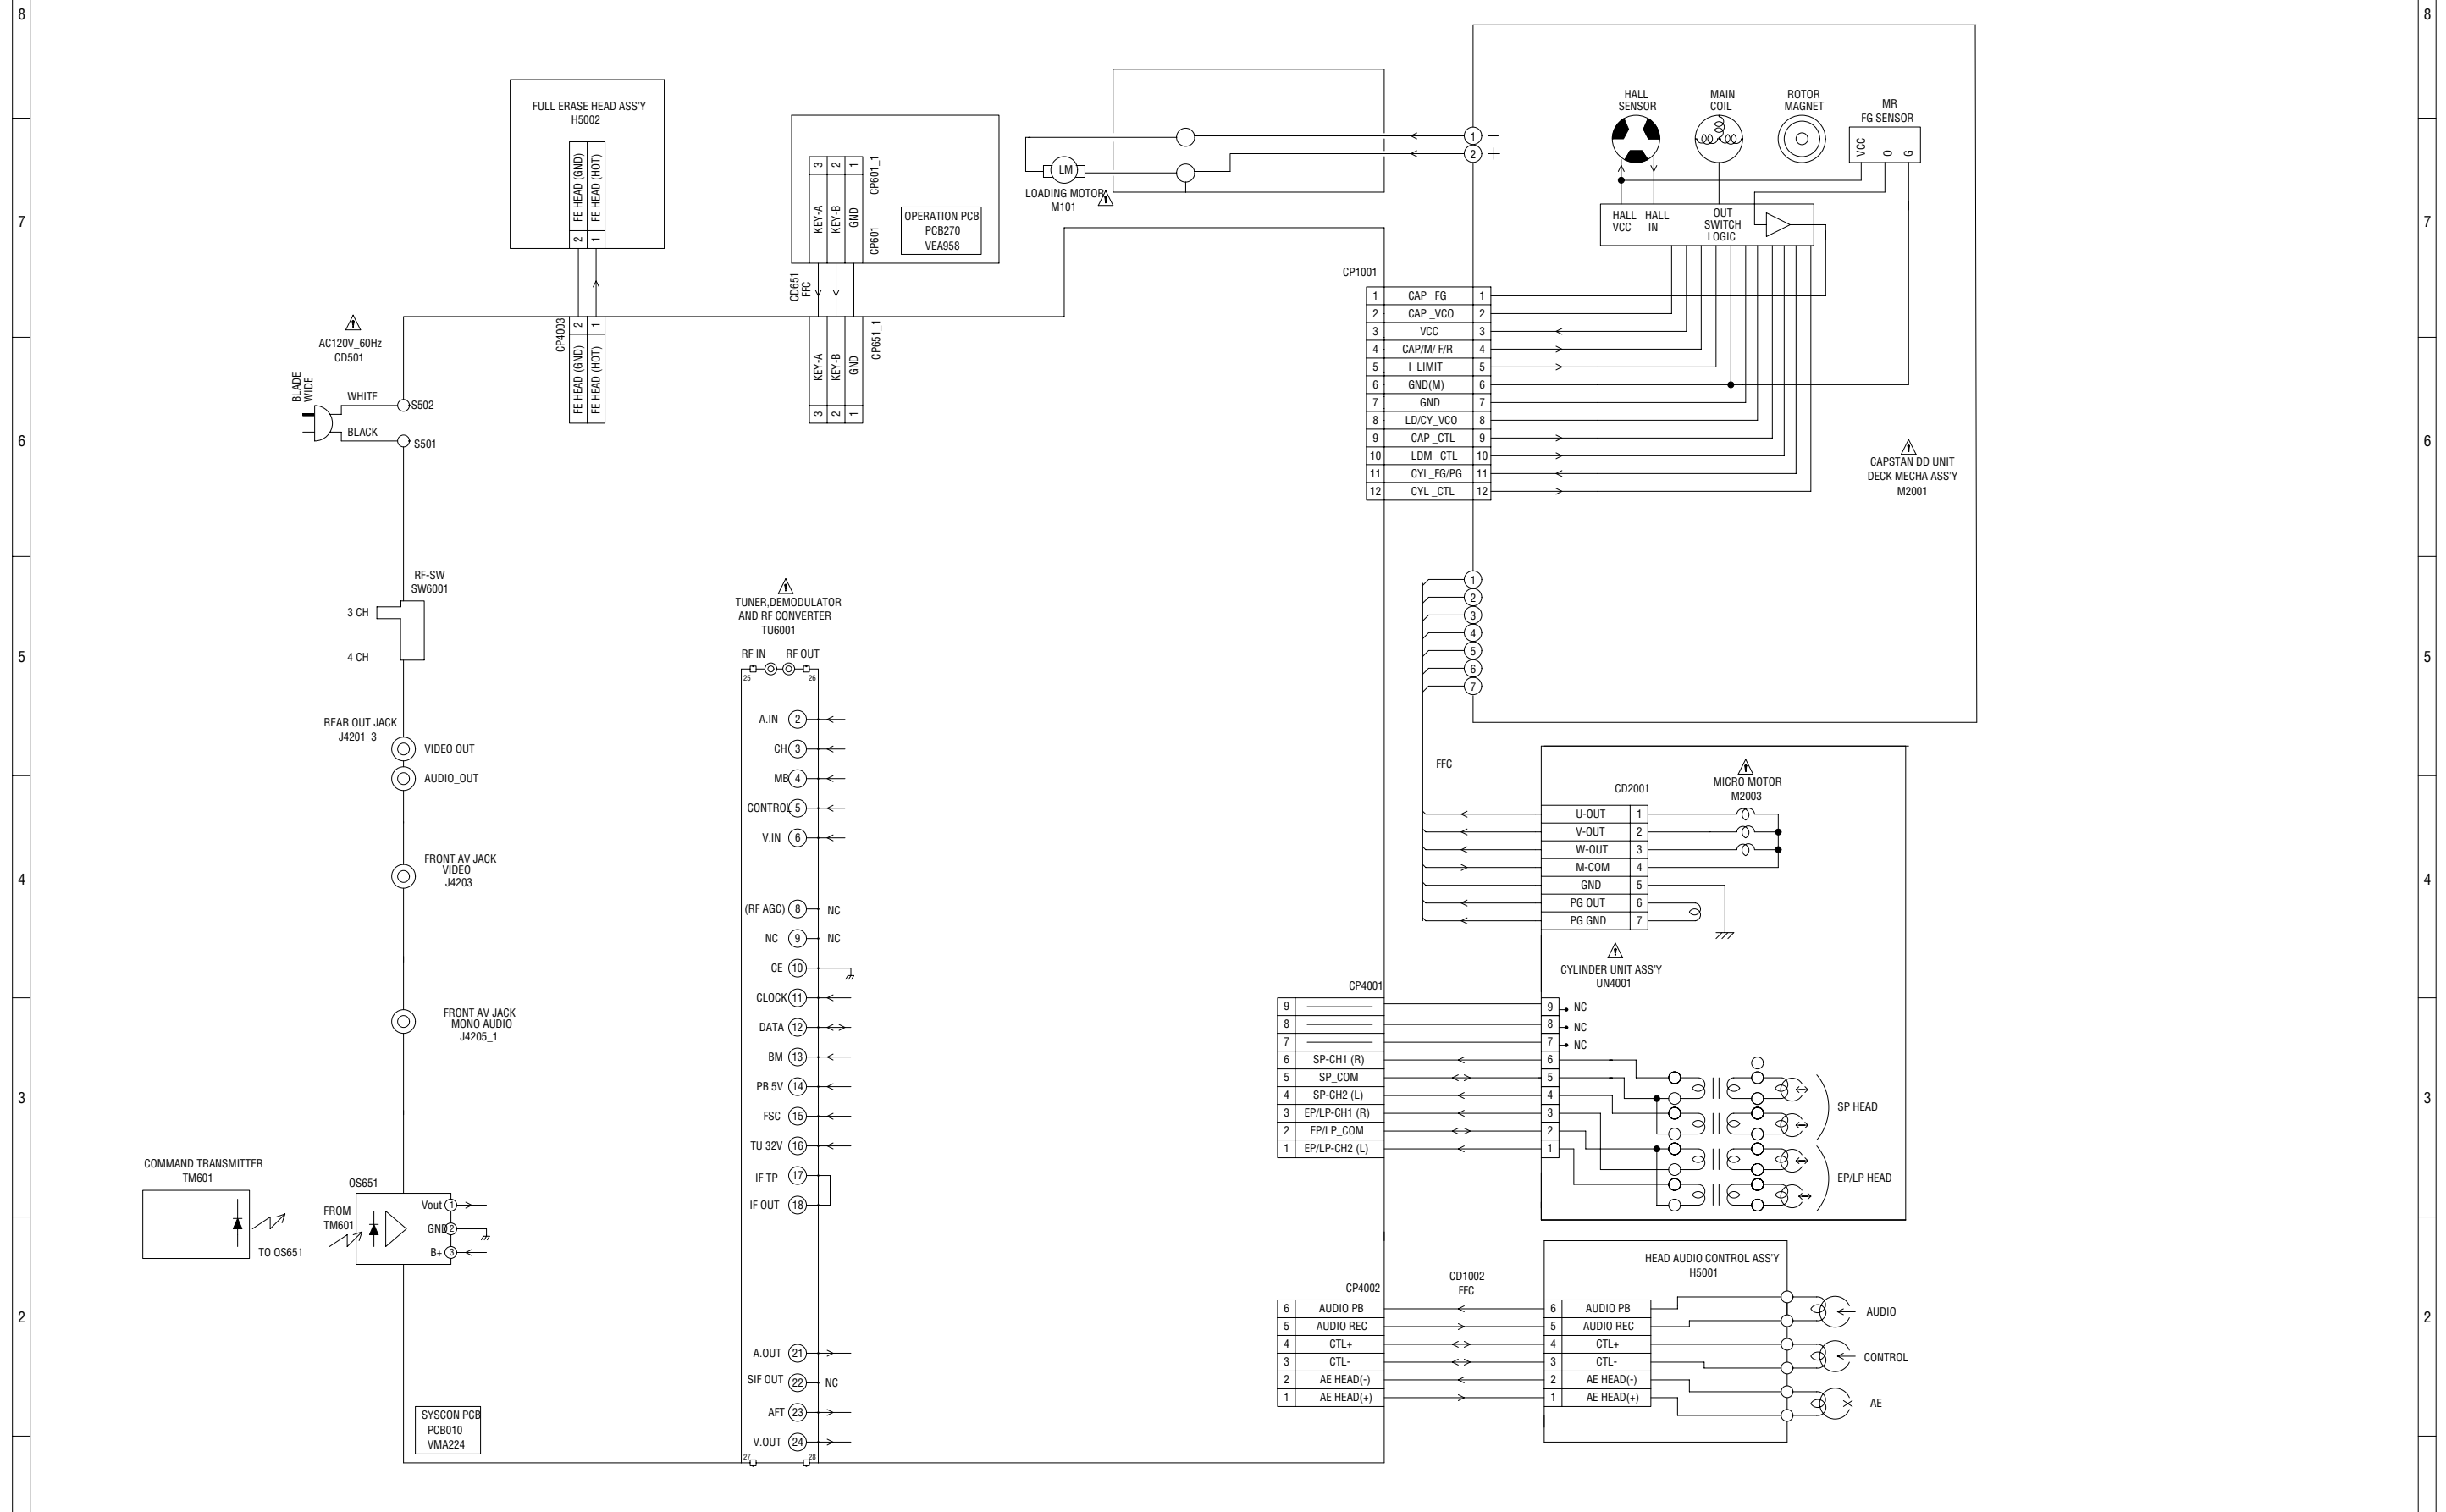


ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.


NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

WAVEFORMS


Y/C/AUDIO/CCD/HEAD AMP

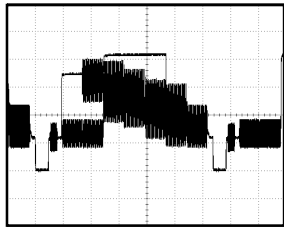


① POWER ON
10µs 500mV/div

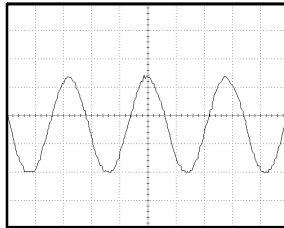


② POWER ON
100ns 100mV/div

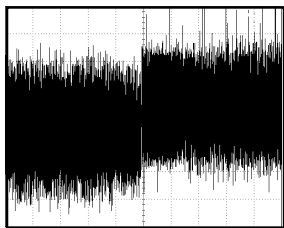

③ PB
1ms 100mV/div

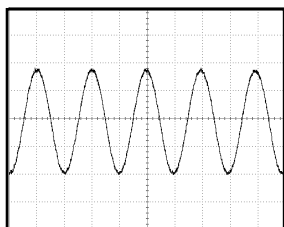


④ PB
500µs 200mV/div

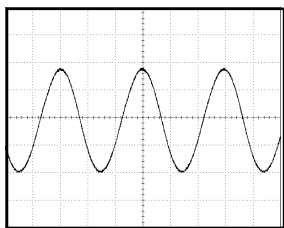

⑤ REC
5µs 20V/div


SYSCON/SERVO

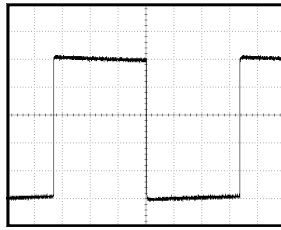


⑥ POWER ON
5ms 1.0V/div




⑦ PB
2µs 1.0V/div

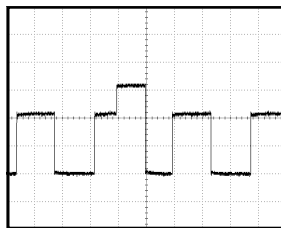


⑧ POWER ON
500µs 1.0V/div

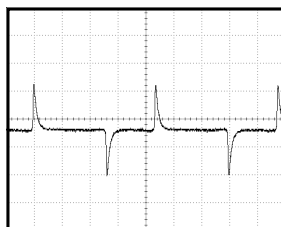


⑨ FF/REW
500µs 500mV/div

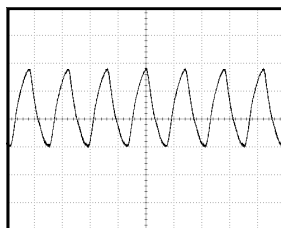


⑩ POWER ON
50ns 500mV/div

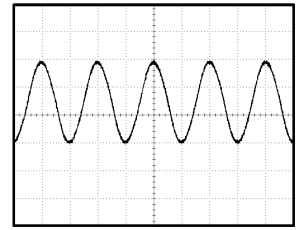

⑪ POWER ON
50ns 1.0V/div

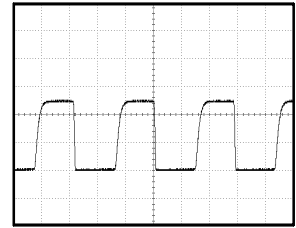


⑫ FF/REW
5ms 2V/div

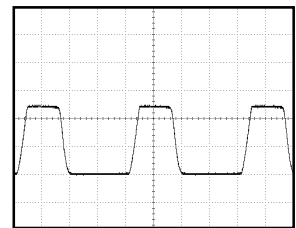

⑭ POWER OFF
5ms 2V/div


POWER

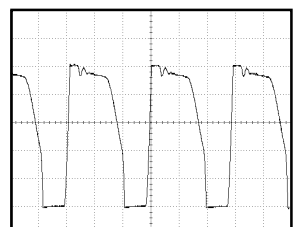


⑮ PB
2µs 50V/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

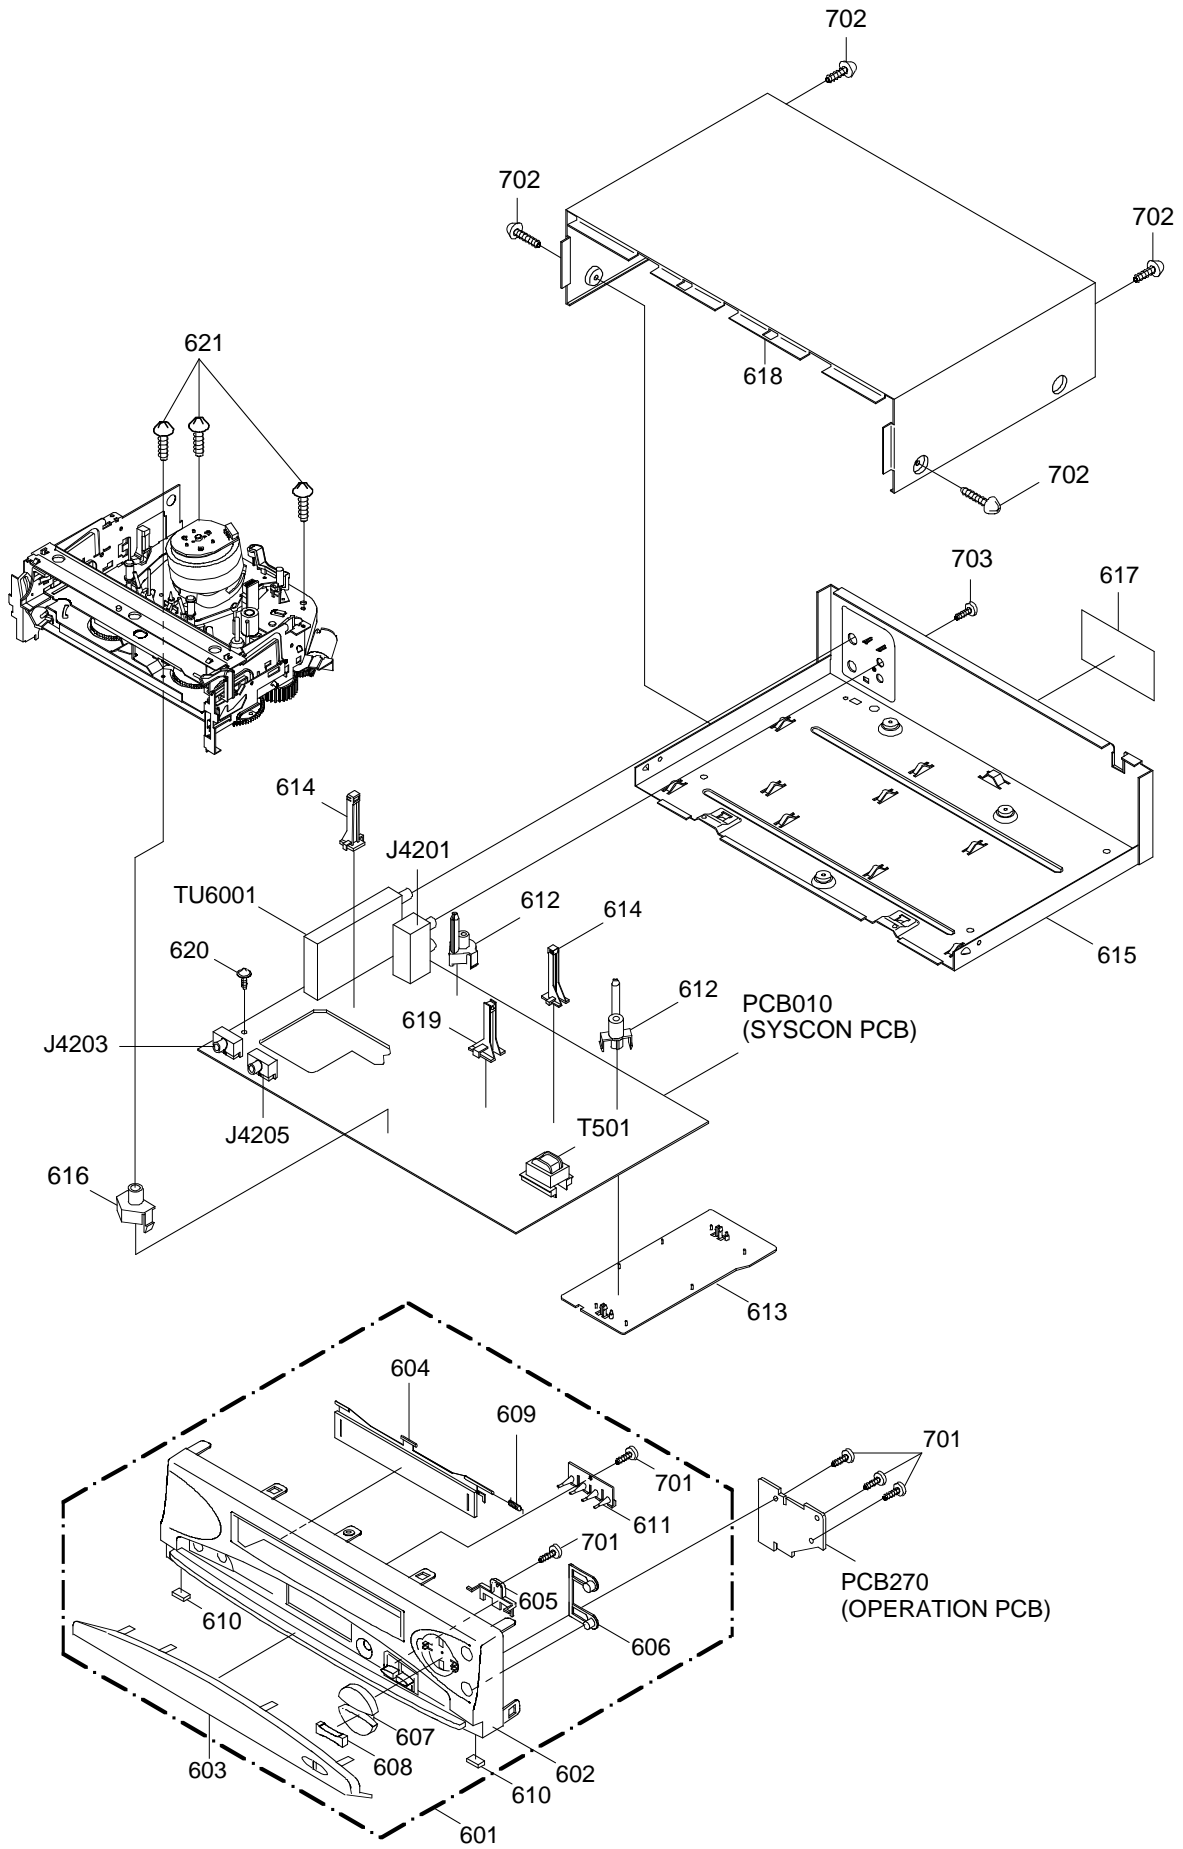


CHASSIS EXPLODED VIEW (TOP VIEW)

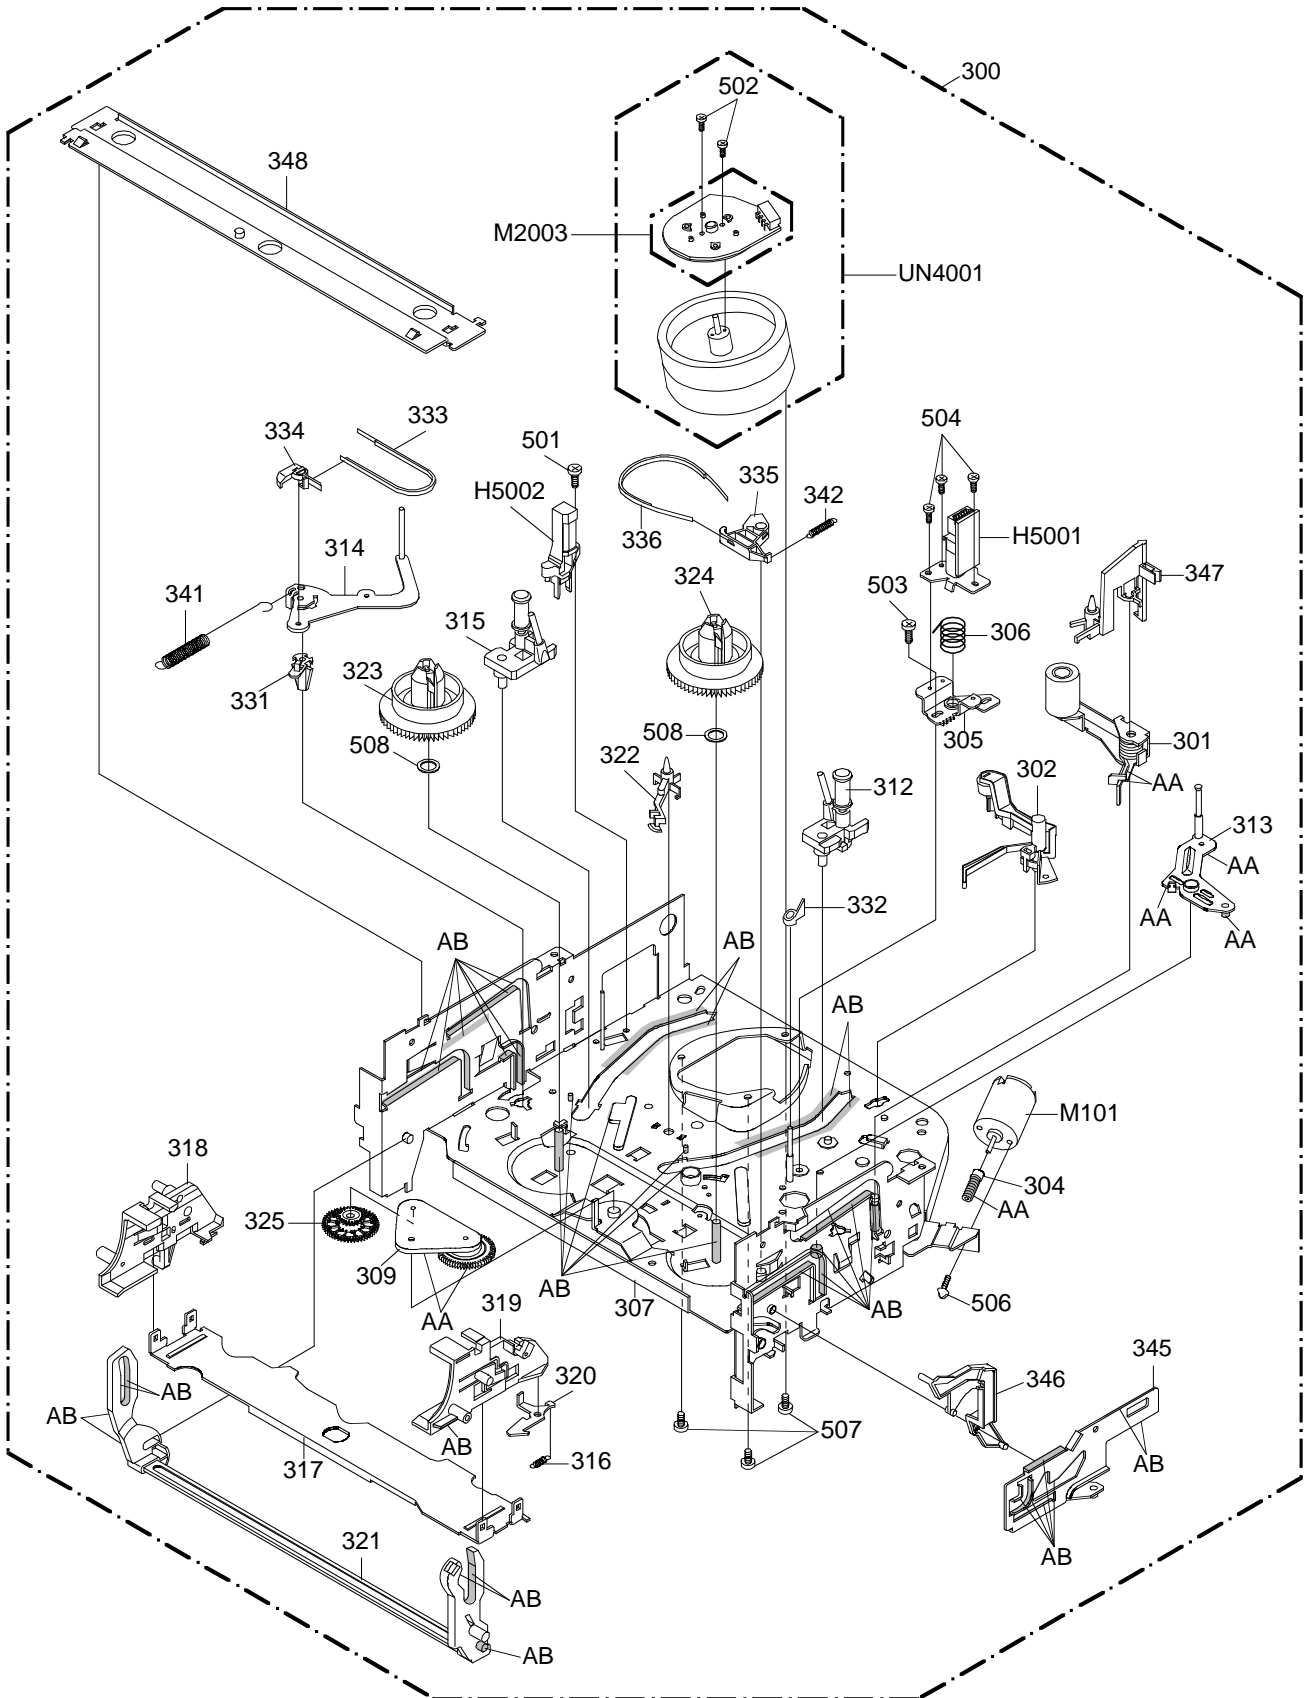

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB

NOTE: Applying positions AA and AB for the grease are displayed for this section. Check if the correct grease is applied for each position.

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

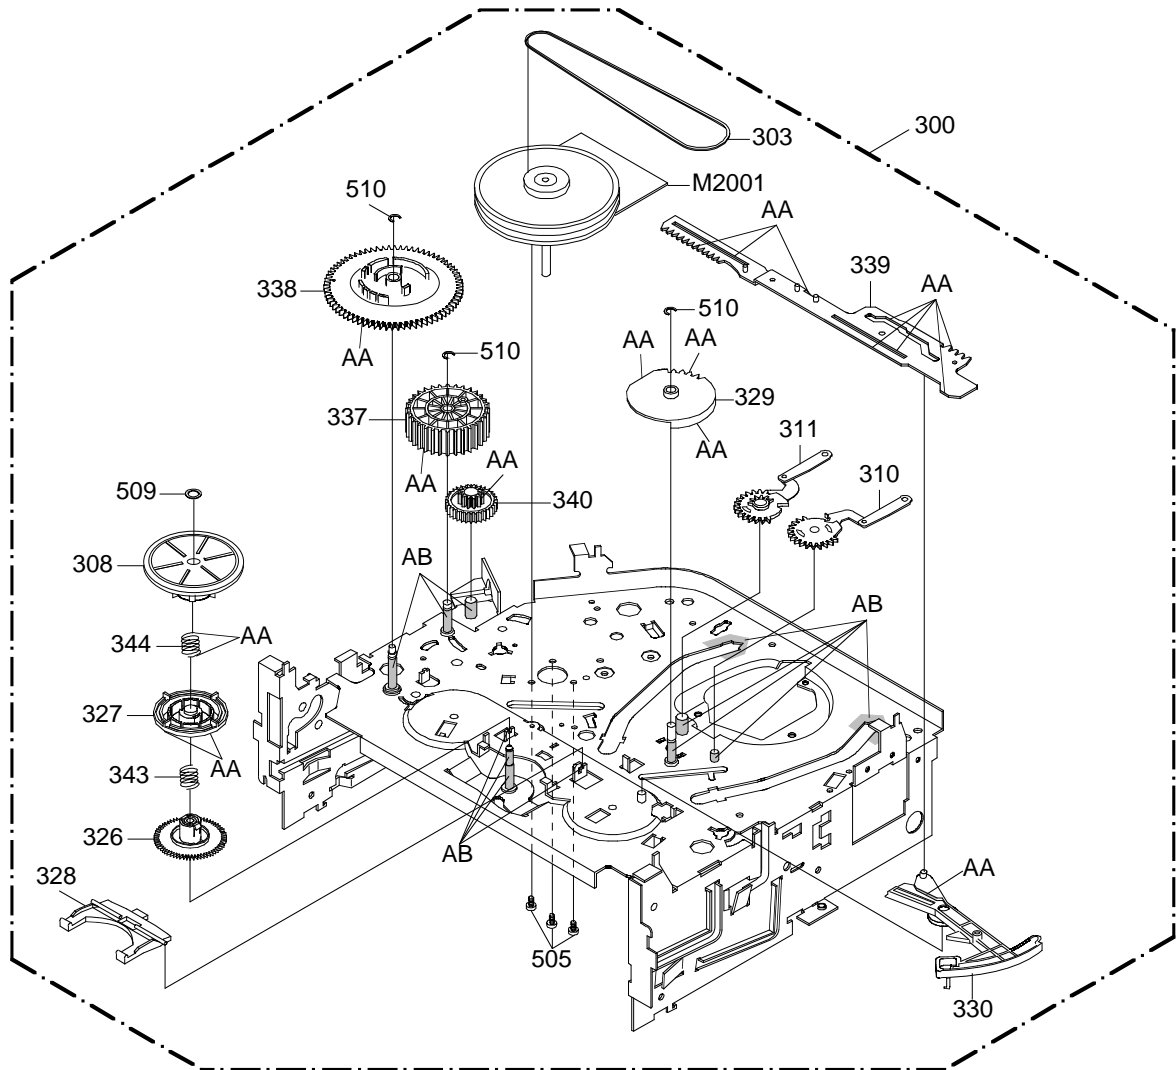

CLASS	PART NO.	MARK
GREASE	G-555G	AA
	MG-33	AB

NOTE: Applying positions AA and AB for the grease are displayed for this section. Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION			
601	A4F103B720	CABINET,FRONT ASS'Y			
602	701WPJB403	CABINET,FRONT			
603	711WPDA409	PLATE,DISPLAY			
604	712WPJB134	FLAP			
605	735WPAA222	BUTTON,STOPPER			
606	735WPAA221	BUTTON,POWER			
607	735WPDA397	BUTTON 1			
608	735WPDA398	BUTTON 2			
609	743WKA0032	SPRING,FLAP(COMBO)			
610	800WFA0045	CUSHION,LEG			
611	713WPAA036	GLASS,LED			
612	701WPA0680	HOLDER,DECK			
613	755WPA0020	PLATE,COVER POWER			
614	85OP700036	HOLDER EOT SENSOR			
615	702WSA0086	PLATE,BOTTOM			
616	701WPA0686	HOLDER,DECK			
617	722A08A088	SHEET,RATING			
618	702WSB0058	CABINET,TOP			
619	85OP700037	HOLDER,LED			
620	8109230704	SCREW,TAP TITE(B)R	BIND		3x7
621	8109130B94	SCREW,TAP TITE(B)R	PAN		3x29
701	8110226804	SCREW,TAP TITE(P)	BIND		2.6x8
702	8109230802	SCREW,TAP TITE(B)			3x8
703	8110230804	SCREW,TAP TITE(P)	BIND		3x8
---	JA5U0200	POLYBAG			
---	J3J81702	WARRANTY SHEET			
---	J4F10301	INSTRUCTION BOOK			
---	791WHA0095	GIFT,SHEET			
---	792WHA0306	PACKAGE			
---	793WCDB043	GIFT BOX			
---	A4F103B975	INSTRUCTION BOOK KIT			

CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A4F101B420K	DECK ASSY A4F101B420K	501	8107226804	SCREW,TAP TITE(S) BIND 2.6x8
			502	8107226504	SCREW,TAP TITE(S) BIND 2.6x5
301	85OA400227	PINCH ROLLER BLOCK	503	8107226404	SCREW,TAP TITE(S) BIND 2.6x4
302	85OA500026	AHC ASS'Y	504	8102120604	SCREW,PAN M2x6
303	85OP200290	BELT,CAPSTAN (S)	505	8109126604	SCREW,TAP TITE(B) PAN 2.6x6
304	85OP600581	WORM	506	810A130404	SCREW/WASHER(A) M3x4
305	85OP500083	BASE,AC HEAD	507	810A126504	SCREW/WASHER(A) M2.6x5
306	85OP800324	SPRING,AC HEAD	508	82Q264713N	POLYSLIDER WASHER 2.6x4.7xT0.13
307	85OA000459	MAIN CHASSIS ASS'Y	509	82P184505N	POLYSLIDER WASHER(CUT) 1.8x4.5xT0.5
308	85OA200089	CLUTCH ASS'Y			
309	85OA200090	ARM IDLER ASS'Y	510	83ETW30000	E-RING 3.0
310	85OA300065	LOADING ARM S UNIT	CD1501	122H071603	CORD JUMPER SMCD-7X151
311	85OA300066	LOADING ARM T UNIT	CD1502	122Y021902	CORD JUMPER 2Y021902
312	85OA400223	INCLINED BASE T UUNIT 3S	H5001	1523D91034	HEAD (AUDIO CONTROL) HVMXA1072A
313	85OA400226	P5 ARM ASS'Y	H5002	1543D02013	HEAD (FULL ERASE) HVFHP0032A
314	85OA400230	TENSION ARM ASS'Y	△ M101	1596P98001	MOTOR (LOADING) MXN13FB12K3
315	85OA400231	INCLINED BASE S UNIT	△ M2001	1510S98035	CAPSTAN DD UNIT F2QVB01-C
316	85OP800358	SPRING,LOCKER	△ M2003	1589S11015	MICRO MOTOR I2OAL01
317	85OP900736	CASS,HOLDER	△ UN4001	A4E304B500	CYLINDER UNIT ASSY A4E304B500
318	85OP900737	CASS,SIDE L			
319	85OP900738	CASS,SIDE R			
320	85OP900739	LOCKER,R			
321	85OA900228	LINK UNIT			
322	85OP000496	POST,CASS GUIDE			
323	85OP200291	REEL,S (S)			
324	85OP200292	REEL,T (S)			
325	85OP200308	GEAR,IDLER			
326	85OP200311	GEAR,CLUTCH			
327	85OP200312	GEAR,COUPLING			
328	85OP200313	LEVER,CLUTCH			
329	85OP300194	GEAR,MAIN LOADING			
330	85OP400490	LEVER,TENSION			
331	85OP400492	HOLDER,TENSION			
332	85OP400520	CAP.P4			
333	85OP400532	BAND,TENSION			
334	85OP400533	CONNECT,TENSION			
335	85OP600573	ARM,BRAKE T			
336	85OP600574	BAND,BRAKE T			
337	85OP600577	CAM,PINCH ROLLER			
338	85OP600578	CAM,MAIN			
339	85OP600579	ROD,MAIN			
340	85OP600582	GEAR,JOINT			
341	85OP800322	SPRING,TENSION			
342	85OP800350	SPRING,BRAKE T			
343	85OP800355	SPRING,COUPLING			
344	85OP800356	SPRING,RING			
345	85OP900743	LEVER,LINK			
346	85OP900744	LEVER,FLAP			
347	85OP900745	CASS,OPENER			
348	85OP900746	BRACKET,TOP 3V			

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
RESISTORS			COILS & TRANSFORMERS		
△ R502	R0G3K2335K	RC 3.3M OHM 1/2W	L6002	02167F220J	COIL 22 UH
△ R512	R002T2333J	RC 33K OHM 1/2W	L6003	0216A6150K	COIL 15 UH
△ R514	R3X181010J	R,METAL OXIDE 1 OHM 1W	△ T501	0481220094	TRANSFORMER,SWITCHING 8122009
△ R547	R002T2224J	RC 220K OHM 1/2W	T4001	031626009R	COIL,BIAS OSC 1626009
△ R549	R65584331J	R,FUSE 330 OHM 1/4W	JACKS		
CAPACITORS			J4201	060J401078	RCA JACK MSP-382V-18 PBSN
△ C504	P2472B223M	CMP 0.022 UF 275V PHE840	J4203	060J401079	RCA JACK MSP-281V4-B
△ C505	CBLLYEMH3M	CC 0.0022UF 250V	J4205	060J401080	RCA JACK MSP-281V1-B
△ C508	E62QFC470M	CE 47 UF 200V	SWITCHES		
△ C514	E02LT0102M	CE 1000 UF 6.3V	SW603	0504201T32	SWITCH,TACT SKQNAED010
△ C518	E50HU5100M	CE 10 UF 50V	SW604	0504201T32	SWITCH,TACT SKQNAED010
△ C519	E02LT2471M	CE 470 UF 16V	SW605	0504201T32	SWITCH,TACT SKQNAED010
△ C520	E02LU0471M	CE 470 UF 6.3V	SW606	0504201T32	SWITCH,TACT SKQNAED010
△ C522	E02LU2221M	CE 220 UF 16V	SW607	0504201T32	SWITCH,TACT SKQNAED010
DIODES			SW608	0504201T32	SWITCH,TACT SKQNAED010
D501	D97U02401B	DIODE,ZENER MTZJ24B T-77	SW659	0504201T31	SWITCH,TACT SKHVBED010
D502	D1VT001330	DIODE,SILICON 1SS133T-77	SW660	0504201T31	SWITCH,TACT SKHVBED010
△ D505	D2WXN40050	DIODE SILICON 1N4005-EIC	SW1001	0508A11001	SWITCH(LEAF) MXS01350MVPO
D506	D1VT001330	DIODE,SILICON 1SS133T-77	SW6001	0510S21041	SWITCH SLIDE SLD-12-592
△ D507	D1VT001330	DIODE,SILICON 1SS133T-77	VARIABLE RESISTOR		
△ D508	D2WXN40050	DIODE SILICON 1N4005-EIC	VR1001	V116314BTC	VOLUME,SEMI FIXED EVNCYAA03B14
D511	D2WXGP10J0	DIODE RECTIFIER RGP10J-EIC	P.C. BOARD ASSEMBLIES		
△ D512	D2WXS81400	DIODE SCHOTTKY SB140-EIC	PCB010	A4F103B010	PCB ASS'Y VMA224A
△ D514	D2WXB290S0	DIODE,ZENER SB290S	PCB270	A4F103B270	PCB ASS'Y VEA958A
D520	D97U03301B	DIODE,ZENER MTZJ33B T-77	MISCELLANEOUS		
△ D521	D17T002440	DIODE SILICON 1SS244T-77	B501	024HT03564	CORE,BEADS W4BRH3.5X6X1
△ D523	D2WXN40050	DIODE SILICON 1N4005-EIC	B502	024HT03564	CORE,BEADS W4BRH3.5X6X1
△ D525	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	△ CD501	120R414901	CORD AC BUSH 0R414901
△ D528	D2WXN40050	DIODE SILICON 1N4005-EIC	CD651	06CU230701	CORD JUMPER CU230701
D663	0021E2Q140	LED LTL-1CHEE-002A	CP601	067U003029	WIRE HOLDER B2013H02-3P
D664	0021E2Q140	LED LTL-1CHEE-002A	CP651	069S230629	CONNECTOR PCB SIDE A2001WV2-3P
D665	0021E2Q140	LED LTL-1CHEE-002A	CD1002	122F061501	CORD JUMPER 2F061501
D666	0021E2Q140	LED LTL-1CHEE-002A	CD6002	06CQL02006	CABLE SI-C108-40
D1001	0010100320	INFRARED LED LNA2702L010R	CP1001	06972C0010	CONNECTOR PCB SIDE TMC-J12P-B2
D1002	D1VT001330	DIODE,SILICON 1SS133T-77	CP4001	0697290620	CONNECTOR PCB SIDE TOC-C09X-A1
D1003	D1VT001330	DIODE,SILICON 1SS133T-77	CP4002	069J760019	CONNECTOR PCB SIDE IMSA-9604S-06Z13
D1004	D1VT001330	DIODE,SILICON 1SS133T-77	CP4003	0697120320	CONNECTOR PCB SIDE TMC-T02X-E1
D1005	D1VT001330	DIODE,SILICON 1SS133T-77	△ F501	081PC1R605	FUSE 51MS016L
ICS			FH501	06710T0006	HOLDER,FUSE EYF-52BC
△ IC501	I1KJ9A4310	IC KIA431	FH502	06710T0006	HOLDER,FUSE EYF-52BC
IC505	0002E00610	PHOTO COUPLER LTV-817M-VB	OS651	077Q037001	REMOTE RECEIVER PIC-37043LO
IC511	0002E00610	PHOTO COUPLER LTV-817M-VB	TM601	076N0EA050	TRANSMITTER RC-EA050
IC1001	I54F50104B	IC OEC0104B	△ TU6001	0162600020	RF UNIT TMDH2-A34A
IC1003	IC7J0311A0	IC R3111N311A/C-TR	X1001	1002T01003	CERAMIC OSCILLATOR CSTS1000MG96004-T2
IC4001	I03F301MNO	IC LA71201M-N-MPB	X4001	100CT3R508	CRYSTAL HC-49/U 3.579545MHz
TRANSISTORS			RESISTOR		
△ Q502	TD3T007340	TRANSISTOR,SILICON 2SD734(E,F)-AA	RC.....	CARBON RESISTOR	
△ Q503	TCWQ4160E0	TRANSISTOR SILICON 2SC4160-OEC-YAC1	CAPACITORS		
Q506	TAAT01273Y	TRANSISTOR SILICON KTA1273_Y	CC.....	CERAMIC CAPACITOR	
Q508	TNATA03002	COMPOUND TRANSISTOR KRC101MAT	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
△ Q515	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)	CP.....	POLYESTER CAPACITOR	
Q1002	0002700590	PHOTO COUPLER RPI-301	CPP.....	POLYPROPYLENE CAPACITOR	
Q1004	0002M00580	PHOTO COUPLER SG-233S	CPL.....	PLASTIC CAPACITOR	
Q1005	0002M00580	PHOTO COUPLER SG-233S	CMP.....	METAL POLYESTER CAPACITOR	
Q1006	0000100380	PHOTO TRANSISTOR PNA2604M010R	CMPL.....	METAL PLASTIC CAPACITOR	
Q1007	TNAAC05002	COMPOUND TRANSISTOR KRC103RTK	CMPP.....	METAL POLYPROPYLENE CAPACITOR	
Q1008	0000100380	PHOTO TRANSISTOR PNA2604M010R			
Q4001	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)			
Q4002	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)			
Q4003	TPAAC05002	COMPOUND TRANSISTOR KRA103RTK			
Q4005	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)			
Q4006	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT			
Q4010	T6YJ1037K0	TRANSISTOR,SILICON 2SA1037AKT146R,S			
Q4011	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S			
Q4012	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S			
Q4201	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)			
COILS & TRANSFORMERS					
△ L501	029T000083	COIL,LINE FILTER 0R3A433F20			
L504	021W7A220K	COIL 22 UH			
L505	021W7A220K	COIL 22 UH			
L1001	0216A6150K	COIL 15 UH			
L1002	021W7A220K	COIL 22 UH			
L4001	02167F220J	COIL 22 UH			
L4003	02167F101J	COIL 100 UH			
L4004	0216A6220K	COIL 22 UH			
L4005	0216A6470K	COIL 47 UH			
L4006	0216A6470K	COIL 47 UH			

SPEC.NO.	M4F1-03B
O/R NO.	K184015