


## INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

BATTERY: SR626W

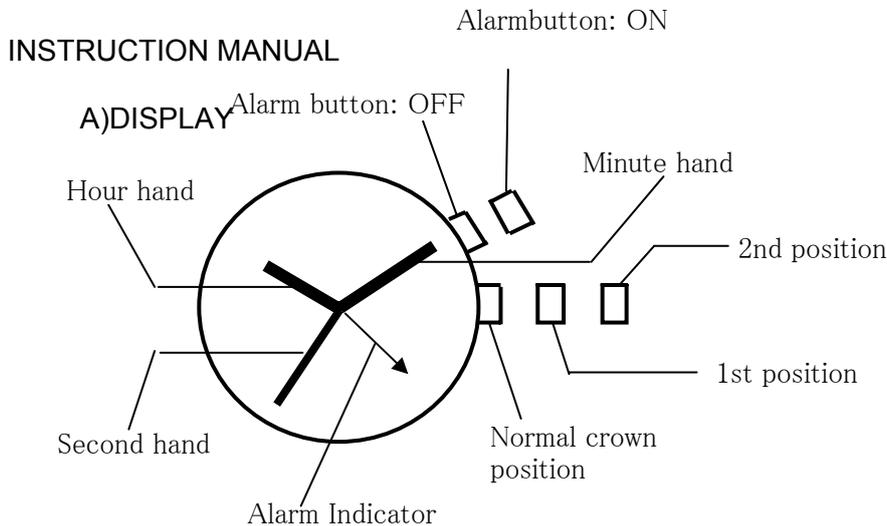

### B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

### C) SETTING THE ALARM

1. Pull the crown out to the 1st position.
2. Turn the crown to set the alarm indicator.  
In the case of alarm setting within one hour, turn the alarm indicator counter-clockwise.

### D) Alarm sound ON / OFF

Alarm ON: Pull the alarm button out. Alarm function is set and alarm sound can be heard at the time you set.

Alarm OFF: Push the alarm button fully. Alarm sound stops.


### REMARKS:

Within 3 minutes after alarm sounded 15 seconds, if you reset the position of the alarm indicator, alarm sound may not be heard.

In that case, push the alarm button once and pull it out again.

## INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

BATTERY: SR626W

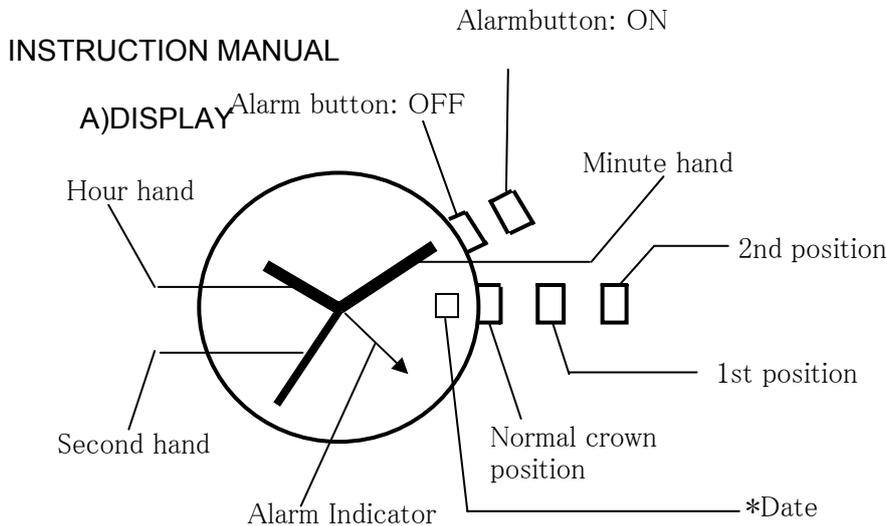

\*Date position may be located at different position depends on models.

### B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.  
\* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

### D) SETTING THE ALARM

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to set the alarm indicator.  
In the case of alarm setting within one hour, turn the alarm indicator counter-clockwise.

### E) Alarm sound ON / OFF

Alarm ON: Pull the alarm button out. Alarm function is set and alarm sound can be heard at the time you set.

Alarm OFF: Push the alarm button fully. Alarm sound stops.

**REMARKS:**

Within 3minutes after alarm sounded 15 seconds, if you reset the position of the alarm indicator, alarm sound may not be heard.

In that case, push the alarm button once and pull it out again.