



# Model 3000 R157A / R157A DUAL Program Timer Jr. Instruction Sheet



## Description

Monroe Electronics' Model 3000 R157A Program Timer Jr. provides 2x1 (AB) balanced stereo audio follow video switching by timed commands. Six 'ON' and six 'OFF' instructions may be stored in the timer's memory. NO & NC contact activities are also provided with each timed switch. The test button, under the 'h+' and 'm+' buttons, is used to manually change the status of the 2x1 switch.

## Specifications

### Video

>70 dB @ 100 MHz.

### Stereo Audio

DPDT w/screw terminals

### Clock Accuracy

±1 sec per day @ 20°C

### Battery Backup

1.5 VDC AA

### Power Requirement

100 – 240 VAC ±2%, 50-60 Hz.

### Physical

3.50"H x 19"W x 2.25"

### Setting Clock

## Installation

1. Remove the two screws which are holding the back cover of the 3000 R157A. Install a AA battery in the holder on the under side of the PC board. Re-install the cover screws.
2. Connect your main stereo audio/video source to the primary inputs.
3. Connect your alternate stereo audio/video source to the secondary inputs.
4. Connect the 3000 R157A's stereo audio/video outputs to your equipment's inputs.
5. Connect the **WH** wire of the power pack to the +12 vdc on the 3000 R157A, and the **BK** wire to **GND**.
6. Apply AC power, the display will show 'OFF' and '00:00'.

When power has been applied to the 3000 R157A, the display will come on showing 'OFF' and '00:00'.

To set the day of the week, hold down the clock symbol '⊕' button, and push the 'Day' button until the proper day of the week is set.

Then, while still holding down the clock symbol button, push the 'h+' button until the proper hour is set, and then push the 'm+' button until the proper minute shows. Two models of timers may be used. If the colon between the hour and minutes stops blinking when the timer button is pushed, the timer starts when this button is released. If the colon continues to blink, then the timer starts at 0 seconds when the 'm+' switch is pushed.

P/N 1340185  
(3000R157A/157A DUAL)  
040506

## Programming

There are 6 'ON' and 6 'OFF' programmable instructions for the 2x1 switch. Each press of the 'Timer' button steps through them, from 1 'ON' to 6 'OFF'.

To make one of the program instructions active, enter the hour and minutes desired with the 'h+' and 'm+' buttons.

Then press the 'Day' button. This selects which of the individual days or day groups you wish: Monday through Friday, Saturday/Sunday, or Monday through Saturday. If you wish the programmed instruction to be done every day, do not enter a day selection.

When all instructions have been entered, press the clock symbol which will again display the time and day of week.

### Note:

If an 'ON' and 'OFF' instruction both occur at exactly the same time and day, the 'OFF' instruction will be executed and the 'ON' instruction will be ignored.

## Deleting Programs

An instruction is erased by incrementing the 'h+', 'm+', and 'Day' buttons to restore the horizontal (null) lines.

### Note:

Momentarily pressing the 'Reset' detent will eliminate all program data from the unit as well as eliminating the time setting. The 'Reset' detent has the same effect as removing all power (including the battery) from the unit.

## Operation

The 3000 R157A's primary inputs are normally connected to the common outputs. It remains in this state until an 'ON' instruction is received from the timer. This will connect the secondary inputs to the common until an 'OFF' instruction from the timer is received.

## Maintenance

The internal battery provides a minimum of eight hours of memory back up. Replace the battery at least once a year, or more often depending on usage.



## **WARRANTY**

Monroe Electronics, Inc. warrants to the owners, each instrument and sub-assembly manufactured by them to be free from defects in material and workmanship for a period of one year after shipment from factory. This warranty is applicable to the original purchaser only.

Liability under this warranty is limited to service, adjustment or replacement of defective parts (other than fuses or batteries) on any instrument or sub-assembly returned to the factory for this purpose, transportation charges prepaid.

This warranty does not apply to instruments or sub-assemblies subjected to abuse, abnormal operating conditions, or unauthorized repair or modification.

Since Monroe Electronics, Inc. has no control over conditions of use, no warranty is made, or implied as to the suitability of our product for the customer's intended use.

THE WARRANTY SET FORTH IN THIS ARTICLE IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS, IMPLIED OR STATUTORY INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. Except for obligations expressly undertaken by Monroe Electronics, in this warranty, Owner hereby waives and releases all rights, claims and remedies with respect to any and all warranties, express, implied or statutory (including without limitation, the implied warranties of merchantability and fitness), and including but without being limited to any obligation of Monroe Electronics with respect to incidental or consequential damages, or damages for loss of use. No agreement or understanding varying or extending the warranty will be binding upon Monroe Electronics unless in writing signed by a duly authorized representative of Monroe Electronics.

In the event of a breach of the foregoing warranty, the liability of Monroe Electronics shall be limited to repairing or replacing the non-conforming goods and/or defective work, and in accordance with the foregoing, Monroe Electronics shall not be liable for any other damages, either direct or consequential.

## **RETURN POLICY TO FACTORY:**

Materials returned to Monroe must have a Return Material Authorization number. To obtain a RMA number, contact our A/V Switching & Control Customer Service at 585-765-2254 or fax 585-765-9330. Customers have 30 days to determine that the product ordered fills their need and performs as described in Monroe's literature. Units returned for approved repair or credit, must be in the original packaging including all parts and paperwork plus be in very good physical condition. If not, the customer is billed the cost to refurbish the unit and for missing accessories and merchandise. No products may be returned for exchange or credit after 12 months of the shipment date. Monroe reserves the right to repair or replace units under warranty.