D

Appendix D Pin Assignment and Cable Wiring

100BaseTX Port Pin Assignment and Cable Wiring
Console Port Pin Assignment
Async RS-232 Port Pin Assignment
CN20030- RJ45 to Female DB25 RS-232 Cable Wiring
CN20040- RJ45 to Male DB25 RS-232 Cable Wiring

100BaseTX Port Pin Assignment and Cable Wiring

100BaseTX Port Pin Assignment

Pin	Signals
1	Tx+
2	Tx-
3	Rx+
6	Rx-

Connecting to a Hub - Straight Through Cable Wiring

CN2500 100BaseTX		HUI
1 Tx+		1
2 Tx-		2
3 Rx+		3
6 Rx-		6

Connecting to a PC - Crossed Over Cable Wiring

CN2500 100BaseTX		PC LAN Card
1 Tx+		3
2 Tx-		6
3 Rx+		1
6 Rx-		2

Console Port Pin Assignment



RJ45 Female Connector

Pin	Signals	
1	-	
2	DSR	
3	RTS	
4	GND	
5	TxD	
6	RxD	
7	GND	
8	CTS	
9	DTR	
10	-	

Async RS-232 Port Pin Assignment



RJ45 Female Connector

Pin	Signals	
1	DCD	
2	DSR	
3	RTS	
4	GND	
5	TxD	
6	RxD	
7	GND	
8	CTS	
9	DTR	
10	-	



Note: You may use either pin 4 or pin 7 or both pins for grouding.

CN20030- RJ45 to Female DB25 RS-232 Cable Wiring

Connecting to a DTE device.

Async RJ45	CN20030 ▼ RJ45 Plug Pin 1		PC COM2 port, Serial Printer, Terminal, or any DTE Device
CN2500			DTE Device
Async RJ45	Cable Wiring		DB25 Male
Connector			Connector
DCD	1	8	DCD
DSR	2 ——	20	DTR
RTS	3	5	CTS
GND	4/7	7	GND
TxD	5 ——	3	RxD
RxD	6 ——	2	TxD
CTS	8	4	RTS
DTR	9	6	DSR

Note: 4/7 means either line 4 or line 7 can be used for GND.

Async RJ45		PC COM2 port, serial printer, terminal, or any DTE device
	RJ45 Plug Pin 1	
CN2500		DTE Device
Async RJ45	Cable Wiring	DB9 Male
Connector		Connector
DCD	1 1	DCD
DSR	2 — 4	DTR
RTS	3 8	CTS
GND	4/7 5	GND
TxD	5 2	RxD
RxD	6 3	TxD
CTS	8 7	RTS
DTR	9 6	DSR

Note: 4/7 means either line 4 or line 7 can be used for GND.

Pin Assignment and Cable Wiring

CN20040- RJ45 to Male DB25 RS-232 Cable Wiring

Cable Wiring and Connecting to a DCE device.

Async RJ45	Cable CN20040 RJ45 Plug Pin 1	Modem, or any DCE Device
CN2500 Async RJ45	Cable Wiring	DCE Device
•	Cable Willing	
Connector		Connector
DCD	1 8	DCD
DSR	2 — 6	DTR
RTS	3 — 4	CTS
GND	4/7 7	GND
TxD	5 2	RxD
RxD	6 — 3	TxD
CTS	8 — 5	RTS
DTR	9 ——— 20	DSR

Note: 4/7 means either line 4 or line 7 can be used for GND.