# LDP1602 LCD Module

-Snap-on module for the ioLogik E2200 and R2100 series



- > Hot-pluggable LCD module
- > Handy for IP display and configuration
- > Direct display for I/O status
- > No battery required (powered by device)



## Installing the LCD Module

1. Remove the ioLogik's top cover.



3. Check and configure the IP address.



#### : Specifications

LCD Screen: 16 x 2 text display (in English) Operating Temperature: 0 to 55°C (32 to 131°F) Storage Temperature: -20 to 70°C (-4 to 158°F) Ambient Relative Humidity: 5 to 95% (non-condensing)

### **Crdering Information**

Available Models LDP1602: LCD module with 16 x 2 text display and 5 buttons

2. Plug in the LCD module.



4. Check IP and I/O status.



#### **Power Requirements**

Power Consumption: 15 mA @ 24 VDC Warranty Warranty Period: 2 years \*Because of the limited lifetime of the LCD module it is only covered by a 2-year warranty.

1