

Recording Function

This recordable DVD player has two kinds of recording functions.

1. One is disc copy (duplication) internally.
2. The other is recording from external signals.

English

Disc Copy

- 1 Press **DVD EJECT** on the remote control and insert the disc you wish to record into the DVD playing side.

The disc will play back automatically. Press **STOP**, the DVD playing side stops.

- 2 Press **REC EJECT** on the remote control and insert blank CD-R, CD-RW disc or discs which are not fully recorded and not closed yet into the recording side.

- 3 Press **▶/◀** to play the original disc to choose the preferred segment for recording.

NOTE:

Make sure to switch to DVD-PLAY mode by pressing **Mode** button on the front panel.

- 4 Press **VCD REC** or **CD REC** and you'll be able to record in that format.

NOTE:

- The CD-RW disc will automatically eject when fully recorded if the DVDR EJECT Setting is on. The playback will temporarily stop at the same time. Insert another recordable disc into the recording side and repeat the process to record.
- While recording, a red REC indicator will blink on the display panel. The display panel only shows the left time for recording.

- 5 Press **REC STOP** to stop recording.

NOTE:

- The minimum recording time is 30 seconds.
- Under recording, only **REC STOP** works; other buttons don't work.
- You could check the information of the recordable disc by pressing **INFO**. a number of times, the information of the recordable disc will show on the top left corner of the screen.

- 6 Press **CLOSE** to close the disc which takes 2 to 3 minutes.

NOTE:

- CD-RW could only be played on other machines after being closed.

Recording Editing

NOTE: This editing function only works when recording DVD, VCD, CD and MP3.

While recording DVD/VCD

1. Press **Mode** button on the front panel to switch to DVD PLAY mode.
2. Press **PBC**.
"NAVIGATE OFF" appear on the screen.
3. Press **PROGRAM**.
4. Press number button(s) and **◀ / ▶ / ▲ / ▼** to select the preferred item.
5. Press **▶/◀**, then press **VCD REC** immediately to start to record.

While recording CD/MP3

1. Press **Mode** button on the front panel to switch to DVD PLAY mode.
2. Press **PROGRAM** in the stop mode.
3. Press number button(s) and **◀ / ▶ / ▲ / ▼** to select the preferred item.
4. Press **CD REC** to start to record.

Recording From External Signals

- 1** Please check source and machine is properly connected.
- 2** Press **Mode** button on the front panel to switch to CD-RW PLAY mode, now you can see and hear the external source.
- 3** Press **REC EJECT** on the remote control and insert blank CD-R, CD-RW disc or discs which are not fully recorded and not closed yet into the recording side.
"DVDR READY" will appear on the top left corner of the screen.
- 4** Press **VCD REC** or **CD REC** and you'll be able to record in that format.

NOTE:

- When disc is full it automatically ejects but the external signal must be stopped on your own before you put in another recording disc.
- While recording, a red REC indicator will blink on the display panel. The display panel only shows the recording time for recording.

- 5** Press **REC STOP** to stop recording.
- 6** Press **CLOSE** to close the disc which takes 2 to 3 minutes.

NOTE:

- Under CD-RW mode, this recordable DVD player will detect external signals rather than the disc inside. If you want to check the disc after recording, you have to turn off the external signals. You could check the information of the disc by pressing **INFO**.

After Recording

CLOSE

In the stop mode, press **CLOSE** after recording.

NOTE:

- CD-RW could only be played on other machines after being closed.
- After closing, CD-R discs may not be recorded again.
- After closing, CD-RW discs may be recorded again after erasing it.
- You could close disc under DVD PLAY and CD-RW mode. A red indicator on the display panel blinks while closing is being processed. When the red indicator stop blinking, the closing is completed.

ERASE

In the stop mode, press **ERASE** to clear information on disc for future recording.

NOTE:

- Please confirm that the CD-RW is in REC already, as this command may not be paused or cancelled, please reconsider the necessity of such acts.
- You could erase disc under DVD PLAY mode and CD-RW mode. A red indicator on the display panel blinks while erasing is being processed. When the red indicator stop blinking, the erasing is completed.
- When erasing begins, all REC functions are locked; please do not turn off the power at this time lest loss of information.
- It usually takes 2-3 minutes to erase disc.

Recording Format

- 1** Please choose the same formats which this machine supports.
- 2** One may edit VCD or CD to produce multiple track effects.
 - (1) Formats must be matching.
 - (2) With enough space, up to 98 tracks are allowed.
- 3** You may not record VCD and CD formats on the same disc.

Recording Notice

- 1** This recordable DVD player allows simultaneous viewing and recording and also reading from TV/Cable TV/VCR/Satellite TV and recording them to VCD.
- 2** When recording begins, "Disc REC" will appear on screen, but the numbers on display panel will not start moving yet; at this time recording hasn't begun. You must wait until the "Disc REC" to disappear and numbers start to run for recording to actually begin. This usually takes less than 7 seconds.
- 3** If you record from MP3 disc, this recordable DVD player will record MP3 disc into CD format instead of MP3 format.

Recording Troubleshooting

Please check the following if recording doesn't happen.

- (1) Correct placement of disc.
- (2) Compatible disc formats.
- (3) Recording room on disc.
- (4) Please place disc in player again if all fails.