

En Errata

The *Guide to Digital Photography with the COOLPIX 3100* contains the errors listed below. We apologize for any inconvenience this may cause.

Batteries (pg. i)

Incorrect

 
Use a pair of rechargeable Nikon EN-MH1 NiMH batteries, one CRV3 lithium battery, or two LR6 (AA) nickel manganese, NiMH, or NiCad batteries (available separately).

Correct


Use a pair of rechargeable Nikon EN-MH1 NiMH batteries, one CRV3 lithium battery, or two LR6 (AA) nickel manganese batteries.

Inserting Batteries (pg. 8)

Incorrect

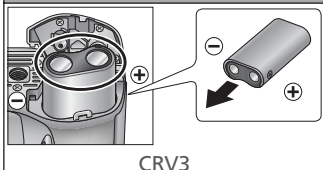

Correct

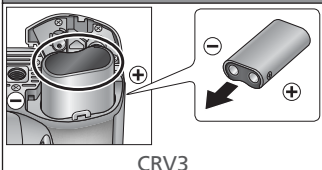 

Alternative Power Sources (pg. 9)

Incorrect

The camera can also be used with a pair of LR6 (AA) nickel-manganese, NiCad, or NiMH batteries.

Correct

The camera can also be used with a pair of LR6 (AA) nickel-manganese batteries.

Image File and Folder Names (pg. 23)

Incorrect

Picture type	Identifier
Retouched copy	SSCN
Small copy	FSCN

Correct

Picture type	Identifier
Retouched copy	FSCN
Small copy	SSCN

 
Incorrect

Folders can hold up to 200 pictures; if you take a picture when the current folder contains 200 pictures, a new folder will be created by adding one to the current folder number and file numbering will begin again from 0001.



Correct

Folders can hold up to 200 pictures; if you take a picture when the current folder contains 200 pictures or a picture numbered 9999, a new folder will be created by adding one to the current folder number. When file numbering reaches 9999, it will begin again from 0001 in a new folder.



Transfer Marking (pp. 40, 77)

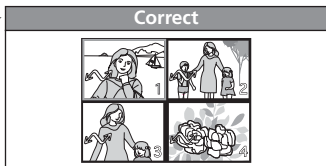

  
Viewing All Pictures in the Order Recorded (pg. 71)

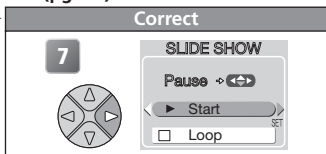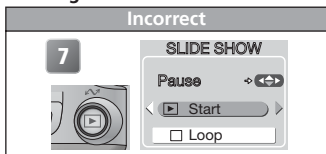

Brightness (pg. 81)

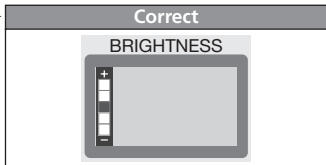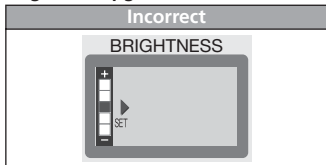  

Power Sources (pg. 93)

 

Dimensions and Weight (pg. 93)

Incorrect

Dimensions	3.44" × 2.46" × 1.50"
Weight	5.4 oz

Correct

Dimensions	3.44" × 2.56" × 1.50"
Weight	5.3 oz

Addenda

Recording Movies (pp. 53, 54)

The maximum length for movies recorded at **TV movie (640)** is twenty seconds.

Reset All (pg. 82)

In addition to the items already listed, the following settings are also reset to default values:

Setting	Default
Welcome screen	Coolpix
Volume	On