


Fast Track Guide

Nikon

COOLPIX 950


This Fast Track Guide provides a brief introduction to the parts and functioning of the COOLPIX 950. Please be sure to read all other documentation fully.

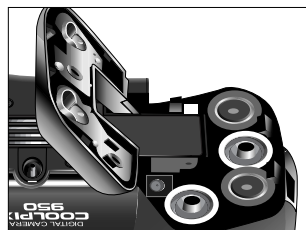

1 Insert the batteries

The battery compartment may be found on the bottom of the camera. To open the compartment, unlatch the cover, slide it out, and flip it open. Insert four LR6 (AA) batteries as shown on the inside of the compartment, then close and latch the cover.


FYS **RM 4**

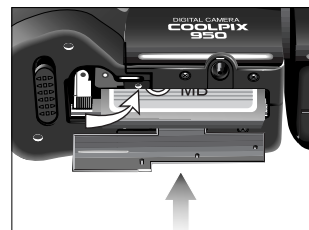

2 Insert the memory card

The COOLPIX 950 uses compact flash memory cards to store photographs, in much the same way an ordinary camera uses film. The memory card slot is on the bottom of the camera. Open the cover, slide the card in as shown above, and fold the eject button over. Then close the cover.


FYS **RM 5**

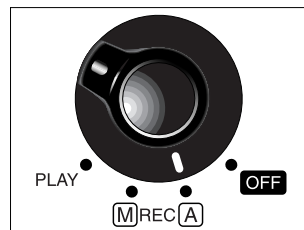

3 Select A-REC

Turn the mode dial to A-REC. Check that the LCD display on top of the camera is on and that the battery indicator is not flashing.


PG 19 **RM 6**

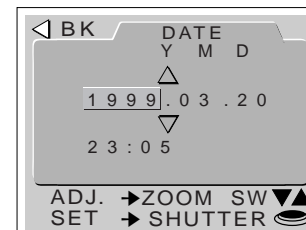

4 Set the time and date


Press the MENU button to display the A-REC menu. Choose DATE and use the zoom buttons and shutter-release button to set the camera's internal clock to the current time and date.

PG 19 **RM 6**

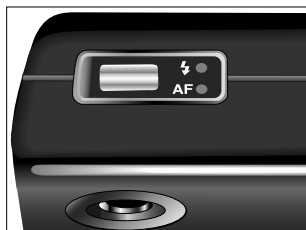

5 Adjust viewfinder diopter

The dial next to the viewfinder allows the viewfinder to be adjusted to accommodate individual differences in vision.

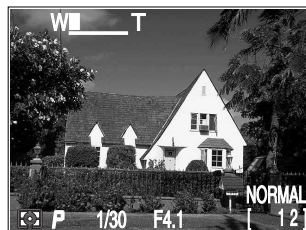

6 Compose a photograph

Frame your subject in the viewfinder or LCD monitor. When the LCD monitor is on, the camera focuses continuously to give an impression of how the final photograph will look. If the LCD monitor is off, the camera focuses only when the shutter-release button is pressed half way.

PG 2-3 **RM 9**



7 Check the focus and flash

Gently depress the shutter-release button half way and check the autofocus and flash indicators next to the viewfinder. The camera is ready to take a picture when the autofocus lamp (green) glows steadily and the flash lamp (red) is not blinking.

PG 3-4 **RM 9**



8 Take a picture

To take a picture, fully depress the shutter-release button.

PG 3-4 **RM 9**



9 Check the results

The picture just taken will be displayed briefly in the LCD monitor while the camera transfers it to memory. Press the button to freeze the display for ten seconds. If you are not pleased with the results, you can press to delete the photo before returning to shooting mode.

RM 10

Understanding the Control Panel Icons

Current settings are displayed in the control panel on top of the camera.

Image Size **RM 16**

NO ICON 1,600 × 1,200 pixels
XGA 1,024 × 786 pixels
VGA 640 × 480 pixels

Image Quality **RM 16**

HI Fewer pictures, higher quality
FINE
NORMAL
BASIC More pictures, basic quality

Focus Mode **RM 13**

NO ICON Autofocus (30cm/12in.~∞)
Infinity (∞)
Macro close-up (2cm/0.8in.~∞)
Manual focus (10cm/4in.~∞)

Self Timer **RM 15**

NO ICON Off
On

Multi-shot Mode **PG 11**

NO ICON Single shot
Continuous
Continuous—16-shot
Continuous—high speed

Flash Mode **RM 11**

AUTO Auto flash mode
"Flash Cancel" (off)
"Anytime Flash" (forced on)
SLOW Slow synchronized
Red-eye reduction

Exposure Mode **RM 18**

P Programmed
A Aperture priority
S Shutter priority

Metering **PG 5**

Matrix
Spot
Center-weighted

Sensitivity **RM 17**

NO ICON Standard (ISO 80 equivalent)
Sensitivity adjustment in effect

Compensation

NO ICON None (±0EV)
Exposure compensation in effect

Battery Level

Battery fully charged
Low battery
Battery exhausted

Number Display

Number of exposures remaining
No memory card detected
Card format error
Serial cable connected
Data transfer in progress



Focus Lock

The brackets in the center of the viewfinder () show the autofocus position.

Using focus lock to focus on an off-center subject

- 1 If your subject is not inside the focus brackets, you can use focus lock to focus on the subject while blurring distant details of the background.
- 2 To focus on an off-center subject, position the subject in the focus brackets and depress the shutter-release button half way.
- 3 Keeping the shutter-release button slightly depressed, recompose your picture, then press the shutter-release button the rest of the way down to take the photograph.

The Mode Dial

The COOLPIX 950 offers a choice of three operating modes.

A-REC **RM 7** M-REC **PG 5** PLAY **RM 20**

- A-REC**
You control:
• Zoom
• Flash and focus modes
• Exposure compensation
• Image quality and size
All other settings are made automatically by the camera.
- M-REC**
In addition to the items listed at left, you control:
• Exposure and metering modes
• Sensitivity
• White balance
• Brightness and contrast
• Multi-shot mode
• "Best-shot" mode
• Color mode (black-and-white or full color)
• Other settings
- PLAY**
This mode allows you to play back and delete previously recorded photographs (see below).

Playback Mode

The zoom buttons and the three buttons under the monitor have special functions in playback mode.

- DELETE**
Select the current photograph for deletion.
- THUMBNAIL**
View nine photographs at once. Use the command dial to page through photos nine at a time. Use the buttons to highlight individual photos. Press the thumbnail button again to view highlighted photograph at full size.
- MAGNIFY**
Zoom in on the current photograph. Press once to view at ×2, twice to view at ×3. Use the command dial to view different portions of the image. Press a third time to view photograph at full size.
- Photo info**
When a photo is displayed full size, turn the command dial to display or hide photo information.
- W/T**
Scroll through photographs one at a time.

Using the Menus

Separate menus are available for each operating mode.

To display and hide the menu
With the monitor on, press the MENU button. In menus with more than one page, you can move between pages by pressing the MENU button. Pressing the MENU button when the last page of the menu is displayed hides the menu.


To highlight a menu item
Use the buttons to move through menu items one at a time.

To select a highlighted menu item
Press the shutter-release button. Where several different settings are possible for an item in the main menu, you can highlight the menu item and press the shutter release button to display a submenu of options, or use the command dial to make changes to settings directly from the main menu.

Using This Guide


This guide is intended as a brief introduction to the parts and functioning of the COOLPIX 950. **Please read all other documentation fully.** This guide provides cross-references to sections of other manuals where topics are covered in greater detail. The following abbreviations are used:

- FYS** For Your Safety. Be sure to read these references before use.
- PG** Pocket Guide.
- RM** Reference Manual (on CD).

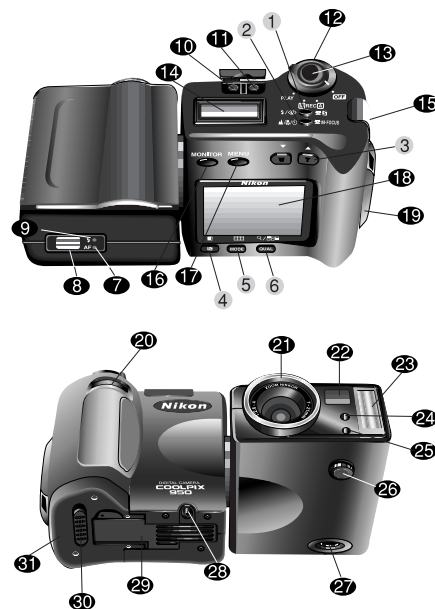

- | | |
|---|---------------------------------|
| 7 Autofocus lamp | 18 LCD monitor |
| 8 Viewfinder eyepiece | 19 Eyelet for camera strap |
| 9 Flash-ready lamp | 20 Command dial |
| 10 Video cable connector | 21 Lens |
| 11 Power jack for optional AC adapter | 22 Viewfinder |
| 12 Mode dial | 23 Built-in flash |
| 13 Shutter-release button | 24 Red-eye reduction lamp |
| 14 Control panel | 25 Photocell |
| 15 Serial cable connector | 26 Connector for external flash |
| 16 MONITOR button (press once to hide settings, press again to turn monitor off, press a third time to turn monitor on) | 27 Diopter adjustment dial |
| 17 MENU button | 28 Tripod socket |
| | 29 CompactFlash card slot |
| | 30 Battery chamber latch |
| | 31 Battery chamber cover |

Icons in the LCD monitor (A-REC/M-REC)

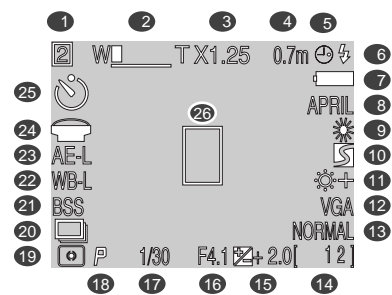

- | | |
|------------------------------------|---|
| 1 User set number | 14 Number of exposures remaining |
| 2 Zoom indicator | 15 Exposure compensation |
| 3 Digital zoom | 16 Aperture (f number) |
| 4 Focus mode/manual focus distance | 17 Shutter speed |
| 5 "Date not set" indicator | 18 Exposure mode |
| 6 Flash mode | 19 Metering mode |
| 7 Battery indicator | 20 Multi-shot mode |
| 8 Current folder | 21 Best-shot mode |
| 9 White balance program | 22 White-balance lock |
| 10 Sensitivity | 23 Auto-exposure lock |
| 11 Brightness/contrast | 24 Lens converter settings |
| 12 Image size | 25 Self timer |
| 13 Image quality | 26 Auto-exposure target (spot metering) |

Flash mode/sensitivity button

Press this button to change the flash setting. In addition to automatic, "Flash Cancel" (off), and "Anytime Flash" (forced on), the COOLPIX 950 offers the following settings:

Slow sync

Balances the flash and background lighting. Ideal for low-light photography at night.

Red-eye reduction

Before the flash fires, a red-eye reduction lamp lights up, causing the pupils in the subject's eyes to contract and minimizing the "red-eye" effects a flash can sometimes produce.

Sensitivity

In M-REC mode, sensitivity can be adjusted by turning the command dial while holding down the flash mode button. Sensitivity can be set to a value corresponding to ISO 100, or further increased by factors of +1.0 or +2.0. Select **dEF** to restore sensitivity to a value equivalent to ISO 80.

Increased sensitivity is useful when you want to freeze motion or capture distant objects under low light conditions. Note however that noise may appear in pictures taken at settings other than **dEF**.

Focus mode/self-timer button

Infinity (∞)

Captures distant scenes with maximum clarity.

Macro close-up (2cm/0.8in. from lens-∞)

Use this mode when taking photos of small objects at close range. At the middle optical zoom position, you can focus on objects as close as 2cm (0.8in.) from the lens (a yellow icon in the LCD monitor tells you that the current zoom setting is right for close-range photography).

Self-timer

The shutter is released automatically ten seconds after the shutter-release button is pressed once (press twice for a three-second delay). A light flashes before a picture is taken. Ideal for self-portraits.

Manual focus

In M-REC mode, focus can be set according to the distance to your subject. Turn the command dial while holding down the focus mode button. Focus distance from the lens will be displayed in meters or feet: a range of settings from 10cm (4in.) to infinity is available.

Exposure compensation

Turning the command dial while the exposure compensation button is held down allows you to select a value for compensation of from -2 to +2 EV in increments of 1/3 EV. Higher values create photographs that bring out details in shadows while "washing out" brightly lit objects. Lower values can be used to bring out details of brightly lit objects. The effects of exposure compensation can be previewed in the monitor.

Exposure mode button

In M-REC mode, exposure mode can be chosen by turning the command dial while the exposure mode button is held down.

Program

Point-and-shoot, full auto exposure mode.

Aperture priority

Turn the command dial to choose from among three apertures. At wide apertures (low f numbers), details of the background are blurred. A small aperture (high f number) brings both background and foreground into focus.

Zoom buttons

The **T** button zooms the camera in, increasing magnification and reducing the field of view. Press the **W** button to zoom the camera out. The amount of zoom is displayed in the monitor when either button is pressed. If the **T** button is held down for two seconds at maximum zoom, the camera will enter digital zoom mode, allowing you to enlarge the image a further $\times 1.25$ – $\times 2.5$. Note that the LCD monitor must be on or the camera connected to a TV set for digital zoom to take effect.

Exposure mode button

Shutter priority


Turn the command dial to select a shutter speed from eight to 1/500 seconds. This mode is ideal for controlling action. Use a high shutter speed to freeze motion or a low shutter speed to suggest movement by blurring moving objects.

If the aperture or shutter speed does not change when you turn the command dial, press the mode button once and then turn command dial to change the setting.

Image quality/image size

Image quality and size can be selected by turning the command dial while the image quality button is held down. To store more photographs on a single memory card, choose a smaller image size (VGA or XGA) or select an image quality of BASIC. To capture fine details, select an image quality of FINE. For maximum quality, a setting of HI (uncompressed) is available when the camera is in M-REC mode.

Viewing and Printing Photographs on External Devices

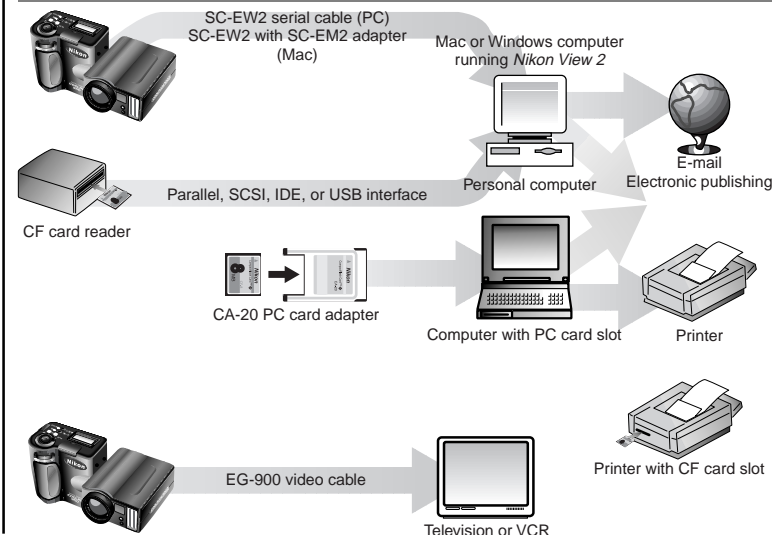

Principal Features

- A half-inch, 2.11-million pixel CCD allowing photographs of up to 1,600 × 1,200 pixels in size.
- Motor-driven $\times 3$ optical zoom. Digital zoom allows pictures to be enlarged a further $\times 1.25$ – $\times 2.5$.
- Nikon's 256-element matrix metering and intelligent in-camera processing guarantee superb image quality.
- Shutter speed, aperture, and focus can be set automatically or manually.
- Minimum delay between exposures and fast switching between record and playback.
- Internal memory buffer allows continuous, rapid shooting (about ten exposures at an image quality of "normal" and an image size of 1,600 × 1,200 pixels).
- Manual mode offers a choice of black-and-white or color photography, digital image enhancement, spot metering with auto-exposure lock, "best shot" mode, and a choice of multi-shot modes.
- LCD monitor offers continuous preview while shooting, allowing evaluation of scene composition and settings. Images are played back after shooting for the user to keep or delete.
- Operation similar to conventional Nikon cameras, including a built-in flash, adjustable viewfinder diopter, and a high-quality Nikkor lens.

Fast Track Guide

Nikon

COOLPIX 950