

Page 8

The dialog which appears when ColorSync has been installed is shown below. A **Quit** button has been added to allow you to quit the installer and launch the other installer programs included on the CD-ROM before restarting your computer, if desired.



What's New with the CD-ROM Release of *Nikon Scan* and *Nikon Control*

The CD included in this package contains updated versions of *Nikon Control Macintosh* and *Nikon Scan Macintosh*. With the exception of minor changes to the installation process, detailed below, most of the changes made to *Nikon Control* and *Nikon Scan* have been in the form of improvements to drivers and have had no significant effect on the operation or appearance of the program as these are described in the manuals, which remain unchanged from the previous release. This leaflet describes changes to the system requirements and installation procedure following on the release of the CD-ROM edition of *Nikon Scan*.

System Requirements

In addition to the requirements listed on page 2 of the *Nikon Control Macintosh User's Manual*, a CD-ROM drive will be needed to run the installer.

Software Installation

The following changes apply to section 2.2 of the *Nikon Control Macintosh User's Manual*:


Page 3

The installer CD does not need to be write-protected (locked).

Page 4

Where the instructions direct you to insert the Install disk 1 into the floppy-disk drive, read "installer CD" for "Install disk 1" and "CD-ROM drive" for "floppy-disk drive."

 When the installer CD is inserted into the drive, the folder shown below will open on the desktop.

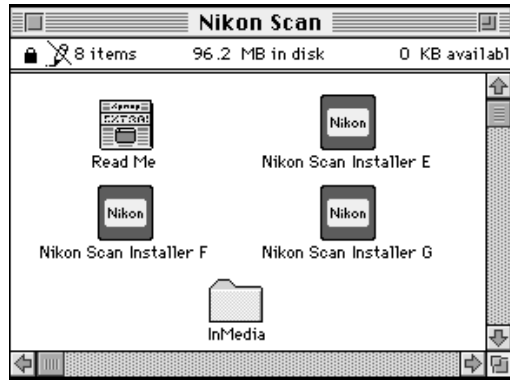


Double-click one of the three Nikon Scan Installer icons to install *Nikon Scan* and *Nikon Control* in the language of your choice (“E” for English, “F” for French, or “G” for German). In addition to the Nikon Scan Installer, the *Nikon Scan* CD includes a trial version of *Slides & Sound Plus*, located in the InMedia folder. For more information on *Slides & Sound Plus* and associated software, view the readme file in the InMedia folder.

Double-clicking the “Installer E” icon will bring up the following dialog.



When the **Continue...** button is clicked, the Nikon Software License Agreement will be displayed (note that the terms of the agreement may differ depending on the country of sale).

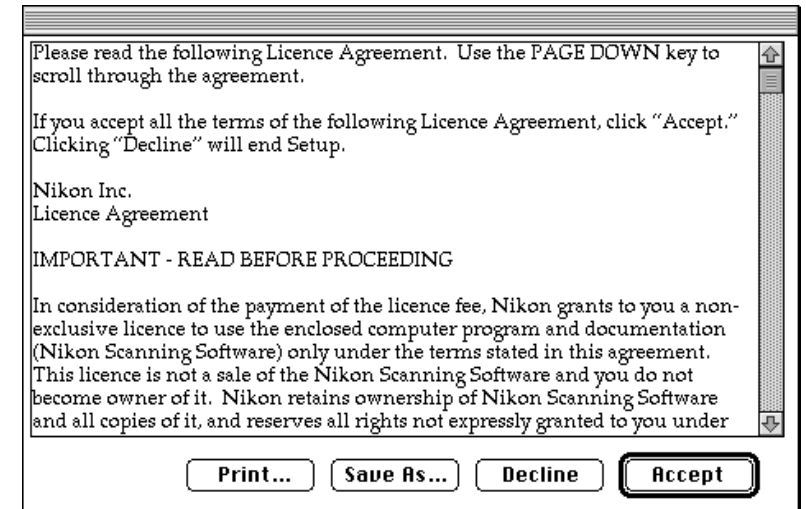

The license agreement can be saved to disk or printed for future reference by clicking the **Save As...** or **Print...** buttons. After reading the license agreement, click **Accept** to continue with installation as described in the manual or click **Decline** to exit setup without installing *Nikon Scan* and *Nikon Control*.

Page 7

You will not be prompted to insert Install disk 2 into the floppy disk drive.