

# Nikon

## Seven Scene modes for every situation



**Party/Indoor**  
Captures the details of dimly lit scenes. Automatically fires the COOLPIX 775's built-in Speedlight, if necessary.



**Back Light**  
Fires the built-in Speedlight to keep subjects in backlit settings from turning out too dark.



**Portrait**  
Emphasises the subject by creating a soft, pleasant background.



**Night Portrait**  
Fires the built-in Speedlight to light the subject while keeping the shutter open long enough to show the background.



**Landscape**  
Captures distant scenes with postcard-sharp clarity.



**Beach/Snow**  
Captures the clean, bright sparkle of sea or snow backgrounds.



**Sunset**  
Preserves the exquisite, natural splendour of beautiful sunsets.

## All-in-one package

Everything you need to get started – from rechargeable battery and battery charger to computer cable and software – it's there in the COOLPIX 775 box.



## Nikon Digital Camera COOLPIX 775 Specifications

- Type of camera:** Digital camera COOLPIX 775
- Effective pixels:** 2.0 million
- CCD:** 2.14 million total pixels
- Lens:** 3x Zoom-Nikkor f=5.8-17.4mm (35mm camera format equivalent to 38-115mm); Digital Zoom: 2.5x
- Viewfinder:** Real image optical zoom viewfinder
- LCD monitor:** 1.5-in. low-temp. polysilicon TFT LCD
- Storage media:** CompactFlash™ (CF) Card Type I
- Built-in Speedlight:** Sensor flash system; shooting range: approx. 0.4-1.7m (T), approx. 0.4-3.0m (W), approx. 0.2-2.4m (macro)
- Interface:** USB1.1 interface; Video output: NTSC/PAL (Selectable)
- Power requirements:** Rechargeable Li-ion Battery EN-EL1 (included), 6V 2CR5/DL245 Lithium Battery (optional) or AC Adaptor/Battery Charger EH-21 (optional)
- Dimensions (W×H×D):** Approx. 87 × 66.5 × 44mm
- Weight:** Approx. 185g (without battery and CF card)
- Accessories included:** Wrist strap, Video cable, 8MB CompactFlash™ Card, USB cable, Rechargeable Li-ion Battery EN-EL1, Battery Charger, Nikon View 4 (COOLPIX) CD-ROM
- Optional accessories:** AC Adaptor/Battery Charger EH-21, Various size CompactFlash™ Cards, Soft Case CS-E775, Converter Adaptor UR-E3, Telephoto Converter TC-E2\*, Wideangle Converters WC-E24\*/WC-E63\* \* Converter Adaptor UR-E3 is necessary.

### Nikon View 4 System Requirements:

- |   |  |
|---|--|
| <p><b>Macintosh</b></p> <p><b>OS:</b> Mac® OS 8.6, 9, 9.1</p> <p><b>Models:</b> iMac™, Power Macintosh® G3 (Blue/White), Power Macintosh™ G4 or later; iBook™, PowerBook® G3 (only built-in USB ports are supported) or later</p> <p><b>RAM:</b> 32Mbyte, (64Mbyte or more recommended)</p> <p><b>Hard disk:</b> An additional amount equivalent to twice the capacity of the camera memory card required when Nikon View is running</p> <p><b>Display:</b> 640 × 480 with 16-bit colour (800 × 600 or greater, full colour recommended)</p> <p><b>Others:</b> CD-ROM drive<br/>USB Interface (only built-in USB ports supported)<br/>Mac® OS 8.6 needs USB driver (ver. 1.3.5) on Web site of Apple computer</p> | <p><b>Windows</b></p> <p><b>OS/Models:</b> Windows®98/98SE, Windows®2000, Windows®ME pre-installed model</p> <p><b>CPU:</b> MMX® Pentium® or later</p> <p><b>RAM:</b> 32Mbyte (64Mbyte or more recommended)</p> <p><b>Hard disk:</b> An additional amount equivalent to twice the capacity of the camera memory card required when Nikon View is running</p> <p><b>Display:</b> 640 × 480 with 16-bit colour (800 × 600 or greater, Full colour recommended)</p> <p><b>Others:</b> CD-ROM drive, USB Interface (only built-in USB ports supported)</p> |
|---|--|

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Macintosh® and QuickTime® are either registered trademarks or trademarks of Apple Computer Inc. in the United States and/or other countries. CompactFlash™ is a trademark of SanDisk Corporation. Products and brand names are trademarks or registered trademarks of their respective companies. Images on LCDs and monitors shown in this brochure are simulated.

Specifications and equipment are subject to change without any notice or obligation on the part of the manufacturer. March 2002  
© 2001/2002 NIKON CORPORATION



**WARNING**

TO ENSURE CORRECT USAGE, READ MANUALS CAREFULLY BEFORE USING YOUR EQUIPMENT. SOME DOCUMENTATION IS SUPPLIED ON CD-ROM ONLY.



Downloadable  
User's Manual

Nikon Fotoshare  
may not be available  
in some regions.



QuickTime



ISO 9001 Certified  
Nikon Corporation  
Imaging Company

# Turn Your Moments into Memories



# COOLPIX 775

**3×**  
Optical  
Zoom-Nikkor Lens

**2.0**  
Effective  
Megapixels

Rechargeable  
Battery and  
Charger Included

**Nikon** NIKON CORPORATION

FUJI BLDG., 2-3, MARUNOUCHI 3-CHOME, CHIYODA-KU, TOKYO 100-8331, JAPAN

www.nikon-image.com/eng/

Printed in Japan Code No. 6CE41163 (0208)K

En

www.nikon-coolpix.com

# Digital made easy!

Carefree, **point-and-shoot** operation

**Clear, colourful images** with Nikon's advanced image processing technology

**Long-life** rechargeable Li-ion battery (approx. 100 min. of operation)

**2.0 effective megapixels** for high-resolution images

Get closer to your subject with **3x Zoom-Nikkor** lens

**Incredibly light** and **small** enough for your pocket



## Scene

## Shoot

## Select

## Share



Mode dial



Auto Mode & 7 Scene Modes



Point



and



Shoot



 
Quick Review button



LCD monitor



TRANSFER button

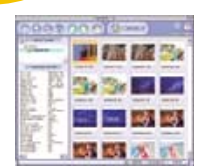

Data upload



Portrait



 
Movie mode

Select Auto mode for everyday, anytime photography, or pick one of the seven scene modes for greater versatility and creativity. The COOLPIX 775 digital camera makes taking pictures easy, and even captures simple movies of up to 15 seconds.

Once you've turned the Mode dial and set up the camera, just press the shutter release button. The COOLPIX 775 does all the rest – focus, exposure control, and flash if necessary. Capture the moment – just point and shoot!



Quick Review lets you view each picture in the LCD monitor with your friends as soon as you've taken it. And you can delete photos that you've taken at any time, keep on shooting until you get the image you want.

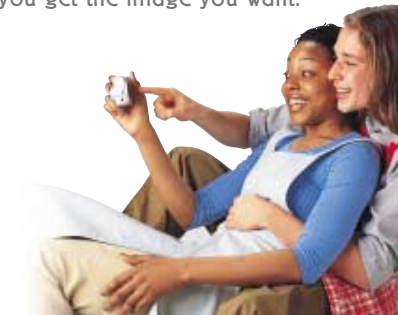

Connect the COOLPIX 775 to your computer with the USB cable (supplied), then push the TRANSFER button. The pictures in your COOLPIX 775 – all or just selected pictures – will be transferred automatically to your computer\*. It's never been easier to share your photos with friends or family through e-mail and the internet!

\*Requires Nikon View 4 software installation.

