



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

PayPal Name Lynn@butkus.org

NIKON N65™ CHEATSHEET



FLASH PHOTOGRAPHY

Built-in flash is automatically deployed in or VARI-program modes. Guide #40 in feet, 12 in meters. In **P, S, A** or **M** modes blinks in viewfinder if the flash is recommended (press flash lock release to pop-up).

Before using: Flash is ready when the solid flash ready light appears in the viewfinder.

After using: If it blinks 3 seconds after flash fires, you may have been too far away from your subject.

Sync Modes: (set by pressing & turning CMD dial)

Front-Curtain

This is the normal flash mode for most situations.

Slow-Sync

Can be used in , **P**, or **A** exposure modes. Uses slow shutter speeds to help use ambient light to bring out background details. Use with tripod if possible.

Flash Shooting Distances

Film Speed	Min Dist (f16)	Max Dist (f2.8)	Max Dist (f4)	Max Dist (f5.6)
50	1.7 ft	10.0 ft	7.0 ft	5.0 ft
100	2.5 ft	14.2 ft	10.0 ft	7.1 ft
200	3.5 ft	20.0 ft	14.0 ft	10.0 ft
400	4.9 ft	28.2 ft	19.7 ft	14.1 ft

DATE & TIME (N65QD ONLY)

Push MODE to select date/time. Press ADJUST to change numbers and SELECT to set. Hold ADJUST down for > 1 second for fast change.



RedEye reduction

Can be used in , **P, S, A, M** or VARI-pgm (except for) exposure modes.

RedEye w/slow

Can be used in , **P**, or **A** exposure modes. Combines red-eye reduction w/slow sync.

Flash Cancel

Can be used in or VARI-program exposure modes. Cancels operation of flash.

Rear-Curtain

Fires flash at end of exposure. Can be used in **P, S, A** or **M** exposure modes. Slow sync is also set when in **P** or **A** modes. Can create a *blur effect* from the ambient light.

REMOTE CONTROL OPERATION

The optional remote control can release the shutter remotely. Press the until the (immediate release) or (2-second delay) icon appears in LCD. If remote control is not used within 60 seconds, function is shut off.

FOCUS AREA SELECTION

Press & rotate CMD dial.



Dynamic w/closest-subject priority




Dynamic with Closest-Subject priority



Place selected focus area on subject and lightly press shutter.



Dynamic with closest-subject priority maintains focus on the subject located closed to any of the 5 focus areas. Focus is locked once it is achieved. If the subject moves from the selected focus area before focus lock, AF automatically focuses on the subject using all 5 focusing areas.

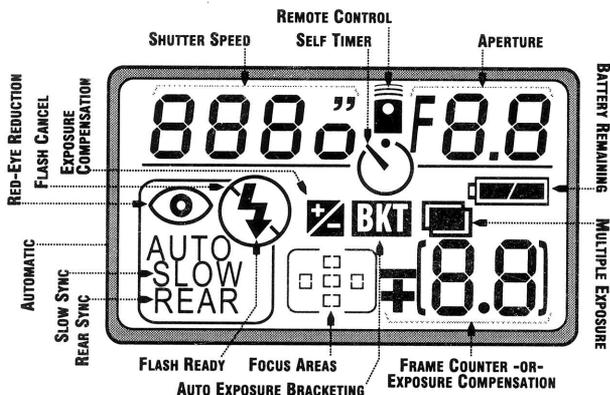

FOCUS FOCUS AREAS APERTURE FLASH READY/RECOMMENDED EXP. COMPENSATION



SHUTTER

ANALOG EXPOSURE/COMPENSATION VALUE

NIKON N65™ CHEATSHEET



FILM LOAD

Turn power on, open back, pull film across to red index mark. Film automatically advances to first frame. *ERR* or *E* in LCD panel indicates error - reload.

AUTOFOCUS MODE

"M"-Manual Focus

"AF"-AutoFocus - lens may also have to be set to AF



EXPOSURE MODES

AUTO Camera automatically set for Dynamic AF with Closest-Subject priority, Matrix Metering, Flash sync normal

Note: For AF operation, be sure to turn on AF Mode

Program - Auto Multi-Program Mode

Aperture must be set to minimal f-stop (largest #). CMD dial can be rotated to change shutter/aperture while holding correct exposure (Flex. Pgm). Flash may be recommended but doesn't automatically pop up. Can also use with Exposure Comp., AE Bracketing, Multiple Exposures, Slow or Rear Sync Flash.

Shutter-Priority Auto Mode

You set the shutter speed (30 - 1/2000) and the camera selects the aperture. Aperture ring must be set to minimal f-stop (largest #). Use slow shutter for blurring moving subjects or fast shutter for freezing motion.

Aperture-Priority Auto Mode

You set the Aperture via the CMD Dial and the camera selects the shutter. Aperture ring must be set to minimal f-stop (largest #). Use large aperture for minimal depth of field; small aperture for maximum depth of field.

Manual Exposure Mode

You set both shutter and aperture. The viewfinder analog exposure display helps you determine proper exposure. Set the shutter by turning the CMD dial. Set the aperture by pressing the button while turning the CMD dial. Center-weighted metering is used in Manual mode. Exposures longer than 30 seconds can be accomplished with *Time* exposure. (see below)



Time Exposures: Turn CMD Dial past 30 seconds to --. Press shutter once to open, again to close.

VARI-PROGRAM MODES

- PORTRAIT** Camera determines aperture/shutter. Best used with telephoto lenses.
- LANDSCAPE** Greatest depth of field - best w/wide angle lenses
- CLOSE-UP** Best w/telephoto - center focus area selected
- SPORTS** Uses fast shutter and AF tracks subject. Shutter will continuously fire if held. Best with telephoto and fast film.
- NIGHT** Good for sunsets, night scenes with lights. Use fast film. Cancel flash for sunset pictures.

EXPOSURE

COMPENSATION

Rotate CMD dial while pressing . The symbol appears in the LCD. You can under or over expose by up to 2 stops.

This example indicates over-exposure of 1 stop. Can be used in **P, S, A** and **Vari-Program**. *Don't forget to turn off when you no longer need it!!*



MULTIPLE EXPOSURE & EXPOSURE BRACKETING

Both *multiple exposure* and *exposure bracketing* are turned on by pressing the button while turning the CMD dial. They cannot be used together. LCD display cycle:

- 0.5** Bracketing: normal, 1/2 stop under, 1/2 stop over
 - 1.0** Bracketing: normal, 1 stop under, 1 stop over
 - 1.5** Bracketing: normal, 1 1/2 stop under, 1 1/2 stop over
 - 2.0** Bracketing: normal, 2 stops under, 2 stops over
- Multiple Exposure Mode

Multiple Exposure allows you to take more than one exposure on one film frame. *Must be manually shut off.* Requires underexposure compensation depending upon how many exposures are taken based on the following:

MULTIPLE EXPOSURE STANDARD COMPENSATION VALUES	# Exposures	Compensation
2	2	-1.0 EV
3	3	-1.5 EV
4	4	-2.0 EV

Exposure bracketing lets you take 3 pictures of the same subject at 3 different exposures. Shuts off automatically after 3rd shot. Can't be used in **AUTO** or **VARI**-program modes. Not cancelled if power shut off.

FILM REWIND

Press the two film rewind buttons together for 1 second. Film is completely rewound when a blinking *E* is shown in the frame counter.



CAUTION: If a blinking *E* does NOT appear, don't open the camera - you may need to change batteries!!

SELF-TIMER OPERATION

Press self-timer button and confirm that it appears in LCD. Press shutter - picture is taken in 10 seconds. Self-timer button cycles thru Self-Timer, immediate remote & 2-second remote.

DYNAMIC AF w/CLOSEST SUBJECT PRIORITY

Automatically focuses on subject closed to any of the 5 focus areas and camera tracks subject until focus is achieved. Auto selected when in **AUTO** or **VARI**-PGM modes (except close-up).

FOCUS LOCK

Press the shutter lightly placing focus-area on subject and hold shutter to lock focus.

Note: If the subject starts to move when focus is locked, focus-lock is deactivated and the AF will track the subject.

DEPTH OF FIELD PREVIEW

Press the depth of Field button (below-right of shutter) with the camera turned on. Viewfinder may get darker but you will be able to view how much of picture is in focus.

AF-ASSIST ILLUMINATOR

Automatically turns on w/center focus area or dynamic AF under certain conditions. Press while pressing shutter to disable.