


## Caution!

Take special care when opening the camera back, releasing the lens or removing the remote and/or sync cords after use.

**Water drops might remain around the outside of O-ring of rear door and its opposite side of camera body. It may accidentally fall inside camera body.**

Be sure to wipe off not only water on the camera body but also any water drops that accidentally got inside the camera. If you use the camera with any trace of water inside, or if it is stored without thorough drying, this can cause the camera to malfunction. Observe the following instructions on how to wipe water off.


**Be sure to wipe water off the camera and your hands after use.**

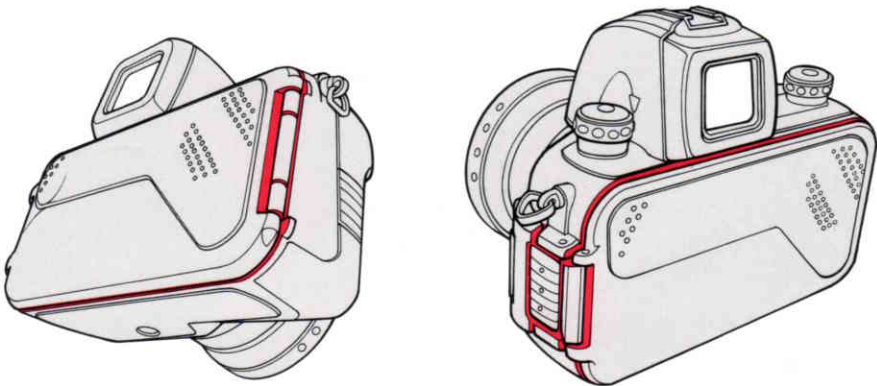

- Use a dry towel or cloth to wipe water off, particularly from joints and crevices as shown in red in the above figures. Dab the towel or cloth down lightly to absorb the water.


**Point the camera parts downward, as shown below, to prevent water from getting inside the camera body :**

**When opening the camera back,**

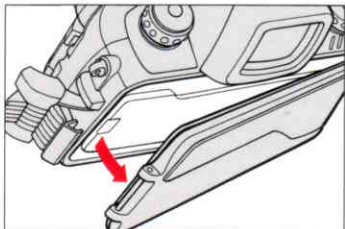


Point the camera back downward.

**When releasing the lens,**

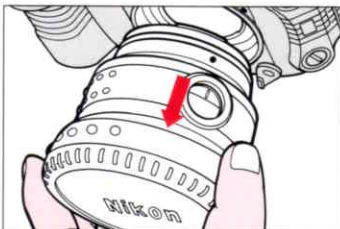


Point the lens downward.

**When removing the remote and/or sync cords,**

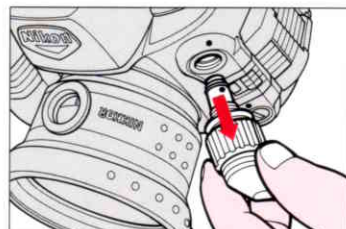

Point the connector terminals downward and remove the cords carefully.

**When opening the camera back, releasing the lens or removing the remote and/or sync cords after use, be sure to wipe off any trace of water on the camera that may accidentally fall into the camera openings.**

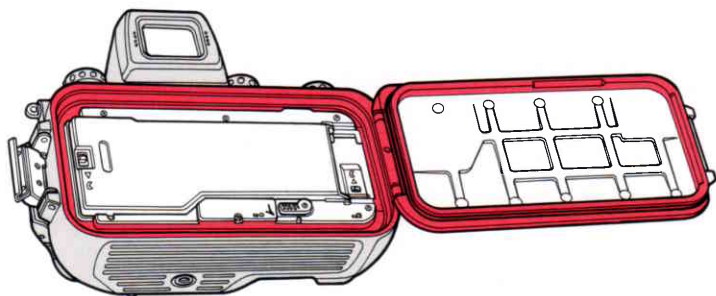

- Completely wipe water off such places where water might remain as shown in red in the above figures.
- Be sure to prevent water from your wet suit or hair from entering the camera body.

*For more information on checking O-rings and taking care of your camera, refer to the instruction manual.*