# **Customer Care Solutions RH-9 Series Transceivers**

## **Disassembly Instructions**

### Company confidential

RH-9	
Disassembly Instructions	s

#### NOKIA

#### **CCS Technical Documentation**

#### **Table of Contents**

	Page No
Disassembly Procedure	3
Remove Shielding Lids	6
Reassembly procedure	7

## **Disassembly Procedure**

#### Table 1:




1. Release the A-cover from the bottom side of the unit.



2. Take away the A-cover.




3.Also protect the inner part of the window with a foil. The keymat is loose inside the Acover.

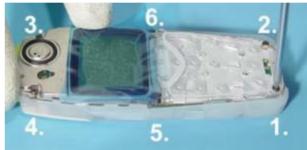


4. Open the six screws in the predefined orderwith a Torx 6 driver. When re-assembling the reverse order has to be taken with a torque of 28Ncm.



5. When releasing the side clips of the D-cover you can use the SRT 6.

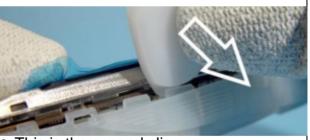

6. This is the second clip.

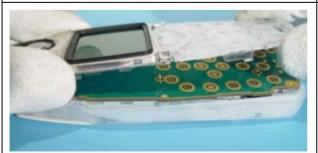

7. Take away the Display Assembly (UI module) and avoid touching the pads.




8. There are two snaps on each side of the metal frame.

#### Table 2:



9. Remove the metal frame.

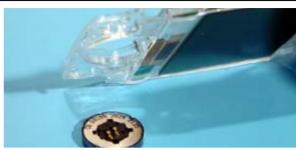


10. If you hold the UI module upside down, the speaker drops out of its hollow.



11. The next step is to take out the Radio-Module EY1A. Take care of LEDs.1




12. Lift up the Battery Connector with your fingers. You can use the SRT-6 opening tool.

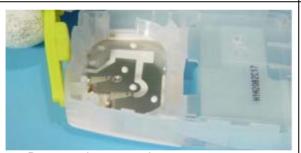

13. Remove the power key.



14. To loosen the System Connector you can use the SRT-6 opening tool. Take care not to scratch D-cover or connector housing.

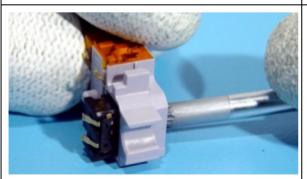

15. The Microphone can be changed separately. To remove it from connector housing, you have to push it with for example Torx Driver.



16. When re-assembling the Microphone remember the right direction. The hole of the Microphone has to point to the hole of the connector housing.

#### Table 2:




17. The SALT speaker is taped to the D-cover and can be removed with a straight bladed-screwdriver.



18. If you need to change the VIBRA motor-strong tweezers or pliers can be taken.



19. Remove the SIM card support this way.

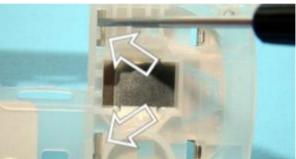


20. The Release Spring is locked on two sides. Use a screwdriver to unlock the two snaps



21. After releasing the two hooks, you can remove the Release Springs easily.

## **Remove Shielding Lids**

#### Table 3:

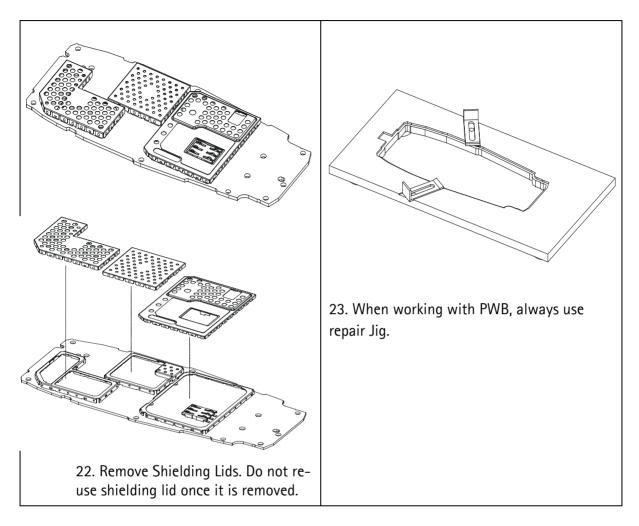

**Disassembly Instructions** 

## Reassembly procedure

Reassembly takes place in reversed order compared with disassembly.

[This page left intentionally blank]